

Please check that all items listed here are present in a package before using them.

(1) SD Memory Card (1)

(2) Storage Case (1)

(3) Installation Guide (1) <This Guide>

(This is the registered
trademark of SD-3C, LLC.)



This product has been carefully packed, with special attention to quality.

However, should you find anything damaged or missing, please contact your local distributor immediately.

CAUTION

LOSS OF DATA

- Be sure to back up the data saved in the SD Memory Card. Check if all the important data has been backed up before formatting the SD Memory Card.
- Before removing the SD Memory Card from the Display Unit or PC, be sure to perform the prescribed removal procedure. Forcibly removing the SD Memory Card without following this procedure may cause damage to the internal data. For further details, read the Hardware Manual for your Display Unit.
- While the SD Memory Card is being accessed, NEVER turn OFF or reset the Display Unit, or insert or remove the SD Memory Card. Failure to follow this instruction may cause damage to the internal data.
- Before inserting the SD Memory Card, familiarize yourself with the SD Memory Card's front and rear face orientation, as well as the SD Memory Card connector's position. If the SD Card is not positioned correctly when inserted into the GP unit, the card's internal data and GP unit could become damaged.
- When using the SD Memory Card, be sure to follow the instructions given below to prevent damage to the internal data or malfunction:
 - DO NOT leave the SD Memory Card in a place exposed to static electricity or electromagnetic waves.
 - DO NOT leave the SD Memory Card in a place exposed to direct sunlight or near intense heat sources such as heaters.
 - DO NOT bend the SD Memory Card.
 - Keep the SD Memory Card dry.
 - DO NOT drop or give a strong shock to the SD Memory Card.
 - DO NOT touch the SD Memory Card connectors.
 - DO NOT disassemble or modify the SD Memory Card.
 - DO NOT place a label on the SD Memory Card.

Failure to follow these instructions can result injury or equipment damage.

Disclaimer


- Digital Electronics Corporation shall not be liable for any damages arising out of use other than as described in this guide.
- Digital Electronics Corporation shall not be liable for any damages arising out of malfunction caused by use in combination with connected devices.
- Digital Electronics Corporation shall not be liable for any damages arising out of fires, earthquakes, acts by third parties, other incidents, user's intentional or negligent misuse, or use under other abnormal conditions.
- Digital Electronics Corporation shall not be liable for any damages, including losses in business profits, suspension of business operations, and changes or losses in the saved data, arising out of the use of or inability to use this product.

Digital Electronics Corporation does not offer any data recovery services.

For information on the models and manuals compatible with this product, visit Pro-face Home Page (<http://www.pro-face.com/otasuke/>).

Note

- As shown in the image below (example on the left-hand side), you can set the Write-Control Tab to prevent write operations to the SD Memory Card. Push the tab up, as shown in the example on the right-hand side, to release the lock and enable writing to the SD Memory Card.

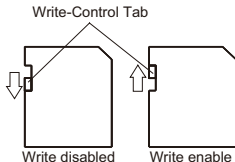

The information in this document is subject to change without notice.

Copyright 2011 Digital Electronics Corporation. All rights reserved.

PFXCBS4GC61-MT01-CP 2012.01 HS/C

Pro-face
for the best interface