




# FX Series CPU Direct Driver

1	System Configuration.....	3
2	Selection of External Device .....	11
3	Example of Communication Setting.....	12
4	Setup Items.....	18
5	Cable Diagram .....	23
6	Supported Device.....	53
7	Device Code and Address Code.....	72
8	Error Messages.....	73

## Introduction

This manual describes how to connect the Display and the External Device (target PLC).

In this manual, the connection procedure will be described by following the below sections:

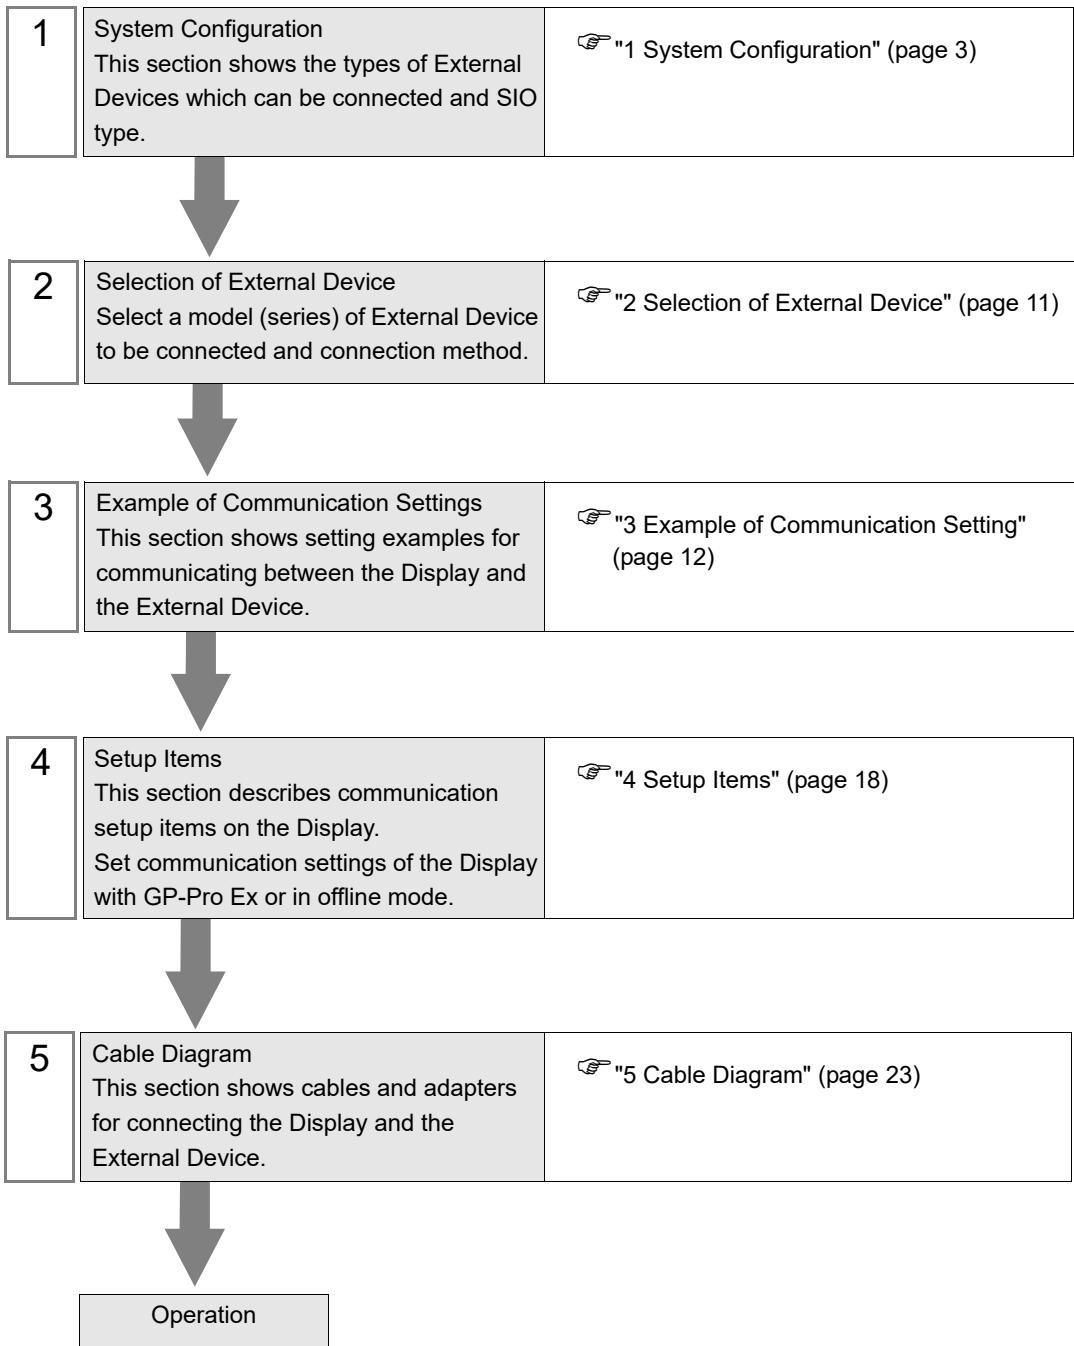

# 1 System Configuration

The system configuration in the case when the External Device and the Display are connected is shown.

Series	CPU	Link I/F	SIO Type	Setting Example	Cable Diagram
MELSEC FX Series	FX1	CPU Direct	RS232C	Setting Example 1 (page 12)	Cable Diagram 1 (page 23)
	FX2	CPU Direct	RS232C	Setting Example 1 (page 12)	Cable Diagram 1 (page 23)
		2-port adapter II by Pro-face (Model: GP070-MD11)	RS422/485 (4wire)	Setting Example 3 (page 16)	Cable Diagram 10 (page 42)
	FX2C	CPU Direct	RS232C	Setting Example 1 (page 12)	Cable Diagram 1 (page 23)
	FX0S	CPU Direct	RS422/485 (4wire)	Setting Example 2 (page 14)	Cable Diagram 2 (page 24)
		2-port adapter II by Pro-face (Model: GP070-MD11)	RS422/485 (4wire)	Setting Example 3 (page 16)	Cable Diagram 10 (page 42)
	FX0N	CPU Direct	RS422/485 (4wire)	Setting Example 2 (page 14)	Cable Diagram 2 (page 24)
		FX2NC-232ADP	RS232C	Setting Example 1 (page 12)	Cable Diagram 9 (page 40)
		2-port adapter II by Pro-face (Model: GP070-MD11)	RS422/485 (4wire)	Setting Example 3 (page 16)	Cable Diagram 10 (page 42)

Series	CPU	Link I/F	SIO Type	Setting Example	Cable Diagram
MELSEC FX Series	FX1S, FX1N	CPU Direct	RS422/485 (4wire)	Setting Example 2 (page 14)	Cable Diagram 2 (page 24)
		FX1N-232-BD	RS232C	Setting Example 1 (page 12)	Cable Diagram 3 (page 26)
		FX0N-232ADP + FX1N-CNV-BD	RS232C	Setting Example 1 (page 12)	Cable Diagram 4 (page 28)
		FX2NC-232ADP + FX1N-CNV-BD	RS232C	Setting Example 1 (page 12)	Cable Diagram 7 (page 35)
		FX1N-422-BD	RS422/485 (4wire)	Setting Example 2 (page 14)	Cable Diagram 6 (page 32)
		2-port adapter II by Pro-face (Model: GP070-MD11)	RS422/485 (4wire)	Setting Example 3 (page 16)	Cable Diagram 10 (page 42)
		2-port adapter II by Pro-face (Model: GP070-MD11) + FX1N-422-BD	RS422/485 (4wire)	Setting Example 3 (page 16)	Cable Diagram 11 (page 47)
	FX2N	CPU Direct	RS422/485 (4wire)	Setting Example 2 (page 14)	Cable Diagram 2 (page 24)
		FX2N-232-BD	RS232C	Setting Example 1 (page 12)	Cable Diagram 3 (page 26)
		FX0N-232ADP + FX2N-CNV-BD	RS232C	Setting Example 1 (page 12)	Cable Diagram 4 (page 28)
		FX2NC-232ADP +FX2N-CNV-BD	RS232C	Setting Example 1 (page 12)	Cable Diagram 7 (page 35)
		FX2N-422-BD	RS422/485 (4wire)	Setting Example 2 (page 14)	Cable Diagram 6 (page 32)
		2-port adapter II by Pro-face (Model: GP070-MD11)	RS422/485 (4wire)	Setting Example 3 (page 16)	Cable Diagram 10 (page 42)
		2-port adapter II by Pro-face (Model: GP070-MD11) + FX2N-422-BD	RS422/485 (4wire)	Setting Example 3 (page 16)	Cable Diagram 11 (page 47)

Series	CPU	Link I/F	SIO Type	Setting Example	Cable Diagram
MELSEC FX Series	FX1NC, FX2NC	CPU Direct	RS422/485 (4wire)	Setting Example 2 (page 14)	Cable Diagram 2 (page 24)
		FX0N-232ADP	RS232C	Setting Example 1 (page 12)	Cable Diagram 5 (page 30)
		FX2NC-232ADP	RS232C	Setting Example 1 (page 12)	Cable Diagram 9 (page 40)
		2-port adapter II by Pro-face (Model: GP070-MD11)	RS422/485 (4wire)	Setting Example 3 (page 16)	Cable Diagram 10 (page 42)
	FX3U, FX3UC- 32MT- LT(-2)	CPU Direct	RS422/485 (4wire)	Setting Example 2 (page 14)	Cable Diagram 2 (page 24)
		FX3U-232-BD	RS232C	Setting Example 1 (page 12)	Cable Diagram 3 (page 26)
		FX3U-232ADP + FX3U-232-BD, FX3U- 422-BD, FX3U-485-BD, FX3U-USB-BD or FX3U-CNV-BD	RS232C	Setting Example 1 (page 12)	Cable Diagram 8 (page 37)
		FX3U-422-BD	RS422/485 (4wire)	Setting Example 2 (page 14)	Cable Diagram 6 (page 32)
		2-port adapter II by Pro-face (Model: GP070-MD11)	RS422/485 (4wire)	Setting Example 3 (page 16)	Cable Diagram 10 (page 42)
		2-port adapter II by Pro-face (Model: GP070-MD11) + FX3U-422-BD	RS422/485 (4wire)	Setting Example 3 (page 16)	Cable Diagram 11 (page 47)

Series	CPU	Link I/F	SIO Type	Setting Example	Cable Diagram
MELSEC FX Series	FX3G	CPU Direct	RS422/485 (4wire)	Setting Example 2 (page 14)	Cable Diagram 2 (page 24)
		FX3G-232-BD	RS232C	Setting Example 1 (page 12)	Cable Diagram 3 (page 26)
		FX3U-232ADP + FX3G-CNV-ADP	RS232C	Setting Example 1 (page 12)	Cable Diagram 8 (page 37)
		FX3G-422-BD	RS422/485 (4wire)	Setting Example 2 (page 14)	Cable Diagram 6 (page 32)
		2-port adapter II by Pro-face (Model: GP070-MD11)	RS422/485 (4wire)	Setting Example 3 (page 16)	Cable Diagram 10 (page 42)
		2-port adapter II by Pro-face (Model: GP070-MD11) + FX3G-422-BD	RS422/485 (4wire)	Setting Example 3 (page 16)	Cable Diagram 11 (page 47)
	FX3GC	Peripheral device connector on Main Unit	RS422/485 (4wire)	Setting Example 2 (page 14)	Cable Diagram 2 (page 24)
		RS-232C Connector on FX3U-232ADP	RS232C	Setting Example 1 (page 12)	Cable Diagram 8 (page 37)
		2-port adapter II by Pro-face (Model: GP070-MD11)	RS422/485 (4wire)	Setting Example 3 (page 16)	Cable Diagram 10 (page 42)
	FX3S	CPU Direct	RS422/485 (4wire)	Setting Example 2 (page 14)	Cable Diagram 2 (page 24)
		FX3G-232-BD	RS232C	Setting Example 1 (page 12)	Cable Diagram 3 (page 26)
		FX3G-422-BD	RS422/485 (4wire)	Setting Example 2 (page 14)	Cable Diagram 6 (page 32)
		FX3U-232ADP or FX3U-232ADP-MB + FX3S-CNV-ADP	RS232C	Setting Example 1 (page 12)	Cable Diagram 8 (page 37)
		2-port adapter II by Pro-face (Model: GP070-MD11)	RS422/485 (4wire)	Setting Example 3 (page 16)	Cable Diagram 10 (page 42)
		2-port adapter II by Pro-face (Model: GP070-MD11) + FX3G-422-BD	RS422/485 (4wire)	Setting Example 3 (page 16)	Cable Diagram 11 (page 47)

**NOTE**

- When the time of GP4000 series is automatically updated in [Clock Update Settings] of GP-Pro EX, there are some restrictions as shown below.

For details on [Clock Update Settings], refer to GP-Pro EX Reference Manual.

- FX0S, FX0N and FX1 does not support automatic update of the time. Specify [Customize] in [Clock Update Settings].
- When the time is automatically updated in FX2, FX2C and FX2NC, the real time clock function board or the E2PROM memory with the real time clock function is required.

## ■ IPC COM Port

When connecting IPC with an External Device, the COM port used depends on the series and SIO type. Please refer to the IPC manual for details.

### Usable port

Series	Usable Port		
	RS-232C	RS-422/485(4 wire)	RS-422/485(2 wire)
PS-2000B	COM1 <sup>*1</sup> , COM2, COM3 <sup>*1</sup> , COM4	-	-
PS-3450A, PS-3451A, PS3000-BA, PS3001-BD	COM1, COM2 <sup>*1*2</sup>	COM2 <sup>*1*2</sup>	COM2 <sup>*1*2</sup>
PS-3650A (T41 model), PS-3651A (T41 model)	COM1 <sup>*1</sup>	-	-
PS-3650A (T42 model), PS-3651A (T42 model)	COM1 <sup>*1*2</sup> , COM2	COM1 <sup>*1*2</sup>	COM1 <sup>*1*2</sup>
PS-3700A (Pentium®4-M) PS-3710A	COM1 <sup>*1</sup> , COM2 <sup>*1</sup> , COM3 <sup>*2</sup> , COM4	COM3 <sup>*2</sup>	COM3 <sup>*2</sup>
PS-3711A	COM1 <sup>*1</sup> , COM2 <sup>*2</sup>	COM2 <sup>*2</sup>	COM2 <sup>*2</sup>
PS4000 <sup>*3</sup>	COM1, COM2	-	-
PL3000	COM1 <sup>*1*2</sup> , COM2 <sup>*1</sup> , COM3, COM4	COM1 <sup>*1*2</sup>	COM1 <sup>*1*2</sup>
PE-4000B Atom N270	COM1, COM2	-	-
PE-4000B Atom N2600	COM1, COM2	COM3 <sup>*4</sup> , COM4 <sup>*4</sup> , COM5 <sup>*4</sup> , COM6 <sup>*4</sup>	COM3 <sup>*4</sup> , COM4 <sup>*4</sup> , COM5 <sup>*4</sup> , COM6 <sup>*4</sup>
PS5000 (Slim Panel Type Core i3 Model) <sup>*5*6</sup>	COM1, COM2 <sup>*4</sup>	COM2 <sup>*4</sup>	COM2 <sup>*4</sup>
PS5000 (Slim Panel Type Atom Model) <sup>*5*6</sup>	COM1, COM2 <sup>*7</sup>	COM2 <sup>*7</sup>	COM2 <sup>*7</sup>
PS5000 (Enclosed Panel Type) <sup>*8</sup>	COM1	-	-
PS5000 (Modular Type PFXPU/PFXPP) <sup>*5*6</sup> PS5000 (Modular Type PFXPL2B5-6)	COM1 <sup>*7</sup>	COM1 <sup>*7</sup>	COM1 <sup>*7</sup>
PS5000 (Modular Type PFXPL2B1-4)	COM1, COM2 <sup>*7</sup>	COM2 <sup>*7</sup>	COM2 <sup>*7</sup>
PS6000 (Advanced Box) PS6000 (Standard Box)	COM1 <sup>*9</sup>	*10	*10
PS6000 (Basic Box)	COM1 <sup>*9</sup>	COM1 <sup>*9</sup>	COM1 <sup>*9</sup>

\*1 The RI/5V can be switched. Use the IPC's switch to change if necessary.

\*2 Set up the SIO type with the DIP Switch. Please set up as follows according to SIO type to be used.



- \*3 When making communication between an External Device and COM port on the Expansion slot, only RS-232C is supported. However, ER (DTR/CTS) control cannot be executed because of the specification of COM port.  
For connection with External Device, use user-created cables and disable Pin Nos. 1, 4, 6 and 9. Please refer to the IPC manual for details of pin layout.
- \*4 Set up the SIO type with the BIOS. Please refer to the IPC manual for details of BIOS.
- \*5 When setting up communication between an External Device and the RS-232C/422/485 interface module, use the IPC (RS-232C) or PS5000 (RS-422/485) cable diagrams. However, when using PFXZPBMPR42P2 in a RS-422/485 (4-wire) configuration with no flow control, connect 7.RTS+ and 8.CTS+, and connect 6.RTS- and 9.CTS-.  
When using RS-422/485 communication with External Devices, you may need to reduce the transmission speed and increase the TX Wait time.
- \*6 To use RS-422/485 communication on the RS-232C/422/485 interface module, the DIP Switch setting is required. Please refer to "Knowledge Base" (FAQs) on the support site. (<http://www.pro-face.com/trans/en/manual/1001.html>)

Settings	FAQ ID
PFXZPBMPR42P2, RS422/485 change method	FA263858
PFXZPBMPR42P2 termination resistor setting	FA263974
PFXZPBMPR44P2, RS422/485 change method	FA264087
PFXZPBMPR44P2 termination resistor setting	FA264088

- \*7 Set up the SIO type with the DIP Switch. Please refer to the IPC manual for details of DIP Switch. The BOX Atom has not a switch to set the RS-232C, RS-422/485 mode. Use the BIOS for the setting.
- \*8 For the connection with the External Device, on the user-created cable read as if the connector on the Display-side is a M12 A-coding 8 pin socket. The pin assignment is the same as described in the cable diagram. For the M12 A-coding connector, use PFXZPSCNM122.
- \*9 In addition to COM1, you can also use the COM port on the optional interface.
- \*10 Install the optional interface in the expansion slot.

## DIP Switch settings (PL3000 / PS3000 Series)

### RS-232C

DIP Switch	Setting	Description
1	OFF*1	Reserved (always OFF)
2	OFF	SIO type: RS-232C
3	OFF	
4	OFF	Output mode of SD (TXD) data: Always output
5	OFF	Terminal resistance (220Ω) insertion to SD (TXD): None
6	OFF	Terminal resistance (220Ω) insertion to RD (RXD): None
7	OFF	Short-circuit of SDA (TXA) and RDA (RXA): Not available
8	OFF	Short-circuit of SDB (TXB) and RDB (RXB): Not available
9	OFF	RS (RTS) Auto control mode: Disabled
10	OFF	

\*1 When using PS-3450A, PS-3451A, PS3000-BA and PS3001-BD, turn ON the set value.

## RS-422/485 (4 wire)


DIP Switch	Setting	Description
1	OFF	Reserved (always OFF)
2	ON	SIO type: RS-422/485
3	ON	
4	OFF	Output mode of SD (TXD) data: Always output
5	OFF	Terminal resistance (220Ω) insertion to SD (TXD): None
6	OFF	Terminal resistance (220Ω) insertion to RD (RXD): None
7	OFF	Short-circuit of SDA (TXA) and RDA (RXA): Not available
8	OFF	Short-circuit of SDB (TXB) and RDB (RXB): Not available
9	OFF	RS (RTS) Auto control mode: Disabled
10	OFF	

## RS-422/485 (2 wire)

DIP Switch	Setting	Description
1	OFF	Reserved (always OFF)
2	ON	SIO type: RS-422/485
3	ON	
4	OFF	Output mode of SD (TXD) data: Always output
5	OFF	Terminal resistance (220Ω) insertion to SD (TXD): None
6	OFF	Terminal resistance (220Ω) insertion to RD (RXD): None
7	ON	Short-circuit of SDA (TXA) and RDA (RXA): Available
8	ON	Short-circuit of SDB (TXB) and RDB (RXB): Available
9	ON	RS (RTS) Auto control mode: Enabled
10	ON	

## 2 Selection of External Device

Select the External Device to be connected to the Display.

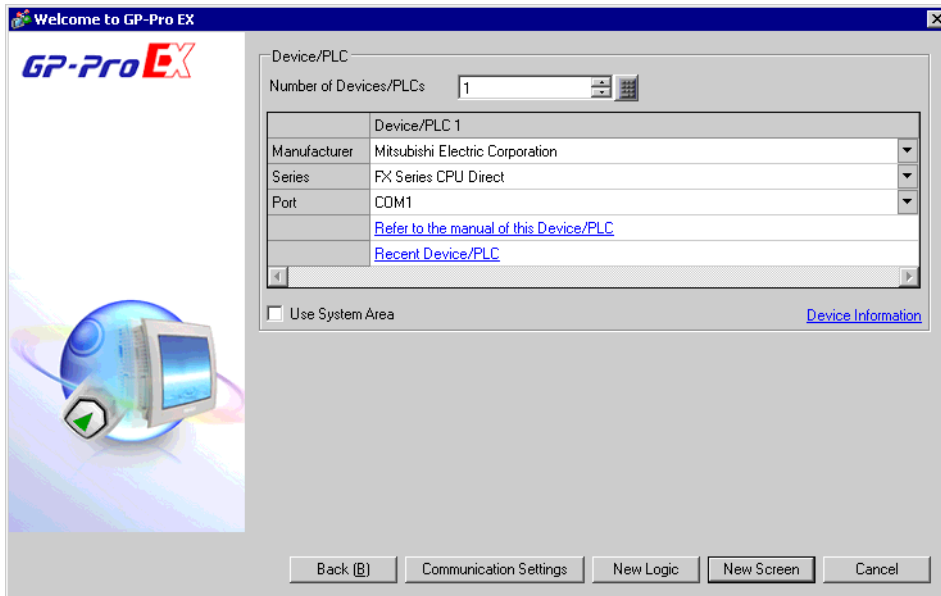

Setup Items	Setup Description
Number of Devices/PLCs	Enter an integer from 1 to 4 to define the number of Devices/PLCs to connect to the display.
Manufacturer	Select the manufacturer of the External Device to connect. Select "Mitsubishi Electric Corporation".
Series	Select the External Device model (series) and the connection method. Select "FX Series CPU Direct". In System configuration, make sure the External Device you are connecting is supported by "FX Series CPU Direct". ☞ "1 System Configuration" (page 3)
Port	Select the Display port to connect to the External Device.
Use System Area	Check this option to synchronize the system data area of the Display and the device (memory) of the External Device. When synchronized, you can use the External Device's ladder program to switch the display or display the window on the Display. Cf. GP-Pro EX Reference Manual "LS Area (Direct Access Method Area)" This feature can also be set in GP-Pro EX or in the Display's offline mode. Cf. GP-Pro EX Reference Manual "System Settings [Display Unit] - [System Area] Settings Guide" Cf. Maintenance/Troubleshooting Guide "Main Unit - System Area Settings"

## 3 Example of Communication Setting

Examples of communication settings of the Display and the External Device, recommended by Pro-face, are shown.

### 3.1 Setting Example 1

#### ■ Setting of GP-Pro EX

#### ◆ Communication Settings

To display the setup screen, from the [Project] menu, point to [System Settings] and select [Device/PLC].

Device/PLC 1

Summary [Change Device/PLC](#)

Manufacturer  Series  Port

Text Data Mode  [Change](#)

Communication Settings

RS232C     RS422/485(2wire)     RS422/485(4wire)

Speed

Data Length  7     8

Parity  NONE     EVEN     ODD

Stop Bit  1     2

Flow Control  NONE     ER(DTR/CTS)     XON/XOFF

Timeout  (sec)

Retry

Wait To Send  (ms)

Adapter  Direct     2 Port

RI / VCC     VCC

In the case of RS232C, you can select the 9th pin to RI (Input) or VCC (5V Power Supply). If you use the Digital's RS232C Isolation Unit or CPU I/F Cable for Mitsubishi PLC FX Series (Digital's:GP430-IP11-0), please select it to VCC.


Device-Specific Settings


Allowable Number of Devices/PLCs  [Add Device](#)

No.	Device Name	Settings
<input type="button" value="↓"/> 1	<input type="text" value="PLC1"/>	<input type="text"/>

[Add Indirect Device](#)

### ◆ Device Setting

To display the [Individual Device Settings] dialog box, from [Device-Specific Settings] in the [Device/PLC] window, select the external device and click [Settings]  .

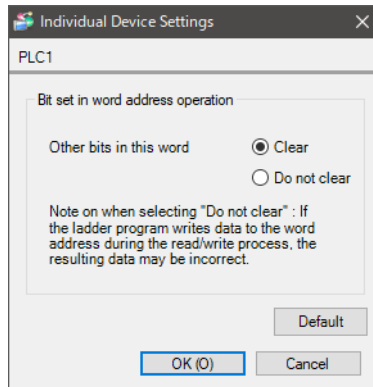

### ■ Setting of External Device

When the link I/F you use is the CPU Direct type, setting of External Device is not necessary. When you use a function extension board and a communication adapter, make the settings as shown below.

- 1 Uncheck the checkbox for [Operate communication setting] in [PLC system (2)] of Mitsubishi's GP-Developer.
- 2 Store data "0" in D8120 and between D8173 and D8180. Then, set M8070 and M8071 to OFF.

When using Channel 2 for FX3U, FX3UC-32MT-LT(-2), FX3G or FX3GC, store data "0" in D8420 instead of D8120. When using Channel 1, store data "0" in D8120.

## 3.2 Setting Example 2

### ■ Setting of GP-Pro EX

#### ◆ Communication Settings

To display the setup screen, from the [Project] menu, point to [System Settings] and select [Device/PLC].

Device/PLC 1

Summary [Change Device/PLC](#)

Manufacturer  Series  Port

Text Data Mode  [Change](#)

Communication Settings

RS232C   
 RS422/485(2wire)   
 RS422/485(4wire)

Speed

Data Length  7     8

Parity  NONE     EVEN     ODD

Stop Bit  1     2

Flow Control  NONE     ER(DTR/CTS)     XON/XOFF

Timeout  (sec)

Retry

Wait To Send  (ms)

Adapter  Direct     2 Port

RI / VCC   
 RI   
 VCC


In the case of RS232C, you can select the 9th pin to RI (Input) or VCC (5V Power Supply). If you use the Digital's RS232C Isolation Unit or CPU I/F Cable for Mitsubishi PLC FX Series (Digital's:GP4304P11-0), please select it to VCC.


Device-Specific Settings

Allowable Number of Devices/PLCs  [Add Device](#)

No.	Device Name	Settings	<a href="#">Add Indirect Device</a>
1	PLC1	<input type="text"/>	<input type="button" value="+"/>

### ◆ Device Setting

To display the [Individual Device Settings] dialog box, from [Device-Specific Settings] in the [Device/PLC] window, select the external device and click [Settings]  .

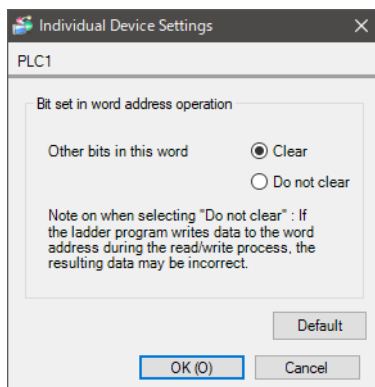

### ■ Setting of External Device

When the link I/F you use is the CPU Direct type, setting of External Device is not necessary. When you use a function extension board and a communication adapter, make the settings as shown below.

- 1 Uncheck the checkbox for [Operate communication setting] in [PLC system (2)] of Mitsubishi's GP-Developer.
- 2 Store data "0" in D8120 and between D8173 and D8180. Then, set M8070 and M8071 to OFF.

When using Channel 2 for FX3U, FX3UC-32MT-LT(-2), FX3G or FX3GC, store data "0" in D8420 instead of D8120. When using Channel 1, store data "0" in D8120.

### 3.3 Setting Example 3

#### ■ Setting of GP-Pro EX

##### ◆ Communication Settings

To display the setup screen, from the [Project] menu, point to [System Settings] and select [Device/PLC].

Device/PLC 1

Summary [Change Device/PLC](#)

Manufacturer  Series  Port

Text Data Mode  [Change](#)

Communication Settings

RS232C   
  RS422/485(2wire)   
  RS422/485(4wire)

Speed

Data Length  7     8

Parity  NONE     EVEN     ODD

Stop Bit  1     2

Flow Control  NONE     ER(DTR/CTS)     XON/XOFF

Timeout  (sec)

Retry

Wait To Send  (ms)

Adapter  Direct     2 Port

RI / VCC   
  RI   
  VCC

In the case of RS232C, you can select the 9th pin to RI (Input) or VCC (5V Power Supply). If you use the Digital's RS232C Isolation Unit or CPU I/F Cable for Mitsubishi PLC FX Series (Digital's:GP430-IP11-0), please select it to VCC.

Device-Specific Settings


Allowable Number of Devices/PLCs  [Add Device](#)


No.	Device Name	Settings
<input type="button" value="1"/>	<input type="text" value="PLC1"/>	<input type="button" value="Settings"/>

[Add Indirect Device](#)



### ◆ Device Setting

To display the [Individual Device Settings] dialog box, from [Device-Specific Settings] in the [Device/PLC] window, select the external device and click [Settings]  .

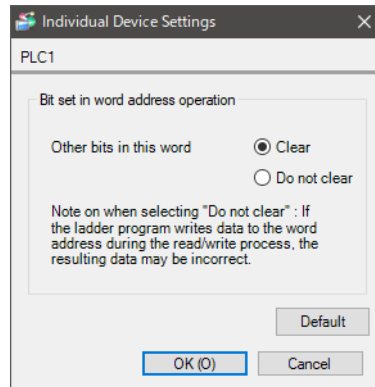

### ■ Setting of External Device

When the link I/F you use is the CPU Direct type, setting of External Device is not necessary. When you use a function extension board and a communication adapter, make the settings as shown below.

- 1 Uncheck the checkbox for [Operate communication setting] in [PLC system (2)] of Mitsubishi's GP-Developer.
- 2 Store data "0" in D8120 and between D8173 and D8180. Then, set M8070 and M8071 to OFF.

When using Channel 2 for FX3U, FX3UC-32MT-LT(-2), FX3G or FX3GC, store data "0" in D8420 instead of D8120. When using Channel 1, store data "0" in D8120.

## 4 Setup Items

Set communication settings of the Display with GP-Pro EX or in offline mode of the Display.

The setting of each parameter must be identical to that of External Device.

☞ "3 Example of Communication Setting" (page 12)

### 4.1 Setup Items in GP-Pro EX

#### ■ Communication Settings

To display the setup screen, from the [Project] menu, point to [System Settings] and select [Device/PLC].

Device/PLC 1

Summary [Change Device/PLC](#)

Manufacturer  Series  Port

Text Data Mode  [Change](#)

Communication Settings

SIO Type  RS232C  RS422/485(2wire)  RS422/485(4wire)

Speed

Data Length  7  8

Parity  NONE  EVEN  ODD

Stop Bit  1  2

Flow Control  NONE  ER(DTR/CTS)  XON/XOFF

Timeout  (sec)

Retry

Wait To Send  (ms)

Adapter  Direct  2 Port

RI / VCC  RI  VCC

In the case of RS232C, you can select the 9th pin to RI (Input) or VCC (5V Power Supply). If you use the Digital's RS232C Isolation Unit or CPU I/F Cable for Mitsubishi PLC FX Series (Digital's:GP430-IP11-0), please select it to VCC.

Device-Specific Settings

Allowable Number of Devices/PLCs  [Add Device](#)

No.	Device Name	Settings
<input type="button" value="1"/>	<input type="text" value="PLC1"/>	<input type="button" value="Settings"/>

[Add Indirect Device](#)


Setup Items	Setup Description
SIO Type	Select the SIO type to communicate with the External Device.
Speed	Select speed between External Device and Display. <b>NOTE</b> <ul style="list-style-type: none"> <li>Supported range of speed varies depending on the type. FX3U, FX3UC-32MT-LT(-2) and FX3G support up to 115.2K. FX1N, FX1NC, FX2N and FX2NC support up to 38400. Note that they support up to 19200 when using FX-232W or FX232AWC. Other CPUs support up to 9600.</li> </ul>
Data Length	Select data length.
Parity	Select how to check parity.
Stop Bit	Select stop bit length.
Flow Control	Select the communication control method to prevent overflow of transmission and reception data.


Setup Items	Setup Description
Timeout	Use an integer from 1 to 127 to enter the time (s) for which the Display waits for the response from the External Device.
Retry	In case of no response from the External Device, use an integer from 0 to 255 to enter how many times the Display retransmits the command.
Wait To Send	Use an integer from 0 to 255 to enter standby time (ms) for the Display from receiving packets to transmitting next commands.
Adapter	Select "Direct" or "2 Port " for the adapter to be used. When using 2-port adapter II, select "2 Port".
RI/VCC	You can switch RI/VCC of the 9th pin when you select RS232C for SIO type. It is necessary to change RI/5V by changeover switch of IPC when connect with IPC. Please refer to the manual of the IPC for more detail.

**NOTE**

- Refer to the GP-Pro EX Reference Manual for Indirect Device.  
Cf. GP-Pro EX Reference Manual "Changing the Device/PLC at Runtime (Indirect Device)"

## ■ Device Setting

To display the [Individual Device Settings] dialog box, from [Device-Specific Settings] in the [Device/PLC] window, select the external device and click [Settings] .

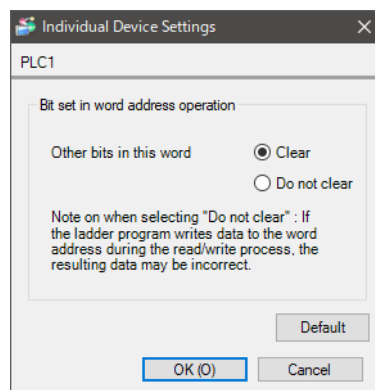

Setup Items	Setup Description
Other bits in this word	Select "Clear" or "Do not clear" for the handling of other bit data in the same word when a bit operation is performed to a bit specified word address.

## 4.2 Setup Items in Offline Mode

- NOTE** • Refer to the Maintenance/Troubleshooting guide for information on how to enter offline mode or about the operation.

Cf. Maintenance/Troubleshooting Guide "Offline Mode"

- The number of the setup items to be displayed for 1 page in the offline mode depends on the Display in use. Please refer to the Reference manual for details.

### ■ Communication Settings

To display the setting screen, touch [Device/PLC Settings] from [Peripheral Settings] in offline mode. Touch the External Device you want to set from the displayed list.

(Page 1/2)

Comm.	Device	Option		
FX Series CPU Direct		[COM1]	Page 1/1	
SIO Type	RS232C			
Speed	9600			
Data Length	<input checked="" type="radio"/> 7 <input type="radio"/> 8			
Parity	<input type="radio"/> NONE <input checked="" type="radio"/> EVEN <input type="radio"/> ODD			
Stop Bit	<input checked="" type="radio"/> 1 <input type="radio"/> 2			
Flow Control	ER(DTR/CTS)			
Timeout(s)	3			
Retry	2			
Wait To Send(ms)	0			
Adapter	2 Port			
Exit		Back		2022/12/02 15:48:01

Setup Items	Setup Description
SIO Type	<p>Select the SIO type to communicate with the External Device.</p> <p><b>IMPORTANT</b></p> <p>To make the communication settings correctly, confirm the serial interface specifications of Display unit for [SIO Type].</p> <p>We cannot guarantee the operation if a communication type that the serial interface does not support is specified.</p> <p>For details concerning the serial interface specifications, refer to the manual for Display unit.</p>
Speed	<p>Select speed between External Device and Display.</p> <p><b>NOTE</b></p> <ul style="list-style-type: none"> <li>• Supported range of speed varies depending on the type. FX3U, FX3UC-32MT-LT(-2) and FX3G support up to 115.2K. FX1N, FX1NC, FX2N and FX2NC support up to 38400. Note that they support up to 19200 when using FX-232W or FX232AWC. Other CPUs support up to 9600.</li> </ul>

Setup Items	Setup Description
Data Length	Select data length.
Parity	Select how to check parity.
Stop Bit	Select stop bit length.
Flow Control	Select the communication control method to prevent overflow of transmission and reception data.
Timeout	Use an integer from 1 to 127 to enter the time (s) for which the Display waits for the response from the External Device.
Retry	In case of no response from the External Device, use an integer from 0 to 255 to enter how many times the Display retransmits the command.
Wait To Send	Use an integer from 0 to 255 to enter standby time (ms) for the Display from receiving packets to transmitting next commands.
Adapter	Select "Direct" or "2 Port " for the adapter to be used. When using 2-port adapter II, select "2 Port".

## ■ Device Setting

To display the setting screen, touch [Device/PLC Settings] from [Peripheral Settings]. Touch the External Device you want to set from the list that appears, and touch [Device].

Comm.	Device	Option		
FX Series CPU Direct		[COM1]	Page 1/1	
Device/PLC Name		[PLC1]		
Bit set in word address operation				
Other bits		Clear		
	Exit		Back	2022/12/02 15:48:24

Setup Items	Setup Description
Device/PLC Name	Select the External Device to set. Device/PLC Name is the title of the External Device set with GP-Pro EX. (Initial value [PLC1])
Bit set in word address operation	Displays "Clear" or "Do not clear" for the handling of other bit data in the same word when a bit operation is performed to a bit specified word address. (Cannot be set in offline mode.)

## ■ Option

To display the setting screen, touch [Device/PLC Settings] from [Peripheral Settings]. Touch the External Device you want to set from the displayed list, and touch [Option].

Comm.	Device	Option		
FX Series CPU Direct		[COM1]	Page 1/1	
Device/PLC Name <input type="text" value="PLC1"/>				
Bit set in word address operation				
Other bits		Clear		
	Exit		Back	2022/12/02 15:48:24

Setup Items	Setup Description
RI/VCC	You can switch RI/VCC of the 9th pin when you select RS232C for SIO type. It is necessary to change RI/5V by changeover switch of IPC when connect with IPC. Please refer to the manual of the IPC for more detail.

### NOTE

- GP-4100 series, GP-4\*01TM and GP-Rear Module do not have the [RI/VCC] setting in the offline mode.

## 5 Cable Diagram

The following cable diagrams may be different from cable diagrams recommended by External Device Manufacturer.

Please be assured there is no operational problem in applying the cable diagram shown in this manual.

- The FG pin of the External Device body must be grounded according to your country’s applicable standard. Refer to your External Device manual for details.
- SG and FG are connected inside the Display. When connecting the External Device to SG, design your system to avoid short-circuit loops.
- Connect an isolation unit if the communication is not stable due to noise or other factors.

### 5.1 Cable Diagram 1

External Device (Connection Port)	Cable		Notes
GP3000 (COM1) GP4000* <sup>1</sup> (COM1) SP5000* <sup>2</sup> (COM1/2) SP-5B00 (COM1) ST3000 (COM1) ST6000 (COM1) STM6000 (COM1) STC6000 (COM1) LT3000 (COM1) IPC* <sup>3</sup> PC/AT	1A	9-25 232C conversion cable by Pro-face CA3-CBLCBT232-01 (0.2m) + Mitsubishi PLC FX Series program control I/F cable by Pro-face GP430-IP11-O (5m)	

\*1 All GP4000 models except GP-4100 series, GP-4\*01TM, GP-Rear Module and GP-4203T


\*2 Except SP-5B00

\*3 Only the COM port which can communicate by RS-232C can be used. (Except PS6000)

■ IPC COM Port (page 8)

**NOTE** • This cable system cannot be used for connection with GP-4100 series, GP-4\*01TM and GP-Rear Module.

1A)

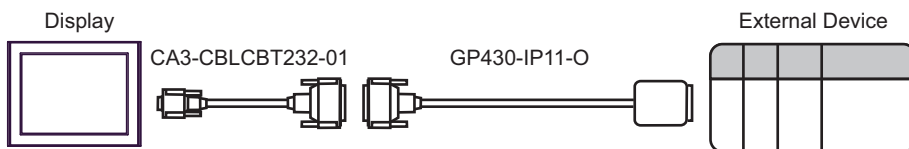

## 5.2 Cable Diagram 2

External Device (Connection Port)	Cable		Notes
GP3000 <sup>*1</sup> (COM1) AGP-3302B (COM2) GP4000 <sup>*2</sup> (COM2) GP-4201T (COM1) GP-4*01TM (COM1) GP-Rear Module (COM1) SP5000 <sup>*3</sup> (COM1/2) SP-5B00 (COM2) ST3000 <sup>*4</sup> (COM2) ST6000 <sup>*5</sup> (COM2) ST-6200 (COM1) STM6000 (COM1) STC6000 (COM1) ET6000 <sup>*6</sup> (COM2) LT3000 (COM1) IPC <sup>*7</sup> PS6000 (Basic Box) (COM1/2)	2A	Mitsubishi PLC FX-Series Connection Cable by Pro-face CA3-CBLFX/1M-01 (1m) or CA3-CBLFX/5M-01 (5m)	
GP-4106 (COM1) GP-4116T (COM1)	2B	Mitsubishi PLC FX Series CPU I/F Cable by Pro-face ZC9CBFX11 (1m) or ZC9CBFX51 (5m)	
PE-4000B <sup>*8</sup> PS5000 <sup>*8</sup> PS6000 (Optional Interface) <sup>*8</sup>	2C	Mitsubishi PLC FX Series CPU I/F Cable by Pro-face ZC9CBFX11 (1m) or ZC9CBFX51 (5m)	

\*1 All GP3000 models except AGP-3302B

\*2 All GP4000 models except GP-4100 series, GP-4\*01TM, GP-Rear Module, GP-4201T and GP-4\*03T

\*3 Except SP-5B00

\*4 All ST models except AST-3211A and AST-3302B

\*5 Except ST-6200

\*6 Due to the COM port specifications, flow control is not possible. Omit wiring the control pins on the Display side of the cable diagram.


\*7 Only the COM port which can communicate by RS-422/485 (4 wire) can be used. (Except PE-4000B, PS5000, and PS6000)

■ IPC COM Port (page 8)

\*8 Only the COM port which can communicate by RS-422/485 (4 wire) can be used.


■ IPC COM Port (page 8)

2A)

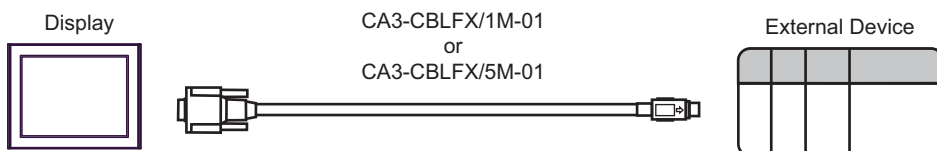




2B)

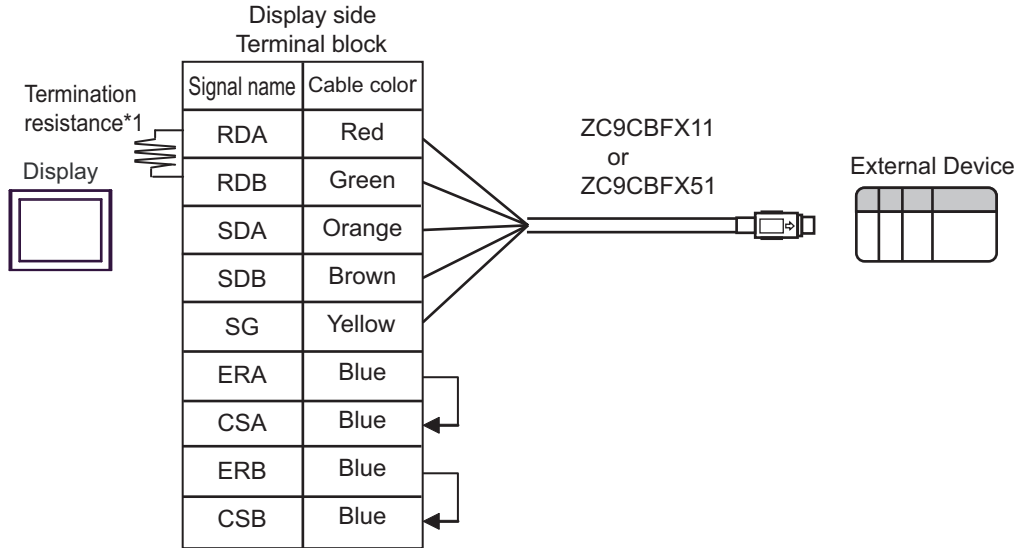

\*1 The resistance in the Display is used as the termination resistance. Set the value of the DIP Switch on the rear of the Display as shown in the table below.

DIP Switch No.	Set Value
1	OFF
2	OFF
3	ON
4	OFF

2C)

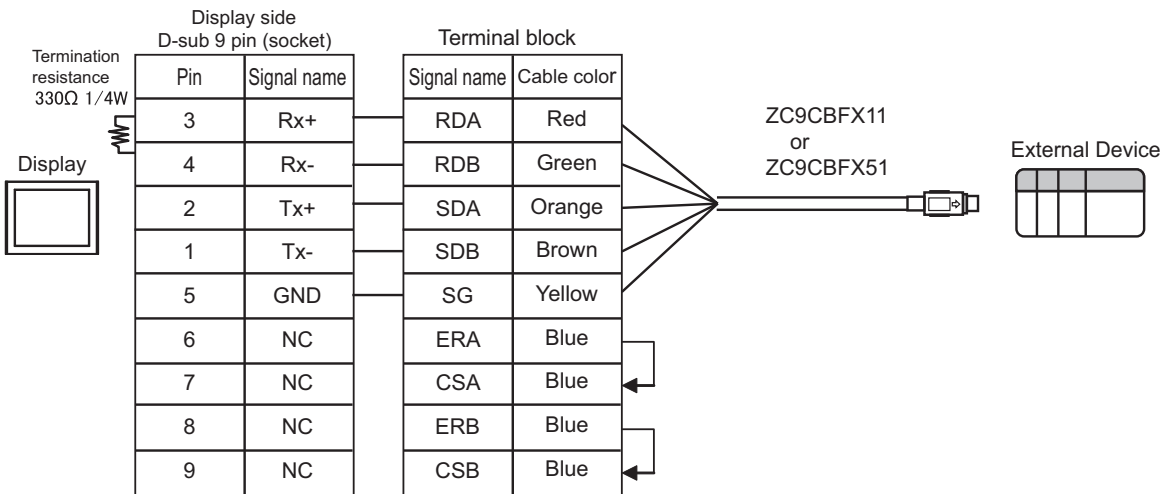

### 5.3 Cable Diagram 3

External Device (Connection Port)	Cable		Notes
GP3000 (COM1) GP4000* <sup>1</sup> (COM1) SP5000* <sup>2</sup> (COM1/2) SP-5B00 (COM1) ST3000 (COM1) ST6000 (COM1) STM6000 (COM1) STC6000 (COM1) ET6000 (COM1) LT3000 (COM1) IPC* <sup>3</sup> PC/AT	3A	RS232C communication cable by Mitsubishi Electric Corp. FX-232CAB-1 (3m) + Function extension board by Mitsubishi Electric Corp.* <sup>4</sup> FX1N-232-BD, FX2N-232-BD, FX3U-232-BD or FX3G-232-BD	The cable length must be 15m or less.
	3B	User-created cable + Function extension board by Mitsubishi Electric Corp.* <sup>4</sup> FX1N-232-BD, FX2N-232-BD, FX3U-232-BD or FX3G-232-BD	
GP-4105 (COM1) GP-4115T (COM1) GP-4115T3 (COM1)	3C	User-created cable + Function extension board by Mitsubishi Electric Corp.* <sup>4</sup> FX1N-232-BD, FX2N-232-BD, FX3U-232-BD or FX3G-232-BD	The cable length must be 15m or less.

\*1 All GP4000 models except GP-4100 series and GP-4203T

\*2 Except SP-5B00


\*3 Only the COM port which can communicate by RS-232C can be used.

■ IPC COM Port (page 8)


\*4 Supported function extension boards vary depending on the model.

CPU	Function Extension Board
FX1S, FX1N	FX1N-232-BD
FX2N	FX2N-232-BD
FX3U, FX3UC-32MT-LT(-2)	FX3U-232-BD
FX3G, FX3S	FX3G-232-BD


3A)

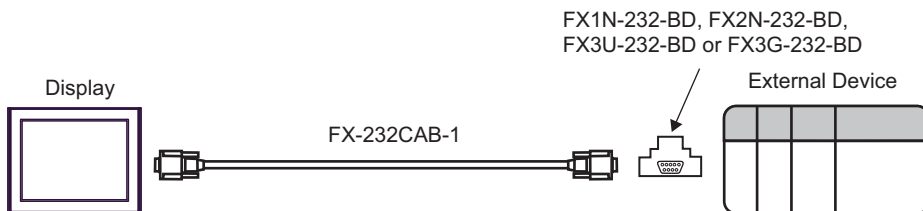

3B)

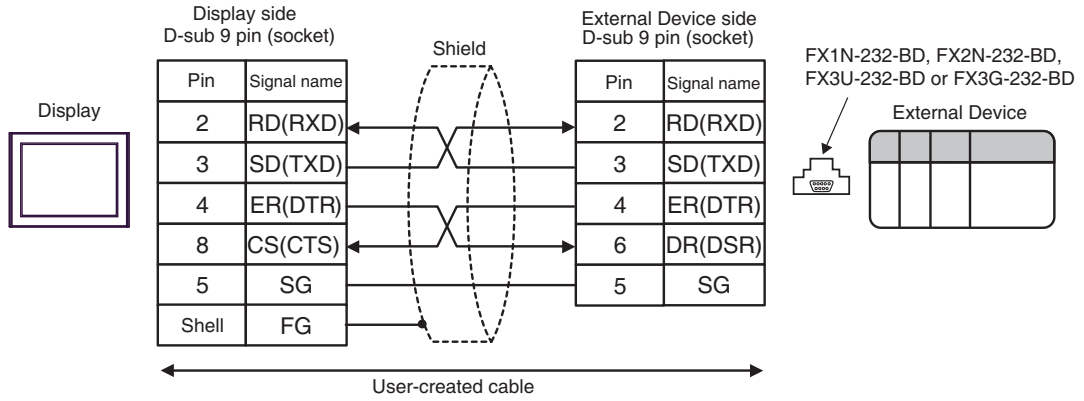

3C)

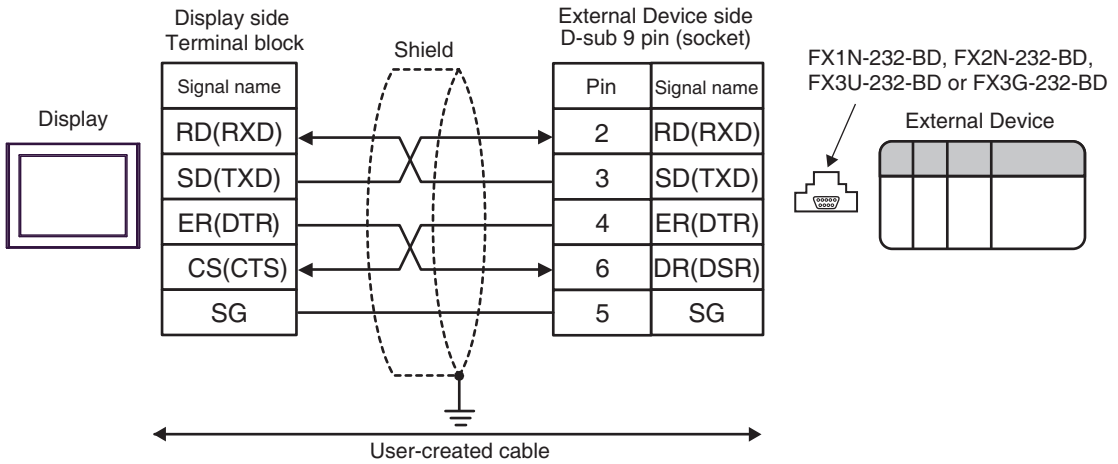


### 5.4 Cable Diagram 4

External Device	Cable		Notes
GP3000 (COM1) GP4000* <sup>1</sup> (COM1) SP5000* <sup>2</sup> (COM1/2) SP-5B00 (COM1) ST3000 (COM1) ST6000 (COM1) STM6000 (COM1) STC6000 (COM1) ET6000 (COM1) LT3000 (COM1) IPC* <sup>3</sup> PC/AT	4A	RS-232C cable by Pro-face CA3-CBL232/5M-01 (5m) + Communication adapter by Mitsubishi Electric Corp. FX0N-232ADP + Function extension board by Mitsubishi Electric Corp.* <sup>4</sup> FX1N-CNV-BD or FX2N-CNV-BD	The cable length must be 15m or less.
	4B	User-created cable + Communication adapter by Mitsubishi Electric Corp. FX0N-232ADP + Function extension board by Mitsubishi Electric Corp.* <sup>4</sup> FX1N-CNV-BD or FX2N-CNV-BD	
GP-4105 (COM1) GP-4115T (COM1) GP-4115T3 (COM1)	4C	User-created cable + Communication adapter by Mitsubishi Electric Corp. FX0N-232ADP + Function extension board by Mitsubishi Electric Corp.* <sup>4</sup> FX1N-CNV-BD or FX2N-CNV-BD	The cable length must be 15m or less.


- \*1 All GP4000 models except GP-4100 series and GP-4203T
- \*2 Except SP-5B00
- \*3 Only the COM port which can communicate by RS-232C can be used.
  - IPC COM Port (page 8)
- \*4 Supported function extension boards vary depending on the model.

CPU	Function Extension Board
FX1S, FX1N	FX1N-CNV-BD
FX2N	FX2N-CNV-BD


4A)

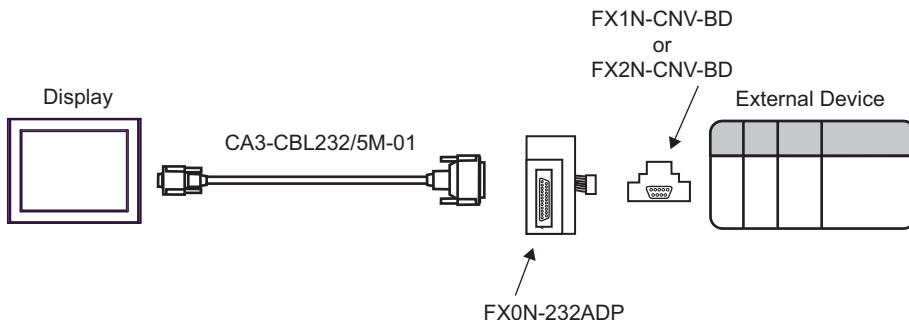

4B)

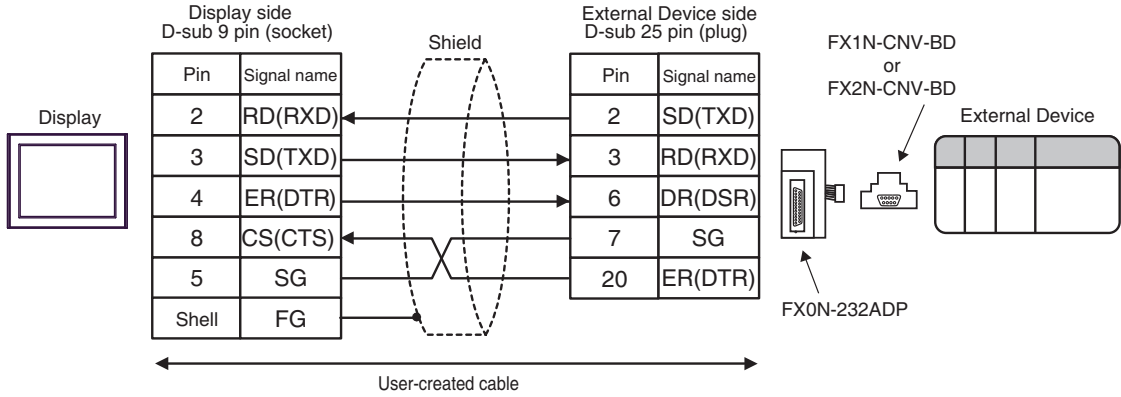

4C)

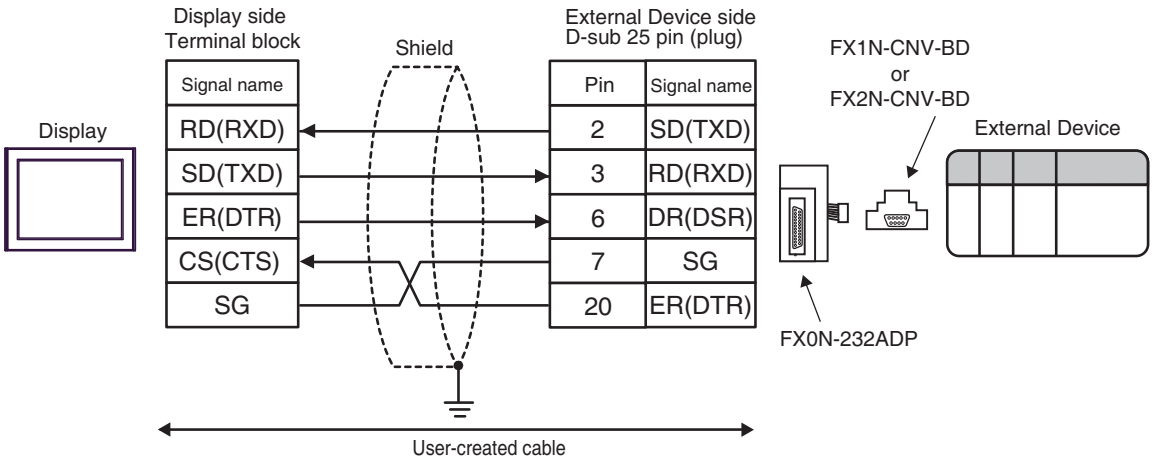

### 5.5 Cable Diagram 5

External Device (Connection Port)	Cable		Notes
GP3000 (COM1) GP4000 <sup>*1</sup> (COM1) SP5000 <sup>*2</sup> (COM1/2) SP-5B00 (COM1) ST3000 (COM1) ST6000 (COM1) STM6000 (COM1) STC6000 (COM1) ET6000 (COM1) LT3000 (COM1) IPC <sup>*3</sup> PC/AT	5A	RS-232C cable by Pro-face CA3-CBL232/5M-01 (5m) + Communication adapter by Mitsubishi Electric Corp. FX0N-232ADP	The cable length must be 15m or less.
	5B	User-created cable + Communication adapter by Mitsubishi Electric Corp. FX0N-232ADP	
GP-4105 (COM1) GP-4115T (COM1) GP-4115T3 (COM1)	5C	User-created cable + Communication adapter by Mitsubishi Electric Corp. FX0N-232ADP	The cable length must be 15m or less.


\*1 All GP4000 models except GP-4100 series and GP-4203T

\*2 Except SP-5B00


\*3 Only the COM port which can communicate by RS-232C can be used.

■ IPC COM Port (page 8)


5A)

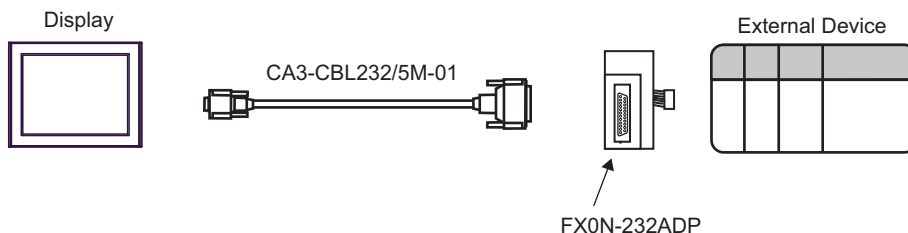

5B)

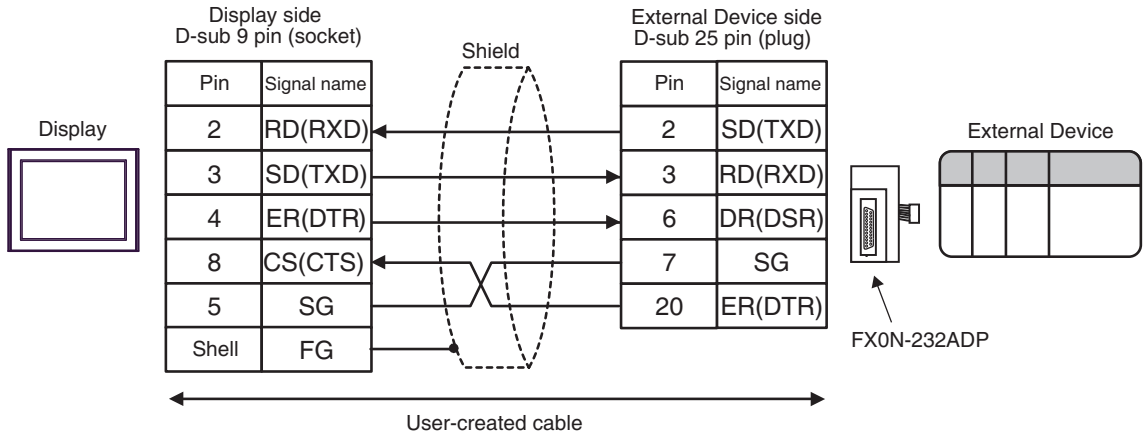

5C)

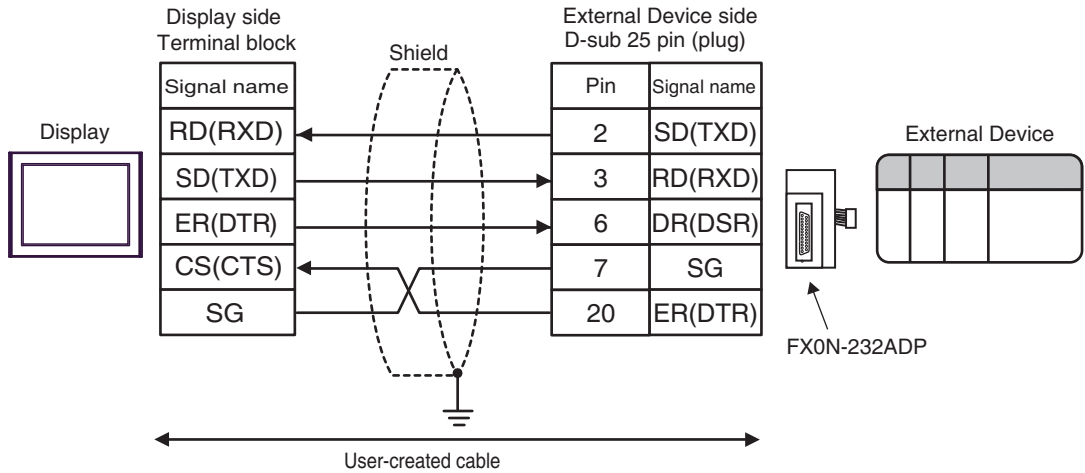

## 5.6 Cable Diagram 6

External Device (Connection Port)	Cable		Notes
GP3000* <sup>1</sup> (COM1) AGP-3302B (COM2) GP4000* <sup>2</sup> (COM2) GP-4201T (COM1) GP-4*01TM (COM1) GP-Rear Module (COM1) SP5000* <sup>3</sup> (COM1/2) SP-5B00 (COM2) ST3000* <sup>4</sup> (COM2) ST6000* <sup>5</sup> (COM2) ST-6200 (COM1) STM6000 (COM1) STC6000 (COM1) ET6000* <sup>6</sup> (COM2) LT3000 (COM1) IPC* <sup>7</sup> PS6000 (Basic Box) (COM1/2)	6A	Mitsubishi FX connection cable by Pro-face CA3-CBLFX/1M-01 (1m) or CA3-CBLFX/5M-01 (5m) + Function extension board by Mitsubishi Electric Corp.* <sup>8</sup> FX1N-422-BD, FX2N-422-BD, FX3U-422-BD or FX3G-422-BD	
GP-4106 (COM1) GP-4116T (COM1)	6B	Mitsubishi PLC FX Series CPU I/F Cable by Pro-face ZC9CBFX11 (1m) or ZC9CBFX51 (5m) + Function extension board by Mitsubishi Electric Corp.* <sup>8</sup> FX1N-422-BD, FX2N-422-BD, FX3U-422-BD or FX3G-422-BD	
PE-4000B* <sup>9</sup> PS5000* <sup>9</sup> PS6000 (Optional Interface)* <sup>9</sup>	6C	Mitsubishi PLC FX Series CPU I/F Cable by Pro-face ZC9CBFX11 (1m) or ZC9CBFX51 (5m) + Function extension board by Mitsubishi Electric Corp.* <sup>8</sup> FX1N-422-BD, FX2N-422-BD, FX3U-422-BD or FX3G-422-BD	

\*1 All GP3000 models except AGP-3302B

\*2 All GP4000 models except GP-4100 series, GP-4\*01TM, GP-Rear Module, GP-4201T and GP-4\*03T

\*3 Except SP-5B00

\*4 All ST models except AST-3211A and AST-3302B

\*5 Except ST-6200

\*6 Due to the COM port specifications, flow control is not possible. Omit wiring the control pins on the Display side of the cable diagram.

\*7 Only the COM port which can communicate by RS-422/485 (4 wire) can be used. (Except PE-4000B, PS5000, and PS6000)

■ IPC COM Port (page 8)


\*8 Supported function extension boards vary depending on the model.

CPU	Function Extension Board
FX1S, FX1N	FX1N-422-BD
FX2N	FX2N-422-BD
FX3U, FX3UC-32MT-LT(-2)	FX3U-422-BD
FX3G, FX3S	FX3G-422-BD




- \*9 Only the COM port which can communicate by RS-422/485 (4 wire) can be used.
  - IPC COM Port (page 8)

6A)

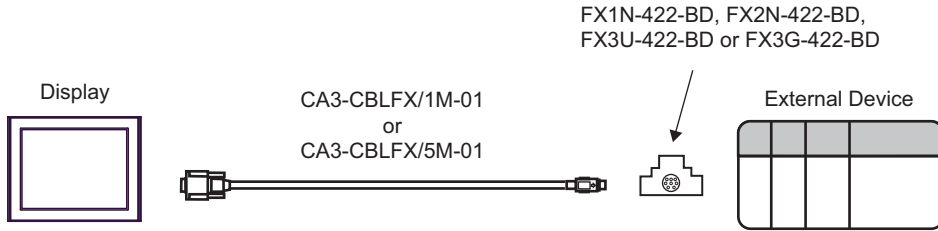


6B)

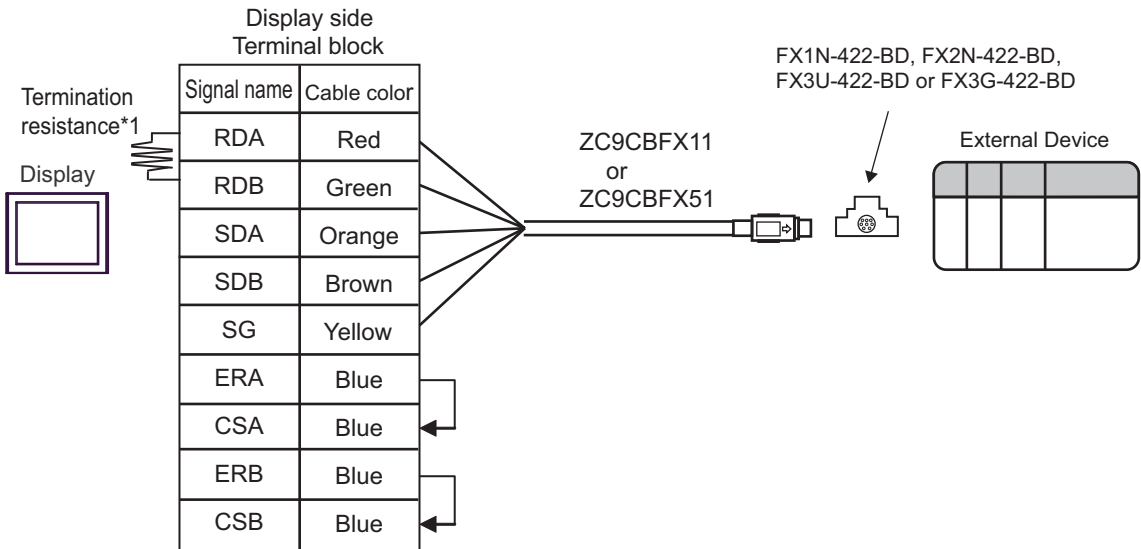

\*1 The resistance in the Display is used as the termination resistance. Set the value of the DIP Switch on the rear of the Display as shown in the table below.

DIP Switch No.	Set Value
1	OFF
2	OFF
3	ON
4	OFF

6C)

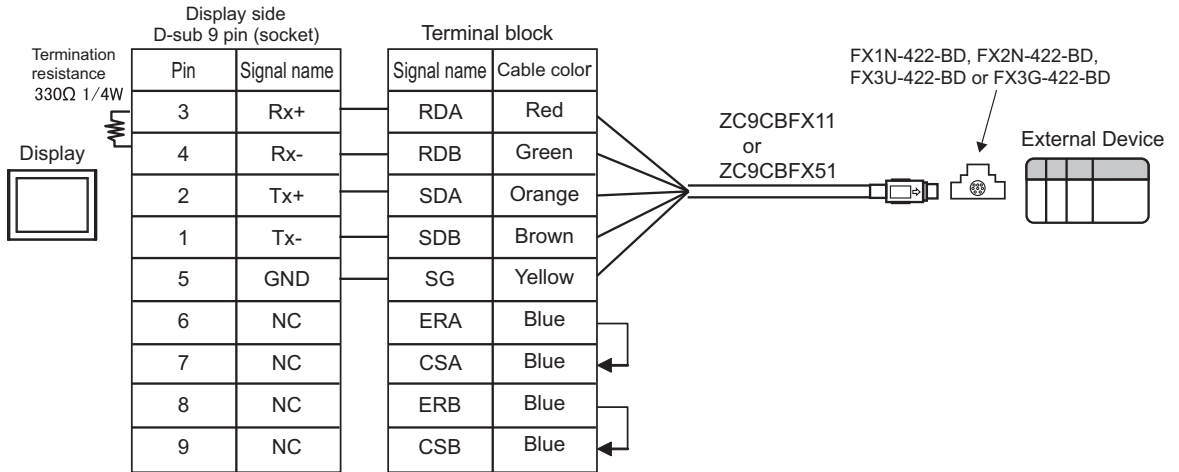

### 5.7 Cable Diagram 7

External Device (Connection Port)	Cable		Notes
GP3000 (COM1) GP4000* <sup>1</sup> (COM1) SP5000* <sup>2</sup> (COM1/2) SP-5B00 (COM1) ST3000 (COM1) ST6000 (COM1) STM6000 (COM1) STC6000 (COM1) ET6000 (COM1) LT3000 (COM1) IPC* <sup>3</sup> PC/AT	7A	RS232C communication cable by Mitsubishi Electric Corp. FX-232CAB-1 (3m) + Communication adapter by Mitsubishi Electric Corp. FX2NC-232ADP + Function extension board by Mitsubishi Electric Corp.* <sup>4</sup> FX1N-CNV-BD or FX2N-CNV-BD	The cable length must be 15m or less.
	7B	User-created cable + Communication adapter by Mitsubishi Electric Corp. FX2NC-232ADP + Function extension board by Mitsubishi Electric Corp.* <sup>4</sup> FX1N-CNV-BD or FX2N-CNV-BD	
GP-4105 (COM1) GP-4115T (COM1) GP-4115T3 (COM1)	7C	User-created cable + Communication adapter by Mitsubishi Electric Corp. FX2NC-232ADP + Function extension board by Mitsubishi Electric Corp.* <sup>4</sup> FX1N-CNV-BD or FX2N-CNV-BD	The cable length must be 15m or less.

\*1 All GP4000 models except GP-4100 series and GP-4203T

\*2 Except SP-5B00


\*3 Only the COM port which can communicate by RS-232C can be used.

■ IPC COM Port (page 8)


\*4 Supported function extension boards vary depending on the model.

CPU	Function Extension Board
FX1S, FX1N	FX1N-CNV-BD
FX2N	FX2N-CNV-BD


7A)

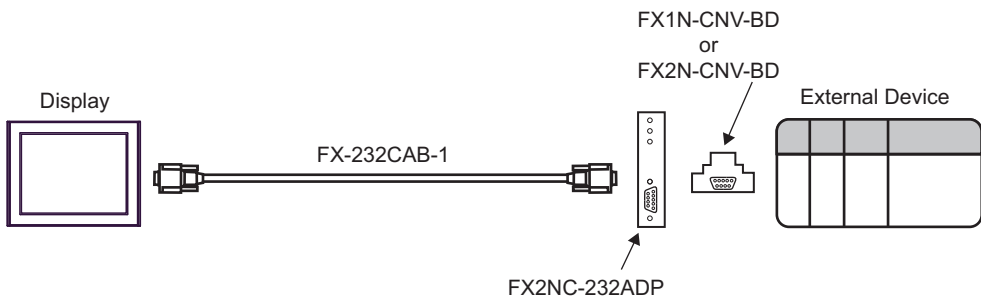

7B)

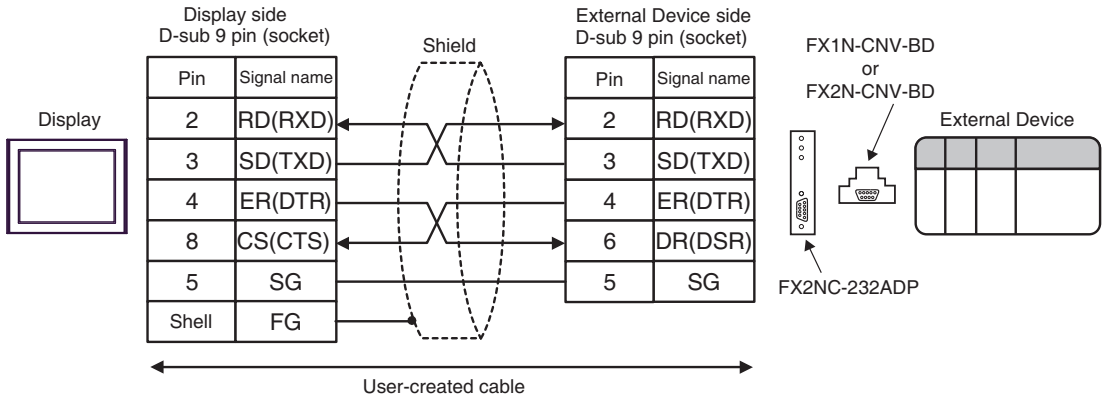

7C)

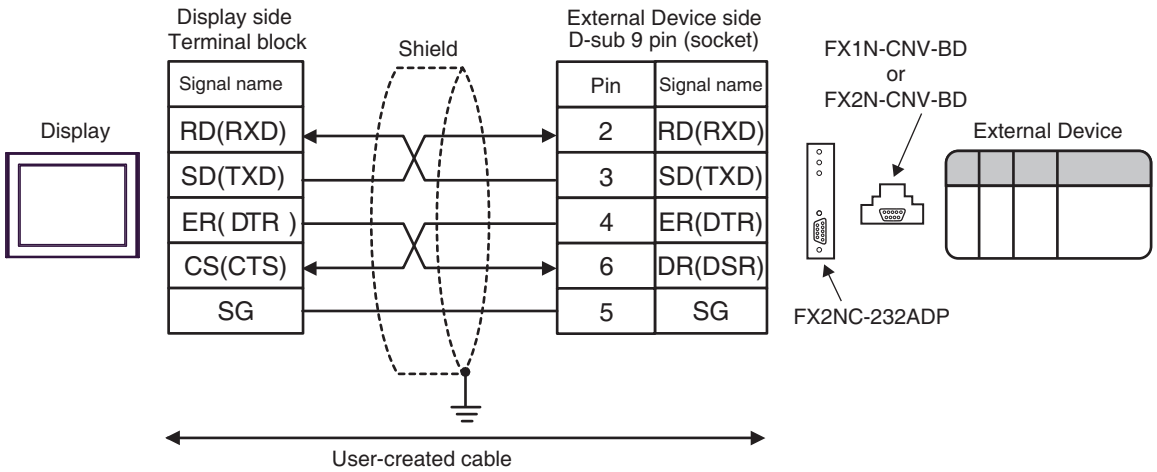

## 5.8 Cable Diagram 8

External Device (Connection Port)	Cable		Notes
GP3000 (COM1) GP4000 <sup>*1</sup> (COM1) SP5000 <sup>*2</sup> (COM1/2) SP-5B00 (COM1) ST3000 (COM1) ST6000 (COM1) STM6000 (COM1) STC6000 (COM1) ET6000 (COM1) LT3000 (COM1) IPC <sup>*3</sup> PC/AT	8A	RS232C communication cable by Mitsubishi Electric Corp. FX-232CAB-1 (3m) + Communication adapter by Mitsubishi Electric Corp. <sup>*4</sup> FX3U-232ADP or FX3U-232ADP-MB + Function extension board by Mitsubishi Electric Corp. <sup>*5</sup> FX3U-232-BD, FX3U-422-BD, FX3U-485-BD, FX3U-USB-BD, FX3U-CNV-BD, FX3G-CNV-ADP or FX3S-CNV-ADP	The cable length must be 15m or less.
	8B	User-created cable + Communication adapter by Mitsubishi Electric Corp. <sup>*4</sup> FX3U-232ADP or FX3U-232ADP-MB + Function extension board by Mitsubishi Electric Corp. <sup>*5</sup> FX3U-232-BD, FX3U-422-BD, FX3U-485-BD, FX3U-USB-BD, FX3U-CNV-BD, FX3G-CNV-ADP or FX3S-CNV-ADP	
GP-4105 (COM1) GP-4115T (COM1) GP-4115T3 (COM1)	8C	User-created cable + Communication adapter by Mitsubishi Electric Corp. <sup>*4</sup> FX3U-232ADP or FX3U-232ADP-MB + Function extension board by Mitsubishi Electric Corp. <sup>*5</sup> FX3U-232-BD, FX3U-422-BD, FX3U-485-BD, FX3U-USB-BD, FX3U-CNV-BD, FX3G-CNV-ADP or FX3S-CNV-ADP	The cable length must be 15m or less.

\*1 All GP4000 models except GP-4100 series and GP-4203T

\*2 Except SP-5B00

\*3 Only the COM port which can communicate by RS-232C can be used.

■ IPC COM Port (page 8)


\*4 Supported communication adapters vary depending on the model.

CPU	Communication Adapter
FX3U, FX3UC-32MT-LT(-2), FX3G, FX3GC	FX3U-232ADP
FX3S	FX3U-232ADP or FX3U-232ADP-MB


\*5 Supported function extension boards vary depending on the model.

CPU	Function Extension Board
FX3U, FX3UC-32MT-LT(-2)	FX3U-232-BD FX3U-422-BD FX3U-485-BD FX3U-USB-BD FX3U-CNV-BD
FX3G	FX3G-CNV-ADP
FX3GC	-
FX3S	FX3S-CNV-ADP


8A)

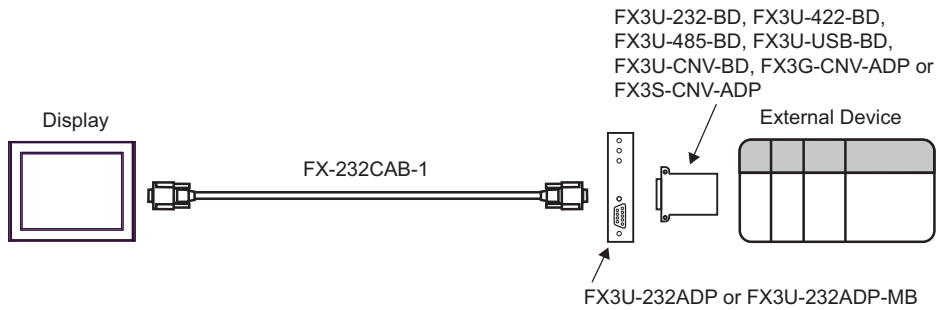

8B)

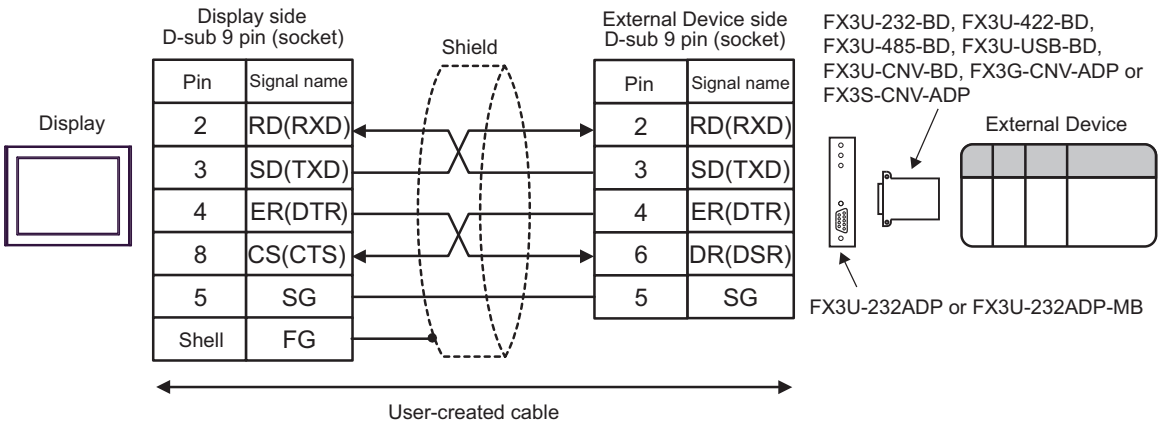

8C)

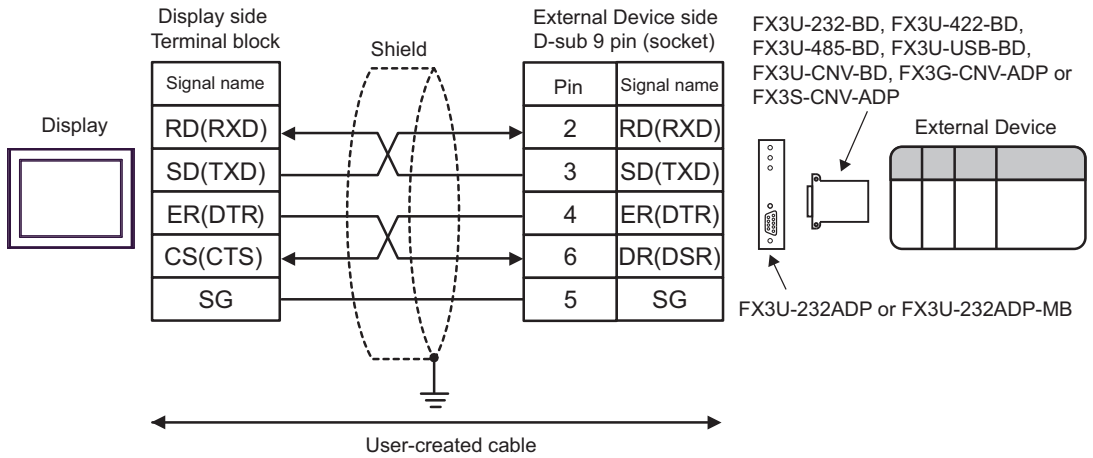


### 5.9 Cable Diagram 9

External Device (Connection Port)	Cable		Notes
GP3000 (COM1) GP4000 <sup>*1</sup> (COM1) SP5000 <sup>*2</sup> (COM1/2) SP-5B00 (COM1) ST3000 (COM1) ST6000 (COM1) STM6000 (COM1) STC6000 (COM1) ET6000 (COM1) LT3000 (COM1) IPC <sup>*3</sup> PC/AT	9A	RS232C communication cable by Mitsubishi Electric Corp. FX-232CAB-1 (3m) + Communication adapter by Mitsubishi Electric Corp. FX2NC-232ADP	The cable length must be 15m or less.
	9B	User-created cable + Communication adapter by Mitsubishi Electric Corp. FX2NC-232ADP	
GP-4105 (COM1) GP-4115T (COM1) GP-4115T3 (COM1)	9C	User-created cable + Communication adapter by Mitsubishi Electric Corp. FX2NC-232ADP	The cable length must be 15m or less.


- \*1 All GP4000 models except GP-4100 series and GP-4203T
- \*2 Except SP-5B00
- \*3 Only the COM port which can communicate by RS-232C can be used.
  - IPC COM Port (page 8)

9A)

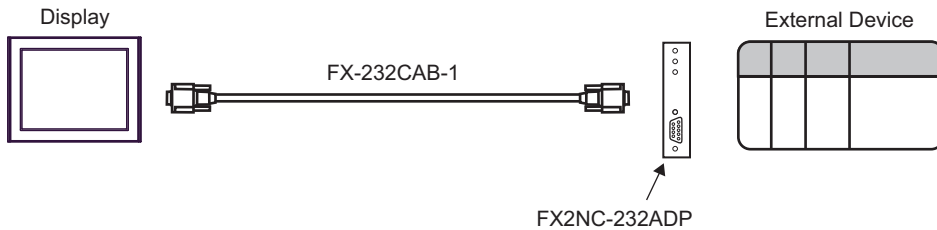




9B)

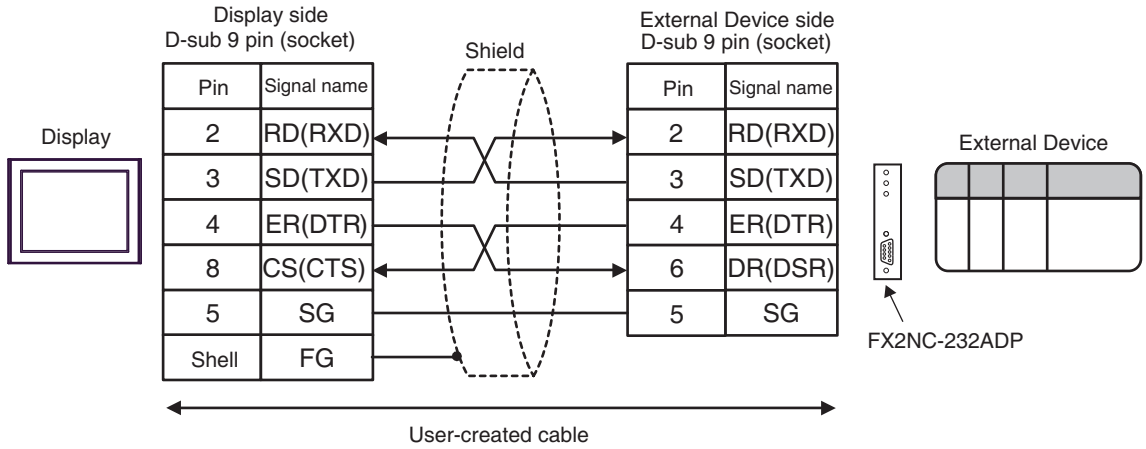

9C)

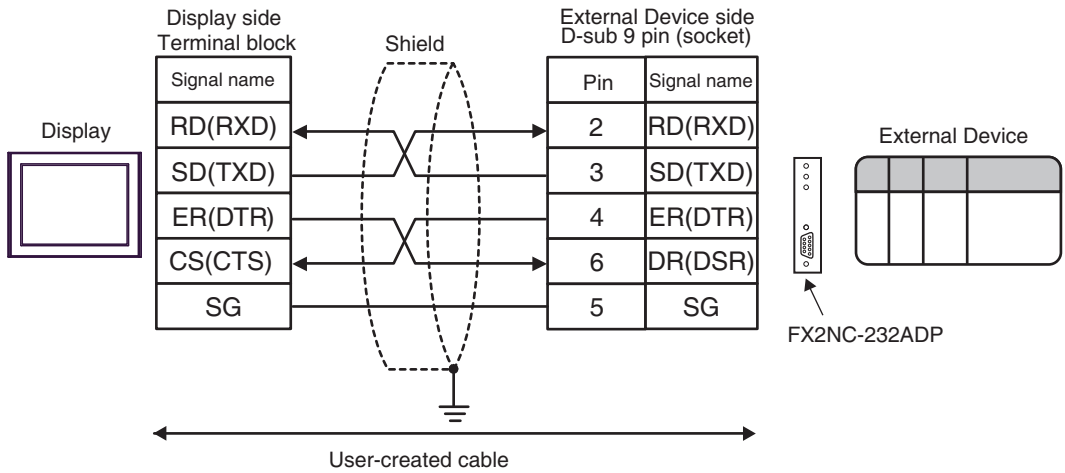

## 5.10 Cable Diagram 10

External Device (Connection Port)	Cable		Notes
GP3000* <sup>1</sup> (COM1) AGP-3302B (COM2) GP-4*01TM (COM1) GP-Rear Module (COM1) ST3000* <sup>2</sup> (COM2) LT3000 (COM1) IPC* <sup>3</sup>	10A	COM port conversion adapter by Pro-face CA3-ADPCOM-01 + 2-port adapter cable for AGP by Pro-face CA3-MDCB11 (5m) + 2-port adapter II by Pro-face GP070-MD11 + Connector conversion cable by Mitsubishi Electric Corp.* <sup>4</sup> FX-20P-CADP (0.3m)	The cable length must be 600m or less.
	10B	User-created cable + 2-port adapter II by Pro-face GP070-MD11 + Connector conversion cable by Mitsubishi Electric Corp.* <sup>4</sup> FX-20P-CADP (0.3m)	
GP3000* <sup>5</sup> (COM2)	10C	Online adapter by Pro-face CA4-ADPONL-01 + 2-port adapter cable for AGP by Pro-face CA3-MDCB11 (5m) + 2-port adapter II by Pro-face GP070-MD11 + Connector conversion cable by Mitsubishi Electric Corp.* <sup>4</sup> FX-20P-CADP (0.3m)	The cable length must be 600m or less.
	10D	Online adapter by Pro-face CA4-ADPONL-01 + User-created cable + 2-port adapter II by Pro-face GP070-MD11 + Connector conversion cable by Mitsubishi Electric Corp.* <sup>4</sup> FX-20P-CADP (0.3m)	
GP-4106 (COM1) GP-4116T (COM1)	10E	User-created cable + 2-port adapter II by Pro-face GP070-MD11 + Connector conversion cable by Mitsubishi Electric Corp.* <sup>4</sup> FX-20P-CADP (0.3m)	The cable length must be 600m or less.

External Device (Connection Port)	Cable		Notes
GP4000* <sup>6</sup> (COM2) GP-4201T (COM1) SP5000* <sup>7</sup> (COM1/2) SP-5B00 (COM2) ST6000* <sup>8</sup> (COM2) ST-6200 (COM1) STM6000 (COM1) STC6000 (COM1) ET6000* <sup>9</sup> (COM2) PS6000 (Basic Box) (COM1/2)	10F	2-port adapter cable by Pro-face PFXZCBCBMD1* <sup>10</sup> + 2-port adapter II by Pro-face GP070-MD11 + Connector conversion cable by Mitsubishi Electric Corp.* <sup>4</sup> FX-20P-CADP (0.3m)	The cable length must be 600m or less.
	10B	User-created cable + 2-port adapter II by Pro-face GP070-MD11 + Connector conversion cable by Mitsubishi Electric Corp.* <sup>4</sup> FX-20P-CADP (0.3m)	
PE-4000B* <sup>11</sup> PS5000* <sup>11</sup> PS6000 (Optional Interface)* <sup>11</sup>	10G	User-created cable + 2-port adapter II by Pro-face GP070-MD11 + Connector conversion cable by Mitsubishi Electric Corp.* <sup>4</sup> FX-20P-CADP (0.3m)	The cable length must be 600m or less.

\*1 All GP3000 models except AGP-3302B

\*2 Except AST-3211A and AST-3302B

\*3 Only the COM port which can communicate by RS-422/485 (4 wire) can be used. (Except PE-4000B, PS5000, and PS6000)

■ IPC COM Port (page 8)

\*4 For FX2, the connector conversion cable (FX-20P-CADP) by Mitsubishi Electric Corp. is not necessary.

\*5 All GP3000 models except GP-3200 series and AGP-3302B

\*6 All GP4000 models except GP-4100 series, GP-4\*01TM, GP-Rear Module, GP-4201T and GP-4\*03T

\*7 Except SP-5B00

\*8 Except ST-6200


\*9 Due to the COM port specifications, flow control is not possible. Omit wiring the control pins on the Display side of the cable diagram.

\*10 When using a 2-port Adapter Cable (CA3-MDCB11) instead of the 2-port Adapter Cable, refer to Cable Diagram 10A.


\*11 Only the COM port which can communicate by RS-422/485 (4 wire) can be used.

■ IPC COM Port (page 8)


10A)

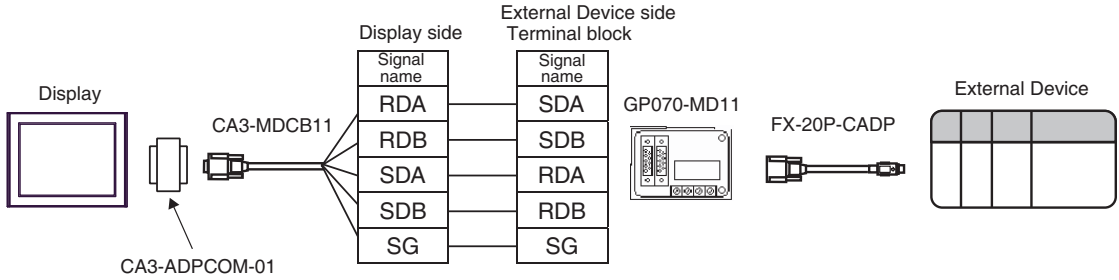


10B)

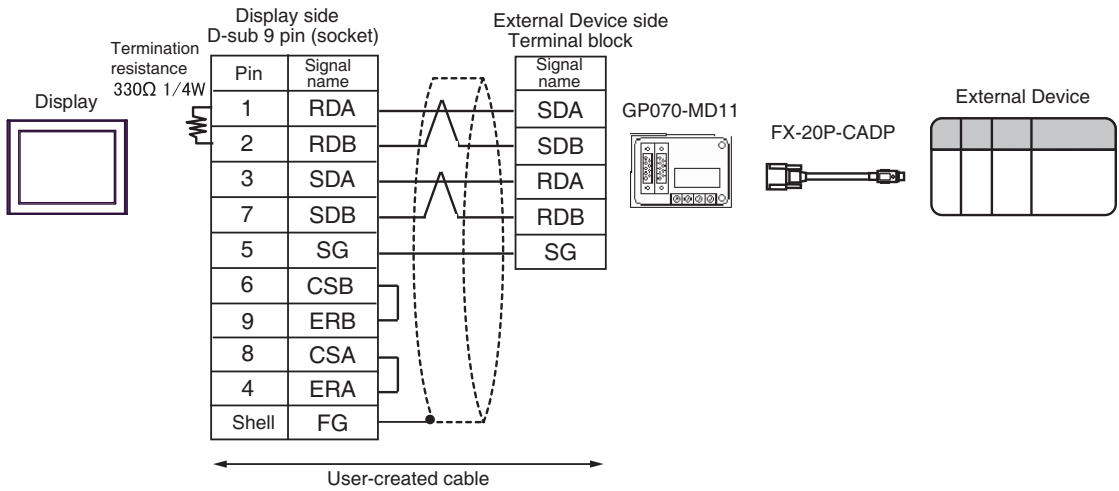


10C)

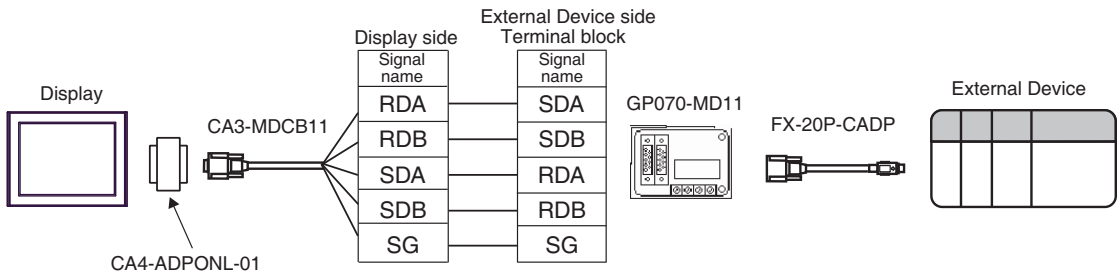

10D)

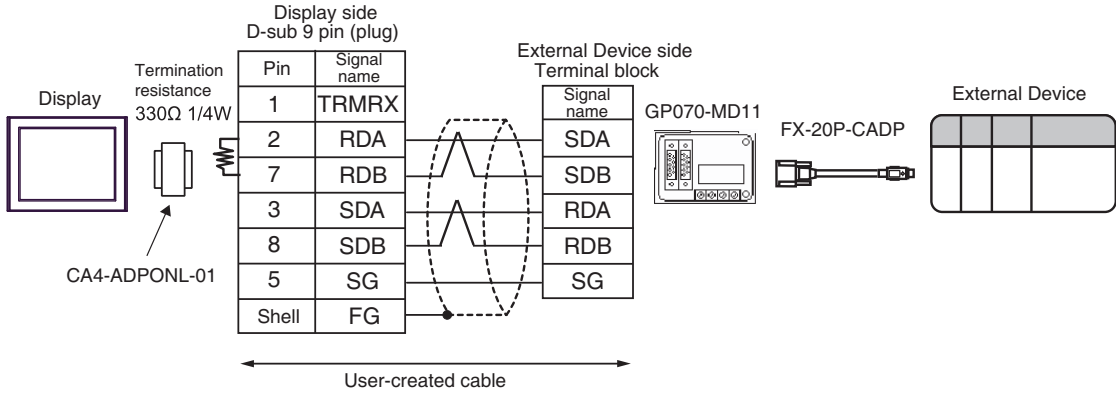


10E)

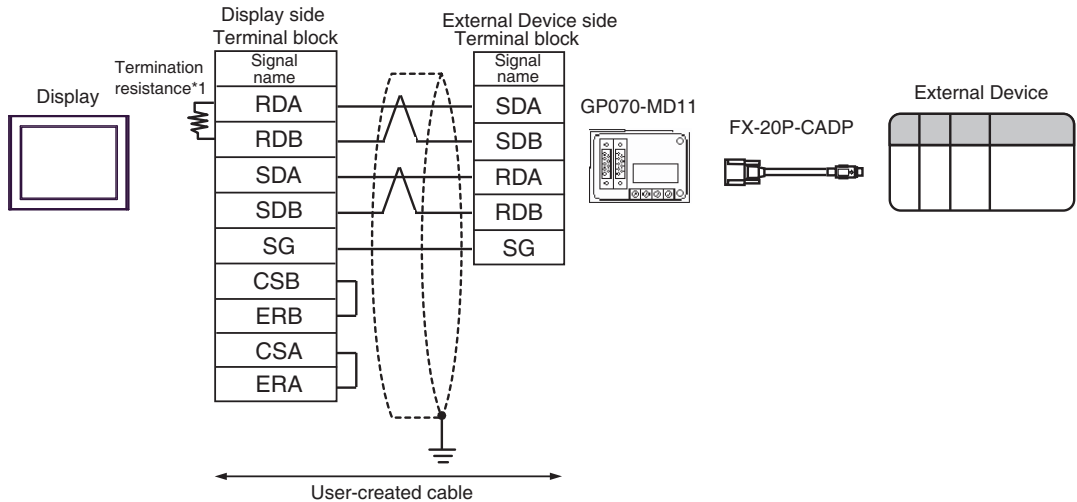


\*1 The resistance in the Display is used as the termination resistance. Set the value of the DIP Switch on the rear of the Display as shown in the table below.

DIP Switch No.	Set Value
1	OFF
2	OFF
3	ON
4	OFF

10F)

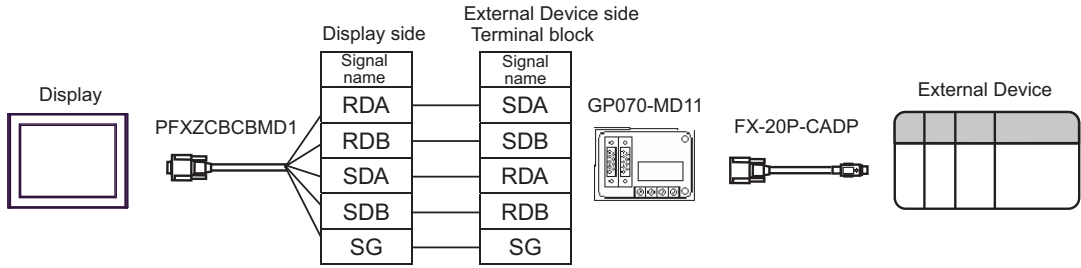

10G)

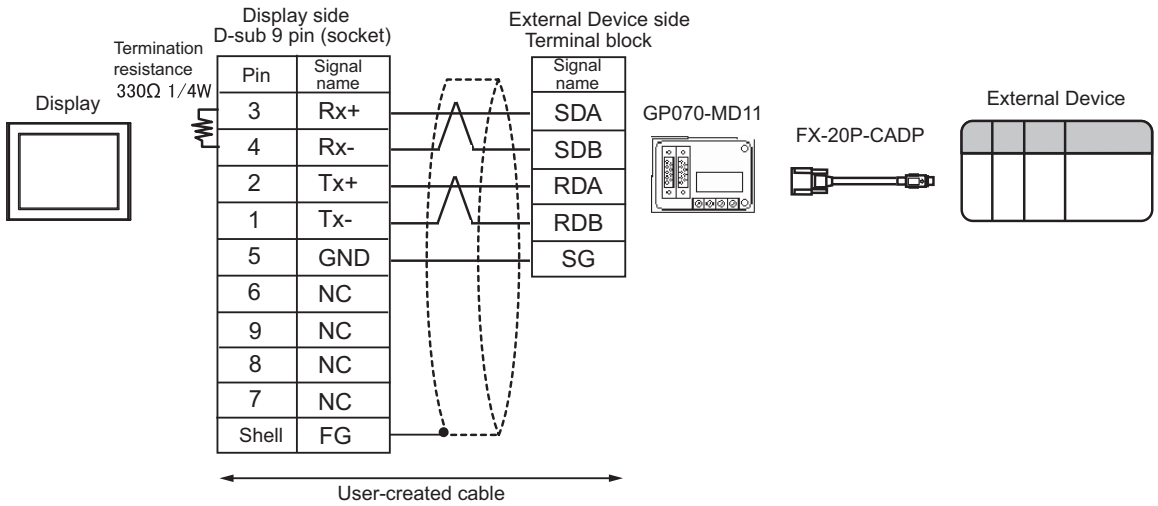

## 5.11 Cable Diagram 11

External Device (Connection Port)	Cable		Notes
GP3000* <sup>1</sup> (COM1) AGP-3302B (COM2) GP-4*01TM (COM1) GP-Rear Module (COM1) ST3000* <sup>2</sup> (COM2) LT3000 (COM1) IPC* <sup>3</sup>	11A	COM port conversion adapter by Pro-face CA3-ADPCOM-01 + 2-port adapter cable for AGP by Pro-face CA3-MDCB11 (5m) + 2-port adapter II by Pro-face GP070-MD11 + Connector conversion cable by Mitsubishi Electric Corp. FX-20P-CADP (0.3m) + Function extension board by Mitsubishi Electric Corp.* <sup>4</sup> FX1N-422-BD, FX2N-422-BD, FX3U-422-BD or FX3G-422-BD	The cable length must be 600m or less.
	11B	User-created cable + 2-port adapter II by Pro-face GP070-MD11 + Connector conversion cable by Mitsubishi Electric Corp. FX-20P-CADP (0.3m) + Function extension board by Mitsubishi Electric Corp.* <sup>4</sup> FX1N-422-BD, FX2N-422-BD, FX3U-422-BD or FX3G-422-BD	

External Device (Connection Port)	Cable		Notes
GP3000 <sup>*5</sup> (COM2)	11C	Online adapter by Pro-face CA4-ADPONL-01 + 2-port adapter cable for AGP by Pro-face CA3-MDCB11 (5m) + 2-port adapter II by Pro-face GP070-MD11 + Connector conversion cable by Mitsubishi Electric Corp. FX-20P-CADP (0.3m) + Function extension board by Mitsubishi Electric Corp. <sup>*4</sup> FX1N-422-BD, FX2N-422-BD, FX3U-422-BD or FX3G-422-BD	The cable length must be 600m or less.
	11D	Online adapter by Pro-face CA4-ADPONL-01 + User-created cable + 2-port adapter II by Pro-face GP070-MD11 + Connector conversion cable by Mitsubishi Electric Corp. FX-20P-CADP (0.3m) + Function extension board by Mitsubishi Electric Corp. <sup>*4</sup> FX1N-422-BD, FX2N-422-BD, FX3U-422-BD or FX3G-422-BD	
GP-4106 (COM1) GP-4116T (COM1)	11E	User-created cable + 2-port adapter II by Pro-face GP070-MD11 + Connector conversion cable by Mitsubishi Electric Corp. FX-20P-CADP (0.3m) + Function extension board by Mitsubishi Electric Corp. <sup>*4</sup> FX1N-422-BD, FX2N-422-BD, FX3U-422-BD or FX3G-422-BD	The cable length must be 600m or less.



External Device (Connection Port)	Cable		Notes
GP4000 <sup>*6</sup> (COM2) GP-4201T (COM1) SP5000 <sup>*7</sup> (COM1/2) SP-5B00 (COM2) ST6000 <sup>*8</sup> (COM2) ST-6200 (COM1) STM6000 (COM1) STC6000 (COM1) ET6000 <sup>*9</sup> (COM2) PS6000 (Basic Box) (COM1/2)	11F	2-port adapter cable by Pro-face PFXZCBCBMD1 <sup>*10</sup> + 2-port adapter II by Pro-face GP070-MD11 + Connector conversion cable by Mitsubishi Electric Corp. FX-20P-CADP (0.3m) + Function extension board by Mitsubishi Electric Corp. <sup>*4</sup> FX1N-422-BD, FX2N-422-BD, FX3U-422-BD or FX3G-422-BD	The cable length must be 600m or less.
	11B	User-created cable + 2-port adapter II by Pro-face GP070-MD11 + Connector conversion cable by Mitsubishi Electric Corp. FX-20P-CADP (0.3m) + Function extension board by Mitsubishi Electric Corp. <sup>*4</sup> FX1N-422-BD, FX2N-422-BD, FX3U-422-BD or FX3G-422-BD	
PE-4000B <sup>*11</sup> PS5000 <sup>*11</sup> PS6000 (Optional Interface) <sup>*11</sup>	11G	User-created cable + 2-port adapter II by Pro-face GP070-MD11 + Connector conversion cable by Mitsubishi Electric Corp. FX-20P-CADP (0.3m) + Function extension board by Mitsubishi Electric Corp. <sup>*4</sup> FX1N-422-BD, FX2N-422-BD, FX3U-422-BD or FX3G-422-BD	The cable length must be 600m or less.

\*1 All GP3000 models except AGP-3302B

\*2 Except AST-3211A and AST-3302B

\*3 Only the COM port which can communicate by RS-422/485 (4 wire) can be used. (Except PE-4000B, PS5000, and PS6000)


■ IPC COM Port (page 8)

\*4 Supported function extension boards vary depending on the model.


CPU	Function Extension Board
FX1S, FX1N	FX1N-422-BD
FX2N	FX2N-422-BD
FX3U, FX3UC-32MT-LT(-2)	FX3U-422-BD
FX3G, FX3S	FX3G-422-BD

- \*5 All GP3000 models except GP-3200 series and AGP-3302B
- \*6 All GP4000 models except GP-4100 series, GP-4\*01TM, GP-Rear Module, GP-4201T and GP-4\*03T
- \*7 Except SP-5B00
- \*8 Except ST-6200
- \*9 Due to the COM port specifications, flow control is not possible. Omit wiring the control pins on the Display side of the cable diagram.
- \*10 When using a 2-port Adapter Cable (CA3-MDCB11) instead of the 2-port Adapter Cable, refer to Cable Diagram 11A.
- \*11 Only the COM port which can communicate by RS-422/485 (4 wire) can be used.
  - IPC COM Port (page 8)


11A)

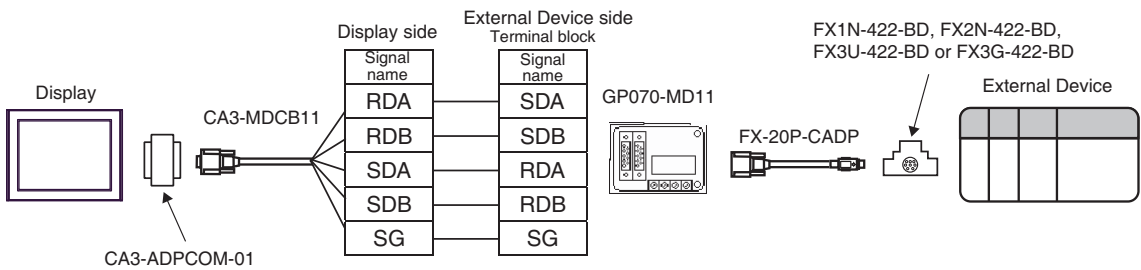


11B)

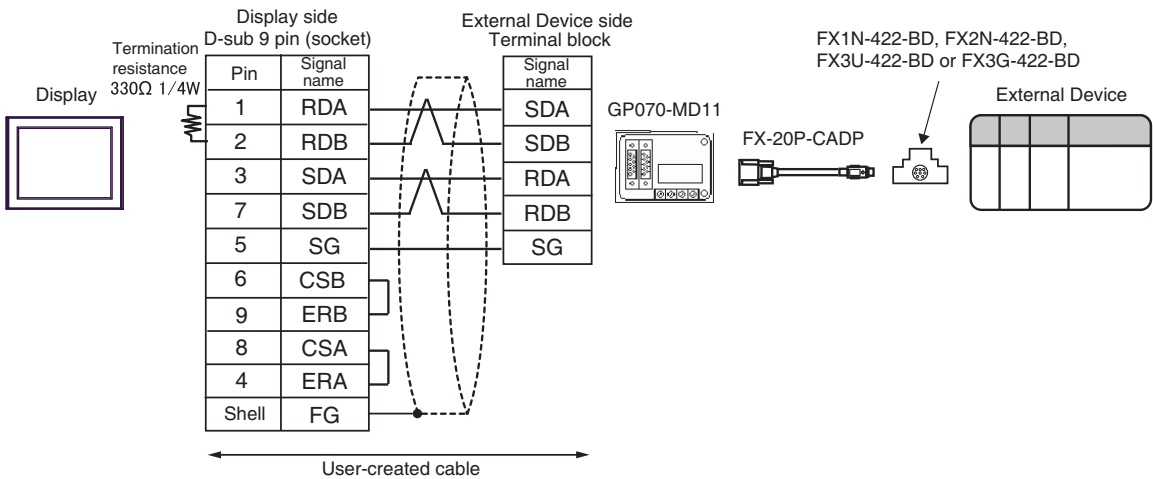


11C)

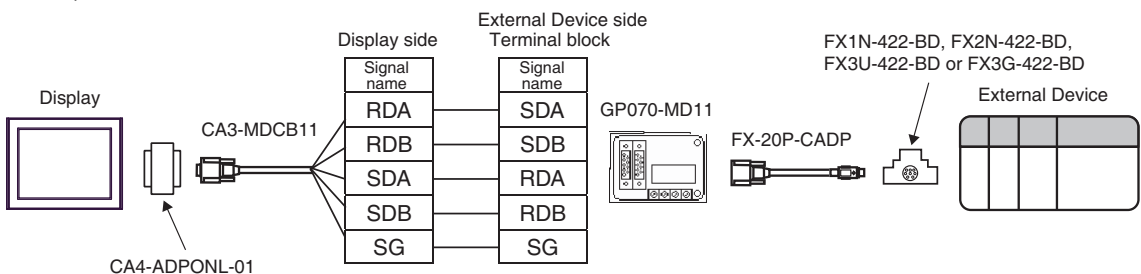

11D)

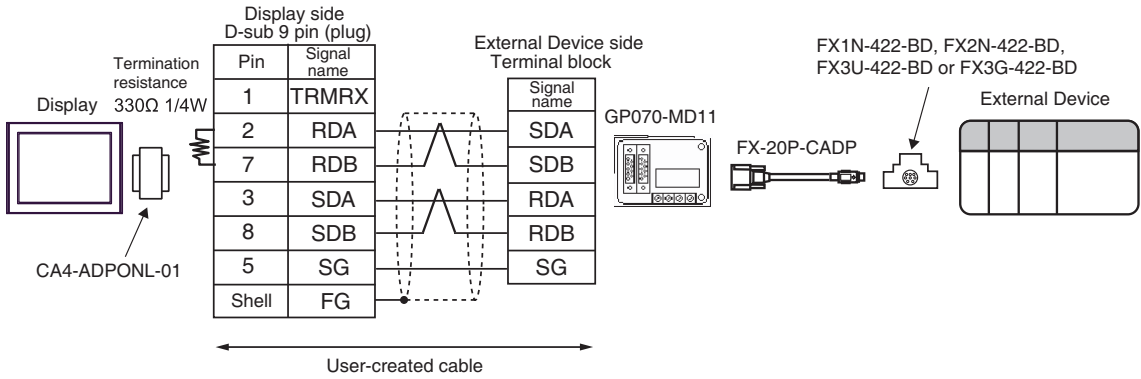


11E)

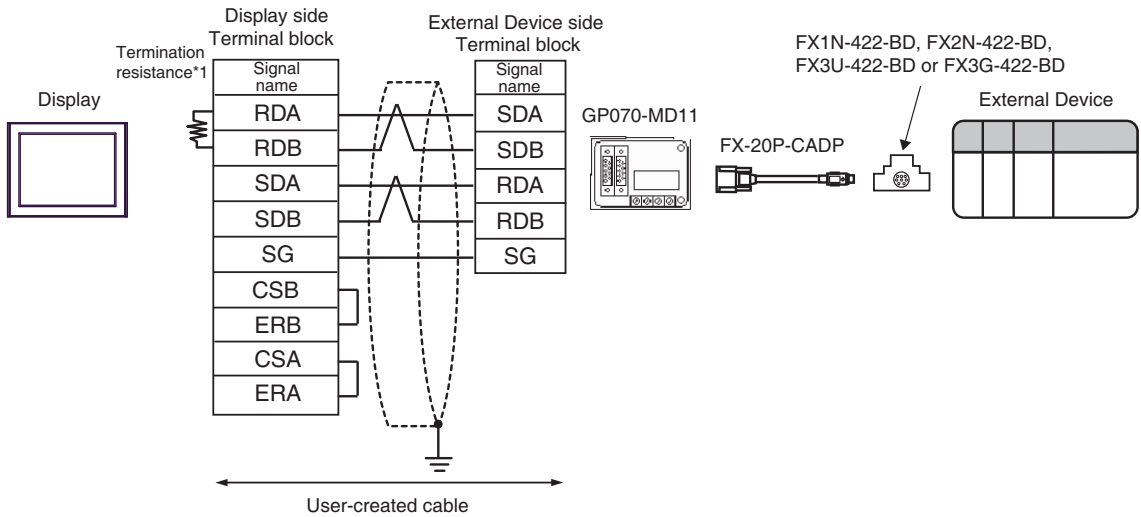


\*1 The resistance in the Display is used as the termination resistance. Set the value of the DIP Switch on the rear of the Display as shown in the table below.

DIP Switch No.	Set Value
1	OFF
2	OFF
3	ON
4	OFF

11F)

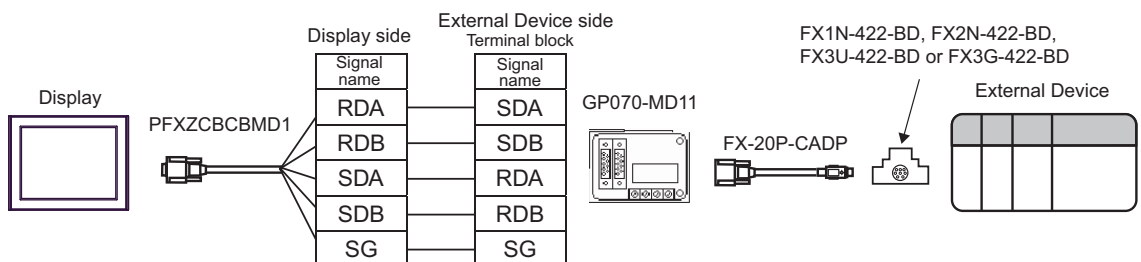

11G)

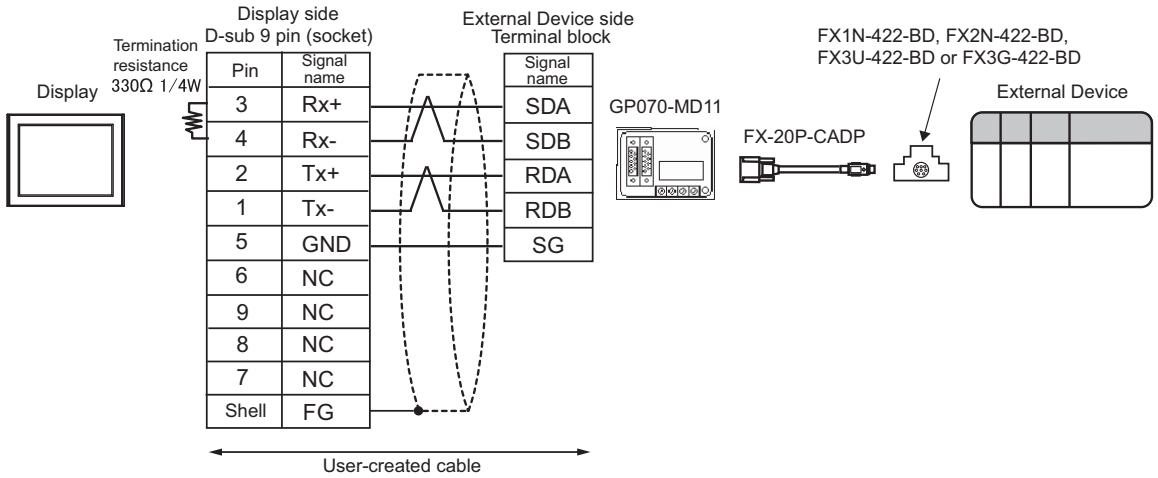

## 6 Supported Device

Range of supported device address is shown in the table below. Please note that the actually supported range of the devices varies depending on the External Device to be used. Please check the actual range in the manual of your External Device.

### 6.1 When using FX1

     This address can be specified as system data area.

Device	Bit Address	Word Address	32bits	Notes
Input Relay	X000 - X167	X000 - X160	[L/H]	<span style="border: 1px solid black; padding: 2px;">OCT 8</span> *1 *2 *3
Output Relay	Y000 - Y167	Y000 - Y160		<span style="border: 1px solid black; padding: 2px;">OCT 8</span> *2
Internal Relay	M0000 - M1023	M0000 - M1008		<span style="border: 1px solid black; padding: 2px;">+16</span>
Special Auxiliary Relay	M8000 - M8255	M8000 - M8240		<span style="border: 1px solid black; padding: 2px;">+16</span> *4
State	S0000 - S0999	S0000 - S0992		<span style="border: 1px solid black; padding: 2px;">+16</span> *5
Timer (Contact)	TS000 - TS245	-----		
Counter (Contact)	CS000 - CS135 CS200 - CS255	-----		
Timer (Current Value)	-----	TN000 - TN245		
Counter (Current Value)	-----	CN000 - CN135		
Counter (Current Value)	-----	CN235 - CN255		*6
Data Register	-----	D000 - D127		<span style="border: 1px solid black; padding: 2px;">Bit F</span> *7
Special Data Register	-----	D8000 - D8069		<span style="border: 1px solid black; padding: 2px;">Bit F</span> *4 *7

\*1 Includes an area in which you cannot write.

\*2 Specify word address only for the divisible value by 20oct. (Example: X0, X20, X40..., X160)

 
\*3 Writing cannot be made to the address, where Input Terminals are allocated on External Device, from Display.

\*4 Special area. This area may be used by the system, and includes an area in which you cannot write. Please refer to the manual attached to the External Device for more detail.

\*5 When the specified word address is outside the device's supported range, you cannot write to the specified word address. If you read a word address from a device that exceeds the supported range, only bits within the supported range are read. In the readout, 0 is assigned to the bits outside the range.

\*6 32-bit device.


- \*7 The access method when specifying bits is different depending on the setting of "Other bits in this word" in "Individual Device Settings".

[Clear]..... 

[Do not clear] ..... When bits are written, the Display reads the corresponding word address from the External Device, sets particular bits of that word address to ON, and then returns the resulting address to the External Device. Note that the data may not be written correctly if you write to the word address using the ladder program while the Display is reading data from, and writing data to, the External Device.

---

**NOTE**

- Please refer to the GP-Pro EX Reference Manual for system data area.  
Cf. GP-Pro EX Reference Manual "LS Area (Direct Access Method Area)"
  - Please refer to the precautions on manual notation for icons in the table.  
 "Manual Symbols and Terminology"
-

6.2 When using FX2, FX2C

     This address can be specified as system data area.


Device	Bit Address	Word Address	32bits	Notes
Input Relay	X000 - X337	X000 - X320	[L/H]	<span style="border: 1px solid black; padding: 2px;">OCT 8</span> *1 *2 *3
Output Relay	Y000 - Y337	Y000 - Y320		<span style="border: 1px solid black; padding: 2px;">OCT 8</span> *2
Internal Relay	M0000 - M1535	M0000 - M1520		<span style="border: 1px solid black; padding: 2px;">÷16</span>
Special Auxiliary Relay	M8000 - M8255	M8000 - M8240		<span style="border: 1px solid black; padding: 2px;">÷16</span> *4
State	S0000 - S0999	S0000 - S0992		<span style="border: 1px solid black; padding: 2px;">÷16</span> *5
Timer (Contact)	TS000 - TS255	-----		
Counter (Contact)	CS000 - CS255	-----		
Timer (Current Value)	-----	TN000 - TN255		
Counter (Current Value)	-----	CN000 - CN199		
Counter (Current Value)	-----	CN200 - CN255		*6
Data Register	-----	D0000 - D2999		<span style="border: 1px solid black; padding: 2px;">Bit F</span> *7 *8
Special Data Register	-----	D8000 - D8255		<span style="border: 1px solid black; padding: 2px;">Bit F</span> *4 *8

- \*1 Includes an area in which you cannot write.
- \*2 Specify word address only for the divisible value by 20oct. (Example: X0, X20, X40..., X320)
- \*3 Writing cannot be made to the address, where Input Terminals are allocated on External Device, from Display.
- \*4 Special area. This area may be used by the system, and includes an area in which you cannot write. Please refer to the manual attached to the External Device for more detail.
- \*5 When the specified word address is outside the device's supported range, you cannot write to the specified word address. If you read a word address from a device that exceeds the supported range, only bits within the supported range are read. In the readout, 0 is assigned to the bits outside the range.
- \*6 32-bit device.
- \*7 D1000-D2499 is the file register.  
To use this area, you need set it as file register. Please refer to the manual attached to the External Device for more detail.
- \*8 The access method when specifying bits is different depending on the setting of "Other bits in this word" in "Individual Device Settings".

[Clear]..... Bit F

[Do not clear] ..... When bits are written, the Display reads the corresponding word address from the External Device, sets particular bits of that word address to ON, and then returns the resulting address to the External Device. Note that the data may not be written correctly if you write to the word address using the ladder program while the Display is reading data from, and writing data to, the External Device.

**NOTE**

- Please refer to the GP-Pro EX Reference Manual for system data area.  
Cf. GP-Pro EX Reference Manual "LS Area (Direct Access Method Area)"
- Please refer to the precautions on manual notation for icons in the table.  
 "Manual Symbols and Terminology"



### 6.3 When using FX0N

     This address can be specified as system data area.


Device	Bit Address	Word Address	32bits	Notes
Input Relay	X000 - X177	X000 - X160	[L/H]	<span style="border: 1px solid black; padding: 2px;">OCT 8</span> *1 *2 *3
Output Relay	Y000 - Y177	Y000 - Y160		<span style="border: 1px solid black; padding: 2px;">OCT 8</span> *2
Internal Relay	M000 - M511	M000 - M496		<span style="border: 1px solid black; padding: 2px;">÷16</span>
Special Auxiliary Relay	M8000 - M8254	M8000 - M8240		<span style="border: 1px solid black; padding: 2px;">÷16</span> *4
State	S0000 - S0127	S0000 - S0112		<span style="border: 1px solid black; padding: 2px;">÷16</span>
Timer (Contact)	TS000 - TS063	-----		
Counter (Contact)	CS000 - CS031 CS235 - CS254	-----		
Timer (Current Value)	-----	TN000 - TN063		
Counter (Current Value)	-----	CN000 - CN063		
Counter (Current Value)	-----	CN200 - CN254		*5
Data Register	-----	D0000 - D0255 D1000 - D2499		<span style="border: 1px solid black; padding: 2px;">BIT F</span> *6 *7
Special Data Register	-----	D8000 - D8255		<span style="border: 1px solid black; padding: 2px;">BIT F</span> *4 *7

- \*1 Includes an area in which you cannot write.
- \*2 Specify word address only for the divisible value by 20oct. (Example: X0, X20, X40..., X320)
- \*3 Writing cannot be made to the address, where Input Terminals are allocated on External Device, from Display.
- \*4 Special area. This area may be used by the system, and includes an area in which you cannot write. Please refer to the manual attached to the External Device for more detail.
- \*5 32-bit device.
- \*6 D1000-D2499 is the file register.  
To use this area, you need set it as file register. Please refer to the manual attached to the External Device for more detail.
- \*7 The access method when specifying bits is different depending on the setting of "Other bits in this word" in "Individual Device Settings".

[Clear]..... BIT F

[Do not clear] ..... When bits are written, the Display reads the corresponding word address from the External Device, sets particular bits of that word address to ON, and then returns the resulting address to the External Device. Note that the data may not be written correctly if you write to the word address using the ladder program while the Display is reading data from, and writing data to, the External Device.

**NOTE**

- Please refer to the GP-Pro EX Reference Manual for system data area.  
Cf. GP-Pro EX Reference Manual "LS Area (Direct Access Method Area)"
- Please refer to the precautions on manual notation for icons in the table.  
 "Manual Symbols and Terminology"

## 6.4 When using FX0S

     This address can be specified as system data area.

Device	Bit Address	Word Address	32bits	Notes
Input Relay	X000 - X017	X000 - X000	L/H	<span style="border: 1px solid black; padding: 2px;">OCT 8</span> *1 *2 *3
Output Relay	Y000 - Y015	Y000 - Y000		<span style="border: 1px solid black; padding: 2px;">OCT 8</span> *2 *4
Internal Relay	M000 - M511	M000 - M496		<span style="border: 1px solid black; padding: 2px;">÷16</span>
Special Auxiliary Relay	M8000 - M8254	M8000 - M8240		<span style="border: 1px solid black; padding: 2px;">÷16</span> *5
State	S000 - S063	S000 - S048		<span style="border: 1px solid black; padding: 2px;">÷16</span>
Timer (Contact)	TS00 - TS55	-----		
Counter (Contact)	CS000 - CS015	-----		
Timer (Current Value)	-----	TN00 - TN55		
Counter (Current Value)	-----	CN000 - CN015		
Data Register	-----	D0000 - D0031		<span style="border: 1px solid black; padding: 2px;">Bit F</span> *6
Special Data Register	-----	D8000 - D8069		<span style="border: 1px solid black; padding: 2px;">Bit F</span> *5 *6

- \*1 Includes an area in which you cannot write.
- \*2 Specify word address only for the divisible value by 20oct. (Example: X0, X20, X40..., X320)
- \*3 Writing cannot be made to the address, where Input Terminals are allocated on External Device, from Display.
- \*4 When the specified word address is outside the device's supported range, you cannot write to the specified word address. If you read a word address from a device that exceeds the supported range, only bits within the supported range are read. In the readout, 0 is assigned to the bits outside the range.
- \*5 Special area. This area may be used by the system, and includes an area in which you cannot write. Please refer to the manual attached to the External Device for more detail.
- \*6 The access method when specifying bits is different depending on the setting of "Other bits in this word" in "Individual Device Settings".

[Clear]..... Bit F

[Do not clear] ..... When bits are written, the Display reads the corresponding word address from the External Device, sets particular bits of that word address to ON, and then returns the resulting address to the External Device. Note that the data may not be written correctly if you write to the word address using the ladder program while the Display is reading data from, and writing data to, the External Device.

- NOTE**
- Please refer to the GP-Pro EX Reference Manual for system data area.  
Cf. GP-Pro EX Reference Manual "LS Area (Direct Access Method Area)"
  - Please refer to the precautions on manual notation for icons in the table.  
☞ "Manual Symbols and Terminology"

## 6.5 When using FX1S

     This address can be specified as system data area.


Device	Bit Address	Word Address	32bits	Notes
Input Relay	X000 - X017	X000 - X000	L/H	<span style="border: 1px solid black; padding: 2px;">OCT 8</span> *1 *2 *3
Output Relay	Y000 - Y015	Y000 - Y000		<span style="border: 1px solid black; padding: 2px;">OCT 8</span> *2 *4
Internal Relay	M0000 - M0511	M0000 - M0496		<span style="border: 1px solid black; padding: 2px;">÷16</span>
Special Auxiliary Relay	M8000 - M8255	M8000 - M8240		<span style="border: 1px solid black; padding: 2px;">÷16</span> *5
State	S0000 - S0127	S0000 - S0112		<span style="border: 1px solid black; padding: 2px;">÷16</span>
Timer (Contact)	TS000 - TS063	-----		
Counter (Contact)	CS000 - CS031 CS235 - CS255	-----		
Timer (Current Value)	-----	TN000 - TN063		
Counter (Current Value)	-----	CN000 - CN031		
Counter (Current Value)	-----	CN235 - CN255		*6
Data Register	-----	D0000 - D0255 D1000 - D2499		<span style="border: 1px solid black; padding: 2px;">BIT F</span> *7 *8
Special Data Register	-----	D8000 - D8255		<span style="border: 1px solid black; padding: 2px;">BIT F</span> *5 *8

- \*1 Includes an area in which you cannot write.
- \*2 Specify word address only for the divisible value by 20oct. (Example: X0 )
- \*3 Writing cannot be made to the address, where Input Terminals are allocated on External Device, from Display.
- \*4 When the specified word address is outside the device's supported range, you cannot write to the specified word address. If you read a word address from a device that exceeds the supported range, only bits within the supported range are read. In the readout, 0 is assigned to the bits outside the range.
- \*5 Special area. This area may be used by the system, and includes an area in which you cannot write. Please refer to the manual attached to the External Device for more detail.
- \*6 32-bit device.
- \*7 D1000-D2499 is the file register.  
To use this area, you need set it as file register. Please refer to the manual attached to the External Device for more detail.
- \*8 The access method when specifying bits is different depending on the setting of "Other bits in this word" in "Individual Device Settings".

[Clear] ..... BIT F

[Do not clear] ..... When bits are written, the Display reads the corresponding word address from the External Device, sets particular bits of that word address to ON, and then returns the resulting address to the External Device. Note that the data may not be written correctly if you write to the word address using the ladder program while the Display is reading data from, and writing data to, the External Device.

**NOTE**

- Please refer to the GP-Pro EX Reference Manual for system data area.  
Cf. GP-Pro EX Reference Manual "LS Area (Direct Access Method Area)"
- Please refer to the precautions on manual notation for icons in the table.  
 "Manual Symbols and Terminology"

## 6.6 When using FX1N, FX1NC

     This address can be specified as system data area.


Device	Bit Address	Word Address	32bits	Notes
Input Relay	X000 - X177	X000 - X160	[L/H]	<span style="border: 1px solid black; padding: 2px;">OCT 8</span> *1 *2 *3
Output Relay	Y000 - Y177	Y000 - Y160		<span style="border: 1px solid black; padding: 2px;">OCT 8</span> *2
Internal Relay	M0000 - M1535	M0000 - M1520		<span style="border: 1px solid black; padding: 2px;">÷16</span>
Special Auxiliary Relay	M8000 - M8255	M8000 - M8240		<span style="border: 1px solid black; padding: 2px;">÷16</span> *4
State	S000 - S999	S000 - S992		<span style="border: 1px solid black; padding: 2px;">÷16</span> *5
Timer (Contact)	TS000 - TS255	-----		
Counter (Contact)	CS000 - CS255	-----		
Timer (Current Value)	-----	TN000 - TN255		
Counter (Current Value)	-----	CN000 - CN199		
Counter (Current Value)	-----	CN200 - CN255		*6
Data Register	-----	D0000 - D7999		<span style="border: 1px solid black; padding: 2px;">Bit F</span> *7 *8
Special Data Register	-----	D8000 - D8255		<span style="border: 1px solid black; padding: 2px;">Bit F</span> *4 *8

- \*1 Includes an area in which you cannot write.
- \*2 Specify word address only for the divisible value by 20oct. (Example: X0, X20, X40..., X160)
- \*3 Writing cannot be made to the address, where Input Terminals are allocated on External Device, from Display.
- \*4 Special area. This area may be used by the system, and includes an area in which you cannot write. Please refer to the manual attached to the External Device for more detail.
- \*5 When the specified word address is outside the device's supported range, you cannot write to the specified word address. If you read a word address from a device that exceeds the supported range, only bits within the supported range are read. In the readout, 0 is assigned to the bits outside the range.
- \*6 32-bit device.
- \*7 You cannot use the data register D7999 as the 32-bit address device. This is because D8000 which is HIGH of the 32-bit device is handled as a different device.
- \*8 The access method when specifying bits is different depending on the setting of "Other bits in this word" in "Individual Device Settings".

[Clear]..... Bit F

[Do not clear] ..... When bits are written, the Display reads the corresponding word address from the External Device, sets particular bits of that word address to ON, and then returns the resulting address to the External Device. Note that the data may not be written correctly if you write to the word address using the ladder program while the Display is reading data from, and writing data to, the External Device.

**NOTE**

- Please refer to the GP-Pro EX Reference Manual for system data area.  
Cf. GP-Pro EX Reference Manual "LS Area (Direct Access Method Area)"
- Please refer to the precautions on manual notation for icons in the table.  
 "Manual Symbols and Terminology"

6.7 When using FX2N, FX2NC

     This address can be specified as system data area.

Device	Bit Address	Word Address	32bits	Notes
Input Relay	X000 -X377	X0000 - X0360	[L/H]	<span style="border: 1px solid black; padding: 2px;">OCT 8</span> *1 *2 *3
Output Relay	Y000 - Y377	Y0000 - Y0360		<span style="border: 1px solid black; padding: 2px;">OCT 8</span> *2
Internal Relay	M0000 - M3071	M0000 - M3056		<span style="border: 1px solid black; padding: 2px;">÷16</span>
Special Auxiliary Relay	M8000 - M8255	M8000 - M8240		<span style="border: 1px solid black; padding: 2px;">÷16</span> *4
State	S000 - S999	S000 - S992		<span style="border: 1px solid black; padding: 2px;">÷16</span> *5
Timer (Contact)	TS000 - TS255	-----		
Counter (Contact)	CS000 - CS255	-----		
Timer (Current Value)	-----	TN000 - TN255		
Counter (Current Value)	-----	CN000 - CN199		
Counter (Current Value)	-----	CN200 - CN255		*6
Data Register	-----	D0000 - D7999		<span style="border: 1px solid black; padding: 2px;">Bit F</span> *7 *8
Special Data Register	-----	D8000 - D8255		<span style="border: 1px solid black; padding: 2px;">Bit F</span> *4 *8


- \*1 Includes an area in which you cannot write.
- \*2 Specify word address only for the divisible value by 20oct. (Example: X0, X20, X40..., X360)
- \*3 Writing cannot be made to the address, where Input Terminals are allocated on External Device, from Display.
- \*4 Special area. This area may be used by the system, and includes an area in which you cannot write. Please refer to the manual attached to the External Device for more detail.
- \*5 When the specified word address is outside the device's supported range, you cannot write to the specified word address. If you read a word address from a device that exceeds the supported range, only bits within the supported range are read. In the readout, 0 is assigned to the bits outside the range.
- \*6 32-bit device.
- \*7 You cannot use the data register D7999 as the 32-bit address device. This is because D8000 which is HIGH of the 32-bit device is handled as a different device.
- \*8 The access method when specifying bits is different depending on the setting of "Other bits in this word" in "Individual Device Settings".

[Clear]..... Bit F

[Do not clear] ..... When bits are written, the Display reads the corresponding word address from the External Device, sets particular bits of that word address to ON, and then returns the resulting address to the External Device. Note that the data may not be written correctly if you write to the word address using the ladder program while the Display is reading data from, and writing data to, the External Device.



**NOTE**

- Please refer to the GP-Pro EX Reference Manual for system data area.  
Cf. GP-Pro EX Reference Manual "LS Area (Direct Access Method Area)"
- Please refer to the precautions on manual notation for icons in the table.  
 "Manual Symbols and Terminology"

## 6.8 When using FX3U, FX3UC-32MT-LT(-2)

     This address can be specified as system data area.


Device	Bit Address	Word Address	32bits	Notes
Input Relay	X000 - X377	X0000 - X0360	<b>L/H</b>	<span style="border: 1px solid black; padding: 2px;">OCT 8</span> *1 *2 *3
Output Relay	Y000 - Y377	Y0000 - Y0360		<span style="border: 1px solid black; padding: 2px;">OCT 8</span> *2
Internal Relay	M0000 - M7679	M0000 - M7664		<span style="border: 1px solid black; padding: 2px;">÷16</span>
Special Auxiliary Relay	M8000 - M8511	M8000 - M8496		<span style="border: 1px solid black; padding: 2px;">÷16</span> *4
State	S0000 - S4095	S0000 - S4080		<span style="border: 1px solid black; padding: 2px;">÷16</span>
Timer (Contact)	TS000 - TS511	-----		
Counter (Contact)	CS000 -CS255	-----		
Timer (Current Value)	-----	TN000 - TN511		
Counter (Current Value)	-----	CN000 - CN199		
Counter (Current Value)	-----	CN200 - CN255		*5
Data Register	-----	D0000 -D7999		<span style="border: 1px solid black; padding: 2px;">Bit F</span> *6 *7
Special Data Register	-----	D8000 - D8511		<span style="border: 1px solid black; padding: 2px;">Bit F</span> *4 *7
Extension Register	-----	R00000 - R32767		<span style="border: 1px solid black; padding: 2px;">Bit F</span> *4 *7

- \*1 Includes an area in which you cannot write.
- \*2 Specify word address only for the divisible value by 20oct. (Example: X0, X20, X40..., X360)
- \*3 Writing cannot be made to the address, where Input Terminals are allocated on External Device, from Display.
- \*4 Special area. This area may be used by the system, and includes an area in which you cannot write. Please refer to the manual attached to the External Device for more detail.
- \*5 32-bit device.
- \*6 You cannot use the data register D7999 as the 32-bit address device. This is because D8000 which is HIGH of the 32-bit device is handled as a different device.
- \*7 The access method when specifying bits is different depending on the setting of "Other bits in this word" in "Individual Device Settings".

[Clear]..... Bit F

[Do not clear] ..... When bits are written, the Display reads the corresponding word address from the External Device, sets particular bits of that word address to ON, and then returns the resulting address to the External Device. Note that the data may not be written correctly if you write to the word address using the ladder program while the Display is reading data from, and writing data to, the External Device.

**NOTE**

- Please refer to the GP-Pro EX Reference Manual for system data area.  
Cf. GP-Pro EX Reference Manual "LS Area (Direct Access Method Area)"
- Please refer to the precautions on manual notation for icons in the table.  
 "Manual Symbols and Terminology"

## 6.9 When using FX3G, FX3GC

     This address can be specified as system data area.


Device	Bit Address	Word Address	32bits	Notes
Input Relay	X000 - X177	X0000 - X0160	L/H	<span style="border: 1px solid black; padding: 2px;">OCT 8</span> *1 *2 *3
Output Relay	Y000 - Y177	Y0000 - Y0160		<span style="border: 1px solid black; padding: 2px;">OCT 8</span> *2
Internal Relay	M0000 - M7679	M0000 - M7664		<span style="border: 1px solid black; padding: 2px;">÷16</span>
Special Auxiliary Relay	M8000 - M8511	M8000 - M8496		<span style="border: 1px solid black; padding: 2px;">÷16</span> *4
State	S0000 - S4095	S0000 - S4080		<span style="border: 1px solid black; padding: 2px;">÷16</span>
Timer (Contact)	TS000 - TS319	-----		
Counter (Contact)	CS000 -CS255	-----		
Timer (Current Value)	-----	TN000 - TN319		
Counter (Current Value)	-----	CN000 - CN199		
Counter (Current Value)	-----	CN200 - CN255		*5
Data Register	-----	D0000 -D7999		<span style="border: 1px solid black; padding: 2px;">Bit F</span> *6 *7
Special Data Register	-----	D8000 - D8511		<span style="border: 1px solid black; padding: 2px;">Bit F</span> *4 *7
Extension Register	-----	R00000 - R23999		<span style="border: 1px solid black; padding: 2px;">Bit F</span> *4 *7

- \*1 Includes an area in which you cannot write.
- \*2 Specify word address only for the divisible value by 20oct. (Example: X0, X20, X40..., X160)
- \*3 Writing cannot be made to the address, where Input Terminals are allocated on External Device, from Display.
- \*4 Special area. This area may be used by the system, and includes an area in which you cannot write. Please refer to the manual attached to the External Device for more detail.
- \*5 32-bit device.
- \*6 You cannot use the data register D7999 as the 32-bit address device. This is because D8000 which is HIGH of the 32-bit device is handled as a different device.
- \*7 The access method when specifying bits is different depending on the setting of "Other bits in this word" in "Individual Device Settings".

[Clear]..... Bit F

[Do not clear] ..... When bits are written, the Display reads the corresponding word address from the External Device, sets particular bits of that word address to ON, and then returns the resulting address to the External Device. Note that the data may not be written correctly if you write to the word address using the ladder program while the Display is reading data from, and writing data to, the External Device.

**NOTE**

- Please refer to the GP-Pro EX Reference Manual for system data area.  
Cf. GP-Pro EX Reference Manual "LS Area (Direct Access Method Area)"
- Please refer to the precautions on manual notation for icons in the table.  
 "Manual Symbols and Terminology"

6.10 When using FX3S

     This address can be specified as system data area.


Device	Bit Address	Word Address	32bits	Notes
Input Relay	X000 - X017	X000 - X000	[L/H]	<span style="border: 1px solid black; padding: 2px;">OCT 8</span> *1 *2 *3
Output Relay	Y000 - Y015	Y000 - Y000		<span style="border: 1px solid black; padding: 2px;">OCT 8</span> *2 *4
Internal Relay	M0000 - M1535	M0000 - M1520		<span style="border: 1px solid black; padding: 2px;">÷16</span>
Special Auxiliary Relay	M8000 - M8511	M8000 - M8496		<span style="border: 1px solid black; padding: 2px;">÷16</span> *5
State	S0000 - S0256	S0000 - S0240		<span style="border: 1px solid black; padding: 2px;">÷16</span>
Timer (Contact)	TS000 - TS137	-----		
Counter (Contact)	CS000 - CS031 CS200 - CS255	-----		
Timer (Current Value)	-----	TN000 - TN137		
Counter (Current Value)	-----	CN000 - CN031		
Counter (Current Value)	-----	CN200 - CN255		*6
Data Register	-----	D0000 -D2999		<span style="border: 1px solid black; padding: 2px;">Bit F</span> *7
Special Data Register	-----	D8000 - D8511		<span style="border: 1px solid black; padding: 2px;">Bit F</span> *5 *7

- \*1 Includes an area in which you cannot write.
- \*2 Specify word address only for the divisible value by 20oct. (Example: X0, X20, X40..., X160)
- \*3 Writing cannot be made to the address, where Input Terminals are allocated on External Device, from Display.
- \*4 When the specified word address is outside the device's supported range, you cannot write to the specified word address. If you read a word address from a device that exceeds the supported range, only bits within the supported range are read. In the readout, 0 is assigned to the bits outside the range.
- \*5 Special area. This area may be used by the system, and includes an area in which you cannot write. Please refer to the manual attached to the External Device for more detail.
- \*6 32-bit device.
- \*7 The access method when specifying bits is different depending on the setting of "Other bits in this word" in "Individual Device Settings".

[Clear]..... Bit F

[Do not clear] ..... When bits are written, the Display reads the corresponding word address from the External Device, sets particular bits of that word address to ON, and then returns the resulting address to the External Device. Note that the data may not be written correctly if you write to the word address using the ladder program while the Display is reading data from, and writing data to, the External Device.

**NOTE**

- Please refer to the GP-Pro EX Reference Manual for system data area.  
Cf. GP-Pro EX Reference Manual "LS Area (Direct Access Method Area)"
- Please refer to the precautions on manual notation for icons in the table.  
 "Manual Symbols and Terminology"

## 7 Device Code and Address Code

Use device code and address code when you select "Device Type & Address" for the address type in data displays.

Device	Device Name	Device Code (HEX)	Address Code
Input Relay	X	0080	Value of word address divided by 0x10
Output Relay	Y	0081	Value of word address divided by 0x10
Internal Relay	M	0082	Value of word address divided by 16
Special Auxiliary Relay	M8	0083	Value of word address divided by 16
State	S	0087	Word Address
Timer (Current Value)	TN	0060	Word Address
Counter (Current Value)	CN	0061	Word Address
Counter (Current Value) *1	CN	0062	Word Address
Data Register	D	0000	Word Address
Special Data Register	D8	0001	Word Address
Extension Register *2	R	000F	Word Address

\*1 32-bit device.

\*2 Supported only by FX3U, FX3UC-32MT-LT(-2) and FX3G.



## 8 Error Messages

Error messages are displayed on the Display screen as follows: "No.: Device Name: Error Message (Error Occurrence Area)". Each description is shown below.

Item	Description
No.	Error No.
Device Name	Name of the External Device where error occurs. Device name is a title of the External Device set with GP-Pro EX. (Initial value [PLC1])
Error Message	Displays messages related to the error which occurs.
Error Occurrence Area	<p>Displays IP address or device address of the External Device where error occurs, or error codes received from the External Device.</p> <p><b>NOTE</b></p> <ul style="list-style-type: none"> <li>• IP address is displayed such as "IP address(Decimal): MAC address( Hex)".</li> <li>• Device address is displayed such as "Address: Device address".</li> <li>• Received error codes are displayed such as "Decimal[Hex]".</li> </ul>

Display Examples of Error Messages

"RHAA035: PLC1: Error has been responded for device write command (Error Code: 2 [02H])"

- 
- NOTE** • Refer to "Display-related errors" in "Maintenance/Troubleshooting Guide" for details on the error messages common to the driver.
-

