


Modbus RTU Mode Driver

1	System Configuration.....	3
2	External Device Selection	8
3	Communication Settings	9
4	Setup Items	13
5	Cable Diagrams	17
6	Supported Device.....	38
7	Device Code and Address Code.....	40
8	Error Messages	41

Introduction

This manual describes how to connect the Display and the External Device (target PLC).

In this manual, the connection procedure is described in the sections identified below.

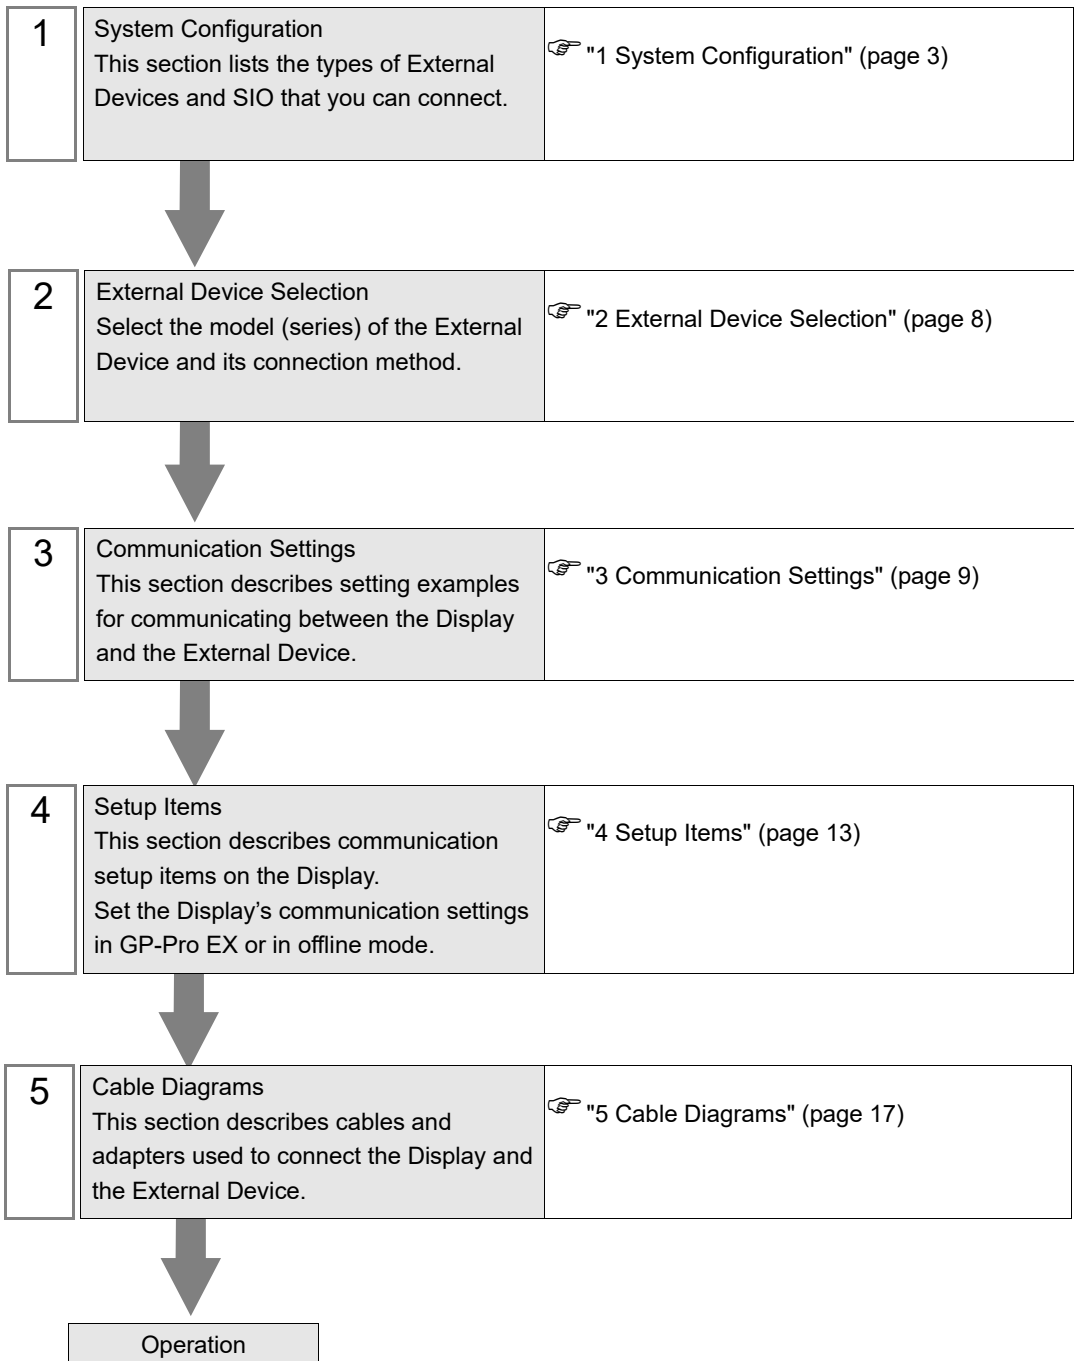


1 System Configuration

The following table lists system configurations for connecting Shenzhen Inovance External Devices and the Display.


Series	CPU	Link I/F	SIO Type	Setting Example	Cable Diagram
H1U-XP	H1U-0806MR-XP H1U-0806MT-XP H1U-1208MR-XP H1U-1208MT-XP H1U-1410MR-XP H1U-1410MT-XP H1U-1614MR-XP H1U-1614MT-XP H1U-1614MTD-XP	CPU (COM0)	RS422/485 (2wire)	Setting Example 1 (page 9)	Cable Diagram 1 (page 17)
	H1U-2416MR-XP H1U-2416MT-XP H1U-2820MR-XP H1U-2820MT-XP H1U-3624MR-XP H1U-3624MRD-XP H1U-3624MT-XP H1U-3624MTD-XP	CPU (COM1)	RS422/485 (2wire)	Setting Example 1 (page 9)	Cable Diagram 2 (page 28)
H2U-XP	H2U-1010MR-XP H2U-1010MT-XP H2U-1616MR-XP H2U-1616MT-XP	CPU (COM0)	RS422/485 (2wire)	Setting Example 1 (page 9)	Cable Diagram 1 (page 17)
	H2U-2416MR-XP H2U-2416MT-XP H2U-2416MTQ-F01 H2U-3624MR-XP H2U-3624MT-XP	CPU (COM1/COM2)	RS422/485 (2wire)	Setting Example 1 (page 9)	Cable Diagram 2 (page 28)
	H2U-3232MR-XP H2U-3232MT-XP H2U-3232MTQ	CPU (COM3)	RS422/485 (2wire)	Setting Example 1 (page 9)	Cable Diagram 2 (page 28)
	H2U-3232MTP H2U-4040MR-XP H2U-4040MT-XP H2U-6464MR-XP H2U-6464MT-XP	H2U-422-BD	RS422/485 (2wire)	Setting Example 1 (page 9)	Cable Diagram 1 (page 17)
	H2U-4040MR-8AB H2U-1616MTS	H2U-4851F-BD	RS422/485 (2wire)	Setting Example 1 (page 9)	Cable Diagram 2 (page 28)
H3U-XP	H3U-1616MR-XP H3U-1616MT-XP H3U-3232MR H3U-3232MT H3U0808PMRTA	CPU (COM0)	RS422/485 (2wire)	Setting Example 2 (page 11)	Cable Diagram 1 (page 17)
		CPU (COM1)	RS422/485 (2wire)	Setting Example 2 (page 11)	Cable Diagram 2 (page 28)

■ Connection Configuration

- 1:1 Connection

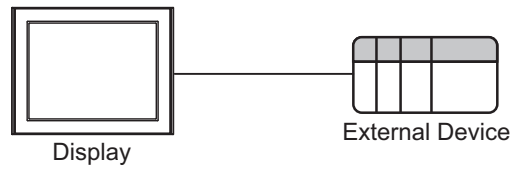

- 1:n Connection

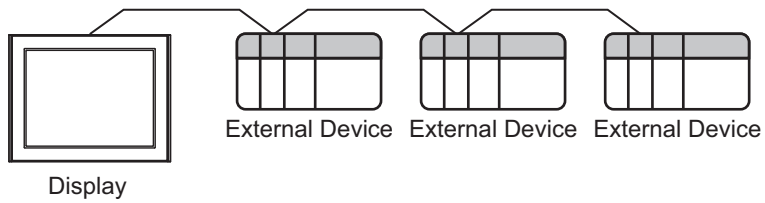

■ IPC COM Port

When connecting IPC with an External Device, the COM port used depends on the series and SIO type. Please refer to the IPC manual for details.

Usable port

Series	Usable Port		
	RS-232C	RS-422/485(4 wire)	RS-422/485(2 wire)
PS-2000B	COM1 ^{*1} , COM2, COM3 ^{*1} , COM4	-	-
PS-3450A, PS-3451A, PS3000-BA, PS3001-BD	COM1, COM2 ^{*1*2}	COM2 ^{*1*2}	COM2 ^{*1*2}
PS-3650A (T41 model), PS-3651A (T41 model)	COM1 ^{*1}	-	-
PS-3650A (T42 model), PS-3651A (T42 model)	COM1 ^{*1*2} , COM2	COM1 ^{*1*2}	COM1 ^{*1*2}
PS-3700A (Pentium®4-M) PS-3710A	COM1 ^{*1} , COM2 ^{*1} , COM3 ^{*2} , COM4	COM3 ^{*2}	COM3 ^{*2}
PS-3711A	COM1 ^{*1} , COM2 ^{*2}	COM2 ^{*2}	COM2 ^{*2}
PS4000 ^{*3}	COM1, COM2	-	-
PL3000	COM1 ^{*1*2} , COM2 ^{*1} , COM3, COM4	COM1 ^{*1*2}	COM1 ^{*1*2}
PE-4000B Atom N270	COM1, COM2	-	-
PE-4000B Atom N2600	COM1, COM2	COM3 ^{*4} , COM4 ^{*4} , COM5 ^{*4} , COM6 ^{*4}	COM3 ^{*4} , COM4 ^{*4} , COM5 ^{*4} , COM6 ^{*4}
PS5000 (Slim Panel Type Core i3 Model) ^{*5*6}	COM1, COM2 ^{*4}	COM2 ^{*4}	COM2 ^{*4}
PS5000 (Slim Panel Type Atom Model) ^{*5*6}	COM1, COM2 ^{*7}	COM2 ^{*7}	COM2 ^{*7}
PS5000 (Enclosed Panel Type) ^{*8}	COM1	-	-
PS5000 (Modular Type PFXPU/PFXPP) ^{*5*6} PS5000 (Modular Type PFXPL2B5-6)	COM1 ^{*7}	COM1 ^{*7}	COM1 ^{*7}
PS5000 (Modular Type PFXPL2B1-4)	COM1, COM2 ^{*7}	COM2 ^{*7}	COM2 ^{*7}
PS6000 (Advanced Box) PS6000 (Standard Box)	COM1 ^{*9}	*10	*10
PS6000 (Basic Box)	COM1 ^{*9}	COM1 ^{*9}	COM1 ^{*9}

*1 The RI/5V can be switched. Use the IPC's switch to change if necessary.

*2 Set up the SIO type with the DIP Switch. Please set up as follows according to SIO type to be used.

- *3 When making communication between an External Device and COM port on the Expansion slot, only RS-232C is supported. However, ER (DTR/CTS) control cannot be executed because of the specification of COM port.
For connection with External Device, use user-created cables and disable Pin Nos. 1, 4, 6 and 9. Please refer to the IPC manual for details of pin layout.
- *4 Set up the SIO type with the BIOS. Please refer to the IPC manual for details of BIOS.
- *5 When setting up communication between an External Device and the RS-232C/422/485 interface module, use the IPC (RS-232C) or PS5000 (RS-422/485) cable diagrams. However, when using PFXZPBMPR42P2 in a RS-422/485 (4-wire) configuration with no flow control, connect 7.RTS+ and 8.CTS+, and connect 6.RTS- and 9.CTS-.
When using RS-422/485 communication with External Devices, you may need to reduce the transmission speed and increase the TX Wait time.
- *6 To use RS-422/485 communication on the RS-232C/422/485 interface module, the DIP Switch setting is required. Please refer to "Knowledge Base" (FAQs) on the support site. (<http://www.pro-face.com/trans/en/manual/1001.html>)

Settings	FAQ ID
PFXZPBMPR42P2, RS422/485 change method	FA263858
PFXZPBMPR42P2 termination resistor setting	FA263974
PFXZPBMPR44P2, RS422/485 change method	FA264087
PFXZPBMPR44P2 termination resistor setting	FA264088

- *7 Set up the SIO type with the DIP Switch. Please refer to the IPC manual for details of DIP Switch. The BOX Atom has not a switch to set the RS-232C, RS-422/485 mode. Use the BIOS for the setting.
- *8 For the connection with the External Device, on the user-created cable read as if the connector on the Display-side is a M12 A-coding 8 pin socket. The pin assignment is the same as described in the cable diagram. For the M12 A-coding connector, use PFXZPSCNM122.
- *9 In addition to COM1, you can also use the COM port on the optional interface.
- *10 Install the optional interface in the expansion slot.

DIP Switch settings (PL3000 / PS3000 Series)

RS-232C

DIP Switch	Setting	Description
1	OFF*1	Reserved (always OFF)
2	OFF	SIO type: RS-232C
3	OFF	
4	OFF	Output mode of SD (TXD) data: Always output
5	OFF	Terminal resistance (220Ω) insertion to SD (TXD): None
6	OFF	Terminal resistance (220Ω) insertion to RD (RXD): None
7	OFF	Short-circuit of SDA (TXA) and RDA (RXA): Not available
8	OFF	Short-circuit of SDB (TXB) and RDB (RXB): Not available
9	OFF	RS (RTS) Auto control mode: Disabled
10	OFF	

*1 When using PS-3450A, PS-3451A, PS3000-BA and PS3001-BD, turn ON the set value.

RS-422/485 (4 wire)


DIP Switch	Setting	Description
1	OFF	Reserved (always OFF)
2	ON	SIO type: RS-422/485
3	ON	
4	OFF	Output mode of SD (TXD) data: Always output
5	OFF	Terminal resistance (220Ω) insertion to SD (TXD): None
6	OFF	Terminal resistance (220Ω) insertion to RD (RXD): None
7	OFF	Short-circuit of SDA (TXA) and RDA (RXA): Not available
8	OFF	Short-circuit of SDB (TXB) and RDB (RXB): Not available
9	OFF	RS (RTS) Auto control mode: Disabled
10	OFF	

RS-422/485 (2 wire)

DIP Switch	Setting	Description
1	OFF	Reserved (always OFF)
2	ON	SIO type: RS-422/485
3	ON	
4	OFF	Output mode of SD (TXD) data: Always output
5	OFF	Terminal resistance (220Ω) insertion to SD (TXD): None
6	OFF	Terminal resistance (220Ω) insertion to RD (RXD): None
7	ON	Short-circuit of SDA (TXA) and RDA (RXA): Available
8	ON	Short-circuit of SDB (TXB) and RDB (RXB): Available
9	ON	RS (RTS) Auto control mode: Enabled
10	ON	

2 External Device Selection

Select the External Device to connect to the Display.

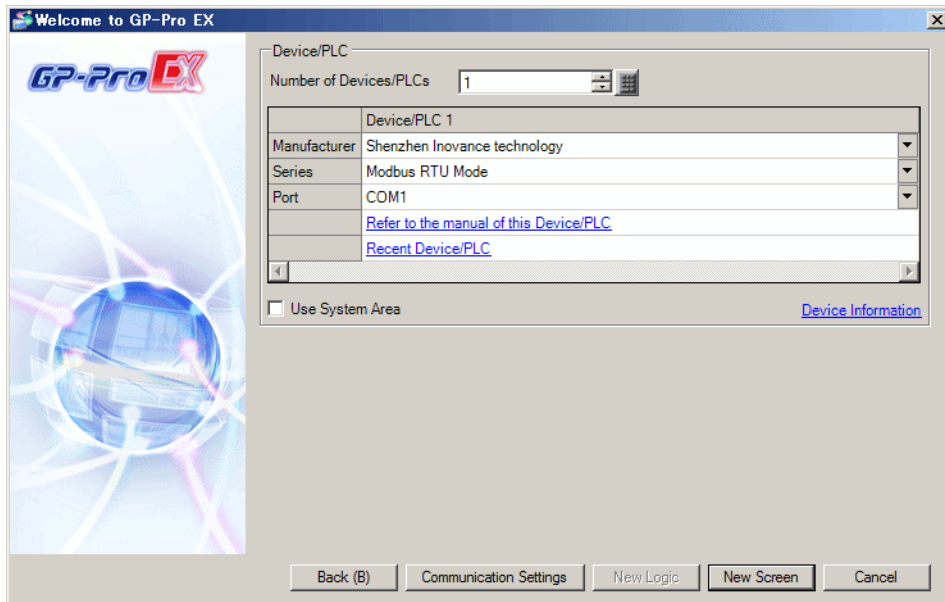

Setup Items	Setup Description
Number of Devices/PLCs	Enter an integer from 1 to 4 to define the number of Devices/PLCs to connect to the display.
Manufacturer	Select the manufacturer of the External Device to connect. Select "Shenzhen Inovance technology".
Series	Select the External Device model (series) and the connection method. Select "Modbus RTU Mode". In System configuration, make sure the External Device you are connecting is supported by "Modbus RTU Mode". ☞ "1 System Configuration" (page 3)
Port	Select the Display port to connect to the External Device.
Use System Area	Check this option to synchronize the system data area of the Display and the device (memory) of the External Device. When synchronized, you can use the External Device's ladder program to switch the display or display the window on the Display. Cf. GP-Pro EX Reference Manual "LS Area (Direct Access Method Area)" This feature can also be set in GP-Pro EX or in the Display's offline mode. Cf. GP-Pro EX Reference Manual "System Settings [Display Unit] - [System Area] Settings Guide" Cf. Maintenance/Troubleshooting Guide "Main Unit - System Area Settings"

3 Communication Settings

This section provides examples of communication settings recommended by Pro-face for the Display and the External Device.

3.1 Setting Example 1

■ GP-Pro EX Settings

◆ Communication Settings

To display the setup screen, from the [Project] menu, point to [System Settings] and select [Device/PLC].

Device/PLC 1

Summary [Change Device/PLC](#)

Manufacturer Series Port

Text Data Mode [Change](#)

Communication Settings

SIO Type RS232C RS422/485(2wire) RS422/485(4wire)

Speed

Data Length 7 8

Parity NONE EVEN ODD

Stop Bit 1 2

Flow Control NONE ER(DTR/CTS) XON/XOFF

Timeout (sec)

Retry

Wait To Send (ms)

Device-Specific Settings

Allowable Number of Devices/PLCs 16 [Add Device](#)

No.	Device Name	Settings	Add Indirect Device
1	PLC1	Series=H1U/H2U, Station No.=1	<input type="button" value="Add Indirect Device"/>

◆ Device Setting

To display the [Individual Device Settings] dialog box, from [Device-Specific Settings] in the [Device/PLC] window, select the external device and click [Settings] .

Individual Device Settings

PLC1

Series

If you change series, please reconfirm all address settings.

Station No.

■ External Device Settings

Use the Shenzhen Inovance ladder software (AutoShop Ver.3.01 or later) to configure communication settings for the External Device.

Refer to your External Device manual for details.

- (1) Start up the ladder software.
- (2) Select [New Project].
- (3) Configure the setup items as follows, and click [OK].

Setup Items	Setup Description
Project Name	Enter the project name.
Project Path	Select the save destination.
PLC Type	Select the series of the External Device.

- (4) In tree view, from [Communication Config] click the COM port that you will use and display the [COM Config] dialog box.
- (5) Configure the setup items as follows.

Setup Items	Setup Description
Protocol	MODBUS-RTU Slave Site
Baud rate	9600
Data Length	8bit
Parity	None
Stop Bit (s)	2bit
Station	1
Time Out	10

NOTE

- When using COM1, COM2 or COM3, select [Operate communication setting].

- (6) Click [OK] to complete the configuration.
- (7) Click [Write] to write the settings to the External Device.

3.2 Setting Example 2

■ GP-Pro EX Settings

◆ Communication Settings

To display the setup screen, from the [Project] menu, point to [System Settings] and select [Device/PLC].

The screenshot shows the 'Device/PLC 1' configuration window. It has a title bar 'Device/PLC 1' and a 'Summary' section with a 'Change Device/PLC' link. The Summary section includes:

- Manufacturer: Shenzhen Inovance technology
- Series: Modbus RTU Mode
- Port: COM1
- Text Data Mode: 1 (with a 'Change' link)

 The 'Communication Settings' section includes:

- SIO Type: RS422/485(2wire), RS232C, RS422/485(4wire)
- Speed: 9600 (dropdown)
- Data Length: 8, 7
- Parity: EVEN, NONE, ODD
- Stop Bit: 1, 2
- Flow Control: NONE, ER(DTR/CTS), XON/XOFF
- Timeout: 3 (spin box) (sec)
- Retry: 2 (spin box)
- Wait To Send: 3 (spin box) (ms)
- A 'Default' button is located at the bottom right of this section.

 The 'Device-Specific Settings' section includes:

- Allowable Number of Devices/PLCs: 16 (with an 'Add Device' link)
- A table with columns 'No.', 'Device Name', and 'Settings'. The first row shows '1', 'PLC1', and 'Series=H3U, Station No.=1'. There are 'Add' and 'Remove' icons for each row.
- An 'Add Indirect Device' button is at the bottom right.

◆ Device Setting

To display the [Individual Device Settings] dialog box, from [Device-Specific Settings] in the [Device/PLC] window, select the external device and click [Settings] .

The screenshot shows the 'Individual Device Settings' dialog box for 'PLC1'. It contains:

- A 'Series' dropdown menu set to 'H3U'. Below it is a note: 'If you change series, please reconfirm all address settings.'
- A 'Station No.' spin box set to '1'.
- A 'Default' button.
- 'OK(O)' and 'Cancel' buttons at the bottom.

■ External Device Settings

Use the Shenzhen Inovance ladder software (AutoShop Ver.3.01 or later) to configure communication settings for the External Device.

Refer to your External Device manual for details.

- (1) Start up the ladder software.
- (2) Select [New Project].
- (3) Configure the setup items as follows, and click [OK].

Setup Items	Setup Description
Project Name	Enter the project name.
Project Path	Select the save destination.
PLC Type	Select the series of the External Device.

- (4) In tree view, from [Communication Config] click the COM port that you will use and display the [COM Config] dialog box.
- (5) Configure the setup items as follows.

Setup Items	Setup Description
Protocol	MODBUS-RTU Slave Site
Baud rate	9600
Data Length	8bit
Parity	None
Stop Bit (s)	2bit
Station	1
Time Out	10

NOTE

- When using COM1, select [Operate communication setting].

- (6) Click [OK] to complete the configuration.
- (7) Click [Write] to write the settings to the External Device.

4 Setup Items

Set up the Display's communication settings in GP-Pro EX or in the Display's offline mode.


The setting of each parameter must match that of the External Device.

 "3 Communication Settings" (page 9)

4.1 Setup Items in GP-Pro EX

■ Communication Settings

To display the setup screen, from the [Project] menu, point to [System Settings] and select [Device/PLC].

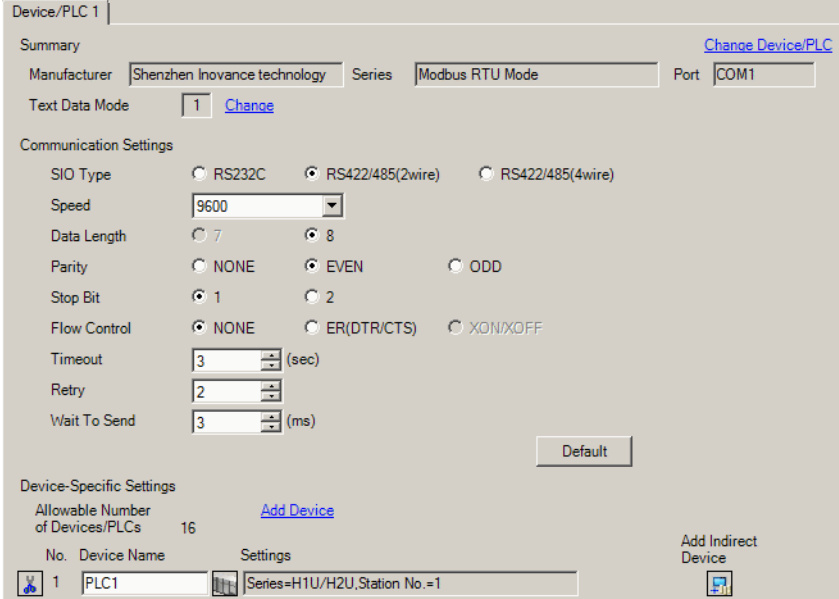


Setup Items	Setup Description
SIO Type	Select the SIO type for communicating with the External Device.
Speed	Select the communication speed between the External Device and the Display.
Data Length	Select a data length.
Parity	Select how to check parity.
Stop Bit	Select a stop bit length.
Flow Control	Select the communication control method to prevent overflow of transmission and reception data.
Timeout	Enter the time (s) for which the Display waits for the response from the External Device, from "1 to 127".
Retry	In case of no response from the External Device, enter how many times the Display retransmits the command, from "0 to 255".
Wait To Send	Enter the standby time (ms) from when the Display receives packets until it transmits the next command, from "0 to 255".


NOTE

- Refer to the GP-Pro EX Reference Manual for Indirect Device.

Cf. GP-Pro EX Reference Manual "Changing the Device/PLC at Runtime (Indirect Device)"

■ Device Setting

To display the [Individual Device Settings] dialog box, from [Device-Specific Settings] in the [Device/PLC] window, select the external device and click [Settings]  .

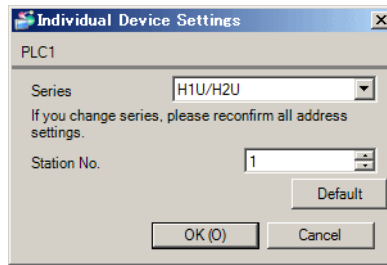

Setup Items	Setup Description
Series	Select the series of the External Device.
Station No.	Enter the station number of the External Device, from "1 to 247".

4.2 Setup Items in Offline Mode

NOTE

- Refer to the Maintenance/Troubleshooting guide for information on how to enter offline mode or about the operation.

Cf. Maintenance/Troubleshooting Guide "Offline Mode"

- The number of the setup items to be displayed for 1 page in the offline mode depends on the Display in use. Please refer to the Reference manual for details.

■ Communication Settings

To display the setting screen, touch [Device/PLC Settings] from [Peripheral Settings] in offline mode. Touch the External Device you want to set from the displayed list.

Comm.	Device			
Modbus RTU Mode		[COM1]	Page 1/1	
SIO Type	RS422/485(2wire) ▼			
Speed	9600 ▼			
Data Length	<input checked="" type="radio"/> 8			
Parity	<input type="radio"/> NONE <input checked="" type="radio"/> EVEN <input type="radio"/> ODD			
Stop Bit	<input checked="" type="radio"/> 1 <input type="radio"/> 2			
Flow Control	NONE ▼			
Timeout(s)		3	▼	▲
Retry		2	▼	▲
Wait To Send(ms)		3	▼	▲
Exit		Back		2019/10/16 17:02:31

Setup Items	Setup Description
SIO Type	Select the SIO type for communicating with the External Device. IMPORTANT In the communication settings, set [SIO Type] correctly according to the serial interface specifications of the Display. If you select an SIO type that the serial interface does not support, proper operation cannot be guaranteed. Refer to your Display manual for details on the serial interface specifications.
Speed	Select the communication speed between the External Device and the Display.
Data Length	Select data length.
Parity	Select how to check parity.

Setup Items	Setup Description
Stop Bit	Select stop bit length.
Flow Control	The communication control method to prevent overflow of transmission and reception data.
Timeout	Enter the time (s) for which the Display waits for the response from the External Device, from "1 to 127".
Retry	In case of no response from the External Device, enter how many times the Display retransmits the command, from "0 to 255".
Wait To Send	Enter the standby time (ms) from when the Display receives packets until it transmits the next command, from "0 to 255".

■ Device Setting

To display the setting screen, touch [Device/PLC Settings] from [Peripheral Settings]. Touch the External Device you want to set from the list that appears, and touch [Device].

Comm.	Device			
Modbus RTU Mode		[COM1]	Page 1/1	
Device/PLC Name	PLC1 ▼			
Series	H1U/H2U			
Station No.	1 ▼ ▲			
	Exit		Back	2019/10/16 17:02:36

Setup Items	Setup Description
Device/PLC Name	Select the External Device to set. Device/PLC Name is the title of the External Device set with GP-Pro EX. (Initial value [PLC1])
Series	Displays the series of the External Device.
Station No.	Enter the station number of the External Device, from "1 to 247".

5 Cable Diagrams



The cable diagrams shown below may be different from the cable diagrams recommended by Shenzhen Inovance. Please be assured there is no operational problem in applying the cable diagrams shown in this manual.

- The FG pin on the External Device must be D-class grounded. Refer to your External Device manual for details.
- The SG and FG are connected inside the Display. If you connect the External Device to the SG, do not form any short-circuit loop in the system design.
- If the communication is not stable because of noise or other factors, connect an isolation unit.

Cable Diagram 1


Display (Connection Port)	Cable		Notes
GP-4*01TM (COM1) GP-Rear Module (COM1)	1A	COM port conversion adapter by Pro-face CA3-ADPCOM-01 + Terminal block conversion adapter by Pro-face CA3-ADPTRM-01 + User-created cable	The cable length must be 15m or less.
	1B	User-created cable	
IPC*1	1C	COM port conversion adapter by Pro-face CA3-ADPCOM-01 + Terminal block conversion adapter by Pro-face CA3-ADPTRM-01 + User-created cable	The cable length must be 15m or less.
	1D	User-created cable	
GP-4106 (COM1) GP-4116T (COM1)	1E	User-created cable	The cable length must be 15m or less.
GP-4107 (COM1) GP-4*03T*2 (COM2) GP-4203T (COM1)	1F	User-created cable	The cable length must be 15m or less.
GP4000*3 (COM2) GP-4201T (COM1) SP5000*4 (COM1/2) SP-5B00 (COM2) ST6000*5 (COM2) ST-6200 (COM1) STM6000 (COM1) STC6000 (COM1) ET6000*6 (COM2) PS6000 (Basic Box) (COM1/2)	1G	RS-422 Terminal Block Conversion Adapter by Pro-face PFXZCBADTM1*7 + User-created cable	The cable length must be 15m or less.
	1B	User-created cable	
LT-4*01TM (COM1) LT-Rear Module (COM1)	1H	RJ45 RS-485 Cable (5m) by Pro-face PFXZLMCBJR81	The cable length must be 15m or less.

Display (Connection Port)	Cable		Notes
PE-4000B ^{*8} PS5000 ^{*8} PS6000 (Optional Interface) ^{*8}	11	User-created cable	The cable length must be 15m or less.


- *1 Only the COM port which can communicate by RS-422/485 (2 wire) can be used. (Except PE-4000B, PS5000, and PS6000)
 ■ IPC COM Port (page 5)
- *2 Except GP-4203T
- *3 All GP4000 models except GP-4100 Series, GP-4*01TM, GP-Rear Module, GP-4201T and GP-4*03T
- *4 Except SP-5B00
- *5 Except ST-6200
- *6 Due to the COM port specifications, flow control is not possible. Omit wiring the control pins on the Display side of the cable diagram.
- *7 When using a Terminal Block Conversion Adapter (CA3-ADPTRM-01) instead of the RS-422 Terminal Block Conversion Adapter, refer to Cable Diagram 1A.
- *8 Only the COM port which can communicate by RS-422/485 (2 wire) can be used.
 ■ IPC COM Port (page 5)

1A)

- 1:1 Connection

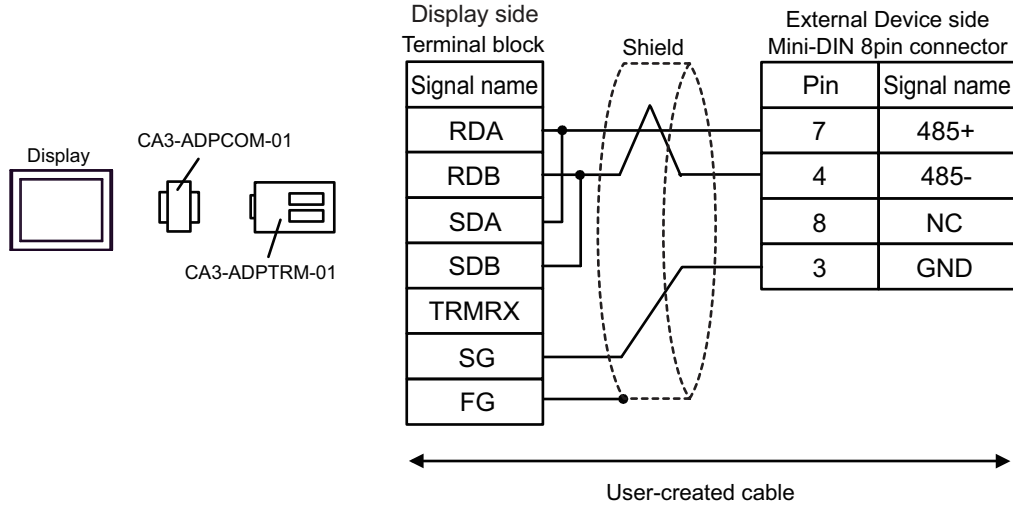


- 1:n Connection

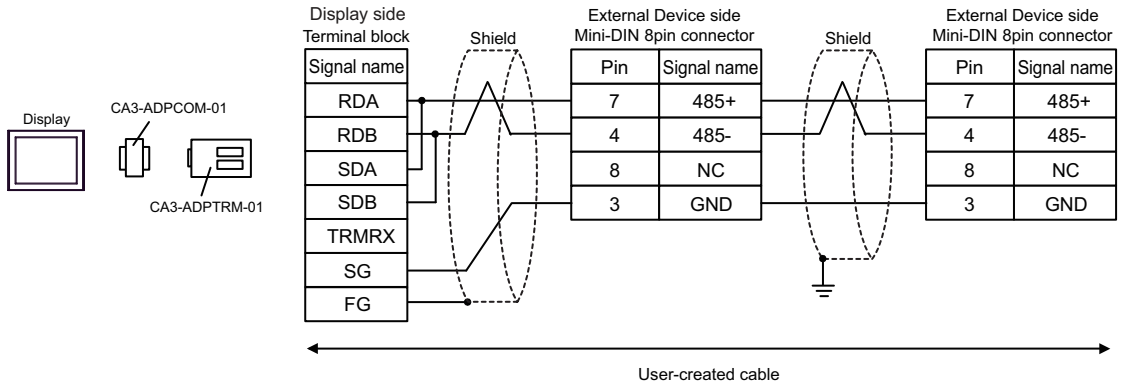


1B)

- 1:1 Connection

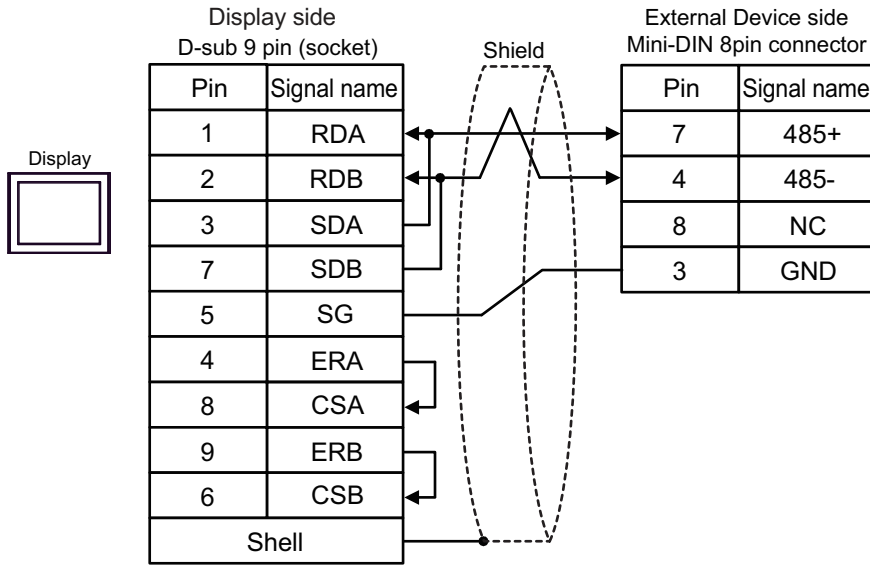


- 1:n Connection

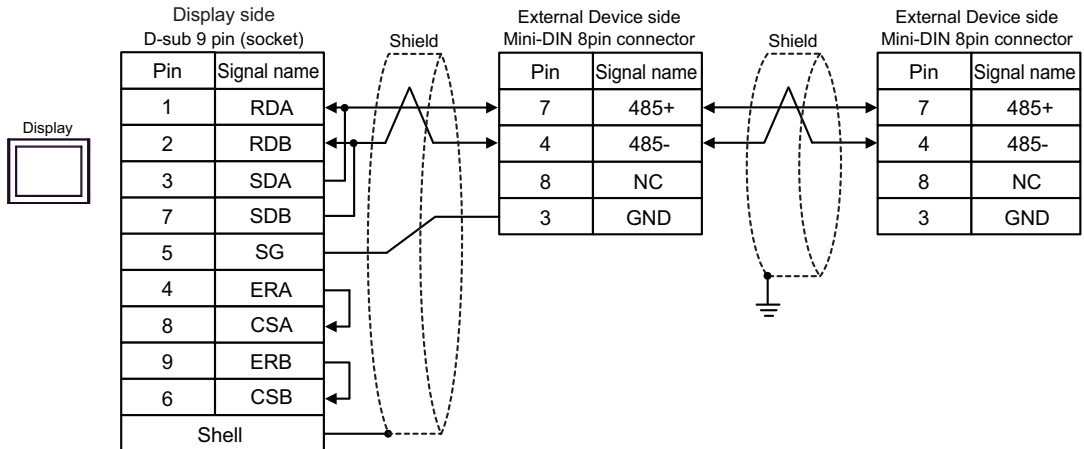


1C)

- 1:1 Connection

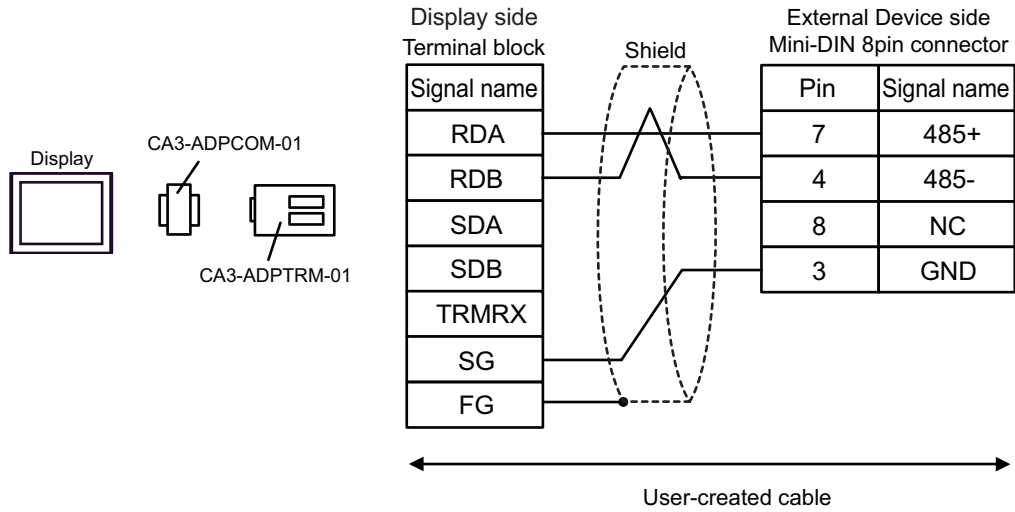


- 1:n Connection

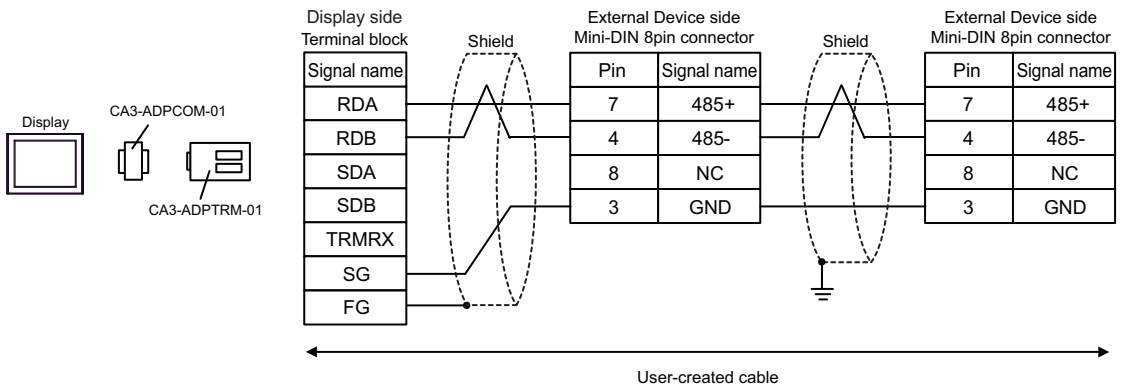


1D)

- 1:1 Connection

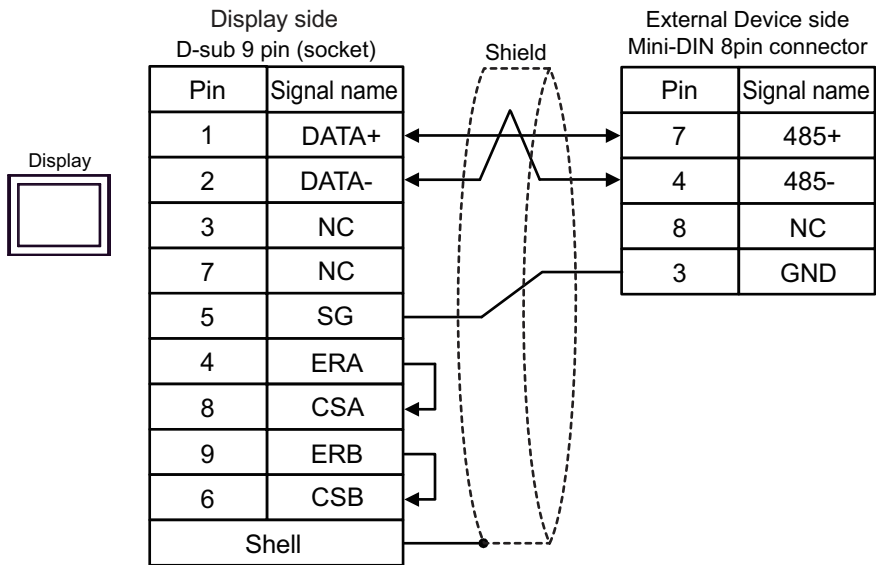


- 1:n Connection

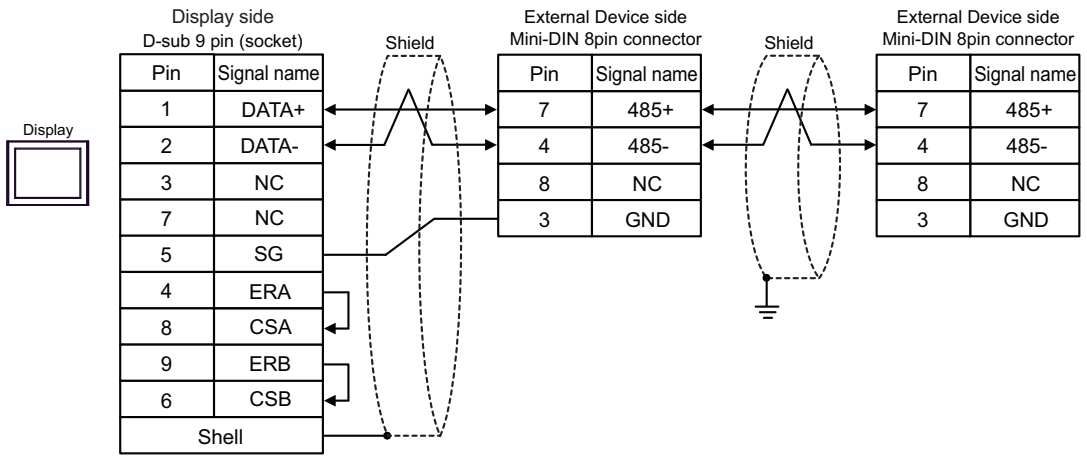


1E)

- 1:1 Connection

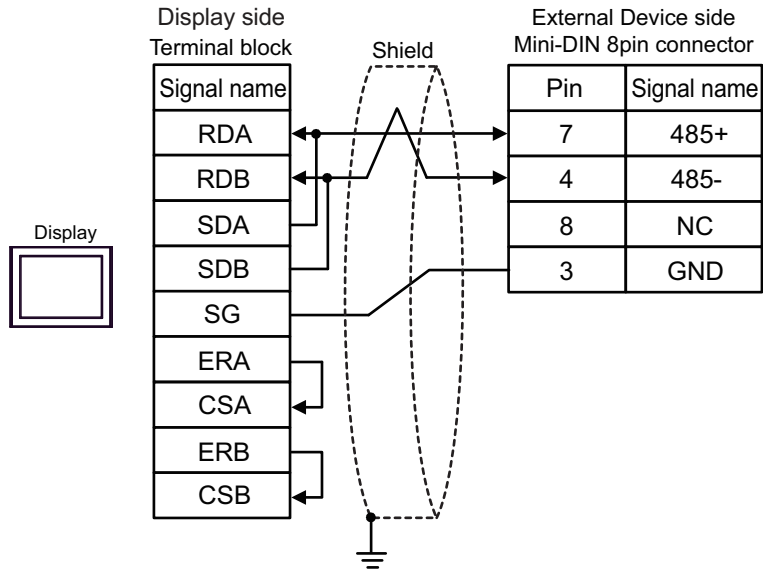

- 1:n Connection

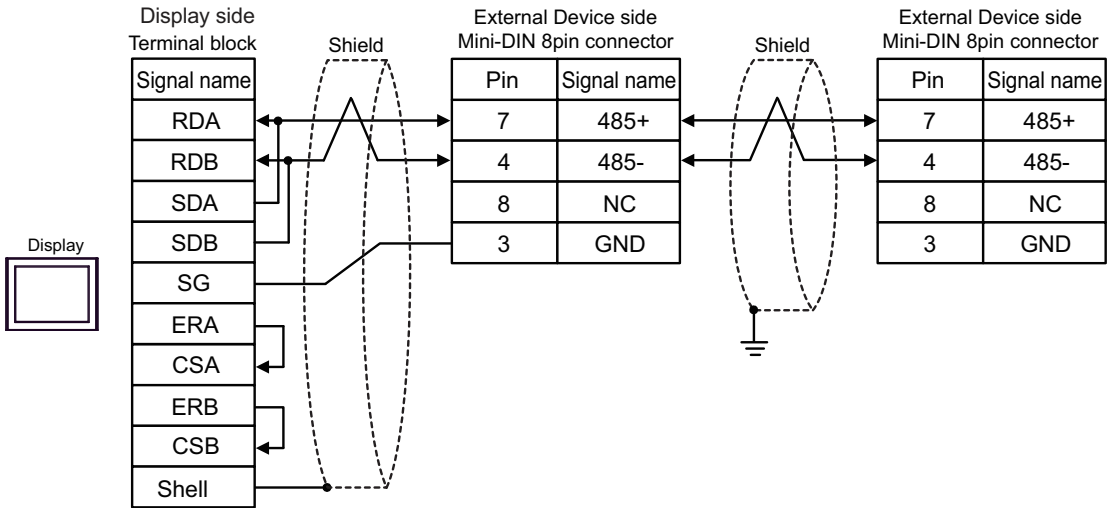


IMPORTANT


- Set the DIP Switch 1-4 on the rear of the Display to OFF.

1F)

- 1:1 Connection

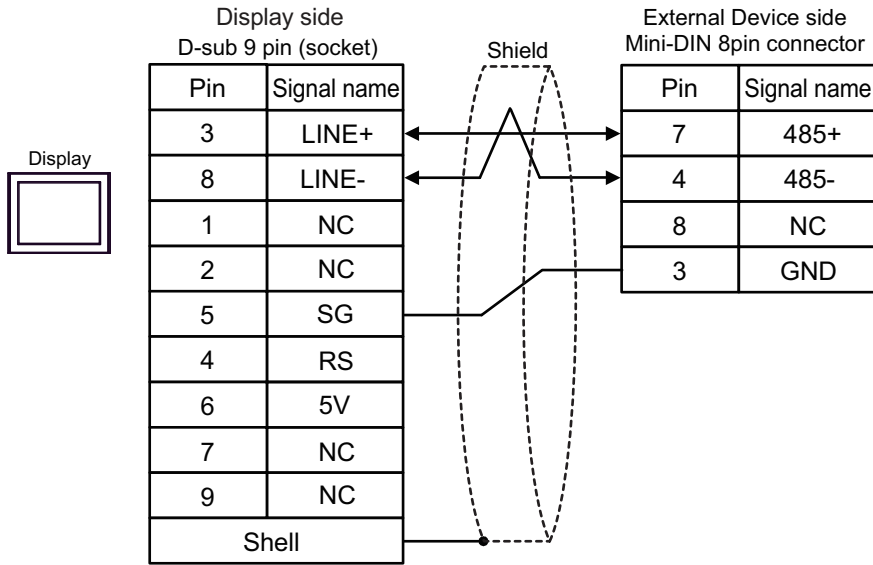

- 1:n Connection

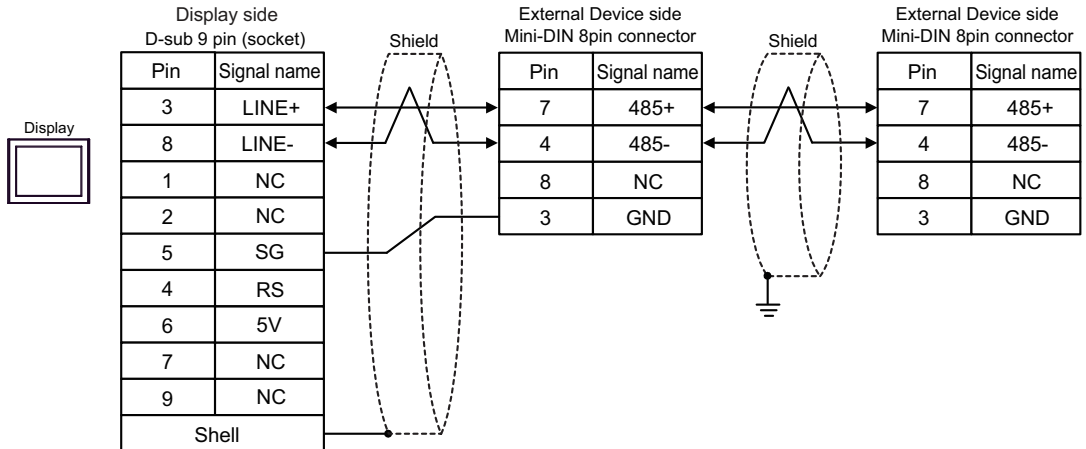


NOTE


- In COM on the GP-4107, the SG and FG terminals are isolated.

1G)

- 1:1 Connection

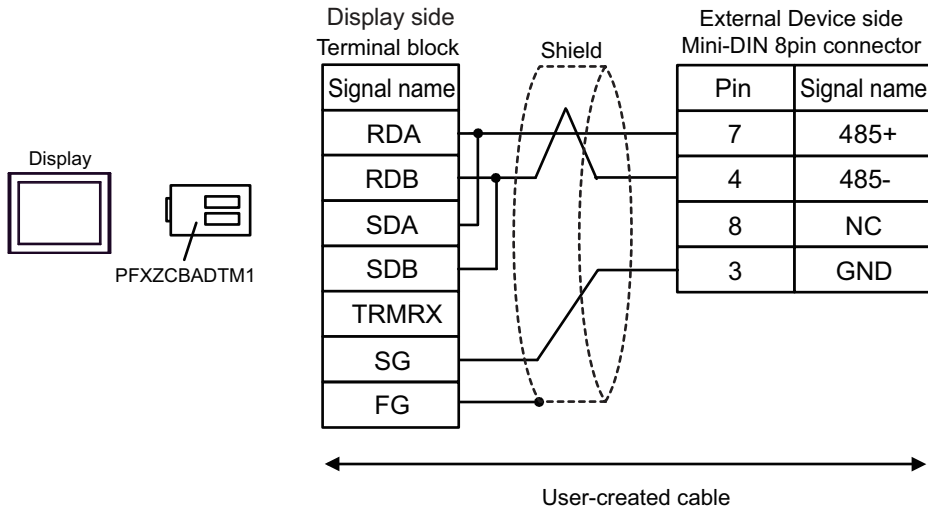


- 1:n Connection

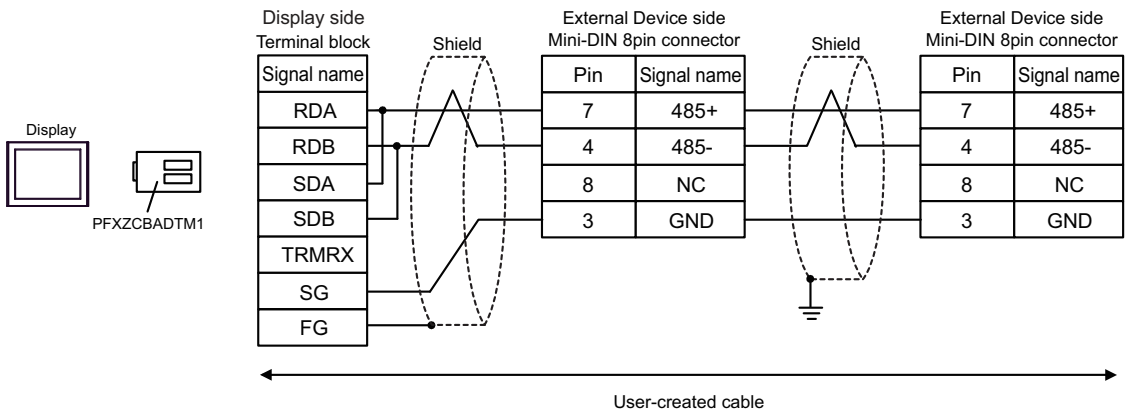


1H)

- 1:1 Connection

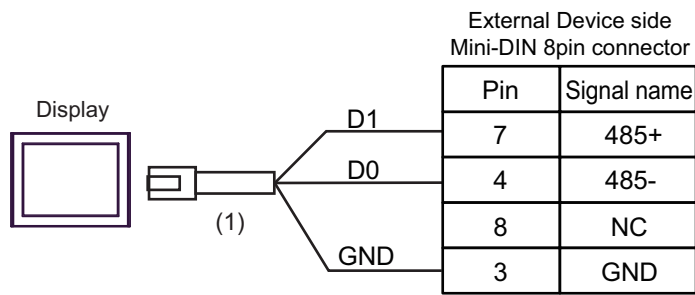


- 1:n Connection

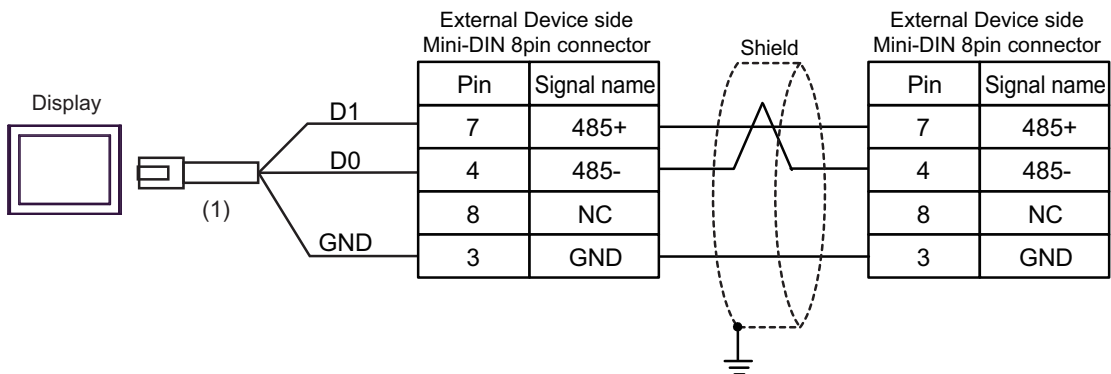


Number	Name	Notes
(1)	RJ45 RS-485 Cable (5m) by Pro-face PFXZLMCBRJR81	

11)

- 1:1 Connection

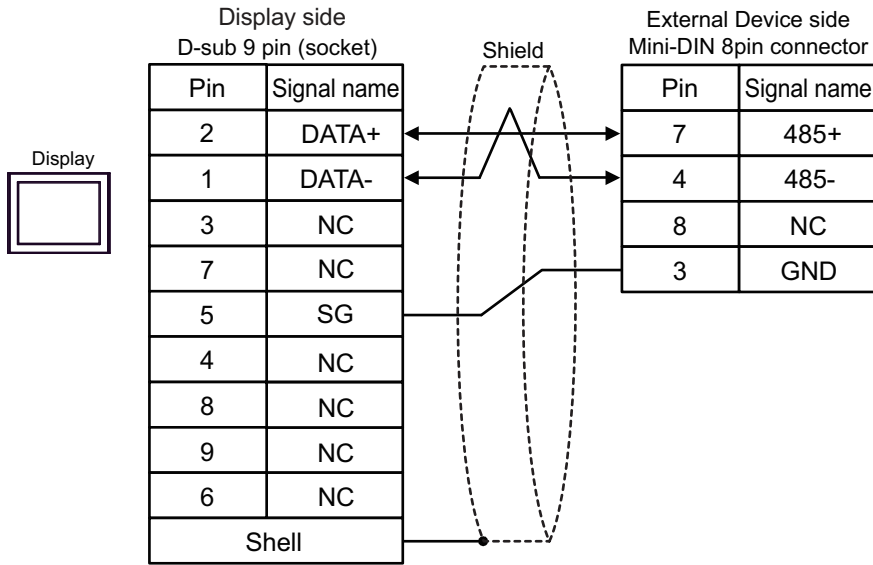

- 1:n Connection

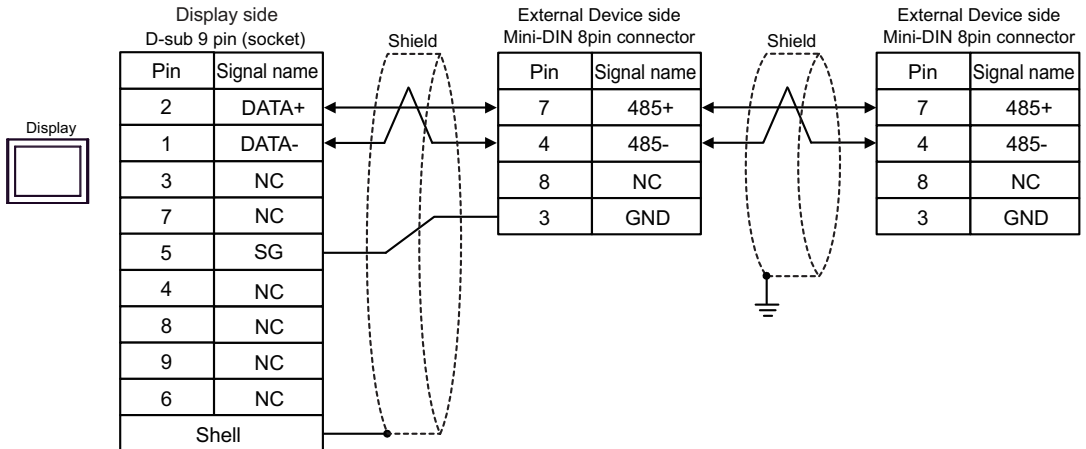

Cable Diagram 2

Display (Connection Port)	Cable		Notes
GP-4*01TM (COM1) GP-Rear Module (COM1)	2A	COM port conversion adapter by Pro-face CA3-ADPCOM-01 + Terminal block conversion adapter by Pro-face CA3-ADPTRM-01 + User-created cable	The cable length must be 15m or less.
	2B	User-created cable	
IPC*1	2C	COM port conversion adapter by Pro-face CA3-ADPCOM-01 + Terminal block conversion adapter by Pro-face CA3-ADPTRM-01 + User-created cable	The cable length must be 15m or less.
	2D	User-created cable	
GP-4106 (COM1) GP-4116T (COM1)	2E	User-created cable	The cable length must be 15m or less.
GP-4107 (COM1) GP-4*03T*2 (COM2) GP-4203T (COM1)	2F	User-created cable	The cable length must be 15m or less.
GP4000*3 (COM2) GP-4201T (COM1) SP5000*4 (COM1/2) SP-5B00 (COM2) ST6000*5 (COM2) ST-6200 (COM1) STM6000 (COM1) STC6000 (COM1) ET6000*6 (COM2) PS6000 (Basic Box) (COM1/2)	2G	RS-422 Terminal Block Conversion Adapter by Pro-face PFXZCBADTM1*7 + User-created cable	The cable length must be 15m or less.
	2B	User-created cable	
LT-4*01TM (COM1) LT-Rear Module (COM1)	2H	RJ45 RS-485 Cable (5m) by Pro-face PFXZLMCBJR81	The cable length must be 15m or less.
PE-4000B*8 PS5000*8 PS6000 (Optional Interface)*8	2I	User-created cable	The cable length must be 15m or less.

*1 Only the COM port which can communicate by RS-422/485 (2 wire) can be used. (Except PE-4000B, PS5000, and PS6000)

 ■ IPC COM Port (page 5)

*2 Except GP-4203T


*3 All GP4000 models except GP-4100 Series, GP-4*01TM, GP-Rear Module, GP-4201T and GP-4*03T

*4 Except SP-5B00


- *5 Except ST-6200
- *6 Due to the COM port specifications, flow control is not possible. Omit wiring the control pins on the Display side of the cable diagram.
- *7 When using a Terminal Block Conversion Adapter (CA3-ADPTRM-01) instead of the RS-422 Terminal Block Conversion Adapter, refer to Cable Diagram 2A.
- *8 Only the COM port which can communicate by RS-422/485 (2 wire) can be used.
 ☞ ■ IPC COM Port (page 5)

2A)

- 1:1 Connection

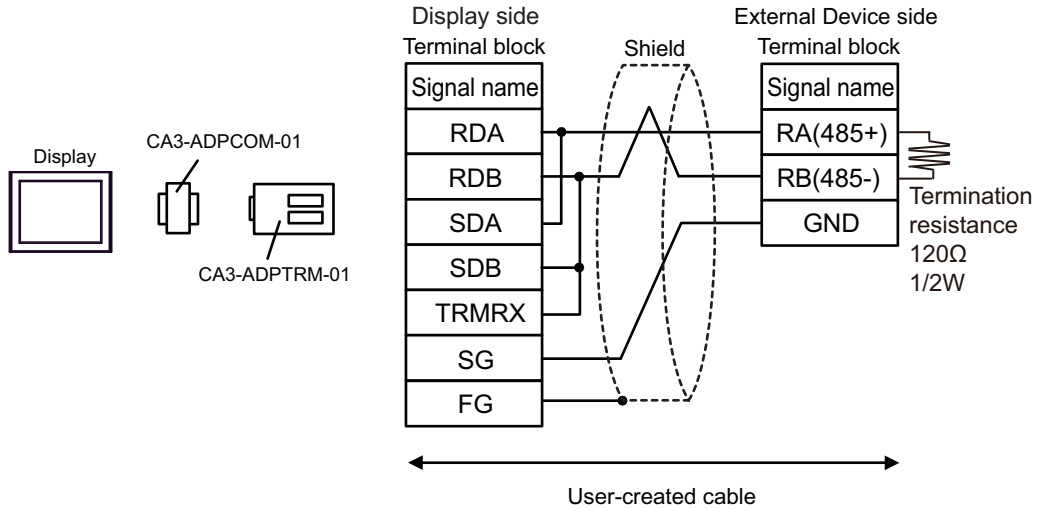


- 1:n Connection

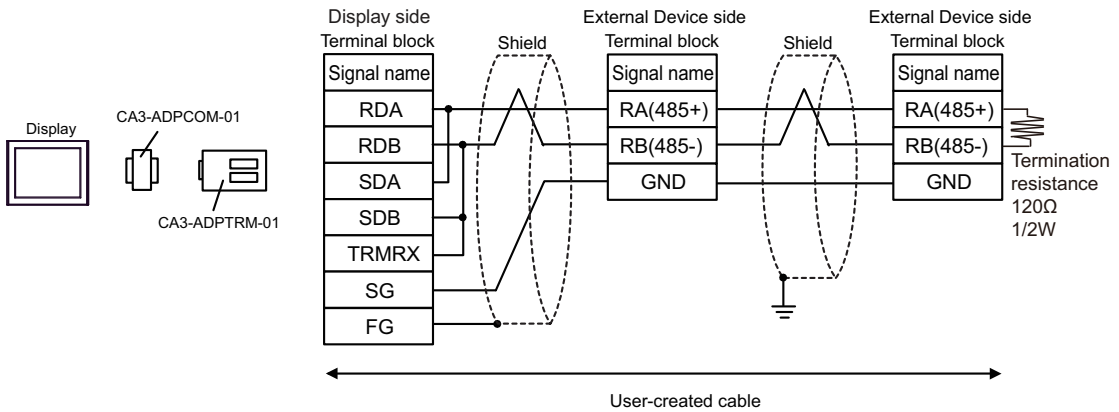


2B)

- 1:1 Connection

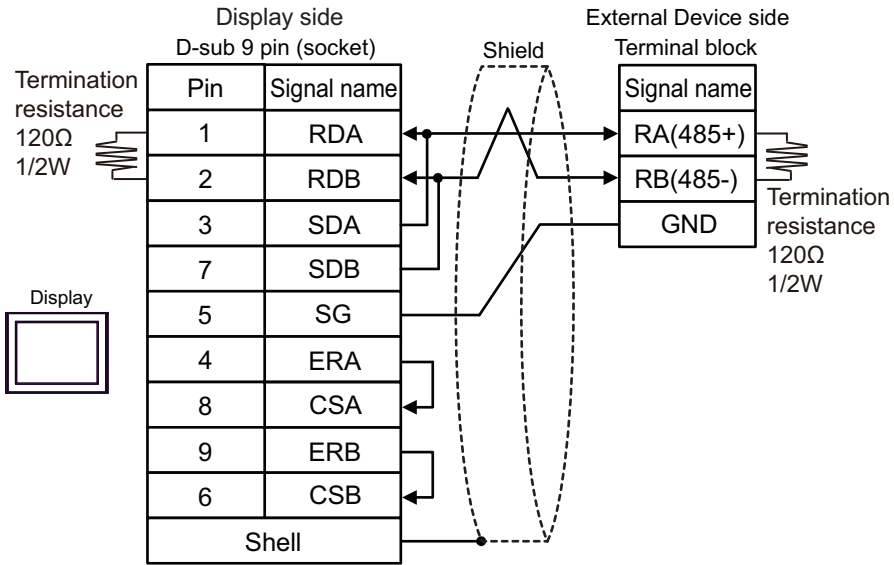


- 1:n Connection

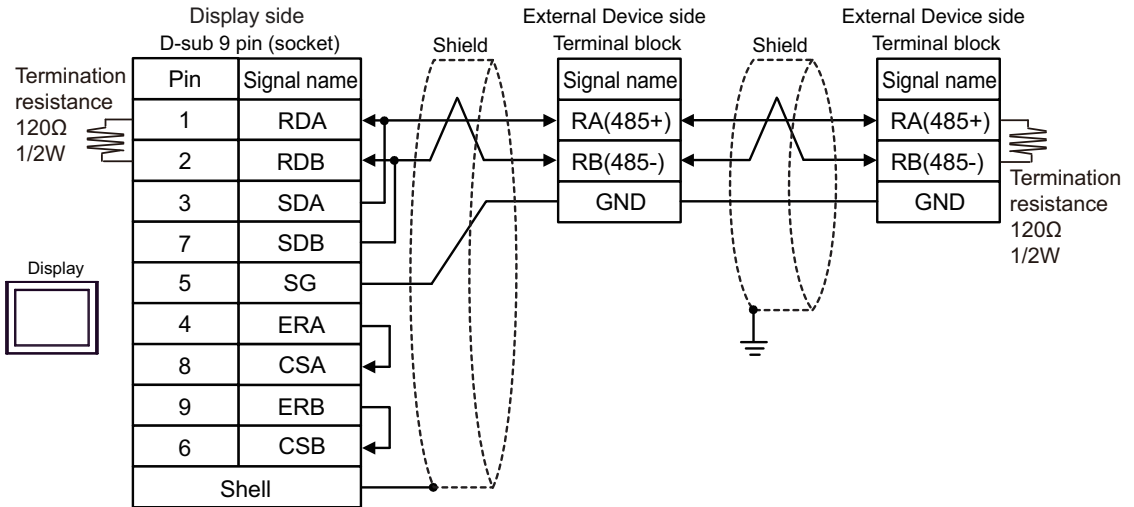


2C)

- 1:1 Connection

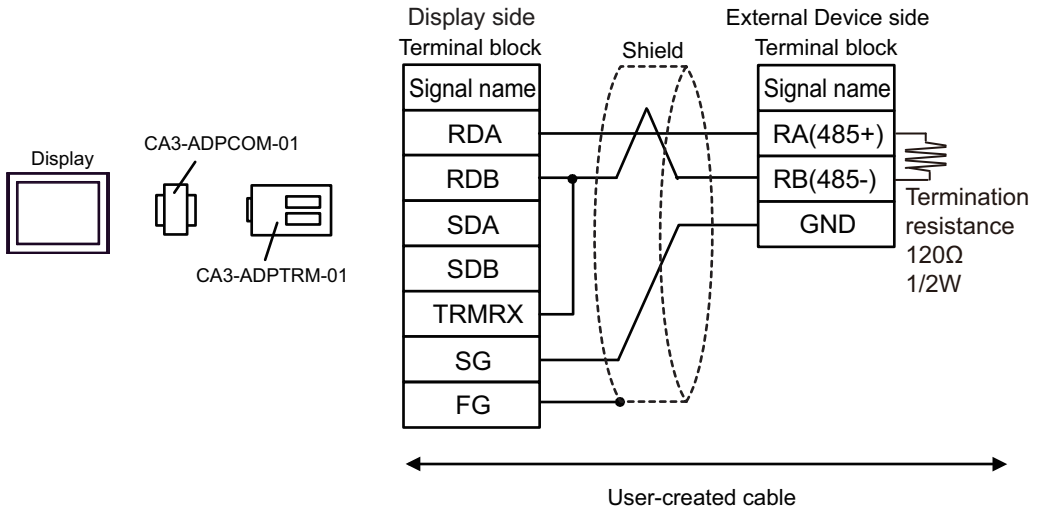


- 1:n Connection

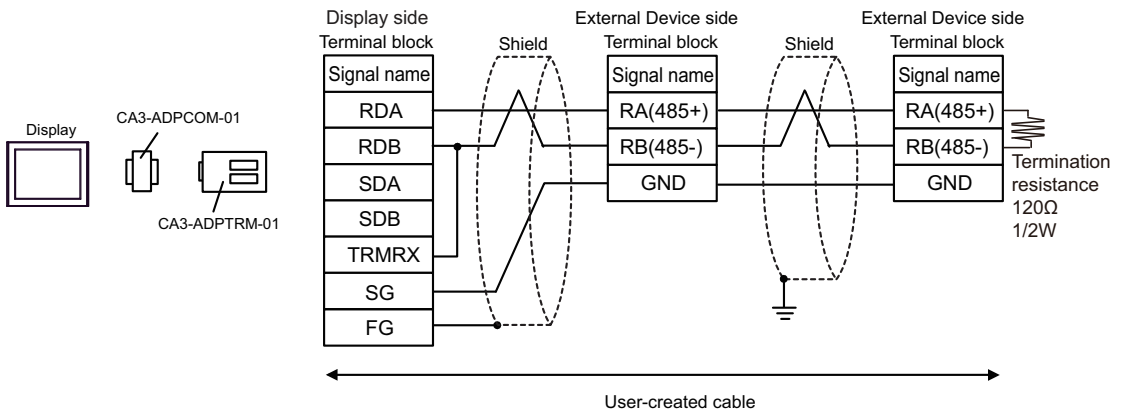


2D)

- 1:1 Connection

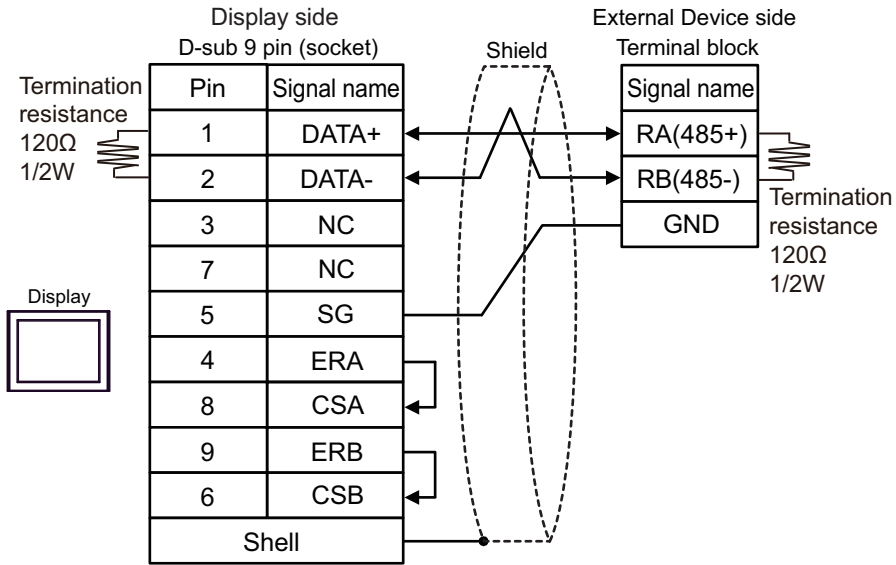


- 1:n Connection

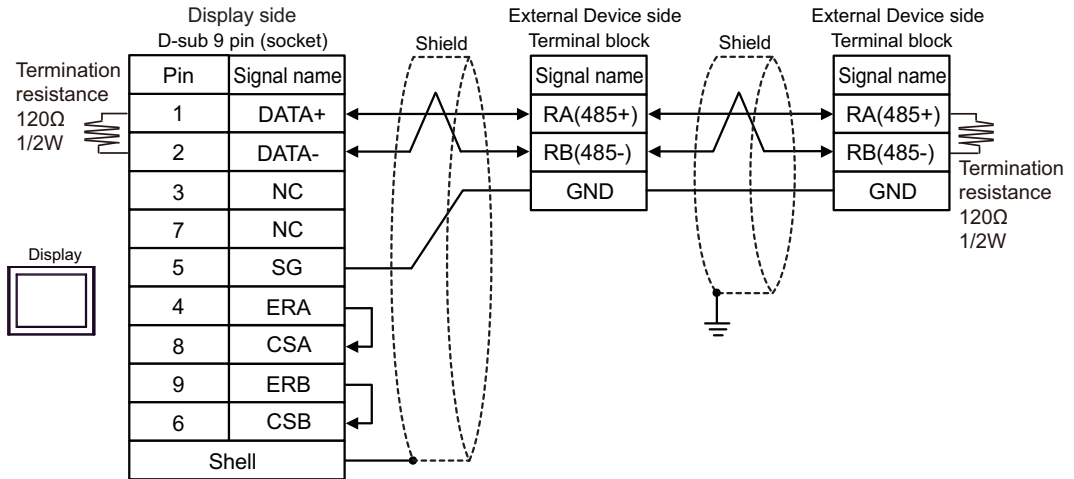


2E)

- 1:1 Connection

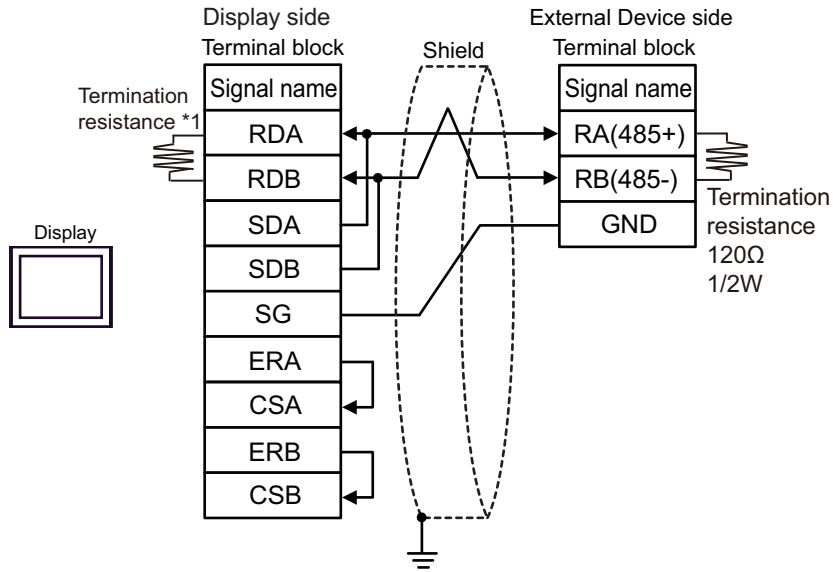

- 1:n Connection

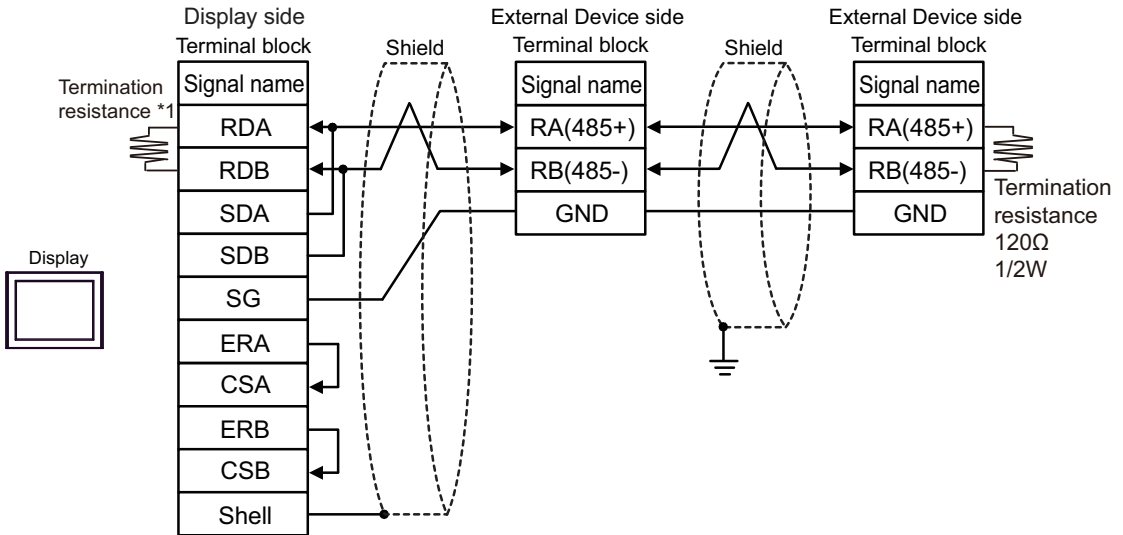


*1 The resistance in the Display is used as the termination resistance. Set the value of the DIP Switch on the rear of the Display as shown in the table below.


DIP Switch No.	Set Value
1	OFF
2	OFF
3	ON
4	ON

2F)

- 1:1 Connection

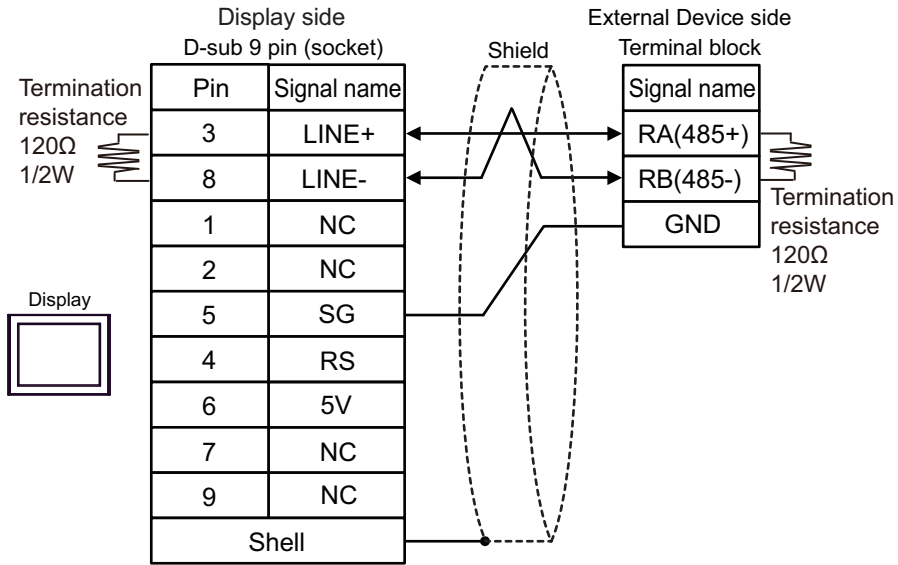


- 1:n Connection

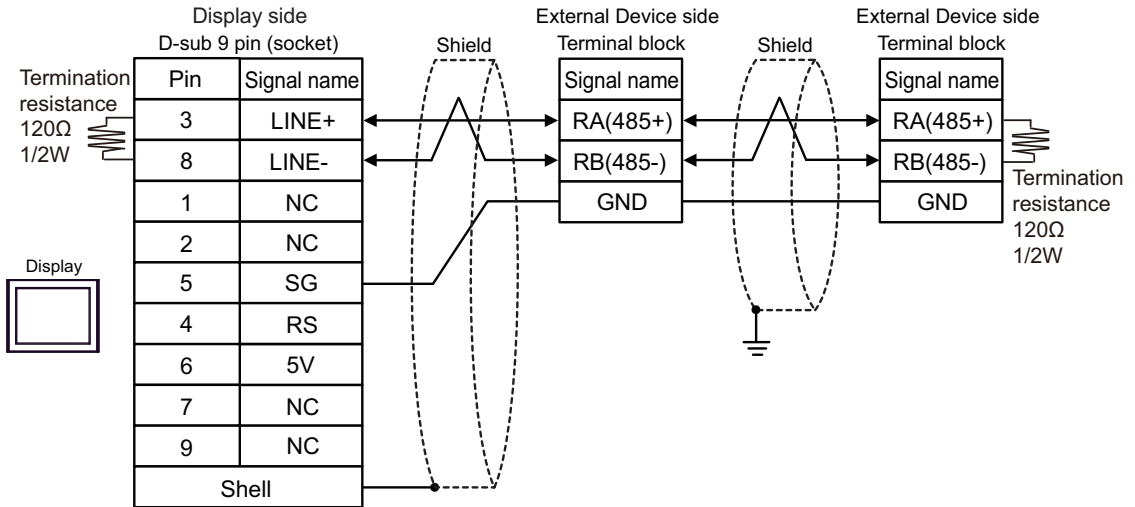


NOTE • In COM on the GP-4107, the SG and FG terminals are isolated.

2G)

- 1:1 Connection

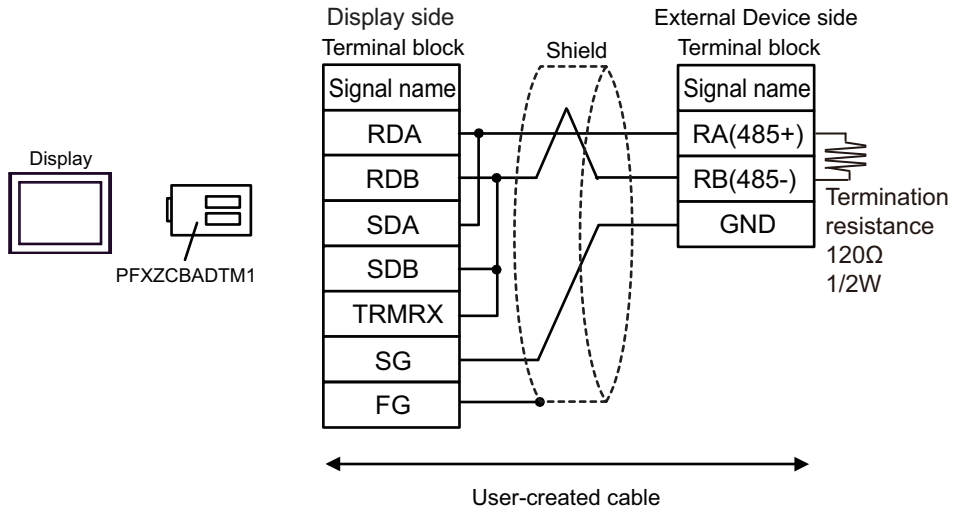


- 1:n Connection

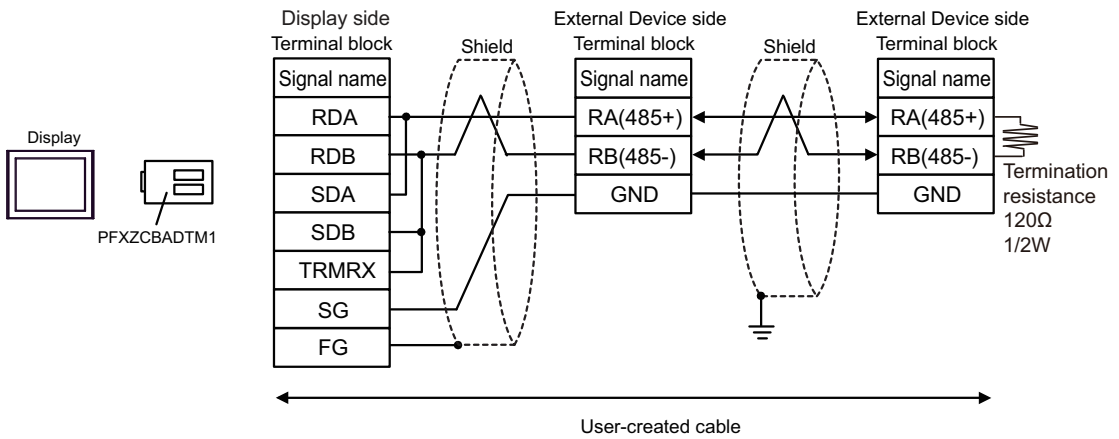


2H)

- 1:1 Connection

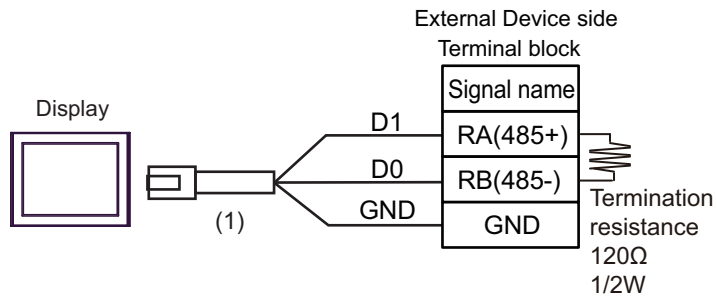


- 1:n Connection

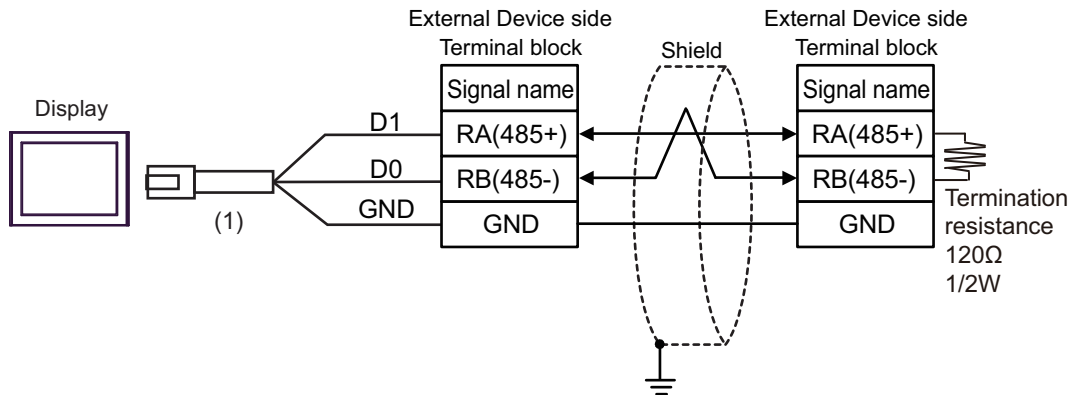


Number	Name	Notes
(1)	RJ45 RS-485 Cable (5m) by Pro-face PFXZLMCBJR81	

2l)

- 1:1 Connection

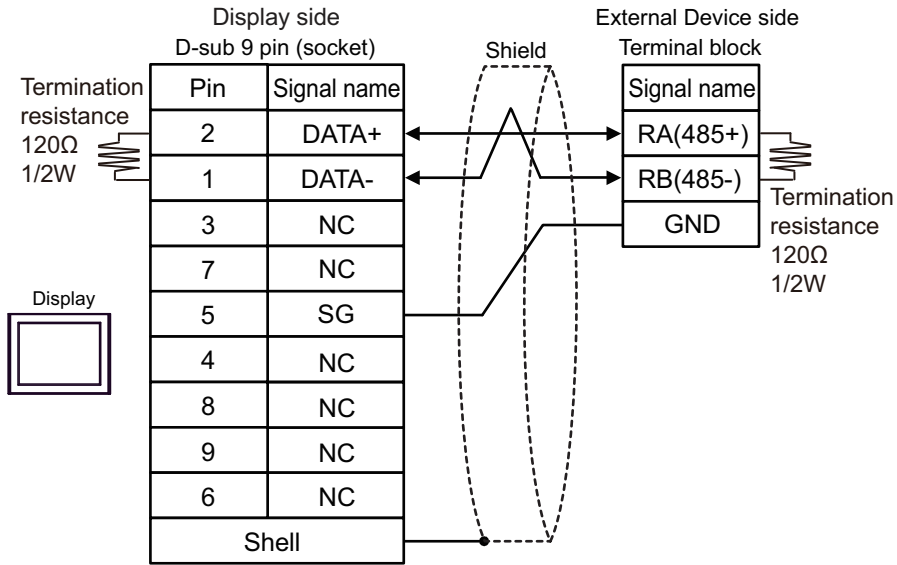


- 1:n Connection

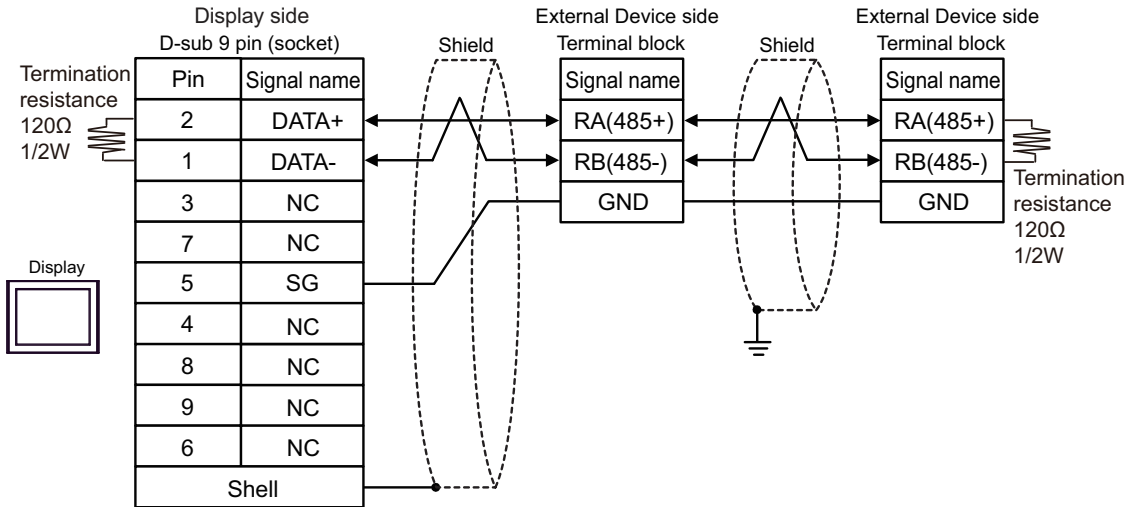





6 Supported Device

The range of supported device addresses is shown in the table below. Please note that the actual supported range for devices varies depending on the external device that is used. Please check the actual range in the external device manual.

 
6.1 H1U/H2U Series

  : This address can be specified as system data area.


Device	Bit Address	Word Address	32 bits	Remarks
Input Register	X000 - X377	-		
Output Relay	Y000 - Y377	-		
Internal Relay	M0000 - M3071	-		
Special Relay	M8000 - M8511	-		
State Relay	S000 - S999	-		
Timer Contact	T000 - T255	-		
Timer Register	-	T000 - T255		
Counter Contact	C000 - C255	-		
Counter Register	-	C000 - C199		
	-	C200 - C255		*1
Data Register	-	 D0000 - D8255		

 
 
 
*1 32-bit device

NOTE

- Refer to the GP-Pro EX Reference Manual for system data area.
Cf. GP-Pro EX Reference Manual "LS Area (Direct Access Method Area)"
- Refer to the precautions on manual notation for icons in the table.
 "Manual Symbols and Terminology"

6.2 H3U Series

 : This address can be specified as system data area.

Device	Bit Address	Word Address	32 bits	Remarks
Input Register	X000 - X377	-	[L/H]	
Output Relay	Y000 - Y377	-		
Internal Relay	M0000 - M7679	-		
Special Relay	M8000 - M8511	-		
	SM0000 - SM1023			
State Relay	S0000 - S4095	-		
Timer Contact	T000 - T511	-		
Timer Register	-	T000 - T511		
Counter Contact	C000 - C255	-		
Counter Register	-	C000 - C199		
	-	C200 - C255		*1
Data Register	-	 D0000 - D8511		
Special Register		SD0000 - SD1023		
Extension Register		R00000 - R32767		


*1 32-bit device

NOTE

- Refer to the GP-Pro EX Reference Manual for system data area.

Cf. GP-Pro EX Reference Manual "LS Area (Direct Access Method Area)"

- Refer to the precautions on manual notation for icons in the table.

 "Manual Symbols and Terminology"

7 Device Code and Address Code

Use device code and address code if you select "Device Type & Address" for the address type in Data displays.

Device	Device Name	Device Code (HEX)	Address Code
Timer Register	T	0060	Word Address
Counter Register	C	0061 ^{*1}	Word Address
		0062 ^{*2}	Word Address
Data Register	D	0063	Word Address
Special Register	SD	0064	Word Address ^{*3}
Extension Register	R	0065	Word Address ^{*3}

*1 Device code for C000 to C199

*2 Device code for C200 to C255

*3 Supported by H3U series only

8 Error Messages

Error messages are displayed on the Display screen as follows: "No.: Device Name: Error Message (Error Occurrence Area)". Each description is shown below.

Item	Description
No.	Error No.
Device Name	Name of the External Device where an error has occurred. Device name is a title of the External Device set with GP-Pro EX. (Initial value [PLC1])
Error Message	Displays messages related to an error that has occurred.
Error Occurrence Area	<p>Displays the IP address or device address of the External Device where an error has occurred, or error codes received from the External Device.</p> <p>NOTE</p> <ul style="list-style-type: none"> • IP address is displayed as "IP address (Decimal): MAC address (Hex)". • Device address is displayed as "Address: Device address". • Received error codes are displayed as "Decimal [Hex]".

Display Examples of Error Messages

"RHAA035: PLC1: Error has been responded for device write command (Error Code: 1 [01H])"

NOTE

- Refer to your External Device manual for details on received error codes.
- Refer to "Display-related errors" in "Maintenance/Troubleshooting Manual" for details on the error messages common to the driver.

