

Index

- A**
- Abnormal termination 1-10
 - Address Block Conversion 1-111
 - Address Block Conversion on Model Change 1-112
 - AddressMonitor 2-45, 2-174
 - Administrator 1-4
 - Alarm 1-113, 1-134, 1-136
 - Analog 2-39
 - Analog settings 2-156
 - API communication 1-194
- B**
- Backlight 2-12, 2-18, 2-79
 - Backup 1-17, 2-11
 - Backup data 1-29, 2-104, 2-172
 - Backup SRAM 1-131, 1-183, 2-31, 2-98, 2-105
 - Bar Code Settings 2-24, 2-93
 - Brightness Control 2-10, 2-175
 - Built-in Function 1-113
 - Buzzer 1-61, 2-15, 2-79
- C**
- Calibration 2-39, 2-101
 - Calibration Touch Panel 2-39, 2-101
 - CANopen Driver 2-54
 - CF card 1-28
 - CF memory loader 1-154, 2-171
 - CF memory loader tool 1-28
 - CF Starting 2-171
 - Check Board 2-153
 - Check CANopen Master 2-54
 - Check CANopen Slave 2-55
 - Check Color Tone 2-103
 - Check COM1/COM2/LAN 2-40, 2-102
 - Check Display Pattern 1-63, 2-99
 - Check Font 2-100
 - Check Touch Panel 2-39, 2-101
 - Checking Communication 2-49, 2-118
 - Clock 1-182, 1-183, 2-11
 - Color 2-173
 - Comment 1-148, 2-77, 2-110, 2-117
 - Communication line 1-76, 1-77, 1-78, 1-79
 - Communication settings 2-21, 2-91
 - Communication speed 1-75, 2-93, 2-95
 - Contrast
 - 2-10, 2-80, 2-128, 2-129, 2-130, 2-132, 2-134, 2-175
 - Controller function execution time 2-57
 - Cross cable 1-22, 1-45
 - Cross cursor 2-19
 - Cross-hair cursor 2-167
- D**
- Data 1-11, 1-17, 1-29, 1-30, 1-31, 1-60, 1-61
 - Data Display 1-72, 1-74, 1-75, 1-76, 1-78, 1-80, 2-93
 - Debug Settings 2-146
 - Default 2-173
 - Detach hardware 2-142
 - Device address
 - 1-72, 1-73, 1-74, 2-82, 2-83, 2-111, 2-118
 - Device Monitor 2-174
 - Device read command 1-172, 1-174, 1-176
 - Device write command 1-172, 1-173, 1-174
 - Device/PLC Settings 2-91
 - DeviceNet (Slave) unit 1-93, 1-215
 - DIO settings 2-154
 - Display scan time 1-80
 - Display Settings 2-80
 - Dot 2-101
 - Download 2-171
 - Driver 1-16, 1-77, 1-79
 - D-script
 - 1-72, 1-74, 1-75, 1-79, 1-80, 1-113, 1-131, 2-80
 - Duplicate 1-120
- E**
- Ethernet 1-19, 1-70, 2-22
 - Ethernet settings 2-25, 2-85
 - EX module 1-95, 1-215, 2-52
 - EXM Driver 1-202, 2-154
 - Explorer 1-48
 - Export 1-112, 1-118, 1-121
 - Extended Script 1-132, 1-186
 - Extended Settings 2-86
- F**
- Firewall 1-24
 - FLEX NETWORK 2-48
 - FLEX NETWORK unit 1-84, 1-207, 2-115
 - Forced transfer 2-67
 - Frame Settings 2-145
- G**
- General 2-127
 - GP-Viewer EX 1-157
- H**
- Hatch 1-28, 1-181
 - Home 2-76, 2-109, 2-116
- I**
- I/O 1-30, 1-147
 - I/O Check 1-83, 2-47, 2-112
 - I/O Driver Settings 2-112, 2-113
 - I/O Monitor
 - 1-81, 1-85, 2-46, 2-48, 2-113, 2-119, 2-152
 - Images 1-119
 - Import 1-112, 1-118, 1-119
 - Initial screen 1-58, 2-13, 2-14, 2-78
 - Initial Start Mode screen 1-30
 - Initialization 2-31
 - Initialization Menu Settings 2-97

Initialization of the backup SRAM	2-34, 2-98
Initialization of the CF card	2-33, 2-98
Initialization of the user memory	2-32, 2-97
Install	1-4
Instruction operand	1-138
IP address	2-25
IPC	2-68, 2-138

K

Keypad	1-134, 1-136
--------------	--------------

L

Ladder Monitor	2-174
Ladder program	1-61, 1-80
Liquid crystal display	2-99
Lithium battery	1-183
Log in	1-4
Logic program	1-138, 1-155, 2-44, 2-45, 2-58, 2-59, 2-111, 2-117, 2-150
LogicMonitor	2-44, 2-174
Loopback cable	1-82, 1-83, 2-40, 2-46, 2-47
LS Area	1-77, 1-79

M

Main Unit Setting	2-150
Main Unit Settings	2-78, 2-111, 2-117, 2-127, 2-133, 2-139, 2-167
Maintenance Menu	2-99
Mark	1-120
Memory	1-4, 1-12, 1-17, 2-31
Memory check	1-148
Memory Information	2-38, 2-102
Memory loader tool	1-28
Memory-resident software	1-13, 1-25, 1-26
Menu and Error Settings	1-55, 1-57, 1-59, 2-3, 2-80
Modem	1-30, 1-153
Movie Converter	1-107
Multilingual Manager	1-7

N

Network Settings	2-144
New Project File	1-110
Noise	1-68, 1-73, 1-76, 2-128, 2-130, 2-135
NTFS format	1-28
Numeric touch keys	2-5

O

Offline mode menu	2-16
Online monitoring	1-155
Online update	1-33
Operating environment	1-4, 1-12
Operation Settings	2-79

P

Package Window	1-120
Part List	1-121
Pass-through	1-36, 1-40
Password	1-17, 1-27, 1-29
Password settings	2-3, 2-27, 2-96
Peripheral Settings	2-20, 2-91, 2-112, 2-118

Pin	1-172, 1-187, 2-21
Play	2-132
PLC	1-171, 2-91
Position	2-173
Power supply	1-58, 1-187, 1-205, 2-150
Print	1-122, 2-23, 2-92
Printer Settings	2-23, 2-92
PROFIBUS	1-90, 1-214
PROFIBUS Slave Unit	1-90
Project file	1-11, 1-14, 2-64, 2-104
Project Information	1-131
ProjectCopy	1-155
Pro-Server EX	1-177, 2-26

R

RAAA***	1-180
RAAE***	1-189
REAA***	1-191
Received data	1-171
Recording	2-130
Remote Viewer Settings	2-73, 2-88
Reset	2-171
Restart IPC	2-141
RFAF***	1-191
RGB	2-103
RGB Screen	2-173
RGE****	1-197
RPA Function	1-122
RS-232C	1-69, 2-102
RS-422	1-69, 2-102

S

Sampling Settings	1-131
Screen	2-173
Screen Management	1-111
Screen Settings	2-7, 2-78
Script error	1-33
Script Settings	2-95
Search Window	1-112
Security Password	2-29, 2-96
Security settings	1-33, 1-34, 1-117
Self-diagnosis	1-26, 2-2
Setup	1-62, 2-26
Show Terminals	2-151
Simulation	1-149
Sink type	1-82, 2-46, 2-112
SIO	1-185, 1-186, 2-102
Sound Settings	1-117
Source type	1-82, 2-47, 2-112
Specify file name and run	2-143
Standby mode	2-12, 2-78
Start	1-7, 1-10
Start Explorer	2-142
Start Task Manager	2-143
Startup	1-110
Status LED	1-54, 1-58, 2-18
STD Driver	1-199, 2-151
Straight cable	1-22, 1-45
Switch	1-54, 1-56, 2-3

Symbol Variable List	1-119
System area	1-60, 1-61, 1-179
System Area Settings	2-84
System error	1-192, 2-81
System Menu	2-80, 2-171
System Password	2-96

T

Template	1-120
Text Table	1-118, 1-136
Touch operation	2-18, 2-79
Touch sound	2-15
Transfer	1-14, 1-150, 2-2
Transfer from CF to SRAM	2-104
Transfer from SRAM to CF	2-66, 2-105
Transfer Project File	2-104

U

Unit	2-133
Upload	1-28, 1-29, 2-171
USB	2-94, 2-103
USB storage	2-171
USB transfer cable	1-14, 1-97
USB-Serial (RS-232C) conversion cable	1-98
User memory (FEPRAM)	2-6, 2-31
User-defined function	1-113

V

Variable	1-119, 2-44, 2-45, 2-174
VD Display Settings	2-62, 2-63, 2-134
VD Operation Settings	2-133
Video display	2-60
Video Settings	2-127, 2-128, 2-130, 2-132
Video window	2-134, 2-135
Virtual COM port Driver	1-38
VM unit	1-92, 2-60
VM Unit Settings	2-133
Volume	2-173

W

Watchdog error	1-198
Web Server	2-89
When the GP supporting the CANopen master is used	2-159
Window Settings	2-81
WinGP	1-57, 1-107, 1-108, 1-122, 1-193, 2-138
WinGP SDK	1-108

