Digital Electronics Corporation

# Memory Link Driver

1	System Configuration	3
2	Selection of Driver	6
3	Example of Communication Setting	7
4	Setup Items	
5	Cable Diagram	22
6	Supported Device	41
7	Device Code and Address Code	42
8	Error Messages	43
9	Memory Link Command (Serial Communication)	47
10	Sample Program (Serial Communication)	117
11	Memory Link Command (Ethernet Communication)	
12	Memory Link API (Ethernet Communication)	
13	Sample Program (Ethernet Communication)	217

#### Introduction

This manual describes how to connect the Display and the External Device (target PLC).

In this manual, the connection procedure will be described by following the below sections:

1	System Configuration This section shows the types of External Devices which can be connected and SIO type.	"1 System Configuration" (page 3)
2	Selection of External Device Select a model (series) of the External Device to be connected and connection method.	"2 Selection of Driver" (page 6)
3	Example of Communication Settings This section shows setting examples for communicating between the Display and the External Device.	"3 Example of Communication Setting" (page 7)
4	Setup Items This section describes communication setup items on the Display. Set communication settings of the Display with GP-Pro EX or in off-line mode.	"4 Setup Items" (page 15)
5	Cable Diagram This section shows cables and adapters for connecting the Display and the External Device.	ি "5 Cable Diagram" (page 22)
	Operation	

# 1 System Configuration

When using the Memory Link, the connection configuration is shown below.

- Serial
  - 1:1 Connection



1:n Connection



Max 32 units (including External Device)

# Ethernet

1:1 Connection



• 1:n Connection



• Only available when selecting "Ethernet (UDP)")

#### n:1 Connection





#### COM Port of IPC

When connecting IPC with External Device, the COM port which can be used changes with series and SIO type. Please refer to the manual of IPC for details.

#### Usable port

Series	Usable port				
Conco	RS-232C	RS-422/485(4 wire)	RS-422/485(2 wire)		
PS-2000B	COM1 <sup>*1</sup> , COM2, COM3 <sup>*1</sup> , COM4	-	-		
PS-3450A, PS-3451A	COM1, COM2 <sup>*1*2</sup>	COM2 <sup>*1*2</sup>	COM2 <sup>*1*2</sup>		
PS-3650A, PS-3651A	COM1 <sup>*1</sup>	-	-		
PS-3700A (Pentium®4-M) PS-3710A	COM1 <sup>*1</sup> , COM2 <sup>*1</sup> , COM3 <sup>*2</sup> , COM4	COM3 <sup>*2</sup>	COM3 <sup>*2</sup>		
PS-3711A	COM1 <sup>*1</sup> , COM2 <sup>*2</sup>	COM2 <sup>*2</sup>	COM2 <sup>*2</sup>		
PL-3000B	COM1 <sup>*1*2</sup> , COM2 <sup>*1</sup> , COM3, COM4	COM1*1*2	COM1 <sup>*1*2</sup>		

\*1 The RI/5V can be switched. Please switch with the change switch of IPC.

\*2 It is necessary to set up the SIO type with the Dip switch. Please set up as follows according to SIO type to be used.

#### Dip switch setting: RS-232C

Dip switch	Setting	Description	
1	OFF <sup>*1</sup>	Reserve (always OFF)	
2	OFF	SIO type: PS 232C	
3	OFF	510 type. K5-252e	
4	OFF	Output mode of SD (TXD) data: Always output	
5	OFF	Terminal resistance (220 $\Omega$ ) insertion to SD (TXD): None	
6	OFF	Terminal resistance (220 $\Omega$ ) insertion to RD (RXD): None	
7	OFF	Short-circuit of SDA (TXA) and RDA (RXA): Does not Exist	
8	OFF	Short-circuit of SDB (TXB) and RDB (RXB): Does not Exist	
9	OFF	RS (RTS) Auto control mode: Disable	
10	OFF	NS (NIS) Auto control mode. Disable	

\*1 It is necessary to turn ON the set value, only when using PS-3450A and PS-3451A.

# Dip switch setting: RS-422/485 (4 wire)

Dip switch	Setting	Description	
1	OFF	Reserve (always OFF)	
2	ON	SIQ type: RS-422/485	
3	ON	510 type. NS-422/403	
4	OFF	Output mode of SD (TXD) data: Always output	
5	OFF	Terminal resistance (220 $\Omega$ ) insertion to SD (TXD): None	
6	OFF	Terminal resistance (220 $\Omega$ ) insertion to RD (RXD): None	
7	OFF	Short-circuit of SDA (TXA) and RDA (RXA): Does not Exist	
8	OFF	Short-circuit of SDB (TXB) and RDB (RXB): Does not Exist	
9	OFF	RS (RTS) Auto control mode: Disable	
10	OFF	No (N15) / Nito control mode. Disable	

#### Dip switch setting: RS-422/485 (2 wire)

Dip switch	Setting	Description	
1	OFF	Reserve (always OFF)	
2	ON	SIO type: P.S. 422/485	
3	ON	510 type. K5-422/465	
4	OFF	Output mode of SD (TXD) data: Always output	
5	OFF	Terminal resistance (220 $\Omega$ ) insertion to SD (TXD): None	
6	OFF	Terminal resistance (220 $\Omega$ ) insertion to RD (RXD): None	
7	ON	Short-circuit of SDA (TXA) and RDA (RXA): Exist	
8	ON	Short-circuit of SDB (TXB) and RDB (RXB): Exist	
9	ON	PS (PTS) Auto control modo: Enchla	
10	ON	NS (NIS) Auto control mode. Endole	

# 2 Selection of Driver

Select the External Device to be connected to the Display.

💰 New Project File					×
GP-Pro	Device/PL	c			
	Maker	Digital Electronics Co	rporation		<b>T</b>
	Series	Memory Link			•
	🗖 Use S		Refe	er to the manual of th	nis Device/PLC
	Connection	n Method			
	Port	Ethernet (UDP)	•		
				<u>Go to De</u>	vice/PLC Manual
Back	( <u>B</u> ) Cor	mmunication Settings	New Logic	New Screen	Cancel

Setup Items	Setup Description			
Maker	Select the maker of the External Device to be connected. Select "Digital Electronics Corporation".			
Driver	Select a model (series) of the External Device to be connected and connection method. Select "Memory Link". Check the connection configuration in "Memory Link" in system configuration.			
Port	Select the Display port to be connected to the External Device.			

# 3 Example of Communication Setting

Examples of communication settings of the Display and the External Device, recommended by Pro-face, are shown.

# 3.1 Setting Example 1

# ■ Settings of GP-Pro EX (RS232C connection: Convert mode)

Communication Settings

To display the setting screen, select [Device/PLC Settings] from [System setting window] in workspace.

Device/PLC 1	
Summary	Change Device/PLC
Maker Digital Electronics Corporation Series Memory Link	Port COM1
Text Data Mode 1 Change	
Communication Settings	
SID Type 💿 RS232C 💿 RS422/485(2wire) 💿 RS422/485(4wire)	
Speed 9600 💌	
Data Length O 7 💿 8	
Parity  © NONE  © EVEN  © ODD	
Stop Bit 💿 1 💿 2	
Flow Control O NONE O ER(DTR/CTS) O XON/XOFF	
Wait To Send 🛛 📑 (ms)	
Transmit Timeout 1 📑 (sec)	
Protocol  © Normal  © Extended	
Extended Mode	
Machine No.	
Communication 1:1 ASCII	
Terminator CR.LF CCR	
ETX. Sum Check	
E ACK	
E NAK.	
In the case of RS232C, you can select the 9th pin to RI (Input)	
or VCC (5V Power Supply). If you use the Digital's RS232C	
Default	

## Settings of External Device

# 3.2 Setting Example 2

■ Settings of GP-Pro EX (RS232C connection: Extend mode)

Communication Settings

To display the setting screen, select [Device/PLC Settings] from [System setting window] in workspace.

Device/PLC 1		
Summary		Change Device/PLC
Maker Digital Ele	actronics Corporation Series Memory Link	Port COM1
Text Data Mode	1 Change	
Communication Settings		
SIO Type	RS232C C RS422/485(2wire) C RS422/485(4wire)	
Speed	9600 💌	
Data Length	O 7 O 8	
Parity	NONE C EVEN C ODD	
Stop Bit		
Flow Control	O NONE O ER(DTR/CTS) O XON/XOFF	
Wait To Send	0 * (ms)	
Transmit Timeout	1 * (sec)	
Protocol	C Normal  © Extended	
Extended Mode		
Machine No.		
Communication	1:1 ASCII	
Terminator	⊙ CR.LF O CR	
ETX. Sum Chec	k	
🗖 АСК		
NAK		
RI / VCC		
In the case of RS2	32C, you can select the 9th pin to RI (Input)	
or VCC (5V Power Isolation Unit, plea:	Supply). If you use the Digital's RS232C se select it to VCC. Default	

#### Settings of External Device

# 3.3 Setting Example 3

■ Settings of GP-Pro EX (RS422/485 (2wire) connection: Convert mode)

Communication Settings

To display the setting screen, select [Device/PLC Settings] from [System setting window] in workspace.

Device/PLC 1		
Summary		Change Device/PLC
Maker D	igital Electronics Corporatio	on Series Memory Link Port COM1
Text Data M	ode 1 <u>Change</u>	
Communication Se	ettings	
SIO Type	C RS232C	RS422/485(2wire)     RS422/485(4wire)
Speed	9600	Y
Data Length	O 7	© 8
Parity	NONE	O EVEN O ODD
Stop Bit	I	O 2
Flow Control	O NONE	C ER(DTR/CTS)
Wait To Sen	d 🛛 🕂 (	(ms)
Transmit Tim	eout 1 🕂 (	(sec)
Protocol	Normal	O Extended
Extended Mo	ode	
Machine No.	0	
Communicati	on 1:1 ASCII	V
Terminator	CR.LF	O CR
ETX. S		
🗖 АСК.		
🗖 NAK		
RI / VCC In the case or VCC (5v Isolation Ut	C Fil of RS232C, you can select Power Supply). If you use nit, please select it to VCC.	C VCC ct the 9th pin to RI (Input) e the Digital's RS232C Default

#### Settings of External Device

# 3.4 Setting Example 4

■ Settings of GP-Pro EX (RS422/485 (2wire) connection: Extend mode)

Communication Settings

To display the setting screen, select [Device/PLC Settings] from [System setting window] in workspace.

Device/PLC 1				
Summary				Change Device/PLC
Maker Digital El	ectronics Corporati	ion Series Mer	nory Link	Port COM1
Text Data Mode	1 <u>Change</u>			
Communication Settings				
SIO Type	C RS232C	• RS422/485(2wire)	C RS422/485(4wire)	
Speed	9600	•		
Data Length	O 7	• 8		
Parity	NONE	O EVEN	O ODD	
Stop Bit	• 1	O 2		
Flow Control	O NONE	C ER(DTR/CTS)	• XON/XOFF	
Wait To Send	0 🗧	(ms)		
Transmit Timeout	1 🗦	(sec)		
Protocol	C Normal	Extended	i .	
Extended Mode				
Machine No.				
Communication	1:1 ASCII	<u> </u>		
Terminator	CR.LF	C CR		
ETX. Sum Chec	ж			
RI / VCC	© RI	O VCC		
In the case of RS2	32C, you can sele	ot the 9th pin to RI (Input	)	
Isolation Unit, plea	se select it to VCC.	e me Digitais Hoz32U	Default	

#### Settings of External Device

# 3.5 Setting Example 5

■ Settings of GP-Pro EX (RS422/485 (4wire) connection: Convert mode)

Communication Settings

To display the setting screen, select [Device/PLC Settings] from [System setting window] in workspace.

Device/PLC 1		
Summary		Change Device/PL
Maker Digital B	lectronics Corporal	tion Series Memory Link Port COM1
Text Data Mode	1 <u>Change</u>	
Communication Settings		
SIO Type	C RS232C	O RS422/485(2wire) O RS422/485(4wire)
Speed	9600	<b>•</b>
Data Length	O 7	• 8
Parity	NONE	O EVEN O ODD
Stop Bit	● 1	O 2
Flow Control	O NONE	C ER(DTR/CTS)  © XON/XOFF
Wait To Send	0 🗮	(ms)
Transmit Timeout	1 🕂	(sec)
Protocol	Normal	O Extended
Extended Mode —		
Machine No.	0 ÷	
Communication	1:1 ASCII	7
Terminator	C CR.LF	O CR
ETX. Sum Che		
E ACK		
🗖 NAK		
RI / VCC	🖸 RI	O VCC
In the case of RS	232C, you can sele	ect the 9th pin to RI (Input)
Isolation Unit, ple	ase select it to VCC	C. Default

#### Settings of External Device

# 3.6 Setting Example 6

■ Settings of GP-Pro EX (RS422/485 (4wire) connection: Extend mode)

Communication Settings

To display the setting screen, select [Device/PLC Settings] from [System setting window] in workspace.

Device/PLC 1	
Summary	Change Device/PLC
Maker Digital Ele	ctronics Corporation Series Memory Link Port COM1
Text Data Mode	1 Change
Communication Settings	
SIO Type	C RS232C C RS422/485(2wire)
Speed	9600
Data Length	C 7 C 8
Parity	NONE O EVEN O ODD
Stop Bit	© 1 O 2
Flow Control	© NONE O ER(DTR/CTS) ⊙ XON/XOFF
Wait To Send	0 (ms)
Transmit Timeout	1 (sec)
Protocol	C Normal       Extended
Extended Mode	
Machine No.	
Communication	
Terminator	© CR.LF C CR
ETX. Sum Check	ĸ
ACK	
□ NAK	
RI / VCC	© HI O VCC
In the case of RS23	32C, you can select the 9th pin to RI (Input)
or VCC (5V Power 1 Isolation Unit, pleas	supply). If you use the Digital's HS232U e select it to VCC. Default

#### Settings of External Device

# 3.7 Setting Example 7

### ■ Settings of GP-Pro EX (Ethernet (UDP) connection)

Communication Settings

To display the setting screen, select [Device/PLC Settings] from [System setting window] in workspace.

Device/PLC1		
Summary		Change Device/PLC
Maker Digital Electronics Corporation	Series Memory Link	Port Ethernet (UDP)
Text Data Mode 1 Change		
Communication Settings		
Port No. 1024		
Wait To Send 🛛 🗧 (ms)		
DemandPolling		
Use DemandPolling		
Polling Cycle 20 🚎 (sec)	Default	

## Settings of External Device

# 3.8 Setting Example 8

## ■ Settings of GP-Pro EX (Ethernet (TCP) connection)

Communication Settings

To display the setting screen, select [Device/PLC Settings] from [System setting window] in workspace.

Device/PLC 1		
Summary	Corine Manager Link	Change Device/PLC
	Series [Memory Link	For Ethemer(TCP)
Text Data Mode T Change		
Communication Settings		
Port No. 1024		
Wait To Send 🛛 📑 (ms)		
DemandPolling		
I Use DemandPolling		
Polling Cycle 20 🕂 (sec)	Default	

# Settings of External Device

# 4 Setup Items

Set communication settings of the Display with GP-Pro EX or in off-line mode of the Display.

The setting of each parameter must be identical to that of External Device.

"3 Example of Communication Setting" (page 7)

**NOTE** • Set the Display's IP address in off-line mode.

Cf. Maintenance/Troubleshooting Manual "2.5 Ethernet Settings"

#### 4.1 Serial Connection

- Setup Items in GP-Pro EX
- Communication Settings

To display the setting screen, select [Device/PLC Settings] from [System setting window] in workspace.

Device/PLC1	
Summary	Change Device/PLC
Maker Digital Electronics Corporation Series Memory Link	Port COM1
Text Data Mode 1 Change	
Communication Settings	
SIO Type 💿 RS232C 🔿 RS422/485(2wire) 🔿 RS422/485(4wire)	
Speed 9600 💌	
Data Length O 7 💿 8	
Parity  O NONE O EVEN O ODD	
Stop Bit 💿 1 💿 2	
Flow Control ONONE O ER(DTR/CTS) O XON/XOFF	
Wait To Send 0 🔤 (ms)	
Transmit Timeout 1 📑 (sec)	
Protocol C Normal © Extended	
Extended Mode	
Machine No. 0 📑	
Communication 1:1 ASCII	
Terminator 💿 CR.LF 💿 CR	
ETX. Sum Check	
In the case of RS232C, you can select the 9th pin to RI (Input)	
or VCC (bV Power Supply). If you use the Digital's RS232C Isolation Unit, please select it to VCC. Default	

Setup Items	Setup Description		
SIO Type	Select the SIO type to communicate with the External Device.		

continued to next page

15

Setup Items	Setup Description		
Speed	Select speed between the External Device and the Display.		
Data Length	Select data length.		
Parity	belect how to check parity.		
Stop Bit	Select stop bit length.		
Flow Control	Select the communication control method to prevent overflow of transmission and reception data.		
Wait To Send	Use an integer from 0 to 255 to enter standby time (ms) for the Display from receiving packets to transmitting next commands.		
Use an integer from 0 to 255 to enter the time (sec) for which before the transm doing timeout.Transmit TimeoutWhen CTS is OFF, the Display cannot transmit the packet at the RS232C comm When cannot transmit the packet during the time when set with the transmit time is indicated.			
Protocol	Select the communication protocol.		
Machine No.	Use an integer 0 to 31 to enter the unit number of the External Device to communicate.		
Communication	Select any of "1:1 ASCII code", "1:1 Binary code", "1:N ASCII code" and "1:N Binary code" for SIO type.		
Terminator	Select the terminator to be used. The terminator is available only in case that the communication type is [1:1 ASCII] or [1:n ASCII].		
ETX. Sum Check	Set whether the sum check code is added or not for data communication.		
ACK	Check this option when you use ACK.		
NAK	Check this option when you use NAK.		
RI/VCC	You can switch RI/VCC of the 9th pin when you select RS232C for SIO type. It is necessary to change RI/5V by changeover switch of IPC when connect with IPC. Please refer to the manual of the IPC for more detail.		

## Setup Items in Off-Line Mode

#### NOTE

• Please refer to Maintenance/Troubleshooting for more information on how to enter off-line mode or about operation.

Cf. Maintenance/Troubleshooting "2.2 Offline Mode"

#### Communication Settings

To display the setting screen, touch [Device/PLC Settings] from the [Peripheral Settings] in the off-line mode. Touch the External Device you want to set from the displayed list, and touch the [Communication Settings].

#### (Page 1/2)

Comm.	Option			
Memory Link			[COM1]	Page 1/2
	SIO Type	RS232C		
	Speed	9600		•
	Data Length	07	• 8	
	Parity	NONE	O EVEN	O ODD
	Stop Bit	• 1	0 2	
	Flow Control	XON/XOFF		<b>•</b>
	Wait To Send(ms)		0	
	Transmit Timeout(s)		1	
	Protocol	Normal		•
				+
	Exit		Back	2008/03/19 10:35:42

Setup Items	Setup Description		
	Select the SIO type to communicate with the External Device.		
SIO Type	To make the communication settings correctly, confirm the serial interface specifications of Display unit for [SIO Type]. We cannot guarantee the operation if a communication type that the serial interface does not support is specified. For details concerning the serial interface specifications, refer to the manual for Display unit.		
Speed	Select speed (bps) between the External Device and the Display.		
Data Length	Select data length.		
Parity	Select how to check parity.		
Stop Bit	Select stop bit length.		
Flow Control	Select the communication control method to prevent overflow of transmission and reception data.		
Wait To Send	Use an integer from 0 to 255 to enter standby time (ms) for the Display from receiving packets to transmitting next commands.		

continued to next page

Setup Items	Setup Description		
Transmit Timeout	Use an integer from 0 to 255 to enter the time (sec) for which before the transmission doing timeout. When CTS is OFF, the Display cannot transmit the packet at the RS232C communication. When cannot transmit the packet during the time when set with the transmit timeout, error is indicated.		
Protocol	Select either "Normal" or "Extended" for the communication protocol.		

(Page 2/2)



Setup Items	Setup Description	
Machine No.	Use an integer 0 to 31 to enter the unit number of the External Device to communicate.	
Communication	Select any of "1:1 ASCII code", "1:1 Binary code", "1:N ASCII code" and "1:N Binary code" for SIO type.	
Terminator	Select either of "CR, LF" or "CR" for the terminator to be used. The terminator is available only in case that the communication type is [1:1 ASCII] or [1:n ASCII].	
ETX. Sum Check	Set whether the sum check code is added or not for data communication.	
ACK	Check this option when you use ACK.	
NAK	Check this option when you use NAK.	

# Option

To display the setting screen, touch [Device/PLC Settings] from [Peripheral Settings] in the off-line mode. Touch the External Device you want to set from the displayed list, and touch [Option].

Comm,	Option			
Memory Link			[COM1]	Page 1/1
	RI / VCC In the case of the 9th pin to Power Supply). RS232C Isolati it to VCC.	<ul> <li>RI</li> <li>RS232C, you can sel</li> <li>RI(Input) or VCC(5)</li> <li>If you use the Digition Unit, please sele</li> </ul>	● VCC lect / ual's ect	
	Exit		Back	2008/03/19 10:35:57

Setup Items	Setup Description
RI/VCC	You can switch RI/VCC of the 9th pin when you select RS232C for SIO type. It is necessary to change RI/5V by changeover switch of IPC when connect with IPC. Please refer to the manual of the IPC for more detail.

# 4.2 Ethernet Connection

- Steup Items in GP-Pro EX
- ♦ Communication Settings

To display the setting screen, select [Device/PLC Settings] from [System setting window] in workspace.

Device/PLC 1		
Summary	Sories Manager Link	Change Device/PLC
Tark Data Mada		
Text Data Mode   1 <u>Change</u>		
Communication Settings		
Port No. 1024		
Wait To Send 🛛 📑 (ms)		
DemandPolling		
Use DemandPolling		
Polling Cycle 20 📑 (sec)	Default	

Setup Items	Setup Description		
Port No.	Use an integer 1024 to 65535 to enter the port number of the External Device to communicate.		
Wait To Send	Use an integer from 0 to 255 to enter standby time (ms) for the Display from receiving packets to transmitting next commands.		
Use Demand Polling Check this option when you use the demand polling command to confirm the present the External Device.			
Polling Cycle	Use an integer from 10 to 100 to enter the polling cycle (sec).		

# Setup Items in Off-Line Mode

#### NOTE

• Please refer to Maintenance/Troubleshooting for more information on how to enter off-line mode or about operation.

Cf. Maintenance/Troubleshooting "2.2 Offline Mode"

#### Communication Settings

To display the setting screen, touch [Device/PLC Settings] from the [Peripheral Settings] in the off-line mode. Touch the External Device you want to set from the displayed list, and touch the [Communication Settings].

Comm.				
				2
Memory Link			[UDP]	Page 1/1
	Port No.		1024 💌 🔺	
	wait to Send(ms)		0 🗸 🔺	·]
	Use DemandPolling Polling Cycle(s)	g OFF	● ON 20 ▼ ▲	1
	Exit		Back	2005/09/22 14:11:07

Setup Items	Setup Description		
Port No.	Use an integer 1024 to 65535 to enter the port number of the External Device to communicate.		
Wait To Send	Use an integer from 0 to 255 to enter standby time (ms) for the Display from receiving packets to transmitting next commands.		
Use Demand Polling	Check this option when you use the demand polling command to confirm the presence of the External Device.		
Polling Cycle (s)	Use an integer from 10 to 100 to enter the polling cycle (sec).		

# 5 Cable Diagram

The cable diagram shown below may be different from the cable diagram recommended by the maker of the External Device. Please be assured there is no operational problem in applying the cable diagram shown in this manual.

- The FG pin of the main body of the external device must be D-class grounded. Please refer to the manual of the external device for more details.
- SG and FG are connected inside the Display. When connecting SG to the External Device, design the system not to form short-circuit loop.
- Connect the isolation unit, when communication is not stabilized under the influence of a noise etc..

#### Cable Diagram 1

Display (Connection Port)		Cable	Remarks
GP (COM1)	Α	Your Own Cable (ER Control)	
LT (COM1)	В	Your Own Cable (X Control)	The cable length must be 15m
IPC <sup>*1</sup> PC/AT	С	Your Own Cable (without control method)	01 1055.

\*1 Only the COM port which can communicate by RS-232C can be used.

<sup>GP</sup>"■ COM Port of IPC" (page 4)

# IMPORTANT

Correspondence of the RS232C connector type or pin number with the signal name varies depending on the host device. Connect properly according to the interface specification of the host device.

A) When using your own cable

• When the External Device supports RTS/CTS control

	D-sub 9 p	oin (socket)	Shield	Device
	Pin	Signal name		Signal name
	1	CD		CD
Display	2	RD		RD
	3	SD		SD
	4	ER		RTS
	5	SG		SG
	6	DR	−	DTR
	7	RS		DSR
	8	CS		CTS
	Shell	FG		

• When the External Device supports DTR/DSR control



#### Prohibited:

- When ER in the Display is OFF, do not allow the host device to send.
- B) When using your own cable (X control)

	D-sub 9	oin (socket	<sup>t)</sup> Shield	External Device
	Pin	Signal name		Signal name
	1	CD		CD
Display	2	RD		RD
	3	SD		SD
	4	ER		RTS
	5	SG		SG
	6	DR		DTR
	7	RS		DSR
	8	CS	┝┛┊┊╴┊╠━━	CTS
	Shell	FG	<u>⊢•U V</u>	

C) When using your own cable (without control method)

	D-sub 9	pin (socket	<sup>i)</sup> Shield	External Device
	Pin	Signal name		Signal name
	1	CD		CD
Display	2	RD		RD
	3	SD		SD
	4	ER		RTS
	5	SG		SG
	6	DR		DTR
	7	RS		DSR
	8	CS	┝┛┊┊╴╴┊╠━━╸	CTS
	Shell	FG	H <u>i v</u>	

# Cable Diagram 2

Display (Connection Port)		Cable	Remarks
	А	COM port conversion adapter by Pro-face CA3-ADPCOM-01 + Terminal block conversion adapter by Pro-face CA3-ADPTRM-01 + Your own cable	
GP <sup>*1</sup> (COM1)	В	RS-422 cable (for COM1) by Pro-face CA3-CBL422/5M-01	
AGP-3302B (COM2) ST <sup>*2</sup> (COM2) LT (COM1) IPC <sup>*3</sup>	С	COM port conversion adapter by Pro-face CA3-ADPCOM-01 + RS-422 cable (for COM2) by Pro-face CA3-CBL422-01	
	D	COM port conversion adapter by Pro-face CA3-ADPCOM-01 + Multi-link cable for AGP by Pro-face CA3-CBLMLT-01	
	Е	Your own cable	
	F	Online adapter by Pro-face CA4-ADPONL-01 + Terminal block conversion adapter by Pro-face CA3-ADPTRM-01 + Your own cable	
GP <sup>*4</sup> (COM2)	G	Online adapter by Pro-face CA4-ADPONL-01 + RS-422 cable (for COM2) by Pro-face CA3-CBL422-01	
	Н	Online adapter by Pro-face CA4-ADPONL-01 + Multi-link cable for AGP by Pro-face CA3-CBLMLT-01	
	I	Online adapter by Pro-face CA4-ADPONL-01 + Your own cable	

- \*2 All ST models except AST-3211A
- \*3 Only the COM port which can communicate by RS-422/485 (4 wire) can be used. <sup>(G)</sup> "■ COM Port of IPC" (page 4)
- \*4 All GP models except GP-3200 series and AGP-3302B

**NOTE** • Control method when using the RS422 cable is XON/XOFF only. XON/XOFF control is enabled only for ASCII.

Forced:

Use the twist pair cable with approx. 50pF/m capacitance, 100 Ω characteristic impedance, made of 24AWG rod.

IMPORTANT	• The RS422 cable length is normally 1000m at maximum, but the cable length has the limit depending on the connecting host device. For connection, be sure to refer to the manual of the connecting host device.
	• The connecting method or termination resistance varies depending on the connecting host device.
	<ul> <li>Not isolated on the Display side.</li> </ul>
	<ul> <li>Always connect SG between Displays.</li> </ul>
	• When the External Device is isolated, SG connection between the External Device and the Display may not be required.

- A) When using the COM port conversion adapter (CA3-ADPCOM-01), the connector terminal block conversion adapter (CA3-ADPTRM-01) by Pro-face and your own cable
- 1:1 Connection





NOTE

Connect RDB of CA3-ADPTRM-01 with TERM to insert the  $100\Omega \ 1/2W$  termination resistance between RDA and RDB on the Display side.

B) When using the RS-422 cable (for COM1) (CA3-CBL422/5M-01) by Pro-face

• 1:1 Connection



- C) When using the COM port conversion adapter (CA3-ADPCOM-01), the RS-422 cable (for COM2) (CA3-CBL422-01) by Pro-face and your own cable
- External Device Signal name SD(+) RDA CA3-CBL422-01 Display RDB SD(-) Termination resistance SDA RD(+) 100Ω 1/2W SDB RD(-) SG FG CA3-ADPCOM-01 FG SG  $100\Omega$  termination resistance is inserted between RDA and RDB in CA3-CBL422-01. NOTE ٠
- 1:1 Connection

D) When using the COM port conversion adapter (CA3-ADPCOM-01), the multi-link cable for AGP (CA3-CBLMLT-01) by Pro-face and your own cable



1:n Connection

٠

#### E) When using your own cable

• 1:1 Connection



#### • 1:n Connection



- F) When using the online adapter (CA4-ADPONL-01), the connector terminal block conversion adapter (CA3-ADPTRM-01) by Pro-face and your own cable
- 1:1 Connection



• 1:n Connection



NOTE

• Connect RDA of CA3-ADPTRM-01 with TERM to insert the 100Ω1/2W termination resistance between RDA and RDB on the Display side.

- G) When using the online adapter (CA4-ADPONL-01), the RS-422 cable (for COM2) (CA3-CBL422-01) by Proface.
- 1:1 Connection



H) When using the online adapter (CA4-ADPONL-01) and the multi-link cable for AGP (CA3-CBLMLT-01) by Pro-face and your own cable



• 1:n Connection

- I) When using the online adapter (CA4-ADPONL-01) by Pro-face and your own cable
- 1:1 Connection



#### • 1:n Connection



Your own cable

#### Cable Diagram 3 (RS-422 (2 wire) connection)

Display (Connection Port)	Cable	Remarks
GP <sup>*1</sup> (COM1) AGP-3302B (COM2) ST <sup>*2</sup> (COM2) LT (COM1)	A COM port conversion adapter by Pro-face CA3-ADPCOM-01 + Terminal block conversion adapter by Pro-face CA3-ADPTRM-01 + Your own cable	
	B Your own cable	
GP <sup>*3</sup> (COM2)	C Online adapter by Pro-face CA4-ADPONL-01 + Terminal block conversion adapter by Pro-face CA3-ADPTRM-01 + Your own cable	
	D Online adapter by Pro-face CA4-ADPONL-01 + Your own cable	-
IPC <sup>*4</sup>	E COM port conversion adapter by Pro-face CA3-ADPCOM-01 + Terminal block conversion adapter by Pro-face CA3-ADPTRM-01 + Your own cable	
	F Your own cable	

\*1 All GP models except AGP-3302B

\*2 All ST models except AST-3211A

\*3 All GP models except GP-3200 series and AGP-3302B

\*4 Only the COM port which can communicate by RS-422/485 (2 wire) can be used. <sup>(3)</sup> "■ COM Port of IPC" (page 4)

NOTE

• Control method when using the RS422 cable is XON/XOFF only. XON/XOFF control is enabled only for ASCII.

Forced:

Use the twist pair cable with approx. 50pF/m capacitance, 100Ω characteristic impedance, made of 24AWG rod.

IMPORTANT	<ul> <li>The RS422 cable length is normally 1000m at maximum, but the cable length has the limit depending on the connecting host device. For connection, be sure to refer to the manual of the connecting host device.</li> <li>The connecting method or termination resistance varies depending on the connecting host device. Connect SG if provided.</li> </ul>

- A) When using the COM port conversion adapter (CA3-ADPCOM-01), the connector terminal block conversion adapter (CA3-ADPTRM-01) by Pro-face and your own cable
- 1:1 Connection



n:1 Connection



NOTE

Connect RDB of CA3-ADPTRM-01 with TERM to insert the  $100\Omega 1/2W$  termination resistance between RDA and RDB on the Display.

#### B) When using your own cable

• 1:1 Connection



• n:1 Connection


- C) When using the online adapter (CA4-ADPONL-01), the connector terminal block conversion adapter (CA3-ADPTRM-01) by Pro-face and your own cable
- 1:1 Connection



n:1 Connection



Your own cable

D)When using the online adapter (CA4-ADPONL-01) by Pro-face and your own cable

• 1:1 Connection



• n:1 Connection



Your own cable

- E) When using the COM port conversion adapter (CA3-ADPCOM-01), the connector terminal block conversion adapter (CA3-ADPTRM-01) by Pro-face and your own cable
- 1:1 Connection



n:1 Connection



NOTE

 Connect RDB of CA3-ADPTRM-01 with TERM to insert the 100Ω1/2W termination resistance between RDA and RDB on the Display.

#### F) When using your own cable

• 1:1 Connection



• n:1 Connection



# 6 Supported Device

Range of supported device address is shown in the table below. Please note that the actually supported range of the devices varies depending on the External Device to be used. Please check the actual range in the manual of your External Device.

Device	Bit Address	Word Address	32 bits	Remarks
Internal Device	000000 - 999915	0000 - 9999	[H/L]	

NOTE	•	Please refer to the precautions on manual notation for icons in the table.
-		"Manual Symbols and Terminology"

# 7 Device Code and Address Code

Use device code and address code when you select "Device Type & Address" for the address type in data displays.

Device	Device Name	Device Code (HEX)	Address Code
Internal Device	-	0000	Value of word address

# 8 Error Messages

Error messages are displayed on the Display screen as follows: "No.: Device Name: Error Message (Error Occurrence Area)". Each description is shown below.

Item	Description	
No.	Error No.	
Device Name	Name of the External Device where error occurs. Device name is a title of the External Device set with GP-Pro EX. (Initial value [PLC1])	
Error Message	Displays messages related to the error which occurs.	
	Displays IP address or device address of the External Device where error occurs, or error codes received from the External Device.	
Error Occurrence Area	<ul> <li>NOTE</li> <li>IP address is displayed such as "IP address(Decimal): MAC address( Hex)".</li> <li>Device address is diplayed such as "Address: Device address".</li> <li>Received error codes are displayed such as "Decimal[Hex]".</li> </ul>	

#### Display Examples of Error Messages

"RHAA035: PLC1: Error has been responded for device write command (Error Code: 2 [02H])"

NOTE
Refer to your External Device manual for details on received error codes.
Refer to "When an error is displayed (Error Code List)" in "Maintenance/Troubleshooting Manual" for details on the error messages common to the driver.

# ■ Error Codes Specific to the External Device

Error Code	Description	
06	The checksum code is not corresponding.	
10	Undefined code has been received.	
12	The specified number of data elements does not match the number of data elements received.	
15	The specified display attribute is out of the permissible range.	
16	The specified character size is out of the permissible range.	
17	The specified coordinate is out of the permissible range.	
18	The specified line type is out of the permissible range.	
19	The specified tiling pattern is out of the permissible range.	
1A	The specified radius is out of the permissible range.	
1B	The specified start/end angle is out of the permissible range.	
1C	The specified character type is out of the permissible range.	
1D	The specified rotation is out of the permissible range.	
1E	The specified direction is out of the permissible range.	

continued to next page

43

Error Code	Description
1F	The specified highlighting is out of the permissible range.
20	The specified arrow pattern is out of the permissible range.
21	The specified arrow direction is out of the permissible range.
22	The specified beveling method is out of the permissible range.
23	The specified centering is out of the permissible range.
24	The specified attribute code is out of the permissible range.
25	The contrast adjustment command was sent to the model that cannot adjust the contrast.
26	The specified contrast setting is out of the permissible range.
27	The brightness adjustment command was sent to the model that cannot adjust the brightness.
28	The specified brightness setting is out of the permissible range.
29	The banner message is not set.
2A	The specified font code is out of the permissible range.
2B	The specified priority code is out of the permissible range.
FA	The specified address in the system area is out of the permissible range.
FB	An attempt has been made to write to or read from outside the system area.
FC	A data block of an improper format has been received by the Display Unit.
FF	The Display Unit could not send data for longer than 10 seconds.

# Error Messages Specific to this Driver

Message ID	Error Message	Cause and Solution
RHxx128	Memory Link: Checksum does not match the data actually received (ErrorCode: 06 Destination: %s)	The check sum is wrong in the sending sentence. Correct the sending sentence.
RHxx129	Memory Link: Undefined code has been received (ErrorCode: 10 Destination: %s)	The command in the sending sentence is wrong. Correct the sending sentence.
RHxx130	Memory Link: The specified number of data elements does not match the number of data elements received (ErrorCode: 12 Destination: %s)	The number of data elements in the sending sentence is wrong. Correct the sending sentence.
RHxx131	Memory Link:The specified display attribute is out of the permissible range (ErrorCode:15 Destination: %s)	The display attribute in the sending sen- tence is wrong. Correct the sending sen- tence.
RHxx132	Memory Link: The specified character size is out of the permissible range (ErrorCode: 16 Destination: %s)	The character size in the sending sen- tence is wrong. Correct the sending sen- tence.
RHxx133	Memory Link: The specified coordinate is out of the permissible range (ErrorCode: 17 Destination: %s)	The coordinate in the sending sentence is wrong. Correct the sending sentence.
RHxx134	Memory Link: The specified line type is out of the permissible range (ErrorCode: 18 Destination: %s)	The line type in the sending sentence is wrong. Correct the sending sentence.
RHxx135	Memory Link: The specified tiling pattern is out of the permissible range (ErrorCode: 19 Destination: %s)	The tiling pattern in the sending sentence is wrong. Correct the sending sentence.
RHxx136	Memory Link:The specified radius is out of the permissible range(ErrorCode:1A Destination: %s)	The radius in the sending sentence is wrong. Correct the sending sentence.
RHxx137	Memory Link:The specified start/end angle is out of the permissible range(ErrorCode:1B Destination: %s)	The start/end angle in the sending sen- tence is wrong. Correct the sending sen- tence.
RHxx138	Memory Link:The specified character type is out of the permissible range(ErrorCode:1C Destination: %s)	The character type in the sending sen- tence is wrong. Correct the sending sen- tence.
RHxx139	Memory Link:The specified rotation is out of the permissible range(ErrorCode:1D Destination: %s)	The rotation in the sending sentence is wrong. Correct the sending sentence.
RHxx140	Memory Link:The specified direction is out of the permissible range(ErrorCode:1E Destination: %s)	The direction in the sending sentence is wrong. Correct the sending sentence.
RHxx141	Memory Link: The specified highlighting is out of the permissible range (ErrorCode: 1F Destination: %s)	The highlighting in the sending sentence is wrong. Correct the sending sentence.
RHxx142	Memory Link:The specified arrow pattern is out of the permissible range(ErrorCode:20 Destination: %s)	The arrow pattern in the sending sentence is wrong. Correct the sending sentence.
RHxx143	Memory Link:The specified arrow direction is out of the permissible range(ErrorCode:21 Destination: %s)	The arrow direction in the sending sen- tence is wrong. Correct the sending sen- tence.

continued to next page

Message ID	Error Message	Cause and Solution
RHxx144	Memory Link: The specified beveling method is out of the permissible range (ErrorCode: 22 Destination: %s)	The beveling method in the sending sen- tence is wrong. Correct the sending sen- tence.
RHxx145	Memory Link: The specified centering is out of the permissible range (ErrorCode: 23 Destination: %s)	The centering in the sending sentence is wrong. Correct the sending sentence.
RHxx146	Memory Link: The specified address in the system area is out of the permissible range (ErrorCode: FA Destination: %s)	The system area specification in the sending sentence is wrong. Correct the sending sentence.
RHxx147	Memory Link: An attempt has been made to write to or read from outside the system area (ErrorCode: FB Destination: %s)	Exceeded the system area range. Correct the sending sentence.
RHxx148	Memory Link: A data block of an improper format has been received by the AGP (ErrorCode: FC Destination: %s)	The format in the sending sentence is wrong. Correct the sending sentence.
RHxx149	Memory Link: The AGP has been unable to send data (ErrorCode: FF Destination: COM port name)	The Display cannot send the command. Check the cable wiring.
RHxx150	Memory Link: The specified attribute code is out of the permissible range (ErrorCode: 24 Destination: %s)	The attribute designation in the sending sentence is wrong. Correct the sending sentence.
RHxx151	Memory Link: The contrast cannot be adjusted with this model (ErrorCode: 25 Destination: %s)	The contrast adjustment command was sent to the model that cannot adjust the contrast. Check the Display model.
RHxx152	Memory Link: The specified contrast setting is out of the permissible range (ErrorCode: 26 Destination: %s)	The contrast setting value in the sending sentence is wrong. Correct the sending sentence.
RHxx153	Memory Link: The brightness cannot be adjusted with this model (ErrorCode: 27 Destination: %s)	The brightness adjustment command was sent to the model that cannot adjust the brightness. Check the Display model.
RHxx154	Memory Link: The specified brightness setting is out of the permissible range (ErrorCode: 28 Destination: %s)	The brightness setting value in the sending sentence is wrong. Correct the sending sentence.
RHxx155	Memory Link: Flowing message is not set (ErrorCode:29 Destination: %s)	The banner message setting in the sending sentence is wrong. Correct the sending sentence.
RHxx156	Memory Link: The specified font attribute is out of the permissible range (ErrorCode:2A Destination: %s)	The font in the sending sentence is wrong. Correct the sending sentence.
RHxx157	Memory Link: The specified priority attribute is out of the permissible range (ErrorCode:2B Destination: %s)	The priority in the sending sentence is wrong. Correct the sending sentence.

\*COM port name for SIO, source port No. for TCP and destination IP address for UDP are shown in %s after Destination.

# 9 Memory Link Command (Serial Communication)

# 9.1 Basic Communication Protocol Control

The basic procedure for controlling the communication protocol is shown below:

# 9.1.1 SIO

# Host to Display Data Transfer



- (1) and (3) (Command Data area) store the data to be transmitted from the host device to the Display.
- After the Display analyzes the Command Data, (2) and (4) (Response Data area) store the result of "ACK" or "NAK", or no response.
- Please send the Command Data (3) from the host device after receiving the Response Data (2) from the Display.

• When detect the break of the communication cable and the Display power cuts, setting to the environment which is used, please set the response timeout time of host side. 3 seconds in response timeout time of host side are recommended.

# Display to Host Data Transfer

Host		
Display	Interrupt output	
Display	Uala DIOCK	

- When entered with the touch panel, the Display sends the data stored in the interrupt data area to the host device. (Interrupt Output)
- Interrupt output does not occur in case of 1:n or RS422/485 (2wire) connection. Please refer to the interrupt output request.
- "9.3.3 Interrupt Output Requests" (page 60)

# 9.1.2 Communication in SIO Convert Mode

Host to Display Data Transfer



■ Display to Host Data Transfer (Interrupt Output)

Host		
Display	Interrupt output	
Display	аата рюск	

• You cannot use the interrupt output in case of RS422/485(2wire).

# 9.1.3 Communication in SIO Extend Mode (1:1 ASCII)

■ Host to Display Data Transfer



• Marked area with asterisk (\*) may not be added depending on the setting.

■ Display to Host Data Transfer (Interrupt Output)



- Marked area with asterisk (\*) may not be added depending on the setting.
- In case of RS422/485 (2wire) or UDP connection, please use "Interrupt Output Request Command" to perform the interrupt output.

# 9.1.4 Communication in SIO Extend Mode (1:1 Binary)

Host to Display Data Transfer



• Marked area with asterisk (\*) may not be added depending on the setting.

## Display to Host Data Transfer (Interrupt Output)



- Marked area with asterisk (\*) may not be added depending on the setting.
- You cannot use the XON/XOFF control in the binary mode. Use the ER control and enable the response (ACK/NAK) for communication.
- In case of RS422/485 (2wire), please use "Interrupt Output Request Command" to perform the interrupt output.

# 9.1.5 Communication in SIO Extend Mode (1:n ASCII)

# Host to Display Data Transfer



- Marked area with asterisk (\*) may not be added depending on the setting.
- You can set the station No. to "FF" to transfer the command to all stations simultaneously. Note that ACK or NAK response will not be performed. In this case, please set the interval of 100ms or more until sending next command after sending the first command.

In addition, note that you cannot use the "Read from System Area" (ESC R) or "Brightness/Contrast Current Value" (ESC \$) command which requires the response data.

• In case of 1:n connection, please use "Interrupt Output Request Command" to perform the interrupt output.

# 9.1.6 Communication in SIO Extend Mode (1:n Binary)

# Host to Display Data Transfer



- Marked area with asterisk (\*) may not be added depending on the setting.
- You can set the station No. to "FF" to transfer the command to all stations simultaneously. Note that ACK or NAK response will not be performed. In this case, please set the interval of 100ms or more until sending next command after sending the first command.

In addition, note that you cannot use the "Read from System Area" (ESC R) or "Brightness/Contrast Current Value" (ESC \$) command which requires the response data.

- You cannot use the XON/XOFF control in the binary mode. Use the ER control and enable the response (ACK/NAK) for communication.
- In case of 1:n connection, please use "Interrupt Output Request Command" to perform the interrupt output.

# 9.1.7 Sum Check Code

The sum check code is the lower one byte (8 bits) of the sum of all data included in the sum check range.

In the ASCII mode, data is converted into ASCII code before summing. Then, the lower 2 digits of the hexadecimal sum of all data is used as the sum check code.

In the binary mode, the lower byte of the sum of all data is used as the sum check code.

Example: Extend Mode, 1:n ASCII

The following data block writes "200" (decimal) to address 100 in the system area:



Lower two digits, "39" (33H, 39H) are used as the sum check code.

# 9.2 Notes on SIO 1:N Binary Communication

In the SIO Extend Mode/1:N binary communication, double process occurs.

# 9.2.1 Host to Display Data Transfer

## ■ ENQ

In the transmission from the host, when the data for "Sum Check Range" or "Sum Check" includes "05h" that is same as the ENQ code, add "05h" just before the data to transmit.



Note that the added "05h" is not included in the data number when the Command Data area has "Data Number".

# 9.2.2 Host to Display Data Transfer

# STX

In the response from the Display series, when the data for "Sum Check Range" or "Sum Check" includes "02h" that is same as the STX code, add "02h" just before the data to respond.



Note that the added "02h" is not included in the data number when the Response Data area has "Data Number".

### ENQ

For the 2-wire 1:N connection, when the data for "Sum Check Range" or "Sum Check" includes "05h" that is same as the ENQ code in the response from the Display series, add "05h" just before the data to transmit.

# 9.3 Command Format

- 9.3.1 Read Format
- SIO Convert Mode
- Command data block (from Host)

Setting range

Address: 0000H to 270FH (0 to 9999)

Number of data packets: 0001H to 0100H (1 to 256)

Be sure to make all data entries in ASCII code format.

- Response data block (from Display)
  - When there is no error



<Setting range>

Data: 0000H to FFFFH

• If an error occurs

NAK response

# SIO Extend Mode, ASCII

Command data block (from Host)

E S C	R	Address (4 bytes)	Number of data (4 bytes)	Sum code	C   L R   F
				$\square$	$\Box$

Marked area with asterisk (\*) may not be added depending on the setting.

<Setting range>

Address: 0000H to 270FH (0 to 9999)

Number of data packets: 0001H to 0100H (1 to 256)

Be sure to make all data entries in ASCII code format.

- Response data block (from Display)
  - When there is no error



Marked area with asterisk (\*) may not be added depending on the setting.

<Setting range>

Data: 0000H to FFFFH

• If an error occurs

NAK response

#### ■ SIO Extend Mode, Binary

Command data block (from Host)

E S C	R	Address (2 bytes)	Number of data (2 bytes)	Sum check code
		H to L	H to L	

Marked area with asterisk (\*) may not be added depending on the setting.

<Setting range>

```
Address: 0000H to 270FH (0 to 9999)
```

```
Number of data packets: 0001H to 0200H (1 to 512)
```

#### Response data block (from Display)

• When there is no error



Marked area with asterisk (\*) may not be added depending on the setting. <Setting range>

Data: 0000H to FFFFH

• If an error occurs

NAK response

#### <Example>

The host reads hexadecimal data of 2 words in length from addresses 100 and 101 in the system area.



### Convert Mode



# Extend Mode, 1:1 ASCII,

ETX. SUMCHECK: ENABLED, TERMINATOR: CR.LF, ACK: ENABLED, NAK: ENABLED



# Extend Mode, 1:n ASCII,

#### ETX. SUMCHECK: ENABLED, TERMINATOR: CR.LF, ACK: ENABLED, NAK: ENABLED



### Extend Mode, 1:1 BINARY,

#### ETX. SUMCHECK: ENABLED, ACK: ENABLED, NAK: ENABLED



# Extend Mode, 1:n BINARY,

#### ETX. SUMCHECK: ENABLED, ACK: ENABLED, NAK: ENABLED



# 9.3.2 Write Format



SIO Convert Mode

Command data block (from Host)

E S C	W	Address (4 bytes)	Data 1 (4 bytes)		Data n (4 bytes)	C R
-------------	---	----------------------	---------------------	--	---------------------	--------

<Setting range>

Address: 0000H to 270FH (0 to 9999)

Data: 0000H to FFFFH

Be sure to make all data entries in ASCII code format.

In the Convert Mode, there is no response command from the Display.

In the Convert Mode, there is no limit for number of write data packets.

# ■ SIO Extend Mode, ASCII

Command data block (from Host)



Marked area with asterisk (\*) may not be added depending on the setting. <Setting range> Address: 0000H to 270FH (0 to 9999) Number of data packets: 0001H to 0100H (1 to 256) Data: 0000H to FFFFH

Be sure to make all data entries in ASCII code format.

Response data block (from Display)

ACK or NAK response

# ■ SIO Extend Mode, Binary

Command data block (from Host)



Marked area with asterisk (\*) may not be added depending on the setting.

<Setting range>

Address: 0000H to 270FH (0 to 9999)

Number of data packets: 0001H to 0200H (1 to 512)

Data: 0000H to FFFFH

Response data block (from Display)

ACK or NAK response

#### <Example>

The host writes "1A2CH" and "145BH" to addresses 100 and 101 in the system area, respectively.



### Convert Mode

Е

S W 0 C

Host

E S W C	0 0 6 4	1 A 2 C	1 4 5 B R
---------------	---------	---------	-----------

### Extend Mode, 1:1 ASCII,

ETX. SUMCHECK: ENABLED, TERMINATOR: CR.LF, ACK: ENABLED, NAK: ENABLED

Host

Display

0	6	4	0	0	0	2	1	A	2	C	1	4	5	I B	с	1	C R	L F				
																			A C K	C R	L F	

5 B 2 1 С L

R F

A C

Κ

0 0

С L

RF

# Extend Mode, 1:n ASCII,

#### ETX. SUMCHECK: ENABLED, TERMINATOR: CR.LF, ACK: ENABLED, NAK: ENABLED

С 4

1

E Host N 0 0 Q

Display

# Extend Mode, 1:1 BINARY,

Е

С

s W 0 0 6 0 0 0 2 А 2

4

#### ETX. SUMCHECK: ENABLED, ACK: ENABLED, NAK: ENABLED



### Extend Mode, 1:n BINARY,

#### ETX. SUMCHECK: ENABLED, ACK: ENABLED, NAK: ENABLED



# 9.3.3 Interrupt Output Requests

Here, commands are explained that are used by the Display in Extend Mode, when using [1:n ASCII], [1:n Binary] or 2-wire type communication, to output an interrupt code via the Display unit's System Area's Absolute Value Write, etc. from the Display unit to the Host.

When using 2-wire type connection, be sure to perform the following settings even for a 1:1 connection.

### ■ SIO, ASCII Mode

Command data block (from Host)



Marked area with asterisk (\*) may not be added depending on the setting.

#### Response data block (from Display)

• When there is no error

E S C	Ι	Number of data items (2 bytes)	Data (2 bytes)	E T X	Sum check code	C R	L
							$\square$

If an error occurs

NAK response

#### <Setting range>

Number of data packets

When a request command is sent from the host, this value defines the previously issued interrupt output's number of data items.

When all the previously issued interrupt output data is acquired, this data frequency (number) must be sent. Data

The data (00H to FEH) is converted into a 2-digit ASCII code (HEX) before being output.

"00" will be entered in this field if there is no data to be output.

# ■ SIO, Binary Mode

Command data block (from Host)



Marked area with asterisk (\*) may not be added depending on the setting.

#### Response data block (from Display)

• When there is no error

E S C	Ι	Number of data items (1 byte)	Data (1 byte)	E T X	Sum chec	k
				ſ		7

Marked area with asterisk (\*) may not be added depending on the setting.

• If an error occurs

NAK response

<Setting range>

Number of data packets

When a request command is sent from the host, this value defines the previously issued interrupt output's number of data items.

When all the previously issued interrupt output data is acquired, this data frequency (number) must be sent.

#### Data

The data value (00H to FEH) is output.

"00" will be entered in this field if there is no data to be output.

#### <Example>

"0031H" is written to the system data area 13 by the Data Display (touch panel input).



### ■ Extend Mode, 1:1 ASCII,

ETX. SUMCHECK: ENABLED, TERMINATOR: CR.LF, ACK: ENABLED, NAK: ENABLED



\*1: When the host sends an ESC I command, the Display sends the response data block containing 0 in the Number of data packets field and the data field. However, be sure to use the ESC I command when using the 2-wire type.

<2-Wire type>



Extend Mode, 1:n ASCII,

ETX. SUMCHECK: ENABLED, TERMINATOR: CR.LF, ACK: ENABLED, NAK: ENABLED



# Extend Mode, 1:1 BINARY,

ETX. SUMCHECK: ENABLED, ACK: ENABLED, NAK: ENABLED



\*1: When the host sends an ESC I command, the Display sends the response data block containing 0 in the Number of data packets field and the data field. However, be sure to use the ESC I command when using the 2-wire type.

<2-Wi	re type>			
Host	E S I 64 C			
Display		E S I 01 31 $\begin{bmatrix} E \\ T \\ 99 \\ X \end{bmatrix}$		

Extend Mode, 1:n BINARY,

ETX. SUMCHECK: ENABLED, ACK: ENABLED, NAK: ENABLED

Host	E E N 00 S I 64		
Display		S         E         I         I         I         E         I	

# 9.3.4 Displaying a Character String

The format of the command data block containing the ESC T command (character string display command) is shown below.

This command is not supported in SIO Convert mode.

Coordinate is specified at left bottom of character string.

Displayed character string is fixed in standard font (Size 8 x 16 dot).

# SIO, ASCII Mode

#### Command data block (from Host)



\*: There are cases that this is not added depending on the setting.

<Setting range>

Blinking : 0 to 3 (0: Disabled, 1: Medium speed, 2: Low speed, 3: High speed)

Character/Background color : 0 to 7

(0: Black, 1: Blue, 2: Green, 3: Light blue, 4: Red, 5: Purple, 6: Yellow, 7: White)

Height, Width : 0 to 3 (0: 1 x, 1: 2 x, 2: 4 x, 3: 8 x)

X coordinate : 0000 to 1023 (0 to 1023)

Y coordinate : 0000 to 0767 (0 to 767)

Number of characters (bytes) : 01 to 99 (1 to 99)

Character string data : ANK character is 1-byte long. All double-sized characters are 2-bytes long.

• Characters that can be used in character string data are only Japanese (Shift JIS).

• If you write over data from 0x00 to 0x1F there may be some damage to communications.

Response data block (from Display)

ACK or NAK

NOTE

# ■ SIO, Binary Mode

Command data block (from Host)



\*: There are cases that this is not added depending on the setting.

<Setting range>

Character/Background color



Size



X coordinate : 0000H to 03FFH (0 to 1023)

Y coordinate : 0000H to 02FFH (0 to 767)

Number of characters (bytes) : 01H to 63H (1 to 99)

Character string data : ANK character is 1-byte long. All double-sized characters are 2-bytes long.

NOTE
Characters that can be used in character string data are only Japanese (Shift JIS).
If you write over data from 0x00 to 0x1F there may be some damage to communications.

Response data block (from Display)

ACK or NAK

#### <Example>

"TEST" appears blinking to the right of point (100, 50).



(Attribute) Character size : 2 X 2

# ■ Extend Mode, 1:1 ASCII,

ETX. SUMCHECK: ENABLED, TERMINATOR: CR.LF, ACK: ENABLED, NAK: ENABLED



# Extend Mode, 1:n ASCII,

ETX. SUMCHECK: ENABLED, TERMINATOR: CR.LF, ACK: ENABLED, NAK: ENABLED



# Extend Mode, 1:1 BINARY,

ETX. SUMCHECK: ENABLED, ACK: ENABLED, NAK: ENABLED

Host E<sup>I</sup> S T 87 00 0064 0032 11 04 TEST E1 C<sub>1</sub> B7 00 0064 CO32 11 04 TEST E1 Display A

# Extend Mode, 1:n BINARY,

ETX. SUMCHECK: ENABLED, ACK: ENABLED, NAK: ENABLED



# 9.3.5 Displaying a Line

The format of the command data block containing the ESC L command (straight line display command) is shown below.

This command is not supported in SIO Convert mode.

When you wish to draw a point, be sure to specify the same value for the start and end points of the X coordinates, and the same value for the start and end points of the Y coordinates.

# SIO, ASCII Mode

#### Command data block (from Host)

E S C	L	Blinking Foreground color	Blinking Background color	0	Line type	Start point X coordinate (4 bytes)	Start point Y coordinate (4 bytes)	End point X coordinate (4 bytes)	End point Y coordinate (4 bytes)	Sumcheck	C R	L F

\*: There are cases that this is not added depending on the setting.

<Setting range>

Blinking : 0 to 3 (0: Disabled, 1: Medium speed, 2: Low speed, 3: High speed)

Foreground/Background color : 0 to 7

(0: Black, 1: Blue, 2: Green, 3: Light blue, 4: Red, 5: Purple, 6: Yellow, 7: White)

Line type : 0 to 9

(0: Solid line (1-dot), 1: Dotted line (1-dot), 2: Chain lin (1-dot), 3: Chain double-dashed line (1-dot),

4: Solid line (2-dot), 5: Dotted line (2-dot), 6: Chain lin (2-dot), 7: Chain double-dashed line (2-dot),

8: Solid line (3-dot), 9: Solid line (5-dot))

X coordinate : 0000 to 1023 (0 to 1023)

Y coordinate : 0000 to 0767 (0 to 767)

#### Response data block (from Display)

ACK or NAK

NOTE	h
NOTE	

• Line Types

No.	Line Type	No.	Line Type	No.	Line Type
0		4		8	
1		5		9	
2		6	<u> </u>		
3		7			

# ■ SIO, Binary Mode

Command data block (from Host)



\*: There are cases that this is not added depending on the setting.

<Setting range>

Foreground/Background color



Line type : 0 to 9

(0: Solid line (1-dot), 1: Dotted line (1-dot), 2: Chain lin (1-dot), 3: Chain double-dashed line (1-dot),

4: Solid line (2-dot), 5: Dotted line (2-dot), 6: Chain lin (2-dot), 7: Chain double-dashed line (2-dot),

8: Solid line (3-dot), 9: Solid line (5-dot))

X coordinate : 0000H to 03FFH (0 to 1023)

Y coordinate : 0000H to 02FFH (0 to 767)

Response data block (from Display)

ACK or NAK

#### <Example>

A dotted line (2-dot) is drawn between two points (100, 50) and (400, 250).



# ■ Extend Mode, 1:1 ASCII,

ETX. SUMCHECK: ENABLED, TERMINATOR: CR.LF, ACK: ENABLED, NAK: ENABLED



# Extend Mode, 1:n ASCII,

ETX. SUMCHECK: ENABLED, TERMINATOR: CR.LF, ACK: ENABLED, NAK: ENABLED



# Extend Mode, 1:1 BINARY,

ETX. SUMCHECK: ENABLED, ACK: ENABLED, NAK: ENABLED



### Extend Mode, 1:n BINARY,

ETX. SUMCHECK: ENABLED, ACK: ENABLED, NAK: ENABLED



# 9.3.6 Displaying a Rectangle

The format of the command data block containing the ESC B command (rectangle display command) is shown below.

This command is not supported in SIO Convert mode.

# ■ SIO, ASCII Mode

Command data block (from Host)

	E S C	В	Blinking Foreground color	Blinking	Background color	0	Line type	Start point X coordinate (4 bytes)	Start point Y coordinate (4 bytes)	End point X coordinate (4 bytes)	End point Y coordinate (4 bytes)	Sumcheck	C R	L F
--	-------------	---	---------------------------------	----------	---------------------	---	-----------	--	--	--	--	----------	--------	--------

\*: There are cases that this is not added depending on the setting.

<Setting range>

Blinking : 0 to 3 (0: Disabled, 1: Medium speed, 2: Low speed, 3: High speed)

Foreground/Background color : 0 to 7

(0: Black, 1: Blue, 2: Green, 3: Light blue, 4: Red, 5: Purple, 6: Yellow, 7: White)

Line type : 0 to 3, 8, 9

(0: Solid line (1-dot), 1: Dotted line (1-dot), 2: Chain lin (1-dot), 3: Chain double-dashed line (1-dot),

8: Solid line (3-dot), 9: Solid line (5-dot))

• Check the image of line type at "Displaying a Line."

X coordinate : 0000 to 1023 (0 to 1023)

Y coordinate : 0000 to 0767 (0 to 767)

#### Response data block (from Display)

ACK or NAK

# ■ SIO, Binary Mode

Command data block (from Host)



\*: There are cases that this is not added depending on the setting.

<Setting range>

Foreground/Background color



Line type : 0 to 3, 8, 9

(0: Solid line (1-dot), 1: Dotted line (1-dot), 2: Chain lin (1-dot), 3: Chain double-dashed line (1-dot),

8: Solid line (3-dot), 9: Solid line (5-dot))

NOTE	• Check the image of line type at "Displaying a Line."	
	"9.3.5 Displaying a Line" (page 67)	

X coordinate : 0000H to 03FFH (0 to 1023)

Y coordinate : 0000H to 02FFH (0 to 767)

Response data block (from Display)

ACK or NAK

#### <Example>

A rectangle is drawn with the upper left and lower right corners located respectively at points (100, 50) and (200, 100).



# Extend Mode, 1:1 ASCII,

ETX. SUMCHECK: ENABLED, TERMINATOR: CR.LF, ACK: ENABLED, NAK: ENABLED



# Extend Mode, 1:n ASCII,

ETX. SUMCHECK: ENABLED, TERMINATOR: CR.LF, ACK: ENABLED, NAK: ENABLED



# Extend Mode, 1:1 BINARY,

ETX. SUMCHECK: ENABLED, ACK: ENABLED, NAK: ENABLED



### Extend Mode, 1:n BINARY,

ETX. SUMCHECK: ENABLED, ACK: ENABLED, NAK: ENABLED


# 9.3.7 Displaying a Filled Rectangle

The format of the command data block containing the ESC S command (filled rectangle display command) is shown below.

This command is not supported in SIO Convert mode.

# SIO, ASCII Mode

Command data block (from Host)



\*: There are cases that this is not added depending on the setting.

<Setting range>

Blinking : 0 to 3 (0: Disabled, 1: Medium speed, 2: Low speed, 3: High speed)

Foreground/Background color : 0 to 7

(0: Black, 1: Blue, 2: Green, 3: Light blue, 4: Red, 5: Purple, 6: Yellow, 7: White)

#### Tiling pattern: 0 to 8

(0: Pattern nothing, 1: Cross pattern, 2: Check pattern (small), 3: Vertically striped pattern,

4: Lateral striped pattern, 5: Forward diagonal pattern, 6: Backward diagonal pattern,

7: Check pattern (medium), 8: Check pattern (large))

X coordinate : 0000 to 1023 (0 to 1023)

Y coordinate : 0000 to 0767 (0 to 767)

Response data block (from Display)

ACK or NAK

#### NOTE

• Tiling Pattern Types

Size of the tile is  $8 \text{ dot} \times 8 \text{ dots}$ .

Tiling pattern No.	Tiling pattern	Tiling pattern No.	Tiling pattern	Tiling pattern No.	Tiling pattern
0		3		6	$\mathbb{N}$
1		4		7	8
2		5	$\sim$	8	

Command data block (from Host)



\*: There are cases that this is not added depending on the setting.

<Setting range>

Foreground/Background color



Tiling pattern : 0 to 8

(0: Pattern nothing, 1: Cross pattern, 2: Check pattern (small), 3: Vertically striped pattern,

4: Lateral striped pattern, 5: Forward diagonal pattern, 6: Backward diagonal pattern,

7: Check pattern (medium), 8: Check pattern (large))

X coordinate : 0000H to 03FFH (0 to 1023)

Y coordinate : 0000H to 02FFH (0 to 767)

Response data block (from Display)

A filled rectangle is drawn with the upper left and lower right corners located respectively at points (100, 100) and (200, 200).



(Attribute) Foreground color: Yellow, Blinking: Disabled Background color: Red, Blinking: Disabled Tiling pattern: 8

■ Extend Mode, 1:1 ASCII,

ETX. SUMCHECK: ENABLED, TERMINATOR: CR.LF, ACK: ENABLED, NAK: ENABLED



## Extend Mode, 1:n ASCII,

ETX. SUMCHECK: ENABLED, TERMINATOR: CR.LF, ACK: ENABLED, NAK: ENABLED



# Extend Mode, 1:1 BINARY,

ETX. SUMCHECK: ENABLED, ACK: ENABLED, NAK: ENABLED



## Extend Mode, 1:n BINARY,



# 9.3.8 Displaying a Circle

The format of the command data block containing the ESC C command (circle display command) is shown below.

This command is not supported in SIO Convert mode.

# SIO, ASCII Mode

Command data block (from Host)



\*: There are cases that this is not added depending on the setting.

<Setting range>

Blinking : 0 to 3 (0: Disabled, 1: Medium speed, 2: Low speed, 3: High speed)

Foreground/Background color : 0 to 7

(0: Black, 1: Blue, 2: Green, 3: Light blue, 4: Red, 5: Purple, 6: Yellow, 7: White)

Line type : 0 to 3, 8, 9

(0: Solid line (1-dot), 1: Dotted line (1-dot), 2: Chain lin (1-dot), 3: Chain double-dashed line (1-dot),

8: Solid line (3-dot), 9: Solid line (5-dot))

• Check the image of line type at "Displaying a Line."

X coordinate : 0000 to 1023 (0 to 1023)

Y coordinate : 0000 to 0767 (0 to 767)

Radius : 0001 to 1023 (1 to 1023)

Response data block (from Display)

Command data block (from Host)



\*: There are cases that this is not added depending on the setting.

<Setting range>

Foreground/Background color



Line type : 0 to 3, 8, 9

(0: Solid line (1-dot), 1: Dotted line (1-dot), 2: Chain lin (1-dot), 3: Chain double-dashed line (1-dot),

8: Solid line (3-dot), 9: Solid line (5-dot))

X coordinate : 0000H to 03FFH (0 to 1023)

Y coordinate : 0000H to 02FFH (0 to 767)

Radius : 0001H to 03FFH (1 to 1023)

#### Response data block (from Display)

A circle is drawn with the center located at points (320, 200), and with a radius of 100.



(Attribute) Foreground color: White Background color: Black Line type: Solid line (0)

# Extend Mode, 1:1 ASCII,

ETX. SUMCHECK: ENABLED, TERMINATOR: CR.LF, ACK: ENABLED, NAK: ENABLED



## Extend Mode, 1:n ASCII,

ETX. SUMCHECK: ENABLED, TERMINATOR: CR.LF, ACK: ENABLED, NAK: ENABLED



# Extend Mode, 1:1 BINARY,

ETX. SUMCHECK: ENABLED, ACK: ENABLED, NAK: ENABLED



# Extend Mode, 1:n BINARY,



# 9.3.9 Displaying an Arc

The format of the command data block containing the ESC A command (arc display command) is shown below. This command is not supported in SIO Convert mode.

Arcs are drawn counterclockwise.

Be sure not to specify the same value for the start and end angles.

# SIO, ASCII Mode

#### Command data block (from Host)



\*: There are cases that this is not added depending on the setting.

<Setting range>

Blinking : 0 to 3 (0: Disabled, 1: Medium speed, 2: Low speed, 3: High speed)

Foreground/Background color : 0 to 7

(0: Black, 1: Blue, 2: Green, 3: Light blue, 4: Red, 5: Purple, 6: Yellow, 7: White)

Line type : 0 to 3, 8, 9

(0: Solid line (1-dot), 1: Dotted line (1-dot), 2: Chain lin (1-dot), 3: Chain double-dashed line (1-dot),

8: Solid line (3-dot), 9: Solid line (5-dot))

NOTE

Check the image of line type at "Displaying a Line."
 "9.3.5 Displaying a Line" (page 67)

X coordinate : 0000 to 1023 (0 to 1023)

Y coordinate : 0000 to 0767 (0 to 767)

Radius : 0001 to 1023 (1 to 1023)

Angle : 0000 to 0360 (0 to 360)

Response data block (from Display)

Command data block (from Host)



\*: There are cases that this is not added depending on the setting.

<Setting range>

Foreground/Background color



Line type : 0 to 3, 8, 9

(0: Solid line (1-dot), 1: Dotted line (1-dot), 2: Chain lin (1-dot), 3: Chain double-dashed line (1-dot),

8: Solid line (3-dot), 9: Solid line (5-dot))

NOTE	• Check the image of line type at "Displaying a Line."
	"9.3.5 Displaying a Line" (page 67)

X coordinate : 0000H to 03FFH (0 to 1023)

Y coordinate : 0000H to 02FFH (0 to 767)

Radius : 0001H to 03FFH (1 to 1023)

Angle : 0000H to 0168H (0 to 360)

Response data block (from Display)

A semicircle (arc) is drawn with the center located at point (320, 200) with a radius of 50.



(Attribute) Foreground color: White Background color: Black Line type: Solid line (0)

# Extend Mode, 1:1 ASCII,

ETX. SUMCHECK: ENABLED, TERMINATOR: CR.LF, ACK: ENABLED, NAK: ENABLED



## ■ Extend Mode, 1:n ASCII,

#### ETX. SUMCHECK: ENABLED, TERMINATOR: CR.LF, ACK: ENABLED, NAK: ENABLED



# Extend Mode, 1:1 BINARY,

#### ETX. SUMCHECK: ENABLED, ACK: ENABLED, NAK: ENABLED



# Extend Mode, 1:n BINARY,



# 9.3.10 Displaying a Pie Shape

The format of the command data block containing the ESC G command (pie display command) is shown below. This command is not supported in SIO Convert mode.

Pie shapes are drawn counterclockwise.

Be sure not to specify the same value for the start and end angles.

# SIO, ASCII Mode

#### Command data block (from Host)



\*: There are cases that this is not added depending on the setting.

<Setting range>

Blinking : 0 to 3 (0: Disabled, 1: Medium speed, 2: Low speed, 3: High speed)

Foreground/Background color : 0 to 7

(0: Black, 1: Blue, 2: Green, 3: Light blue, 4: Red, 5: Purple, 6: Yellow, 7: White)

Line type : 0 to 3, 8, 9

(0: Solid line (1-dot), 1: Dotted line (1-dot), 2: Chain lin (1-dot), 3: Chain double-dashed line (1-dot),

8: Solid line (3-dot), 9: Solid line (5-dot))

NOTE

Check the image of line type at "Displaying a Line."
 "9.3.5 Displaying a Line" (page 67)

X coordinate : 0000 to 1023 (0 to 1023)

Y coordinate : 0000 to 0767 (0 to 767)

Radius : 0001 to 1023 (1 to 1023)

Angle : 0000 to 0360 (0 to 360)

Response data block (from Display)

Command data block (from Host)



\*: There are cases that this is not added depending on the setting.

<Setting range>

Foreground/Background color



Line type : 0 to 3, 8, 9

(0: Solid line (1-dot), 1: Dotted line (1-dot), 2: Chain lin (1-dot), 3: Chain double-dashed line (1-dot),

8: Solid line (3-dot), 9: Solid line (5-dot))

NOTE	• Check the image of line type at "Displaying a Line."	
	"9.3.5 Displaying a Line" (page 67)	

X coordinate : 0000H to 03FFH (0 to 1023)

Y coordinate : 0000H to 02FFH (0 to 767)

Radius : 0001H to 03FFH (1 to 1023)

Angle : 0000H to 0168H (0 to 360)

Response data block (from Display)

A pie is drawn with the center located at point (320, 200), and with a radius of 100.



(Attribute) Foreground color: White, Start angle: 315° Background color: Black, End angle: 225° Line type: Solid line (0)

# Extend Mode, 1:1 ASCII,

ETX. SUMCHECK: ENABLED, TERMINATOR: CR.LF, ACK: ENABLED, NAK: ENABLED



# ■ Extend Mode, 1:n ASCII,

#### ETX. SUMCHECK: ENABLED, TERMINATOR: CR.LF, ACK: ENABLED, NAK: ENABLED

Host	E N 0 0 Q I	E S G C	0 7	0 0	0 0	0	0	3	2 0	0	2	0	0	0	1	0	0	0	3	1	5	0	2	2	5	С	3	C R	L F				
Display											-																			A C 0 K	0	C L R F	:

# Extend Mode, 1:1 BINARY,

#### ETX. SUMCHECK: ENABLED, ACK: ENABLED, NAK: ENABLED



# Extend Mode, 1:n BINARY,



## 9.3.11 Additional Character String Features

The format of the command data block containing the ESC t command (enhancement to the character string display command) is shown below. This command is not supported in SIO Convert mode. Character type, rotation, direction, and character decoration are available as enhancements.

Coordinate is specified at left bottom of character string. When rotating, character string, which is rotated counterclockwise centered on the specified coordinate, is displayed.

## SIO, ASCII Mode

#### Command data block (from Host)



Response data block (from Display)

ACK or NAK

■ SIO, Binary Mode

Command data block (from Host)



\*: There are cases that this is not added depending on the setting.

<Setting range>

Foreground/Background color



Character type : 01 to 09

(01: 1-byte, 02: 2-byte (shifted JIS code) 1-byte display, 03: Standard font Fixed size (6 × 10 dots),

04: Standard font Fixed size (8  $\times$  13 dots), 05: Standard font Fixed size (13  $\times$  23 dots),

06: Standard font Fixed size ( $28 \times 50$  dots), 07: Standard font Bold Fixed size ( $8 \times 13$  dots),

08: Standard font Bold Fixed size  $(13 \times 23 \text{ dots})$ , 09: Standard font Fixed size  $(8 \times 8 \text{ dots})$ )

NOTE	• Usable font differs depending on the character type.
	Only Japanese (Shift JIS) can be used for 02 and 09. Only ASCII can be used for other
	character types.

Rotation : 0 to 3 (0: 0 deg., 1: 90 deg., 2: 180 deg., 3: 270 deg.)

Direction: 0 or 1 (0: Horizontal, 1: Vertical)

1-byte centering : 0 or 1 (0: Disabled, 1: Enabled (available when "Vertical" is selected for Direction))

Character decoration : 0 to 2 (0: Normal, 1: Bold, 2: Shadowed)

X coordinate : 0000H to 03FFH (0 to 1023)

Y coordinate : 0000H to 02FFH (0 to 767)

Size



## NOTE

• When the character type to be used is [Fixed Size], size setting becomes invalid.

Number of characters (bytes) : 01H to 63H (1 to 99)

Character string data : ANK character is 1-byte long. All double-sized characters are 2-bytes long.

• Characters that can be used in character string data are only Japanese (Shift JIS).
• If you write over data from 0x00 to 0x1F there may be some damage to communications.

#### Response data block (from Display)

ACK or NAK

#### <Example>

"TEST" appears blinking to the right of point (100, 50).

(Attribute) Character size: 2 X 2

# Extend Mode, 1:1 ASCII,

ETX. SUMCHECK: ENABLED, TERMINATOR: CR.LF, ACK: ENABLED, NAK: ENABLED

Host	E S C	t 1	7	0	0	0	1	0	0	0	0	0	0	0	1	0	0	0	0	5	0	1	1	0	4	т	E	s	Т	6	4	C R	L F				
Display																																		A C K	C R	F	

Extend Mode, 1:n ASCII,

#### ETX. SUMCHECK: ENABLED, TERMINATOR: CR.LF, ACK: ENABLED, NAK: ENABLED



# Extend Mode, 1:1 BINARY,

#### ETX. SUMCHECK: ENABLED, ACK: ENABLED, NAK: ENABLED





Regarding vertical writing

NOTE

Below is the display for vertical writing.

Characters are displayed turned at 90 degrees as shown in the figure below. The coordinate that is at the left bottom is specified.



# 9.3.12 Additional Line Features

The format of the command data block containing the ESC l command (enhancement to a straight line display command) is shown below. This command is not supported in SIO Convert mode.

This additional feature is the use of an arrow.

## SIO, ASCII Mode

Command data block (from Host)

E S C	Ι	Blinking Foreground color	Blinking Background color	0	Line type	0	0	Arrow pattern	Arrow direction	Start point X coordinate (4 bytes)	Start point Y coordinate (4 bytes)	End point X coordinate (4 bytes)	End point Y coordinate (4 bytes)	Sumcheck	C R	L F
														$\square$		<u> </u>

\*: There are cases that this is not added depending on the setting.

<Setting range>

Blinking : 0 to 3 (0: Disabled, 1: Medium speed, 2: Low speed, 3: High speed)

Foreground/Background color : 0 to 7

(0: Black, 1: Blue, 2: Green, 3: Light blue, 4: Red, 5: Purple, 6: Yellow, 7: White)

#### Line type : 0 to 9

(0: Solid line (1-dot), 1: Dotted line (1-dot), 2: Chain lin (1-dot), 3: Chain double-dashed line (1-dot),

4: Solid line (2-dot), 5: Dotted line (2-dot), 6: Chain lin (2-dot), 7: Chain double-dashed line (2-dot),

8: Solid line (3-dot), 9: Solid line (5-dot))

• Check the image of line type at "Displaying a Line."

<sup>(27)</sup> "9.3.5 Displaying a Line" (page 67)

Arrow pattern : 0 to 4 (0: Disabled, 1:  $\leftarrow$ , 2:  $\leftarrow$ , 3:  $\blacktriangleright$ , 4:  $\frown$ )

Arrow direction : 0 to 2 (0: Both ends of line, 1: End point of line, 2: Start point of line)

X coordinate : 0000 to 1023 (0 to 1023)

Y coordinate : 0000 to 0767 (0 to 767)

Response data block (from Display)

Command data block (from Host)



\*: There are cases that this is not added depending on the setting.

<Setting range>

Foreground/Background color



Line type : 0 to 9

(0: Solid line (1-dot), 1: Dotted line (1-dot), 2: Chain lin (1-dot), 3: Chain double-dashed line (1-dot),

4: Solid line (2-dot), 5: Dotted line (2-dot), 6: Chain lin (2-dot), 7: Chain double-dashed line (2-dot),

8: Solid line (3-dot), 9: Solid line (5-dot))

NOTE • Check the image of line type at "Displaying a Line."

Arrow pattern : 0 to 4 (0: Disabled, 1:  $\leftarrow$ , 2:  $\leftarrow$ , 3:  $\blacktriangleright$ , 4:  $\leftarrow$ )

Arrow direction : 0 to 2 (0: Both ends of line, 1: End point of line, 2: Start point of line)

X coordinate : 0000H to 03FFH (0 to 1023)

Y coordinate : 0000H to 02FFH (0 to 767)

Response data block (from Display)

A bold dotted line is drawn between two points (100, 50) and (400, 250).



# ■ Extend Mode, 1:1 ASCII,

ETX. SUMCHECK: ENABLED, TERMINATOR: CR.LF, ACK: ENABLED, NAK: ENABLED



# Extend Mode, 1:n ASCII,

ETX. SUMCHECK: ENABLED, TERMINATOR: CR.LF, ACK: ENABLED, NAK: ENABLED



# ■ Extend Mode, 1:1 BINARY,

ETX. SUMCHECK: ENABLED, ACK: ENABLED, NAK: ENABLED



# Extend Mode, 1:n BINARY,



# 9.3.13 Additional Rectangle Features

The format of the command data block containing the ESC b command (enhancement to the straight line display command) is shown below. This command is not supported in SIO Convert mode.

This additional feature is the use of beveling.

# SIO, ASCII Mode

#### Command data block (from Host)



\*: There are cases that this is not added depending on the setting.

<Setting range>

Blinking : 0 to 3 (0: Disabled, 1: Medium speed, 2: Low speed, 3: High speed)

Foreground/Background color : 0 to 7

(0: Black, 1: Blue, 2: Green, 3: Light blue, 4: Red, 5: Purple, 6: Yellow, 7: White)

Line type : 0 to 3, 8, 9

(0: Solid line (1-dot), 1: Dotted line (1-dot), 2: Chain lin (1-dot), 3: Chain double-dashed line (1-dot),

8: Solid line (3-dot), 9: Solid line (5-dot))

• Check the image of line type at "Displaying a Line."

Beveling method : 0 to 2 (0: Disabled, 1: Curve, 2: Straight line)

Beveling radius : 00 to 99

X coordinate : 0000 to 1023 (0 to 1023)

Y coordinate : 0000 to 0767 (0 to 767)

Response data block (from Display)

Command data block (from Host)



\*: There are cases that this is not added depending on the setting.

<Setting range>

Foreground/Background color



Line type : 0 to 3, 8, 9

(0: Solid line (1-dot), 1: Dotted line (1-dot), 2: Chain lin (1-dot), 3: Chain double-dashed line (1-dot),

8: Solid line (3-dot), 9: Solid line (5-dot))

Beveling method : 0 to 2 (0: Disabled, 1: Curve, 2: Straight line)

Beveling radius : 00 to 63H (0 to 99)

X coordinate : 0000H to 03FFH (0 to 1023)

Y coordinate : 0000H to 02FFH (0 to 767)

#### Response data block (from Display)

A rectangle is drawn whose upper left and lower right corners are located at points (100, 50) and (200, 100).



(Attribute) Foreground color: Red, Blinking: Enabled Background color: Black, Blinking: Disabled Line type: Solid line (0)

## ■ Extend Mode, 1:1 ASCII,

#### ETX. SUMCHECK: ENABLED, TERMINATOR: CR.LF, ACK: ENABLED, NAK: ENABLED



## Extend Mode, 1:n ASCII,

ETX. SUMCHECK: ENABLED, TERMINATOR: CR.LF, ACK: ENABLED, NAK: ENABLED



# Extend Mode, 1:1 BINARY,

ETX. SUMCHECK: ENABLED, ACK: ENABLED, NAK: ENABLED



## Extend Mode, 1:n BINARY,



# 9.3.14 Additional Filled Rectangle Features

The format of the command data block containing the ESC s command (enhancement to the filled rectangle display command) is shown below. This command is not supported in SIO Convert mode. This additional feature is the use of beveling.

# SIO, ASCII Mode

#### Command data block (from Host)



\*: There are cases that this is not added depending on the setting.

<Setting range>

Blinking : 0 to 3 (0: Disabled, 1: Medium speed, 2: Low speed, 3: High speed)

Foreground/Background color : 0 to 7

(0: Black, 1: Blue, 2: Green, 3: Light blue, 4: Red, 5: Purple, 6: Yellow, 7: White)

#### Tiling pattern : 0 to 8

(0: Pattern nothing, 1: Cross pattern, 2: Check pattern (small), 3: Vertically striped pattern,

4: Lateral striped pattern, 5: Forward diagonal pattern, 6: Backward diagonal pattern,

7: Check pattern (medium), 8: Check pattern (large))

• Check the image of tiling pattern at "Displaying a Filled Rectangle."

<sup>(37)</sup> "9.3.7 Displaying a Filled Rectangle" (page 73)

Beveling method : 0 to 2 (0: Disabled, 1: Curve, 2: Straight line)

Beveling radius : 00 to 99

X coordinate : 0000 to 1023 (0 to 1023)

Y coordinate : 0000 to 0767 (0 to 767)

Response data block (from Display)

Command data block (from Host)



\*: There are cases that this is not added depending on the setting.

<Setting range>

Foreground/Background color



Tiling pattern : 0 to 8

(0: Pattern nothing, 1: Cross pattern, 2: Check pattern (small), 3: Vertically striped pattern,

4: Lateral striped pattern, 5: Forward diagonal pattern, 6: Backward diagonal pattern,

7: Check pattern (medium), 8: Check pattern (large))

• Check the image of tiling pattern at "Displaying a Filled Rectangle."

Beveling method : 0 to 2 (0: Disabled, 1: Curve, 2: Straight line)

Beveling radius : 00 to 63H (0 to 99)

X coordinate : 0000H to 03FFH (0 to 1023)

Y coordinate : 0000H to 02FFH (0 to 767)

Response data block (from Display)

#### <Example>

A patterned rectangle is drawn with the upper left and lower right corners located respectively at points (100, 100) and (200, 200).



(Attribute) Foreground color: Yellow, Blinking: Disabled Background color: Red, Blinking: Disabled Tiling pattern: 8

## ■ Extend Mode, 1:1 ASCII,

ETX. SUMCHECK: ENABLED, TERMINATOR: CR.LF, ACK: ENABLED, NAK: ENABLED



## Extend Mode, 1:n ASCII,

ETX. SUMCHECK: ENABLED, TERMINATOR: CR.LF, ACK: ENABLED, NAK: ENABLED

Host	E N G	0	0	E S C	s	0	6	0	4	0	0	0	0	0	0	0	0	0	 1 	0	0	0	1	0	0	0	2	0	0	0	2	0	0	0	6	C R	L F			
Display																																			_			A C 0 0 K	C R	L F

# Extend Mode, 1:1 BINARY,



# 9.3.15 Additional Filled Circle Features

The format of the command data block containing the ESC c command (enhancement to the filled circle display command) is shown below. This command is not supported in SIO Convert mode. This additional feature allows the use to Tiling.

SIO, ASCII Mode

#### Command data block (from Host)



\*: There are cases that this is not added depending on the setting.

#### <Setting range>

Blinking : 0 to 3 (0: Disabled, 1: Medium speed, 2: Low speed, 3: High speed)

Foreground/Background color : 0 to 7

(0: Black, 1: Blue, 2: Green, 3: Light blue, 4: Red, 5: Purple, 6: Yellow, 7: White)

#### Tiling pattern : 0 to 8

(0: Pattern nothing, 1: Cross pattern, 2: Check pattern (small), 3: Vertically striped pattern,

4: Lateral striped pattern, 5: Forward diagonal pattern, 6: Backward diagonal pattern,

7: Check pattern (medium), 8: Check pattern (large))

• Check the image of tiling pattern at "Displaying a Filled Rectangle."

X coordinate : 0000 to 1023 (0 to 1023) Y coordinate : 0000 to 0767 (0 to 767) Radius : 0001 to 1023 (1 to 1023)

Response data block (from Display)

Command data block (from Host)



\*: There are cases that this is not added depending on the setting.

<Setting range>

Foreground/Background color



Tiling pattern : 0 to 8

(0: Pattern nothing, 1: Cross pattern, 2: Check pattern (small), 3: Vertically striped pattern,

4: Lateral striped pattern, 5: Forward diagonal pattern, 6: Backward diagonal pattern,

7: Check pattern (medium), 8: Check pattern (large))

NOTE

• Check the image of tiling pattern at "Displaying a Filled Rectangle."

<sup>(2)</sup> "9.3.7 Displaying a Filled Rectangle" (page 73)

X coordinate : 0000H to 03FFH (0 to 1023)

Y coordinate : 0000H to 02FFH (0 to 767)

Radius : 0001H to 03FFH (1 to 1023)

Response data block (from Display)

A circle is drawn with the center located at point (320, 200) and a radius of 100.



# Extend Mode, 1:1 ASCII,

ETX. SUMCHECK: ENABLED, TERMINATOR: CR.LF, ACK: ENABLED, NAK: ENABLED



## Extend Mode, 1:n ASCII,

ETX. SUMCHECK: ENABLED, TERMINATOR: CR.LF, ACK: ENABLED, NAK: ENABLED



# Extend Mode, 1:1 BINARY,

ETX. SUMCHECK: ENABLED, ACK: ENABLED, NAK: ENABLED



## Extend Mode, 1:n BINARY,



# 9.3.16 Additional Pie Shape Features

The format of the command data block containing the ESC g command (enhancement to the pie display command) is shown below. This command is not supported in SIO Convert mode.

This is a GP-Pro PBIII compatible command and has an equivalent function as "Displaying a Pie Shape." Pies are drawn counterclockwise.

Be sure not to specify the same value for start and end angles.

# SIO, ASCII Mode

#### Command data block (from Host)



\*: There are cases that this is not added depending on the setting.

<Setting range>

Blinking : 0 to 3 (0: Disabled, 1: Medium speed, 2: Low speed, 3: High speed)

Foreground/Background color : 0 to 7

(0: Black, 1: Blue, 2: Green, 3: Light blue, 4: Red, 5: Purple, 6: Yellow, 7: White)

#### Line type : 0 to 3, 8, 9

(0: Solid line (1-dot), 1: Dotted line (1-dot), 2: Chain lin (1-dot), 3: Chain double-dashed line (1-dot),

8: Solid line (3-dot), 9: Solid line (5-dot))

# • Check the image of line type at "Displaying a Line."

"9.3.5 Displaying a Line" (page 67)

X coordinate : 0000 to 1023 (0 to 1023)

Y coordinate : 0000 to 0767 (0 to 767)

Radius : 0001 to 1023 (1 to 1023)

Angle : 0000 to 0360 (0 to 360)

#### Response data block (from Display)

Command data block (from Host)



\*: There are cases that this is not added depending on the setting.

<Setting range>

Foreground/Background color



Line type : 0 to 3, 8, 9

(0: Solid line (1-dot), 1: Dotted line (1-dot), 2: Chain lin (1-dot), 3: Chain double-dashed line (1-dot),

8: Solid line (3-dot), 9: Solid line (5-dot))

X coordinate : 0000H to 03FFH (0 to 1023)

Y coordinate : 0000H to 02FFH (0 to 767)

Radius : 0001H to 03FFH (1 to 1023)

Angle : 0000H to 0168H (0 to 360)

Response data block (from Display)

A pie is drawn with the center located at point (320, 200) and a radius of 100.



(Attribute) Foreground color: White, Start angle: 315° Background color: Black, End angle: 225° Line type: Solid line (0)

# ■ Extend Mode, 1:1 ASCII,

ETX. SUMCHECK: ENABLED, TERMINATOR: CR.LF, ACK: ENABLED, NAK: ENABLED



Extend Mode, 1:n ASCII,

#### ETX. SUMCHECK: ENABLED, TERMINATOR: CR.LF, ACK: ENABLED, NAK: ENABLED

Host	E N C	ן א 0 ג	0	E S C	g	0	7	0	0	0	0	0	0	0	3	2	0	0	2	0	0	0	 1 	0	0	0	3	1	5	0	2	2	5	С	3	C R	L F		
Display																																						A C 0 0 R K	L F

# Extend Mode, 1:1 BINARY,

ETX. SUMCHECK: ENABLED, ACK: ENABLED, NAK: ENABLED



# Extend Mode, 1:n BINARY,



# 9.3.17 Displaying a Polygon

The format of the command data block containing the ESC Y command (polygon display command) is shown below. This command is not supported in SIO Convert mode.

# SIO, ASCII Mode

#### Command data block (from Host)



\*: There are cases that this is not added depending on the setting.

<Setting range>

Blinking : 0 to 3 (0: Disabled, 1: Medium speed, 2: Low speed, 3: High speed)

Foreground/Background color : 0 to 7

(0: Black, 1: Blue, 2: Green, 3: Light blue, 4: Red, 5: Purple, 6: Yellow, 7: White)

Line type : 0 to 3, 8, 9

(0: Solid line (1-dot), 1: Dotted line (1-dot), 2: Chain lin (1-dot), 3: Chain double-dashed line (1-dot),

8: Solid line (3-dot), 9: Solid line (5-dot))

• Check the image of line type at "Displaying a Line."

<sup>(37)</sup> "9.3.5 Displaying a Line" (page 67)

X coordinate : 0000 to 1023 (0 to 1023)

Y coordinate : 0000 to 0767 (0 to 767)

Number of vertex : 0003 to 0100 (3 to 100)

#### Response data block (from Display)

Command data block (from Host)



\*: There are cases that this is not added depending on the setting.

<Setting range>

Foreground/Background color



Line type : 0 to 3, 8, 9

(0: Solid line (1-dot), 1: Dotted line (1-dot), 2: Chain lin (1-dot), 3: Chain double-dashed line (1-dot),

8: Solid line (3-dot), 9: Solid line (5-dot))

• Check the image of line type at "Displaying a Line."

<sup>(37)</sup> "9.3.5 Displaying a Line" (page 67)

X coordinate : 0000H to 03FFH (0 to 1023)

Y coordinate : 0000H to 02FFH (0 to 767)

Number of vertex : 0003H to 0064H (3 to 100)

#### Response data block (from Display)

A triangle is drawn three points (100, 50), (50, 100) and (150, 150).



Display

Extend Mode, 1:n ASCII,

ETX. SUMCHECK: ENABLED, TERMINATOR: CR.LF, ACK: ENABLED, NAK: ENABLED



Display

## Extend Mode, 1:1 BINARY,

#### ETX. SUMCHECK: ENABLED, ACK: ENABLED, NAK: ENABLED



# Extend Mode, 1:n BINARY,



# 9.3.18 Displaying a Filled Polygon

The format of the command data block containing the ESC y command (filled polygon display command) is shown below. This command is not supported in SIO Convert mode.

# SIO, ASCII Mode

#### Command data block (from Host)



\*: There are cases that this is not added depending on the setting.

<Setting range>

Blinking : 0 to 3 (0: Disabled, 1: Medium speed, 2: Low speed, 3: High speed)

Foreground/Background color : 0 to 7

(0: Black, 1: Blue, 2: Green, 3: Light blue, 4: Red, 5: Purple, 6: Yellow, 7: White)

Tiling pattern: 0 to 8

(0: Pattern nothing, 1: Cross pattern, 2: Check pattern (small), 3: Vertically striped pattern,

4: Lateral striped pattern, 5: Forward diagonal pattern, 6: Backward diagonal pattern,

7: Check pattern (medium), 8: Check pattern (large))

• Check the image of tiling pattern at "Displaying a Filled Rectangle."

<sup>(C)</sup> "9.3.7 Displaying a Filled Rectangle" (page 73)

X coordinate : 0000 to 1023 (0 to 1023)

Y coordinate : 0000 to 0767 (0 to 767)

Number of vertex : 0003 to 0100 (3 to 100)

#### Response data block (from Display)

ACK or NAK

NOTE

Command data block (from Host)



\*: There are cases that this is not added depending on the setting.

<Setting range>

Foreground/Background color



Tiling pattern : 0 to 8

(0: Pattern nothing, 1: Cross pattern, 2: Check pattern (small), 3: Vertically striped pattern,

4: Lateral striped pattern, 5: Forward diagonal pattern, 6: Backward diagonal pattern,

7: Check pattern (medium), 8: Check pattern (large))

NOTE

• Check the image of tiling pattern at "Displaying a Filled Rectangle."

<sup>(2)</sup> "9.3.7 Displaying a Filled Rectangle" (page 73)

X coordinate : 0000H to 03FFH (0 to 1023)

Y coordinate : 0000H to 02FFH (0 to 767)

Number of vertex : 0003H to 0064H (3 to 100)

Response data block (from Display)
### <Example>

A triangle is drawn three points (100, 50), (50, 100) and (150, 150).



#### ETX. SUMCHECK: ENABLED, TERMINATOR: CR.LF, ACK: ENABLED, NAK: ENABLED



### Extend Mode, 1:1 BINARY,

#### ETX. SUMCHECK: ENABLED, ACK: ENABLED, NAK: ENABLED



### Extend Mode, 1:n BINARY,

#### ETX. SUMCHECK: ENABLED, ACK: ENABLED, NAK: ENABLED



# 9.3.19 Brightness and Contrast Adjustments

The format of the command data block containing the ESC # command (brightness and contrast adjustment command) is shown below. Note that brightness or contrast cannot be adjusted with some Display types.

### SIO Convert Mode

Command data block (from Host)



<Setting range>

Attribute: 0000H to 0001H (0: Contrast, 1: Brightness) Settings: Please refer to " ■ Brightness/Contrast Table" (page 114).

Be sure to make all data entries in ASCII code format.

Response data block (from Display)

No response data.

SIO Extend Mode, ASCII

Command data block (from Host)



Marked area with asterisk (\*) may not be added depending on the setting.

<Setting range>

Attribute: 0000H to 0001H (0: Contrast, 1: Brightness)

Settings: Please refer to " ■ Brightness/Contrast Table" (page 114).

Be sure to make all data entries in ASCII code format.

Response data block (from Display)

ACK or NAK response

# ■ SIO Extend Mode, Binary

Command data block (from Host)

E S C	#	Attribute (2 bytes)	Setting (2 bytes)	Sum check code
		H to L	H to L	

<Setting range>

Attribute: 0000H to 0001H (0: Contrast, 1: Brightness)

Settings: Please refer to " ■ Brightness/Contrast Table" (page 114).

Be sure to make all data entries in ASCII code format.

Response data block (from Display)

ACK or NAK response

### <Example>

Set the setting value 1 of brightness adjustment.

## Convert Mode

Host

Е C R s # 0 0 0 1 0 0 0 1 С

# ■ Extend Mode, 1:1 ASCII,

ETX. SUMCHECK: ENABLED, TERMINATOR: CR.LF, ACK: ENABLED, NAK: ENABLED

Host



# ■ Extend Mode, 1:1 BINARY,

ETX. SUMCHECK: ENABLED, ACK: ENABLED, NAK: ENABLED



# 9.3.20 Brightness and Contrast Current Value

The format of the command data block to acquire the brightness and contrast current values with the command is shown below. Note that the brightness or contrast level is not available with some Display types.

SIO Convert Mode

Command data block (from Host)



Response data block (from Display)

E S C	D	Contrast level (4 bytes)	Brightness level (4 bytes)	C R
-------------	---	-----------------------------	-------------------------------	--------

SIO Extend Mode, ASCII

Command data block (from Host)

E S C	\$ Sum check	C R	L F
			$\square$
	*		sk

Marked area with asterisk (\*) may not be added depending on the setting.

Response data block (from Display)

E S C	D	Contrast level (4 bytes)	Brightness level (4 bytes)	Sum check cdde	C R	LF
						$\square$
				*		*

Marked area with asterisk (\*) may not be added depending on the setting.

# ■ SIO Extend Mode, Binary

Command data block (from Host)



Marked area with asterisk (\*) may not be added depending on the setting.

Response data block (from Display)

E S C	D	Contrast level (2 bytes)	Brightness level (2 bytes)	Sum check
		H to L	H to L	

Marked area with asterisk (\*) may not be added depending on the setting.

# Brightness/Contrast Table

Dioplay	Brightness	Contrast
Display	Setting Range	Setting Range
AGP3302B	0(Bright) to 7(Dark)	0(Bright) to 7(Dark)
AGP3301L	0(Bright) to 7(Dark)	0(Bright) to 7(Dark)
AGP3301S	0(Bright) to 7(Dark)	0(Bright) to 7(Dark)
AGP3300L	0(Bright) to 7(Dark)	0(Bright) to 7(Dark)
AGP3300S	0(Bright) to 7(Dark)	0(Bright) to 7(Dark)
AGP3300T	0(Bright) to 7(Dark)	-
AGP3400S	0(Bright) to 7(Dark)	0(Bright) to 7(Dark)
AGP3400T	0(Bright) to 7(Dark)	-
AGP3500L	0(Bright) to 7(Dark)	0(Bright) to 7(Dark)
AGP3500S	0(Bright) to 7(Dark)	0(Bright) to 7(Dark)
AGP3500T	0(Bright) to 7(Dark)	-
AGP3510T	0(Bright) to 7(Dark)	-
AGP3560T	0(Bright) to 7(Dark)	-
AGP3600T	0(Bright) to 7(Dark)	-
AGP3450T	0(Bright) to 7(Dark)	-
AGP3550T	0(Bright) to 7(Dark)	-
AGP3650T	0(Bright) to 7(Dark)	-
AGP3750T	0(Bright) to 7(Dark)	-

Display	Brightness	Contrast
	Setting Range	Setting Range
AGP3200T	0(Bright) to 7(Dark)	-
AGP3200A	0(Bright) to 7(Dark)	0(Bright) to 7(Dark)
AST3201A	0(Bright) to 7(Dark)	0(Bright) to 7(Dark)
AST3211A	0(Bright) to 7(Dark)	0(Bright) to 7(Dark)
AST3301S	0(Bright) to 7(Dark)	0(Bright) to 7(Dark)
AST3301B	0(Bright) to 7(Dark)	0(Bright) to 7(Dark)
AST3401T	0(Bright) to 7(Dark)	-
AST3501T	0(Bright) to 7(Dark)	-
AST3501C	0(Bright) to 7(Dark)	-
LT-3301L	0(Bright) to 7(Dark)	0(Bright) to 7(Dark)
LT-3300L	0(Bright) to 7(Dark)	0(Bright) to 7(Dark)
LT-3300S	0(Bright) to 7(Dark)	0(Bright) to 7(Dark)

NOTE

• IPC does not support brightness and contrast adjustments.

### <Example>

The current value of brightness and contrast is acquired.

The contrast setting value 1 and the brightness setting value 1 are acquired in the example.

### ■ Convert Mode



■ Extend Mode, 1:1 ASCII,

ETX. SUMCHECK: ENABLED, TERMINATOR: CR.LF, ACK: ENABLED, NAK: ENABLED



Host	S \$ 3F C							
Display		E S C	D	0001	0001	E T X	61	

# 10 Sample Program (Serial Communication)

# 10.1 Sample System

This section provides examples of the Host's program and the Display's parts setup which are necessary for data transmissions between the Display and the Host. Plus, when the parts setup below is run with the sample program, it demonstrates a Display screen change.

Use the following steps to create the screens shown below.

When the [Motor ON], [Motor OFF], [Display], or [Error] switch is pressed, that switch's respective interrupt code is output to the host system, starting the following operations.

Switch Explanation

[Motor ON] .....Starts the motor to supply 50% of the sediment into the sedimentation tank.

[Motor OFF] .....Stops the motor.

[Display].....50% of the sediment is being supplied to the sedimentation tank.

[Error].....Only 20% of the sediment has been supplied to the sedimentation tank.

### System Example



sediment level is displayed.

# Screen Creation

(1) Use the GP-Pro EX to create the screens.

This screen is displayed when the Display is operating.



(2) Use the GP-Pro EX to setup Parts

# ■ Parts Setup Example

Switch List

Screen No.	Parts Name	Switch	Word Address	Word Action	Fixed No.
	Motor ON				0031
Base Screen 1	Motor OFF	Word Switch	#MFMI INK 13	Write Data	0032
Dase Gereen 1	Display	word Switch		Dec	0033
	Error				0034

### Address Map

Parts shown in the Parts Setup Example are allotted to their corresponding address as follows.

Switch -> Address 13

Writing data to Address 13 (Interrupt) causes an output of the bottom 1 byte code from the RS232C port. For this reason, the Switch (Parts) uses word write.

Motor ON ......word write 0031 to address 13 Motor OFF.....word write 0032 to address 13 Display .....word write 0033 to address 13 Error .....word write 0034 to address 13

Tank -> Address 20



#### Switch -> Address 21



#### Motor -> Address 22



#### Sediment Tank -> Address 23

Bit	15	0
Address 23	Sediment Tank	

(3) The host unit's company creates the program for data transfer between the Display and the host.

### Sample Program

#include<stdio.h>
#include<dos.h>
#include<string.h>

#include<stdlib.h>

#include<conio.h>

```
#define data_size_str220/*The data size of str2 is 20 bytes*/
#define data_size_wr_data24/*The data size of wr_data is 24 bytes*/
```

```
#define serial_port_BIOS0x14/*PC serial port BIOS*/
#define serial_port_number0x00/*Serial port number used*/
#define serial_port_INT0xE7/*The serial port is initialized.*/
#define serial_port_parameter0xE7/*9600bps,8bit,stopbit;1,parity;none*/
```

```
#define get_status0x03/*The status of the serial port is acquired.*/
#define serial_port_write0x01/*The serial port is written.*/
#define serial_port_read0x02/*The serial port is read out.*/
```

```
#define status_bit_60000x60000/*Port status bits 13 and 14*/
#define status_bit_00200x0020/*Port status bit 5*/
```

/****	***************************************
/*	Writing data*/
/****	***************************************
void	write_data (char wr_data);/*The data is written to the registers.*/
void	write (char *wr_data);/*The data is written to the GP.*/
/****	***************************************
/* /****	Reading data*/
int r	ead_data (void),/* The data is read from the GP.*/
volu	change_screen (int interrupt_data);/* The received data in an interruption from the OP is identified.*/
int r	ead (void),/*The received data in an interruption from the GP is read.*/
/****	***************************************
/*	Confirmation of key entries*/
/****	· ************************************
int k	bhit (void);
/****	***************************************
/*	Global variables*/
/****	***************************************
int i	nterrupt_data,port_status+;
char	*str2;
voia i	main (void)
۱	int no data.
	str? = (char*) malloc (cizeof (char) *data sezi str?): /*The memory for str? is secured */
	$su_2 = (char^3)$ manoe (sizeof (char) * data_sezi_su <sub>2</sub> ), <sup>7</sup> The memory for su <sub>2</sub> is secured. <sup>7</sup>
	/*The memory for usr date is secured */
	open SIQ (); /*Communication settings for PS232C*/
	$v_{r}$ data = "\v1bW/000E0001\v0d\0" · /*0v1 is written to address 15: screen number 1 setun*/
	write (wr. data):
	with $(w_1_data)$ , $w_r_data = "v_1 hW0014003E(v0d)0"$ .
	$\sqrt{2}$ (*0x3E is written to address 20: Materials are put into agration tanks Nos. 1 to 6 */
	write (wr. data):
/****	wine (wi_uaa),
/*	The data recention from the GP is identified */
′ /* If	the Write key is pressed, the execution is completed */
, 11 /****	***************************************
,	while (1)
	{
	no data = read ():

```
if (no_data == 1)
                          /*If there is any key entry, no_data=1.*/
     {
          break;
     }
      else
     {
          wr_data = str2;
          write (wr_data);
     }
}
getch ();
                        /*The codes for keys are removed from the key buffer.*/
free (wr_data);
                           /*The memory area for wr_data is freed up.*/
free (str2);
                        /*The memory area for str2 is freed up.*/
```

```
/*The transmission buffer register status and the transmission register status are acquired.*/ void write_ready (void)
```

```
{
     int err6000;
     err6000 = 0;
     while (status_bit_6000 != err6000)
      {
          err6000 = err_status () & status_bit_6000;
      }
     return;
}
/*Confirmation of data set status*/
int read_ready (void)
{
     int no_data,err0020;
     err0020 = 0;
     while (status_bit_0020 != err0020)
      }
          err0020 = 344_status () & status bit_0020;
          if (kbhit ())
                          /*Confirms whether there is a key entry or not.*/
          {
                no_data = 1;/*If there is a key entry, no_data=1.*/
                break;
                          /*The program is terminated.*/
          }
```

}

```
}
   return (no_data);
}
/*Data is written to the GP.*/
void write (char *wr_data)
{
   while (*wr_data != '\0') /*The data is written until it becomes NULL.*/
   {
        write_ready ();
        write_data (*wr_data);
        wr_data++;
                      /*The address pointed to by the pointer is incremented.*/
    }
   return;
}
/*
        The interrupt data received from the GP is confirmed.
                                                           */
/*
        The data is written to addresses 20, 21, 22, and 23.
                                                         */
void change_screen (int interrupt_data)
{
    switch (interrupt_data)
/*If interrupt_data is 1, 0x1 is written to address 21, 0x3F to address 22, and 0x50 to address 23.*/
          case 1: str2 = "\x1bW00150001003F0050\x0d\0";
                break;
/*If interrupt_data is 2, 0x2 is written to address 21, 0x0 to address 22, and 0x0 to address 23.*/
          case 2: str2 = "\x1bW001500020000000\x9d\0";
                break:
/*If interrupt_data is 3, 0x4 is written to address 21, 0x0 to address 22, and 0x50 to address 23.*/
          case 3: str2 = "\x1bW00150000400000050\x0d\0";
                break:
/*If interrupt_data is 4, 0x8 is written to address 21, 0x0 to address 22, and 0x20 to address 23.*/
          case 4; str2 = "\x1bW001500080000020\x0d\0";
                break;
/*If interrupt_data is other than 1 to 4, NULL is written.*/
         default : str2 = "\setminus0":
               break:
     {
    return;
```

```
GP-Pro EX Device/PLC Connection Manual
```

```
}
```

{

ł

```
/*
         The interrupt data received from the GP is read.
                                                       */
  /* Reading is performed until the interrupt_data becomes other than NULL. */
  int read (void)
  {
      int no_data;
      do
      {
           no_data = read_ready (); /*Confirmation of data set status*/
           if (no_data == 1)
                            /*If there is a key entry, no_data=1.*/
           {
              break;
           }
           else
           {
              read_data ();
                           /*The data received from the GP is read out./*
              change_screen (interrupt_data); /*The data received from the GP is identified.*/
           }
       } while (*str2 == '0');
       return (no_data);
  }
  /*Communications settings for RS232C*/
void open_SIO (void)
    union REGS regs;
         regs.x.dx = serial_port_number;
         regs.h.ah = serial_port_INT;
         regs.h.al = serial_port_parameter;
         int86 (serial_port_BIOS,&regs,&regs);
    return:
}
/*The port status is acquired.*/
int err_status (void)
    union REGS regs;
         regs.x.dx = serial_port_number;
         regs.h.ah = get_status;
```

```
int86 (serial_port_BIOS,&regs,&regs);
           port_status = regs.x.ax;
     return (port_status);
}
/*The data is written to the registers*/
void write_data (char wr_data)
{
     union REGS regs;
           regs.x.dx = serial_port number;
           regs.h.ah = serial_port_write;
           regs.h.al = wr_data;
           int86 (serial_port_BIOS,&regs,&regs);
     return;
}
/*The data is read from the GP*/
int read_data (void)
{
     union REGS regs;
           regs.x.dx = serial_port_number;
           regs.h.ah = serial_port_read;
           int86 (serial_port_BIOS,&regs,&regs);
           interrupt_data = regs.h.al;
     return (interrupt_data);
}
```

NOTE

• The availability of open\_SI0 (void), err\_status (void), write\_data (char wr\_data), and read\_data (void) will depend on the models used. If the program is written on a personal computer that is not IBM -compatible, it must be modified in order to be used.

(4) After screen data is transferred to the Display, display (operation) can begin.

### Display Run Screen

Display Screen (Before running program)



Display Screen (After running program)



Press the [Motor ON] switch

ASCII Code "31" = Data "1" is output to the Host, causing the screen to change.



# 10.2 Troubleshooting Multiple Display (Multi-drop) Communication

The host plays the following two roles when controlling multiple Display units:

- 1. transferring data to be displayed
- 2. reading touch panel inputs from Display units through polling

Note that the more Display units to be controlled, and the more data to be transferred, the more burdened the host will be. In addition, an excessive number of Display units or an excessive amount of data can degrade the response speed of the Display units (slower display switching and slower response to touch panel inputs), substantially affecting the system operation. Therefore, you should consider the number of Display units and amount of data when designing a multi-drop system.

# Sending Display Data to All Display units at the Same Time

When you need to send the same data to all Display units, try sending it to all Display units at the same time for improved efficiency, instead of sending it to one Display unit at a time. (This can be accomplished by specifying "FF" for the station number.)

♦ When sending data to one Display at a time



Excessive amount of time required (4 times longer than the case shown below)

### ♦ When sending data to all Display units at the same time



Substantially reduced communication time (4 times shorter than the case shown above)

# 10.3 Program Flowchart for Multi-drop System



 Writing data shared by all Display units
 Use the ESC W command to write display data shared by all Display units to the system area.
 (At this time, specify "FF" for station number.)
 Writing data for a specific Display
 Use the ESC W command to write data for a specific Display to the system area.

### (3) Polling

Use the ESC I command to poll each Display unit to determine whether any touch panel input has been made. Touch panel inputs are serviced accordingly.

# NOTE

- To improve Display response speed for touch panel input, insert a polling sequence after each write sequence (sequence in which data is written for a specific Display unit).
- Make sure that the amount of data to be written to the system area is minimal. In order to accomplish this, youcan, for example, choose to update only data items that have been changed.

# 11 Memory Link Command (Ethernet Communication)

# 11.1 Basic Communication Protocol Control

The basic procedure for controlling the communication protocol is shown below:

### 11.1.1 LAN

### Host to Display Data Transfer



(When the response frame is followed by another frame)

- Command Data area stores the data to be transmitted from the host device to the Display.
- After the Display analyzes the Command Data, Response Data area stores the result of "ACK" or "NAK", or no response.
- Display to Host Data Transfer



### Interrupt Output

• In the case of TCP, interrupt output is implemented as follows.

Host

Display	'b' 000000	E 00000004 S 'I' 0     C	1 Interrupt output data block
---------	------------	--------------------------------	----------------------------------

• In the case of UDP, interrupt output cannot be implemented. "Interrupt Output Requests" command is used.

<sup>(3)</sup> "11.4.3 Interrupt Output Requests" (page 142)

### Details on Frame Format

The memory link LAN frame is structured as follows:



The initial 8 bytes, from frame marker to data length, are provided in all memory link LAN frames. Therefore, during a frame check, the system checks the initial 8 bytes first, and then checks the subsequent data based on the data length specified in the initial 8 bytes.

Frame Marker (1 byte)

The frame marker is used to identify the frame type.

'B': Binary command frame

'b': Binary response frame

Only binary frames are supported.

Transaction Control (1 byte)



Specifies whether the transaction marker is added or not. 0: Transaction marker is not added 1: Transaction marker is added

#### Destination Control (1 byte)



#### Destination Control Applications

To perform normal 1:1 communication, enter "00h" in the destination control bit.

For "1:n" (multi-link) communication, enter "05h" to request a response from only one target node among an unspecified number of nodes ("n" nodes). To request a response from all the nodes, enter "09h".

### Transaction Marker



#### Application of transaction marker

After receiving a command frame that includes a transaction marker, the Display executes the command (and sends back a response, if necessary). This process is the same as that for a command frame without a transaction marker. Next, the processing result is stored in the Display.

When the Display receives the next transaction result request, the Display responds by sending the stored data.

The Display can store up to ten transaction results. If there are ten or more transactions, the existing transactions will be deleted, starting from the oldest one, and the new data will be registered.

#### Destination Block

A destination block is added when the "Add/Not Add Destination Block" control bit is "1". A destination block is not added when this control bit is "0".



# 11.2 Demand Polling

In TCP connection, when a periodic request is not received from the Host, the Display unit checks for the presence of a Host by performing Demand Polling.

When the Host receives this request, be sure to send a similar Demand Polling request to the Display. After the Display receives this request, it confirms the presence of the Host.

If no response is received from the Host, the Display will close the connection.

If you wish to use Digital Electronics Corporation APIs for the Host, the response processing of the Demand Polling request will be performed automatically by the API.

## 11.2.1 Demand Polling (FS Demand)

The data contents of the Demand Polling request sent from the Display to the Host are as follows:

#### Host: Nothing

Display: Response Data



#### Data Name

• Data: "Demand Polling"



Demand Polling: When the Host Presence Monitoring Time elapses, a Demand Polling request is sent. This request demands the Host send its own Polling command. This type of request allows the Display to not have to wait for a polling request.

Host

Display	ʻb' 00 00 00	00 00 00 10	F S	'Demand Polling'	00
---------	--------------	-------------	--------	------------------	----

# 11.2.2 Polling Command (FS Polling)

The data contents of the Polling Command sent from the Host to the Display are as follows:

#### Host: Command Data



Display: Response Data



Data Name

• Data: "Polling Command"

Example:

Host	'B' 00 00 00	00000011	F S	'Polling Command'	00						
Display						ʻb' 00 00 00	00000012	F S	'Polling Response'	00	

# 11.2.3 Error Detection (FS Error)

When a protocol error occurs, this command allows the Display or the Host to output an error notice about the other unit/device.

This frame does not require a response.

#### Host: Command Data

• Inter-character timeout error frame



#### Data Name

- Data: "Error Receive time out"
- Display presence monitoring timeout error frame



#### Data Name

- Data: "Error Alive time out"
- Inter-protocol timeout error frame



#### Data Name

• Data: "Error Response time out"

#### Display: Response Data

• Inter-character timeout error frame



### Data Name

- Data: "Error Receive time out"
- Display presence monitoring timeout error frame



Data Name

- Data: "Error Alive time out"
- Inter-protocol timeout error frame



Data Name

• Data: "Error Receive time out"

# 11.3 Transaction Result Request Command

This command is enabled only when using the Ethernet.

## 11.3.1 Transaction Result Request

The contents of the transaction result request sent from the host device to the Display are as follows:

#### Host: Command Data



### Display: Response Data



#### Data Name

• Data: 'Transaction Query'

#### Result Executed

• Data: 'Transaction Result'

#### Value Meaning

0x00000000 Processing ends properly.

0x00000001 Error

0x00000002 Designated transaction marker is not stored in the Display.

# 11.4 Command Format

## 11.4.1 Read Format

- LAN
- Command data block (from Host)



<Setting range>

Address: 0000H to 270FH (0 to 9999)

Number of data packets: 0001H to 0200H (1 to 512)

### Response data block (from Display)

• When there is no error



<Setting range> Data: 0000H to FFFFH

#### • If an error occurs

NAK response

### <Example>

Read two words of hexadecimal data from address 100 of the System Area.



# 11.4.2 Write Format

■ LAN

Command data block (from Host)



<Setting range>

Address: 0000H to 270FH (0 to 9999)

Number of data packets: 0001H to 0200H (1 to 512)

Data: 0000H to FFFFH

Response data block (from Display)

ACK or NAK response

### <Example>

Write hexadecimal data "1A2C" and "145B" to address 100 of the System Area.



# 11.4.3 Interrupt Output Requests

# ■ LAN

Command data block (from Host)

		– Da	ta leng	th
'B' 00 00 00 (4 bytes)	Data length (4 bytes)	E S C	ʻl'	
	H to L			

### Response data block (from Display)

• When there is no error



• If an error occurs

NAK response

<Setting range>

Number of data packets

When an enquiry command is sent from the host, this value defines the previously issued interrupt output's number of data items.

Data

The data value (00H to FEH) is output.

"00" will be entered in this field if there is no data to be output.

### <Example>

Request to the Display whether the touch panel input has been activated or not.

Host	'B' 000000	00000002	E S 'l' C	
Display				'b' 000000     00000006     S 'l'     0000       'L' 1     L     L     L

"0031h" is written to the system data area 13 by the Data Display (touch panel input)



# 11.4.4 Displaying a Character String

The contents of the command data isa for displaying a character string are as follows:

Coordinate is specified at left bottom of character string.

Displayed character string is fixed in standard font (Size 8 x 16 dot).

### ■ LAN

Command data block (from Host)



#### <Setting range>

Foreground/Background color



(0: Disabled, 1: Low speed, 2: Medium speed, 3: High speed)

Size

X coordinate : 0000H to 03FFH (0 to 1023)

Y coordinate : 0000H to 02FFH (0 to 767)

Number of characters (bytes) : 01H to 63H (1 to 99)

Character string data : ANK character is 1-byte long. All double-sized characters are 2-bytes long.

• Characters that can be used in character string data are only Japanese (Shift JIS).
• If you write over data from 0x00 to 0x1F there may be some damage to communications.

### Response data block (from Display)

ACK or NAK
"TEST" appears blinking to the right of point (100, 50).



# 11.4.5 Displaying a Line

The contents of the command data for drawing a line are as follows:

When you wish to draw a point, be sure to specify the same value for the start and end points of the X coordinates, and the same value for the start and end points of the Y coordinates.

### LAN

Command data block (from Host)



<Setting range>

Foreground/Background color



Line type : 0 to 9

(0: Solid line (1-dot), 1: Dotted line (1-dot), 2: Chain lin (1-dot), 3: Chain double-dashed line (1-dot),

4: Solid line (2-dot), 5: Dotted line (2-dot), 6: Chain lin (2-dot), 7: Chain double-dashed line (2-dot),

8: Solid line (3-dot), 9: Solid line (5-dot))

NOTE	• Check the image of line type at "Displaying a Line."
	(Page 67) "9.3.5 Displaying a Line" (page 67)

X coordinate : 0000H to 03FFH (0 to 1023)

Y coordinate : 0000H to 02FFH (0 to 767)

Response data block (from Display)

Draw a 2-dot dotted line between (100, 50) and (400, 250).



#### **Displaying a Rectangle** 11.4.6

The contents of the command data for drawing a rectangle are as follows:

- LAN
- Command data block (from Host)



(0: Solid line (1-dot), 1: Dotted line (1-dot), 2: Chain lin (1-dot), 3: Chain double-dashed line (1-dot), 8: Solid line (3-dot), 9: Solid line (5-dot))

NOTE	• Check the image of line type at "Displaying a Line."
L	"9.3.5 Displaying a Line" (page 67)

X coordinate : 0000H to 03FFH (0 to 1023)

Y coordinate : 0000H to 02FFH (0 to 767)

Response data block (from Display)

Draw a rectangle with its two diagonal points placed at (100, 50) and (200, 100).



# 11.4.7 Displaying a Filled Rectangle

The contents of the command data for drawing a filled rectangle are as follows:





X coordinate : 0000H to 03FFH (0 to 1023)

Y coordinate : 0000H to 02FFH (0 to 767)

Response data block (from Display)

Draw a rectangle with its two diagonal points placed at (100, 100) and (200, 200).



(Attribute) Foreground color: Yellow, Blink: Disabled Background color: Red, Blink: Disabled Tiling pattern: 8



# 11.4.8 Displaying a Circle

The contents of the command data for drawing a circle are as follows:

### LAN

Command data block (from Host)



Line type : 0 to 3, 8, 9

(0: Solid line (1-dot), 1: Dotted line (1-dot), 2: Chain lin (1-dot), 3: Chain double-dashed line (1-dot),

8: Solid line (3-dot), 9: Solid line (5-dot))

NOTE	Check the image of line type at "Displaying a Line."
	"9.3.5 Displaying a Line" (page 67)
X coordinate	e: 0000H to 03FFH (0 to 1023)

Y coordinate : 0000H to 02FFH (0 to 767)

Radius : 0001H to 03FFH (1 to 1023)

Response data block (from Display)

Draw a circle with its center placed at (320, 200) and radius of "100".



### 11.4.9 Displaying an Arc

The contents of the command data for drawing an arc are as follows:

The drawing direction is counter-clockwise.

Do not enter the same value for the start angle and end angle.

### ■ LAN

#### Command data block (from Host)



<Setting range>

Foreground/Background color



#### Line type : 0 to 3, 8, 9

(0: Solid line (1-dot), 1: Dotted line (1-dot), 2: Chain lin (1-dot), 3: Chain double-dashed line (1-dot),8: Solid line (3-dot), 9: Solid line (5-dot))

• Check the image of line type at "Dis	playing a Line."
--	------------------

"9.3.5 Displaying a Line" (page 67)

X coordinate : 0000H to 03FFH (0 to 1023)

Y coordinate : 0000H to 02FFH (0 to 767)

Radius : 0001H to 03FFH (1 to 1023)

Angle : 0000H to 0168H (0 to 360)

Response data block (from Display)

Draw an arc with its center placed at (320, 200) with a radius of "50".



### 11.4.10 Displaying a Sector

The contents of the command data for drawing a sector are as follows:

The drawing direction is counter-clockwise.

Do not enter the same value for the start angle and end angle.

### LAN

#### Command data block (from Host)



<Setting range>

Foreground/Background color



#### Line type : 0 to 3, 8, 9

(0: Solid line (1-dot), 1: Dotted line (1-dot), 2: Chain lin (1-dot), 3: Chain double-dashed line (1-dot),8: Solid line (3-dot), 9: Solid line (5-dot))

NOTE	• Check the image of line type at "Displaying a Line."
------	--

"9.3.5 Displaying a Line" (page 67)

X coordinate : 0000H to 03FFH (0 to 1023)

Y coordinate : 0000H to 02FFH (0 to 767)

Radius : 0001H to 03FFH (1 to 1023)

Angle : 0000H to 0168H (0 to 360)

Response data block (from Display)

Draw a sector with its center placed at (320, 200) and a radius of "100".



### 11.4.11 Additional Character String Features

The contents of the command data for displaying a character string using the extended functions are as follows: Character type, rotation, direction, and character decoration are available as enhancements.

Coordinate is specified at left bottom of character string. When rotating, character string, which is rotated counterclockwise centered on the specified coordinate, is displayed.

### ■ LAN

#### Command data block (from Host)



X coordinate : 0000H to 03FFH (0 to 1023)

Y coordinate : 0000H to 02FFH (0 to 767)

Size



NOTE

• When the character type to be used is [Fixed Size], size setting becomes invalid.

Number of characters (bytes) : 01H to 63H (1 to 99)

Character string data : ANK character is 1-byte long. All double-sized characters are 2-bytes long.

**NOTE** • Characters that can be used in character string data are only Japanese (Shift JIS).

• If you write over data from 0x00 to 0x1F there may be some damage to communications.

### Response data block (from Display)

ACK or NAK

#### <Example>

Display "TEST" using double-size characters in the blink mode at the coordinates of (100, 50).



## 11.4.12 Additional Line Features

The contents of the command data for drawing a line using the extended function are as follows: This additional feature is the use of an arrow.

### ■ LAN

Command data block (from Host)



Y coordinate : 0000H to 02FFH (0 to 767)

### Response data block (from Display)

Draw a 2-dot dotted line between (100, 50) and (400, 250).



### 11.4.13 Additional Rectangle Features

The contents of the command data for drawing a rectangle using the extended function are as follows: This additional feature is the use of beveling.

■ LAN

Command data block (from Host)



Draw a rectangle using a 1-dot solid line with its two diagonal points placed at (100, 50) and (200, 100).



# 11.4.14 Additional Filled Rectangle Features

The contents of the command data for drawing a painted rectangle using the extended function are as follows: This additional feature is the use of beveling.

■ LAN

Command data block (from Host)



<Setting range>

Foreground/Background color



Tiling pattern: 0 to 8

(0: Pattern nothing, 1: Cross pattern, 2: Check pattern (small), 3: Vertically striped pattern,

4: Lateral striped pattern, 5: Forward diagonal pattern, 6: Backward diagonal pattern,

7: Check pattern (medium), 8: Check pattern (large))

NOTE	<ul> <li>Check the image of tiling pattern at "Displaying a Filled Rectangle."</li> </ul>
	"9.3.7 Displaying a Filled Rectangle" (page 73)

Beveling method : 0 to 2 (0: Disabled, 1: Curve, 2: Straight line)

Beveling radius : 00 to 63H (0 to 99)

X coordinate : 0000H to 03FFH (0 to 1023)

Y coordinate : 0000H to 02FFH (0 to 767)

Response data block (from Display)

Draw a rectangle of tiling pattern 8 with its two diagonal points placed at (100, 100) and (200, 200).



(Attribute) Foreground color: Yellow, Blink: Disabled Background color: Red, Blink: Disabled Tiling pattern: 8



# 11.4.15 Additional Painted Circle Features

The contents of the command data for drawing a painted circle using the extended function are as follows: This additional feature allows the use to Tiling.

### ■ LAN

Command data block (from Host)



<Setting range>

Foreground/Background color



Tiling pattern : 0 to 8

(0: Pattern nothing, 1: Cross pattern, 2: Check pattern (small), 3: Vertically striped pattern,

4: Lateral striped pattern, 5: Forward diagonal pattern, 6: Backward diagonal pattern,

7: Check pattern (medium), 8: Check pattern (large))

• Check the image of tiling pattern at "Displaying a Filled Rectangle."

X coordinate : 0000H to 03FFH (0 to 1023)

Y coordinate : 0000H to 02FFH (0 to 767)

Radius : 0001H to 03FFH (1 to 1023)

Response data block (from Display)

Draw a circle of tiling pattern 4 with its center placed at (320, 200) and radius of "100".



# 11.4.16 Additional Pie Shape Features

The contents of the command data for drawing a pie shape using the extended function are as follows:

This is a GP-Pro PBIII compatible command and has an equivalent function as "Displaying a Pie Shape." Pies are drawn counterclockwise.

Be sure not to specify the same value for start and end angles.

### ■ LAN

#### Command data block (from Host)



<Setting range>

Foreground/Background color



(0: Disabled, 1: Low speed, 2: Medium speed, 3: High speed)

#### Line type : 0 to 3, 8, 9

(0: Solid line (1-dot), 1: Dotted line (1-dot), 2: Chain lin (1-dot), 3: Chain double-dashed line (1-dot),8: Solid line (3-dot), 9: Solid line (5-dot))



X coordinate : 0000H to 03FFH (0 to 1023)

Y coordinate : 0000H to 02FFH (0 to 767)

Radius : 0001H to 03FFH (1 to 1023)

Angle : 0000H to 0168H (0 to 360)

Response data block (from Display)

Draw a pie shaped using a 3-dot solid line with its center placed at (320, 200) and radius of "100".



# 11.4.17 Displaying a Polygon

The contents of the command data for drawing a polygon are as follows:

LAN

Command data block (from Host)



Response data block (from Display)

A triangle is drawn three points (100, 50), (50, 100) and (150, 150).



# 11.4.18 Displaying a Filled Polygon

The contents of the command data for drawing a filled polygon are as follows:

- LAN
- Command data block (from Host)



Response data block (from Display)

A triangle is drawn three points (100, 50), (50, 100) and (150, 150).



# 11.4.19 Brightness and Contrast Adjustments

The format of the command data block containing the ESC # command (brightness and contrast adjustment command) is shown below. Note that brightness or contrast cannot be adjusted with some Display types.

# ■ LAN

Command data block (from Host)



<Setting range>

Attribute: 0000H to 0001H (0: Contrast, 1: Brightness)

Settings: Please refer to "■ Brightness/Contrast Table" (page 175).

Be sure to make all data entries in ASCII code format.

### Response data block (from Display)

ACK or NAK response

#### <Example>

Set the setting value 7 of cotrast adjustment.



# 11.4.20 Brightness and Contrast Current Value

The format of the command data block to acquire the brightness and contrast current values with the command is shown below. Note that the brightness or contrast level is not available with some Display types.

### ■ LAN

Command data block (from Host)



Response data block (from Display)



### Brightness/Contrast Table

Display	Brightness	Contrast
Display	Setting Range	Setting Range
AGP3302B	0(Bright) to 7(Dark)	0(Bright) to 7(Dark)
AGP3301L	0(Bright) to 7(Dark)	0(Bright) to 7(Dark)
AGP3301S	0(Bright) to 7(Dark)	0(Bright) to 7(Dark)
AGP3300L	0(Bright) to 7(Dark)	0(Bright) to 7(Dark)
AGP3300S	0(Bright) to 7(Dark)	0(Bright) to 7(Dark)
AGP3300T	0(Bright) to 7(Dark)	-
AGP3400S	0(Bright) to 7(Dark)	0(Bright) to 7(Dark)
AGP3400T	0(Bright) to 7(Dark)	-
AGP3500L	0(Bright) to 7(Dark)	0(Bright) to 7(Dark)
AGP3500S	0(Bright) to 7(Dark)	0(Bright) to 7(Dark)
AGP3500T	0(Bright) to 7(Dark)	-
AGP3510T	0(Bright) to 7(Dark)	-
AGP3560T	0(Bright) to 7(Dark)	-
AGP3600T	0(Bright) to 7(Dark)	-
AGP3450T	0(Bright) to 7(Dark)	-
AGP3550T	0(Bright) to 7(Dark)	-
AGP3650T	0(Bright) to 7(Dark)	-

Display	Brightness	Contrast
Display	Setting Range	Setting Range
AGP3750T	0(Bright) to 7(Dark)	-
AGP3200T	0(Bright) to 7(Dark)	-
AGP3200A	0(Bright) to 7(Dark)	0(Bright) to 7(Dark)
AST3201A	0(Bright) to 7(Dark)	0(Bright) to 7(Dark)
AST3211A	0(Bright) to 7(Dark)	0(Bright) to 7(Dark)
AST3301S	0(Bright) to 7(Dark)	0(Bright) to 7(Dark)
AST3301B	0(Bright) to 7(Dark)	0(Bright) to 7(Dark)
AST3401T	0(Bright) to 7(Dark)	-
AST3501T	0(Bright) to 7(Dark)	-
AST3501C	0(Bright) to 7(Dark)	-
LT-3301L	0(Bright) to 7(Dark)	0(Bright) to 7(Dark)
LT-3300L	0(Bright) to 7(Dark)	0(Bright) to 7(Dark)
LT-3300S	0(Bright) to 7(Dark)	0(Bright) to 7(Dark)

NOTE

• IPC does not support brightness and contrast adjustments.

#### <Example>

The current value of brightness and contrast is acquired.

The contrast setting value 3 and the brightness setting value 1 are acquired in the example.



### 11.4.21 Displaying a Banner Message

The content of command data for displaying banner message is explained here. Banner message display command can be used with GP-Pro EX Ver. 2.10 and later versions.

Banner message display setting is performed by GP-Pro EX.

### What is Banner Message?

#### Operation of Banner Message

Banner message is a function to deliver any character strings to Display through Ethernet and stream-display them at lower or upper of the screen.



**NOTE** • Banner message can be used with GP and LT that are equipped with an Ethernet interface.

#### How to Set Banner Message Setting

Banner message display setting is performed by GP-Pro EX.

**IMPORTANT** • Banner message can be used only in Ethernet communication, not in serial communication.

• Banner message cannot be used with stream-display of alarm message.

#### (1) Select [Device/PLC Settings] from [System setting window] in workspace.

Device/PLC 1		
Summary		Change Device/PLC
Maker Digital Electronics Corporation	Series Memory Link	Port Ethernet (UDP)
Text Data Mode 1 Change	Banner Message Display Settings	
Communication Settings		
Port No. 1024		
Wait To Send 🛛 🛛 🕂 (ms)		
DemandPolling		
✓ Use DemandPolling		
Polling Cycle 20 📩 (sec)	Default	

(2) Select [Banner Message Display Settings].

Device/PLC 1					
Summary					Change Device/PLC
Maker	Digital Electronics Corporation	Series	Memory Link	Port	Ethernet (UDP)
Text Data	Mode 1 <u>Change</u>	I	Banner Message Display Settings		

(3) Check [Enable Banner Message Display] to set banner message display.

💰 Banner Message Display Settings	×
🔽 Enable Banner Message Display	1
Stop Banner Message Settings	
C Unlimited   Stop at  10	
Display Font Size 8 x 16	
Display Position Bottom C Up	
OK ( <u>0</u> ) Cancel	

Setup Items	Setup Description
Enable Banner Message Display	Check when using banner message display.
Stop Banner Message Settings	<ul><li>When [Unlimited] is selected, message keeps streaming until the banner message stop command is issued.</li><li>When [Stop at] is selected, enter the number of frequency to stream message between 1 and 100. After the message is streamed at the times entered, the message stops.</li></ul>
Display Font Size	Select a font size of message to be displayed. Display font size cannot be changed while the banner message is displayed.
Display Position	Select the position to display banner message from "Bottom" or "Up."

(4) Click [OK].

### ■ LAN

Command data block (from Host)



Character string length (bytes). 000211 to 014011 (2 to 520)

Character string (Character string length bytes): UNICODE character string.

Up to 160 characters are usable for both half size and full size characters.

Response data block (from Display)

ACK or NAK

<Example>

Display a banner message "TEST".

(Attribute)

Color: White Blinking: Disabled Background color Blinking: Disabled Font: Standard font Language: Europa Priority: Not interrupt Character string length: 4 bytes Character string data: Test
# Color Code

0	1	2	3	4	5	6	7
8	9	10	11	12	13	14	15
16	17	18	19	20	21	22	23
24	25	26	27	28	29	30	31
32	33	34	35	36	37	38	39
40	41	42	43	44	45	46	47
48	49	50	51	52	53	54	55
56	57	58	59	60	61	62	63

No.	RGB	No.	RGB	No.	RGB	No.	RGB
0	(0.0.0)	1	(0.0.255)	2	(0.255.0)	3	(0.255.255)
4	(255.0.0)	5	(255.0.255)	6	(255.255.0)	7	(255.255.255)
8	(0.0.64)	9	(0.0.160)	10	(0.64.0)	11	(0.64.64)
12	(0.64.160)	13	(0.64.255)	14	(0.160.0)	15	(0.160.64)
16	(0.160.160)	17	(0.160.255)	18	(0.255.64)	19	(0.255.160)
20	(64.0.0)	21	(64.0.64)	22	(64.0.160)	23	(64.0.255)
24	(64.64.0)	25	(64.64.64)	26	(64.64.160)	27	(64.64.255)
28	(64.160.0)	29	(64.160.64)	30	(64.160.160)	31	(64.160.255)
32	(64.255.0)	33	(64.255.64)	34	(64.255.160)	35	(64.255.255)
36	(160.0.0)	37	(160.0.64)	38	(160.0.160)	39	(160.0.255)
40	(160.64.0)	41	(160.64.64)	42	(160.64.160)	43	(160.64.255)
44	(160.160.0)	45	(160.160.64)	46	(160.160.160)	47	(160.160.255)
48	(160.255.0)	49	(160.255.64)	50	(160.255.160)	51	(160.255.255)
52	(255.0.64)	53	(255.0.160)	54	(255.64.0)	55	(255.64.64)
56	(255.64.160)	57	(255.64.255)	58	(255.160.0)	59	(255.160.64)
60	(255.160.160)	61	(255.160.255)	62	(255.255.64)	63	(255.255.160)

# 11.4.22 Stop a Banner Message

The content of command data to stop the banner message is as follows. Banner message display command can be used with GP-Pro EX Ver. 2.10 and up.

#### ■ LAN

Command data block (from Host)



- Response data block (from Display)
  - ACK or NAK
  - <Example>

The flow message is stopped.



# 12 Memory Link API (Ethernet Communication)

The Memory Link API is a 32-bit API for Windows that enables you to easily access the Display from the application using the memory link protocol, without understanding details of the memory link.

### 12.1 How to Use Memory Link API

Memory Link API users need to first create a communication channel to the Display. (Creating a communication channel is referred to as "opening a connection". )

After necessary communication with the Display is completed, close the communication channel (connection). If you do not intend to use the same socket for the next communication with the Display, cancel the socket. To perform the next communication with the Display, open the connection again. (The socket can be re-used)

#### Development Environments

Compiler : Microsoft Visual C++ Ver 6.0

OS : Microsoft Windows 98 or higher

Others : The following files are contained on the GP-Pro EX CD-ROM. To view them, open the CD-ROM's [MTOMLAN] folder and double-click on the [MTOMLAN.ZIP] file. MTOMLAN.LIB MTOMLAN.DLL

# Memory Link API Software Structure Diagram



General Operation of Memory Link API



# 12.1.1 Synchronous and Asynchronous Transmision

Synchronous transmission" is a transmission method with which system functionality does not return until the API's processing normally or abnormally ends after an API command is called.

"Asynchronous Transmission" is a transmission method with which the system will return and become ready for further processing before the API's current processing is completed.

Memory Link API supports both synchronous and asynchronous transmission methods.

The second parameter specifies which transmission method is to be used: synchronous or asynchronous.

- When the second parameter is any value other than "MTOMCALLBACK", the API system is automatically set to synchronous transmission mode.
  - When "NULL" is specified for the MTOMCALLBACK-type argument of the second parameter, API is set to synchronous transmission mode.
  - When any value other than "NULL" is specified for the MTOMCALLBACK-type argument of the second parameter, the API system is set to the asynchronous transmission mode, and it is judged as the callback function to perform the processing.

Procedure for Synchronous Transmission







# Canceling Asynchronous Transmission

To cancel the API's processing during asynchronous transmission, the following two methods are available:

Return "FALSE"

The Memory Link API calls the callback function at the end of the current processing session. If the callback function returns FALSE in this status, the Memory Link API cancels subsequent processing safely.

Call "CancelMtoM()"

After canceling subsequent processing, the Memory Link API calls the callback function with the "MtoM\_CANCEL" code. In this status, the socket is unstable, and the API user must then call the FreeMtoMSocket() function to free the socket. To continue communication, use another socket. This procedure is used for forced-termination of the communication application.

# Callback Function for Asynchronous Transmission

To perform asynchronous transmission, API users must prepare the callback function to learn that the processing of asynchronous transmission has been completed.

The type of the callback function is shown below.

#### Syntax

MTOMCALLBACK FinisheMtoM(LPMtoMSOCK pMSock,int iMtoMCode)

Argument

LPMtoMSOCK pMSockSocket handle used for processing

int iMtoMCode Processing result MTOM\_OK : Processing has been normally completed. MTOM\_CONTINUE : Processing is in progress. Other : Processing has been canceled due to an error.

NOTE

• The API specifies the MTOM\_CONTINUE code for the iMtoMcode parameter at the end of the current processing, and calls the callback function.

### 12.1.2 Socket Members dwUser1 and dwUser2

The API system does not re-write "dwUser1" or "dwUser2, but the API users can freely use them. Normally, an identifier is used for each socket.

#### Example

If you design the "C++" class that supports the memory link socket, this class can be used with a callback function when the API user calls the CreateMtoMSocket() function with the constructor of this class, creates a socket, and sets up the pointer of this class to "dwUser1" of the socket.

#### Example of Operation

- (1) Set up "this" pointer of the class to "dwUser1" using the constructor of this class.
- (2) Register the function (global and static function) to be called back first when the API system informs of any event using the SetMtoMEvent CallBack() function.
- (3) If any event occurs, the function registered by the SetMtoMEventCallBack() function (EventFUncJump() in this example) will be called back.
- (4) The class pointer is extracted from "dwUser 1" of the EventFuncJump() function, as if the API system had called back the OnEventFunc() function.
- (5) Normally, you can declare the OnEventFunc() function as a virtual function and override it for convenient use.

class CMtoMSock { public: LPMtoMSOCK m\_pMSock ;

#### CMtoMSock();

~CMtoMSock();

```
//If you need event information from the API system, override this member.
```

```
virtual void OnEventFunc(int iCode,DWORD dwParam1,DWORD dwParam2){};//(5)
```

};

//Function to be called back when an event occurs

(3)

void CALLBACK EventFuncJump

(LPMtoMSOCK pMSock,int iCode,DWORD dwParam1,DWORD dwpara)

{

CMSock\* pCMSock ;

pCMSock = (CMSock\*)pMSock->swUser1;

pCMSock->OnEventFunc(iCode,dwParam1,dwParam2) ;//}(4)

}

```
CMSock::CMSock(DWORD dwProtocolType)
{
    if( m_pMSock = ::CreateMtoMSocket(dwProtocolType) ){
        m_pMSock->dwUser1 = (DWORD )this ; // (1)
        ::SetMtoMEventCallBack(m_pMSock,EventFuncJump) ;// (2)
    }
}
```

# 12.1.3 Transmission Methods (Transaction Types)

This Ethernet protocol supports the follwing four transmission methods (transaction types):

1:1 Transmission

The API system communicates with one Display, ensuring the reliability of the communication result. The internal TCP/IP protocol is used.

The basic procedure for using this transaction type is as follows:

- Create a socket using the CreateMtoMSocket() function.
   (When a socket is created, this transaction type is selected as the default setting.)
- (2) Open a connection using the OpenMtoMLAN() function.
- (3) Perform transmission using the MtoMESC\_\*() function.
- (4) Close the connection using the CloseMToMLAN() function.
- (5) Free the socket using the FreeMtoMSocket() function.

### Transmission to Unspecified Number of Nodes

The API system communicates with an unspecified number of nodes without checking the response. Therefore, the reliability of the communication results cannot be ensured. Since this transmission method does not consider the processing speed of the destination nodes, transmission data may overflow during continuous transmission.

The UDP/IP broadcast protocol is used. The desired broadcast Net ID (dwNetID), specified in the network information area, is used as the broadcast destination Net ID.

The basic procedure for using this transaction type is as follows:

- $(1) \ Create \ a \ socket \ using \ the \ CreateMtoMSocket() \ function.$
- (2) Set up the transaction type by specifying "Transmission to Unspecified Number of Nodes" (B\_dwTransactionType\_BroadCast) for the SetTransactionType() function.
- (3) Open a connection using the OpenMtoMLAN() function. Specify NULL for the destination node IP address.
- (4) Perform transmission using the MtoMESC\_\*() function.
- (5) Close the connection using the CloseMToMLAN() function.
- (6) Free the socket using the FreeMtoMSocket() function.

### Transmission to Specified Node

The API system communicates with a specified node (that has been selected as the processing target in the network information area).

Only a response from the node that has been specified as the processing target at the head of the network information area is treated as effective. In other words, the first node is used as the representative of all nodes in the network. This transmission method is used to send a displaying command to several nodes.

If only one node has been specified in the network information area, the normal UDP/IP protocol (not for broadcast) is used. If several nodes have been specified, the UDP/IP broadcast protocol is used.

The basic procedure for using this transaction type is as follows:

- (1) Create a socket using the CreateMtoMSocket() function.
- (2) Set up the transaction type by specifying "Transmission to Unspecified Number of Nodes" (B\_dwTransactionType\_Specifict) for the SetTransactionType() function.
- (3) Specify the target network Net ID as the broadcast target Net ID (dwNetID) in the broadcast network information (pGPNetWORkData) area.
- (4) Specify the destination node in the network information area.

If the destination node is clearly known, call the MtoM\_ResizeGPNetWORkData() function to change the network information size, and specify the destination node IP address and enter B\_dwNodeStatus\_Find as the dwnodeStatus parameter for the node record of the network information area so that the node record becomes effective.

If the destination node is not clearly known, call the MtoMFS\_FindNode function to search for the nodes participating in the network automatically. The search result will be added to the network information

**NOTE** • During this transmission mode, the node record specified at the head of the network information area indicates the node that represents all nodes in this network.

- (5) Perform transmission using the MtoMESC\_\*() function.
- (6) Close the connection using the CloseMToMLAN() function.
- (7) Free the socket using the FreeMtoMSocket() function.

### Transmission to Specified Node (checking the processing status of each node)

The API system communicates with a specified node (that has been selected as the processing target in the network information area).

After a processing command is transmitted, only a response from the node that has been specified as a processing target at the head of the network information area is treated as effective. This transmission method is different from that described in the previous page, since the processing status of each node is checked.

If only one node has been specified in the network information area, the normal UDP/IP protocol (not for broadcast) is used. If several nodes have been specified, the UDP/IP broadcast protocol is used.

- (1) Create a socket using the CreateMtoMSocket() function.
- (2) Set up the transaction type by specifying "Transmission to Unspecified Number of Nodes" (B\_dwTransactionType\_Specifict) for the SetTransactionType() function.
- (3) Open a connection using the OpenMtoMLAN() function. Specify NULL for the destination node IP address.
- (4) Specify the destination node in the network information area.

If the destination node is clearly known, call the MtoM\_ResizeGPNetWORkData() function to change the network information size, and specify the destination node IP address and enter B\_dwNodeStatus\_Find as the dwnodeStatus parameter for the node record of the network information area so that the node record becomes effective.

If the destination node is not clearly known, call the MtoMFS\_FindNode function to search for the nodes participating in the network automatically. The search result will be added to the network information area.

**NOTE** • During this transmission mode, the node record specified at the head of the network information area indicates the node that represents all nodes in this network.

- (5) Specify TRUE for the (dwCheckButtom) parameter so that this node becomes effective as the processing target in the node record of the network information area.
- (6) Perform transmission using the MtoMESC\_\*() function.
- (7) Check the node status of each node record to verify that the processing of each node has been normally completed.

When the node status is specified as B\_dwNodeStatus\_Nothing, this node record can be ignored since it is empty.

B_dwNodeStatus_Find	:Processing has been normally completed.
B_dwNodeStatus_NotFind	:Processing has been abnormally completed.
B_dwNodeStatus_NonAction	:This node is not the processing target.
	This means that TRUE has not been specified for dwCheckButtom in step 5.

(8) If you attempt to retry after checking the dwNodeStatus value, enter TRUE in the dwCheckButtom parameter of the retry nodes only. With other nodes, enter FALSE in this parameter, and perform step 5 and the subsequent steps again. (9) Close the connection using the CloseMToMLAN() function.

(10)Free the socket using the FreeMtoMSocket() function.

# 12.2 Basic Commands

This section describes the basic commands used for the Memory Link API system.

#### Basic Command List

Command	Action
CreateMtoMSocket	Creates a memory link socket of a specified protocol type.
OpenMtoMLAN	Opens a connection with the node specified in the memory link LAN.
CloseMtoM	Closes the connection with the destination node.
FreeMtoMSocket	Frees the socket.
SetMtoMEventCallBack	Registers the function to accept an event when any event occurs in the Memory link API system.
CancelMtoM	Cancels the currently processed asynchronous transmission.
MtoM_ResizeGPNetWorkData	Changes the size of the network information of the socket.
SetTransitionType	Specifies the transmission method (transaction type).
GetTransitionType	Acquires the currently specified transmission method (transaction type).
MtoMGetLastError	Acquires the details of an error, when any error occurs.

# 12.2.1 Creating Specified Protocol's Memory Link Socket

To create a memory link socket of a specified protocol type, use the following command: This API system secures the resources of the socket.

# Syntax

LPMtoMSOCK WINAPI CreateMtoMSocket(DWORD dwProtocolType)

### Return Value

Other :Handle of the created socket

NULL :Failed to create a socket

# Argument

DWORD dwProtocolType Protocol type to be used

B\_ProtocolType\_SIO:Memory link SIOB\_ProtocolType\_LAN:Memory link LAN

# 12.2.2 Opening Connection with Node Specified in Memory Link LAN

To open a connection with the node specified in the memory link LAN, use the following command:

### Syntax

int WINAPI OpenMtoMLAN(LPMtoMSOCK pMSock,MTOMCALLBACK pfFinish, LPCSTR szIPAddress)

# Return Value

When pfFinish is NULL

- 00 :Normal termination
- Other :Error code

When pfFinish is any value other than NULL

 MTOM\_CONTINUE
 :The system is normally informed of the processing request. Completion of the processing is informed when pfFinish is called back

 Other
 :Error code

LPMtoMSOCK pMSock	Handle of memory link socket			
MTOMCALLBACK pfFinish	NULL :	This API system will not be completed until the		
		specified processing is completed.(Synchronous		
		Transmission)		
		After the specified processing is completed, the		
		API system will return with the processing result		
		code.		
	Other than NULL :	Pointer to the function will be called back after		
		completion of processing. When this parameter is		
		specified, this API system will return with		
		MTOM_CONTINUE immediately after the		
		processing is requested. (Asynchronous		
		Transmission)		
		After the system completes the processing, the		
		specified callback function is called with the		
		corresponding socket handle and processing result		
		code.		
LPCSTR szIPAddress	IP address of destination node (Display)			
	For 1:n communication, specify NULL.			

# NOTE

•	The IP address can be specified with the following two methods:
	The fit address can be specified with the following two includes.
	Separating an IP address with dots:
	Example) szipaddress="11.22.33.44";
	Specifying a node name for an IP address
	Example) szipaddress="GP1";
	To use this method, you must prepare the HOSTS file that describes the IP addresses
	corresponding to the node names specified in the Windows folder.
	Example) Contents of C:\Windows \ HOSTSC
	11.22.33.44 GP1

# 12.2.3 Closing TCP Connection with Destination Node

To close the TCP connection with the destination node, use the following command:

# Syntax

int WINAPI CloseMtoM(LPMtoMSOCK pMSock,MTOMCALLBACK pfFinish)

#### Return Value

- Other : Handle of the created socket
- NULL : Failed to create a socket

LPMtoMSOCK pMSock	Handle of memory link socket	
MTOMCALLBACK pfFinish	NULL:	This API system will not be completed until the
		specified processing is completed.(Synchronous
		Transmission)
		After the specified processing is completed, the API
		system will return with the processing result code.
	Other than NULL:	Pointer to the function will be called back after the
		completion of processing. When this parameter is
		specified, this API system will return with
		MTOM_CONTINUE immediately after the
		processing is requested. (Asynchronous
		Transmission)
		After the system completes the processing, the
		specified callback function is called with the
		corresponding socket handle and processing result
		code.

# 12.2.4 Freeing a Socket

To free a socket, use the following command:

# Syntax

int WINAPI FreeMtoMSoket(LPMtoMSOCK pMSock)

# Return Value

Other : Handle of the created socket

NULL : Failed to create a socket

# Argument

LPMtoMSOCK pMSock Handle of memory link socket

# 12.2.5 Registering a Function (Memory Link API System Event)

To register the function to accept an event when any event occurs in the Memory Link API system, use the following command:

# Syntax

int WINAPI SetMtoMEventCallBack(LPMtoMSOCK pMSock,MTOMEVENTBACK pfEventFunc)

#### Return Value

Other : Handle of the created socket NULL : Failed to create a socket

### Argument

LPMtoMSOCK pMSock	Handle of memory link socket
MTOMEVENTBACK pfEventFunc	Function to be called back when an event occurs.
	If NULL is specified, it will not be called back.

When any event occurs, the API system calls back the specified pfEventFunc with the socket, event code and information (2 packets of 32-bit data, max.). The function to be called back must have the following format:

During synchronous transmission, the system calls the registered callback function, at the end of the processing. During asynchronous transmission, however, the system calls the callback function specified when the processing is requested, instead of the callback function registered by this command.

#### MTOMEVENTBACK EventFunc

(LPMtoMSOCK pMtoMSOCK, int iMtoMCode, DWORD dwParam1, DWORD dwParam2);

LPMtoMSOCK pMtoMSOCK	Socket handle
int iMtoMCode	Even code
DWORD dwParam1	First information
DWORD dwParam2	Second information

The following events can be called back:

Event code	First information	Second information	Contents of event
MTOM_EVENT_TOUCH	T-Tag code	Meaningless	Touch panel has been pressed.
MTOM_EVENT_CLOSED	Meaningless	Meaningless	Connection has been closed.
MTOM_CONTINUE	Meaningless	Meaningless	Synchronous transmission

# 12.2.6 Canceling an Asynchronous Transmission (Current)

To cancel the currently-processed asynchronous transmission, use the following command:

### Syntax

int WINAPI CancelMtoM(LPMtoMSOCK pMSock)

### Return Value

Other :Handle of the created socket

NULL :Failed to create a socket

### Argument

LPMtoMSOCK pMSock Handle of memory link socket

NOTE

٠

After calling this API command, the socket becomes unstable. Be sure to call the FreeMtoMSocket() function to free the socket.

# 12.2.7 Changing Network Information Size

To change the size of the network information, use the following command:

If there are a small number of node records to be managed, this API command enables the number of node records to be increased or reduced. Calling this API command changes the value of pGPNetWorkData that indicates the pMSock network information area.

# Syntax

int WINAPI MtoM\_ResizeGPNetWorkData(LPMtoMSOCK pMSock,DWORD dwNodeCounter)

### Return Value

0	: The network information size has been normally changed.	
Other	: The network information size cannot be changed due to insufficient memory	capacity

LPMtoMSOCK pMSock	Handle of memory link socket
DWORD dwNodeCounter	Desired number of node records

# 12.2.8 Transmission Method Setup (Transaction Type)

To set up the transmission method (transaction type), use the following commands:

### Syntax

DWORD WINAPI SetTransctionType(LPMtoMSOCK pMSock,DWORD dwTranscitonType)

#### Return Value

Setting of the transaction type yet to be changed

LPMtoMSOCK pMSock	Handle of memory link socket		
DWORD dwTranscitonType	Transaction type to be changed		
B_dwTransctionType_Only1:			
	Transmission to only one specified node for which connection has been		
	opened. (Default setting)		
	(The TCP/IP protocol is used.)		
B_dwTransctionType_BroadC	'ast :		
	Transmission to unspecified number of nodes (without response check)		
	Since this transmission method does not consider the processing speed of the		
	destination nodes, transmission data may overflow during continuous		
	transmission.		
	(The UDP/IP broadcast protocol is used.)		
B_dwTransctionType_Specific	2:		
	Transmission to the specified node (that has been selected as the processing		
	target in the network information area)		
	Only a response from the node that has been specified as a processing target at		
	the head of the network information area is treated as effective. In other		
	words, the first node is used as the representative of all nodes in the network.		
	This transmission method is used to send a displaying command to several		
	nodes.		
	(The UDP/IP broadcast protocol is used.)		
B_dwTransctionType_Specific	cCheck :		
	Transmission to the specified node (that has been selected as the processing		
	target in the network information area)		
	Only the response from the node that has been specified as a processing target		
	at the head of the network information area is treated as effective. This		
	transmission method is different from the method specified by		
	B_dwTransctionType_Specific, since the processing result of each node is		
	checked		
	This transmission method is used to closely check the processing results of		
	several nodes (e.g. for file transfer processing).		
	(The UDP/IP broadcast protocol is used.)		

# 12.2.9 Acquiring the Current Transmission Method

To acquire the currently-specified transmission method (transaction type), use the following commands:

# Syntax

DWORD WINAPI GetTranscitonType(LPMtoMSOCK pMSock)

### Return Value

Setting of the currently-specified transmission method (transaction type) For details, refer to the dwTransctionType parameter of the SetTransctionType() function.

### Argument

LPMtoMSOCK pMSockHandle of memory link socket

# 12.2.10 Acquiring Current Error Details

When an error occurs, use the following commands to acquire details of the error.

#### Syntax

DWORD WINAPI MtoMGetLastError(LPMtoMSOCK pMSock)

#### Return Value

If an error occurs when the Memory Link API system is used, details of the error are returned.

#### Argument

LPMtoMSOCK pMSockHandle of memory link socket

#### Description

Generally, details of the error are classified into two types: error response from the Display, and error due to line trouble.

If the former type of error occurs, a value of 9999 or less will be returned. However, "0" indicates that the processing has been normally completed.

If the latter type of error occurs, a value of 10000 or more will be returned. Specifically, since the Memory Link API internally uses Winsock of Microsoft Visual C++, the error code becomes the return value.

#### Display-related error codes

Cf. GP-Pro EX Reference Manual

Winsock-related error codes

Code	Error	Code	Error
10004	WSAEINTR	10053	WSAECONNABORTED
10009	WSAEBADF	10054	WSAECONNRESET
10013	WSAEACCES	10055	WSAENOBUFS
10014	WSAEFAULT	10056	WSAEISCONN
10022	WSAEINVAL	10057	WSAENOTCONN
10024	WSAEMFILE	10058	WSAESHUTDOWN
10035	WSAEWOULDBLOCK	10059	WSAETOOMANYREFS
10036	WSAEINPROGRESS	10060	WSAETIMEDOUT
10037	WSAEALREADY	10061	WSAECONNREFUSED
10038	WSAENOTSOCK	10062	WSAELOOP
10039	WSAEDESTADDRREQ	10063	WSAENAMETOOLONG

Code	Error	Code	Error
10040	WSAEMSGSIZE	10064	WSAEHOSTDOWN
10041	WSAEPROTOTYPE	10065	WSAEHOSTUNREACH
10042	WSAENOPROTYPE	10066	WSAENOTEMPTY
10043	WSAEPROTONOSUPPORT	10067	WSAEPROCLIM
10044	WSAESOCKTNOSUPPORT	10068	WSAEUSERS
10045	WSAEOPNOTSUPP	10069	WSAEDQUOT
10046	WSAEPFNOSUPPORT	10070	WSAESTALE
10047	WSAEAFNOSUPPORT	10071	WSAEREMOTE
10048	WSAEADDRINUSE	10091	WSASYSNOTREADY
10049	WSAEADDRNOTAVAIL	10092	WSAVERNOTSUPPROTED
10050	WSAENETDOWN	10093	WSANOTINITIALISED
10051	WSAENETUNREACH	10101	WSAEDISCON
10052	WSAENETRESET	-	-

### 12.3 Display Mode Commands

This section describes the displaying commands used for the Memory Link API system.

Command	Action	
MtoMESC_W	Writes data into the System Area.	
MtoMESC_R	Reads data from the System Area.	
MtoMESC_I	Inquires if the touch panel has been pressed.	
MtoMESC_SetContrast	Sets brightness/contrast.	
MtoMESC_GetContrast	Acquires the brightness/contrast setting.	
MtoMESC_M	Display the banner message.	
MtoMESC_m	Stop the banner message display.	

# Displaying Command List

### 12.3.1 Writing Data To System Area

To write data to the System Area, use the following command:

#### Syntax

#### int WINAPI MtoMESC\_W

(LPMtoMSOCK pMSock,MTOMCALLBACK pfFinish,WORD wAddress,INT iDataCount,WORD\* pwData)

#### Return Value

When pfFinish is NULL

00 : Normal termination

Other : Error code

When pfFinish is any value other than NULL

 MTOM\_CONTINUE:
 The system is normally informed of the processing request. Completion of the processing is communicated when pfFinish is called back.

 Other:
 Error code

LPMtoMSOCK pMSock		Handle of memory link socket
MTOMCALLBACK pfFinish	NULL:	This API system will not be completed until the specified
		processing is completed.
		(Synchronous Transmission)
		After the specified processing is completed, the API
		system will return with the processing result code.
	Other than NULL:	Pointer to the function will be called back after
		completion of processing. When this parameter is

	specified, this API system will return with
	MTOM_CONTINUE immediately after the processing is
	requested. (Asynchronous Transmission)
	After the system completes the processing, the specified
	callback function is called with the corresponding socket
	handle and processing result code.
WORD wAddress	Specifies the address of the System Area to write data.
	0000h to 0FFFh
INT iDataCount	Specifies the number of data packets to be written.
	0001h to 0200h(1 to 512)
WORD* pwData	Data to be written

# 12.3.2 Reading Data From System Area

To read data from the System Area, use the following command:

#### Syntax

#### int WINAPI MtoMESC\_R

(LPMtoMSOCK pMSock,MTOMCALLBACK pfFinish,WORD wAddress,INT iDataCount,WORD pwoData)

#### Return Value

When pfFinish is NULL

00 : Normal termination

Other : Error code

When pfFinish is any value other than NULL

 MTOM\_CONTINUE
 :The system is informed of the processing request.

 Completion of the processing is communicated when pfFinish is called back.

 Other
 :Error code

#### Argument

LPMtoMSOCK pMSock		Handle of memory link socket
MTOMCALLBACK pfFinish	NULL :	This API system will not be completed until the specified
		processing is completed.
		(Synchronous Transmission)
		After the specified processing is completed, the API
		system will return with the processingresult code.
	Other than NULL	: Pointer to the function will be called back after
		completion of processing. When this parameter is
		specified, this API system will return with
		MTOM_CONTINUE immediately after the processing is
		requested. (Asynchronous Transmission)
		After the system completes the processing, the specified
		callback function is called with the corresponding socket
		handle and processing result code.
WORD wAddress	Specifies the addre	ess of the System Area to read the data.
	0000h to 0FFFh	
INT iDataCount	Specifies the num	ber of data packets to be read.
	0001h to 0200h(1	to 512)
WORD pwoData	Location to store 1	read data.

NOTE

• This API system does not check the buffer size specified by pwoData. The API users must prepare a sufficient buffer size.

# 12.3.3 Inquisition of Touch Panel Input

To inquire whether the touch panel has been pressed or not, use the following commands: After the processing of this API system is normally completed, check the pbHave value. If this area is TRUE, refer to the pdwCode value.

### Syntax

int WINAPI MtoMESC\_I

(LPMtoMSOCK pMSock,MTOMCALLBACK pfFinish,BOOL\* pbHave,DWORD \*pdwCode)

#### Return Value

When pfFinish is NULL

00 : Normal termination

Other : Error code

When pfFinish is any value other than NULL

 MTOM\_CONTINUE
 :The system is informed of the processing request. Completion of the processing is communicated when pfFinish is called back.

 Other
 :Error code

LPMtoMSOCK pMSock	Handle of memory	/ link socket
MTOMCALLBACK pfFinish	NULL:	This API system will not be completed until the specified
		processing is completed.
		(Synchronous Transmission)
		After the specified processing is completed, the API
		system will return with the processing result code.
	Other than NULL	Pointer to the function will be called back after
		completion of processing. When this parameter is
		specified, this API system will return with
		MTOM_CONTINUE immediately after the processing is
		requested. (Asynchronous Transmission)
		After the system completes the processing, the specified
		callback function is called with the corresponding socket
		handle and processing result code.
BOOL* pbHave	This area indicates	s whether the touch panel has been pressed or not.
	If this area is "TR	UE" after the processing of this API system is completed,
	this means that the	e touch panel has been pressed, and the corresponding code
	is entered for the	pdwCode.
DWORD *pdwCode	When the touch pa	anel has been pressed, the corresponding code is entered in
	this area.	

# 12.3.4 Brightness/Contrast Setup

To set up the brightness/contrast, use the following commands:

# Syntax

DWORD WINAPI SetContrase (LPMtoMSOCK pMSock,MTOMCALLBACK pfFinish, DWORD dwContrast, DWORD dwLight)

#### Return Value

Setting of the brightness/contrast to be changed

#### Argument

LPMtoMSOCK pMSock	Handle of memory	/ link socket
MTOMCALLBACK pfFinish	NULL:	This API system will not be completed until the specified
		processing is completed.
		(Synchronous Transmission)
		After the specified processing is completed, the API
		system will return with the processing result code.
	Other than NULL:	Pointer to the function will be called back after
		completion of processing. When this parameter is
		specified, this API system will return with
		MTOM_CONTINUE immediately after the processing is
		requested. (Asynchronous Transmission)
		After the system completes the processing, the specified
		callback function is called with the corresponding socket
		handle and processing result code.
dwContrast	Contrast adjustmen	nt
	(0000h to 0007h)	D: Bright to 7: Dark
	"FFFFFFFFh" ind	icates "No setting"
	(this model disable	es construct adjustment).
dwLight	Brightness adjustn	nent
	(0000h to 0007h)	D: Bright to 7: Dark
	"FFFFFFFFh" ind	icates "No setting"
	(this model disable	es brightness adjustment).

NOTE

• For details about the range of Brightness/Contrast, refer to the Brightness/Contrast Table. <sup>™</sup> ■ Brightness/Contrast Table" (page 175)

# 12.3.5 Acquiring Brightness/Contrast

To acquire the current setting of brightness/contrast, use the following command:

# Syntax

DWORD WINAPI GetContrase

(LPMtoMSOCK pMSock,MTOMCALLBACK pfFinish, DWORD\*dwContrast, DWORD \*dwLight)

#### Return Value

Current brightness/contrast setting

#### Argument

LPMtoMSOCK pMSock	Handle of memory link socket	
MTOMCALLBACK pfFinish	NULL:	This API system will not be completed until the specified
		processing is completed.
		(Synchronous Transmission)
		After the specified processing is completed, the API
		system will return with the processing result code.
	Other than NULL:	Pointer to the function will be called back after
		completion of processing. When this parameter is
		specified, this API system will return with
		MTOM_CONTINUE immediately after the processing is
		requested. (Asynchronous Transmission)
		After the system completes the processing, the specified
		callback function is called with the corresponding socket
		handle and processing result code.
dwContrast	Current value of co	ontrast
	(0000h to 0007h)	D: Bright to 7: Dark
	"FFFFFFFFh" ind	icates "No setting"
	(contrast cannot be	e adjusted with this model).
dwLight	Current value of brightness	
	(0000h to 0007h)	D: Bright to 7: Dark
	"FFFFFFFFh" ind	icates "No setting"
	(brightness cannot	be adjusted with this model).

NOTE

• For details about the range of Brightness/Contrast, refer to the Brightness/Contrast Table. <sup>™</sup> ■ Brightness/Contrast Table" (page 175)

# 12.3.6 Displaying a Banner Message

Banner message display commands are as follows.

### Syntax

int WINAPI MtoMESC\_M

(LPMtoMSOCK pMSock,MTOMCALLBACK pfFinish, GPCOLOR cDisplayColor, GPCOLOR cBackColor, BYTE bFontType, WORD wLanguage, BYTE bPriority, WCHAR\* szString)

#### Return Value

When pfFinish is NULL

00 : Normal termination

Other : Error code

When pfFinish is any value other than NULL

MTOM_CONTINUE	:The system is informed of the processing request. Completion of the processing
	is communicated when pfFinish is called back.
Other	:Error code

LPMtoMSOCK pMSock	Handle of memory	v link socket	
MTOMCALLBACK pfFinish	NULL:	This API system will not be completed until the specified	
		processing is completed.	
		(Synchronous Transmission)	
		After the specified processing is completed, the API	
		system will return with the processing result code.	
	Other than NULL:	Pointer to the function will be called back after	
		completion of processing. When this parameter is	
		specified, this API system will return with	
		MTOM_CONTINUE immediately after the processing is	
		requested. (Asynchronous Transmission)	
		After the system completes the processing, the specified	
		callback function is called with the corresponding socket	
		handle and processing result code.	
GPCOLOR cDisplayColor	Character color and b	linking setting	
	(00h to FFh)		
GPCOLOR cBackColor	Background color and	l blinking setting	
	(00h to FFh)		
NOTE • Refer to the list for <sup>™</sup> ■ Color Co	• Refer to the list for color codes of character color, background color.		

BYTE bFontType	Font type setting
WORD wLanguage	(00h to 01h)
	(0: Standard font, 1: Stroke font)
	Language code
	(0000h to 0006h)
	(0000H: Europa, 0001H: Korea, 0002H: Taiwan, 0003H: China, 0004H: Japan,
BYTE bPriority WCHAR* szString	0005H: Cyrillic (only stroke font), 0006H: Thai (only stroke font))
	Priority setting
	(00h to 01h)
	(0: Not interrupt banner message, 1: Interrupt banner message)
	Displayed character string: UNICODE, NULL: terminated
	Half size: 160 characters, Full size: 80 characters

# 12.3.7 Stop a Banner Message

Banner message stop commands are as follows.

# Syntax

int WINAPI MtoMESC\_m (LPMtoMSOCK pMSock,MTOMCALLBACK pfFinish)

### Return Value

When pfFinish is NULL

00 : Normal termination

Other : Error code

When pfFinish is any value other than NULL

MTOM_CONTINUE	:The system is informed of the processing request. Completion of the processing
	is communicated when pfFinish is called back.
Other	:Error code

LPMtoMSOCK pMSock	Handle of memory	link socket
MTOMCALLBACK pfFinish	NULL:	This API system will not be completed until the specified
		processing is completed.
		(Synchronous Transmission)
		After the specified processing is completed, the API
		system will return with the processing result code.
	Other than NULL:	Pointer to the function will be called back after
		completion of processing. When this parameter is
		specified, this API system will return with
		MTOM_CONTINUE immediately after the processing is
		requested. (Asynchronous Transmission)
		After the system completes the processing, the specified
		callback function is called with the corresponding socket
		handle and processing result code.

# 12.3.8 API Return Value Error Code List

	Code	Description
MTOM_OK	00	Processing has been normally completed.
MTOM_CONTINUE	01	Processing is in progress.
MTOM_USERS_STOPED	03	The processing has been canceled by a user application. (The MtoMStop() function was called, but the callback function returned FALSE.)
MTOM_EVENT_TOUCH	40	The touch panel has been pressed. (It is not the API system's return value, but the callback function is informed of this code when an event registered by the SetMtoMEventCallBack() function occurs.)
MTOM_EVENT_CLOSED	41	Connection has been closed.
MTOM_ERROR	80	Error response from the Display unit.
MTOM_ERROR_INVALID	81	An API parameter error occurred, or the API was illegally called.
MTOM_ERROR_LAN	82	An error occurred on the line. (Winstock returned an error code.)
MTOM_ERROR_TOUT_RES	83	Response timeout error.
MTOM_ERROR_TOUT_CHAR	84	Character-to-character transmission timeout error. (Transmission of data frames from Display was interrupted.)
MTOM_ERROR_NAK	85	Display returned NAK.



• When the system has received an error response from the Display unit, call the MtoMGetLastError() function to acquire details of the error.
# 13 Sample Program (Ethernet Communication)

This chapter describes the sample program (AGPM.EXE) that uses the Memory Link LAN API included with the Display Ethernet I/F Unit. The AGPM.EXE program is the sample program that enables the memory on the Display to be accessed from the Host on a real time basis through 1:1 or 1:n (multi-link) connection between the Display unit(s) and Windows Host.

### 13.1 Memory Link LAN API Sample Program

#### Start-up Environments

- (1) The AGPM.EXE program runs on the Windows 98, Windows 2000, Windows XP operating system.
- (2) Since the AGPM.EXE program uses the MtoMLAN.DLL file, copy the MtoMLAN.DLL file into a Windows folder.
- (3) The Memory Link LAN uses TCP/IP protocol; so, you must first install the TCP/IP protocol. (Install Microsoft TCP/IP by selecting [Start] - [Control Panel] - [Network].)

#### Development Environment

The AGPM.EXE program has been developed for use in the following environments:

The sample program's source code is contained on the GP-Pro EX CD-ROM.

When the source code found in the CD-ROM's [MTOMLAN] folder is compiled in the following environment, the file [AGPM.EXE] is created.

Compiler : Microsoft Visual C++ Ver 6.0

OS : Microsoft Windows 98

#### How to Access Memory Link API

To access the Memory Link API, the AGPM.EXE program defines and uses Class CMSock. Class CMSock fully includes the Memory Link API as "One Socket - One Object".

The AGPM.EXE program provides a callback from the Memory Link API by overriding the method of Class CMSock.

#### Derivation of CMSock

The AGPM.EXE program uses two classes derived from CMSock: One is inherited by Class CGpMApp for 1:n communication and node search, and another is inherited by Class CGpMDoc for 1:1 communication.

CGpMApp is the application class of AGPM, and CGpMDoc is the document class of AGPM. In other words, the application class manages 1:n communication, and the document class manages 1:1 communication.

<sup>•</sup> If "DLL: LAN initialize error" appears at the start-up of the AGPM.EXE program and the program cannot be started, the TCP/IP settings may be incorrect. Check the TCP/IP settings.

## Class CGpMDOC

This class is the core of the AGPM.Exe program. It is used for document data management, including an array of the contents objects. Also, this class manages the connection with a Display unit in the 1:1 communication mode.

## Class CGpMView

This class displays the related contents object of the CGpMDoc class in the window.

## MtoMAPI.H and MtoMLAN.LI

The AGPM.EXE program includes the MtoMAPI.H file in the external device.

The MtoMAPI.H file is stored in the [MtoMLAN] folder. Copy this file into an appropriate folder, and specify the location by changing the #include statement of defsfile.h.

The AGPM.EXE program includes the MtoMLAN.LIB file to call the MtoMLAN.DLL program. Copy this file into an appropriate folder, and specify the location by selecting [Setup] - [Linker] - [Object/Library Module].