OMRON Corporation

CS/CJ/NJ Series EtherNet/IP Driver

1	System Configuration	
2	External Device Selection	5
3	Communication Settings	6
4	Setup Items	12
5	Supported Device Addresses	17
6	Device Code and Address Code	41
7	Error Messages	

Introduction

This manual describes how to connect the Display and the External Device (target PLC).

In this manual, the connection procedure is described in the sections identified below:



1 System Configuration

The following section shows system configurations for connecting Omron Corporation External Devices and the Display.

Series	CPU	Link I/F	SIO Type	Setting Example
CS1 Series	CS1H-CPU67H CS1H-CPU66H CS1H-CPU65H CS1H-CPU63H CS1H-CPU67 CS1H-CPU66 CS1H-CPU65 CS1H-CPU65 CS1H-CPU63 CS1H-CPU63 CS1H-CPU67-V1 CS1H-CPU67-V1 CS1H-CPU65-V1 CS1H-CPU65-V1 CS1H-CPU63-V1 CS1G-CPU45H CS1G-CPU45H CS1G-CPU43H CS1G-CPU42H CS1G-CPU42 CS1G-CPU42 CS1G-CPU42 CS1G-CPU42-V1 CS1G-CPU43-V1 CS1G-CPU43-V1 CS1G-CPU43-V1 CS1G-CPU43-V1 CS1G-CPU42-V1	CS1W-EIP21	Ethernet (TCP)	Setting Example 1 (page 6)
CJ2 Series	CJ2H-CPU68-EIP CJ2H-CPU67-EIP CJ2H-CPU66-EIP CJ2H-CPU65-EIP CJ2H-CPU64-EIP CJ2M-CPU35 CJ2M-CPU34 CJ2M-CPU33 CJ2M-CPU32 CJ2M-CPU31	EtherNet/IP Port on CPU Unit	Ethernet (TCP)	Setting Example 2 (page 8)
NJ Series	NJ501-1300 NJ501-1400 NJ501-1500	EtherNet/IP Port on CPU Unit	Ethernet (TCP)	Setting Example 3 (page 10)

NOTE

• This driver does not support GP-4*01TM.

Connection Configuration

• 1:1 Connection



• 1:n Connection



Maximum number of External Devices: 16

n:1 Connection

٠





n:m Connection





Maximum number of External Devices: 16

2 External Device Selection

Select the External Device to be connected to the Display.

💰 Welcome to GP-Pro EX			×
67-7ro E X	Device/PLC Number of Devices/PLCs		
		Device/PLC 1	
	Manufacturer	OMRON Corporation	•
	Series	CS/CJ/NJ Series EtherNet/IP	-
	Port	Ethernet (TCP)	-
		Refer to the manual of this Device/PLC	
		Recent Device/PLC	
	4		
	Use System	,Area <u>Device Ir</u>	formation
	Back (B	3) Communication Settings New Logic New Screen C	ancel

Setup Items	Setup Description	
Number of Devices/ PLCs	Enter an integer from 1 to 4 to define the number of Devices/PLCs to connect to the display.	
Manufacturer	Select the manufacturer of the External Device to be connected. Select "OMRON Corporation".	
Series	Select the External Device model (series) and the connection method. Select "CS/CJ/NJ Series EtherNet/IP". In System configuration, make sure the External Device you are connecting is supported by "CS/CJ/NJ Series EtherNet/IP". " 1 System Configuration" (page 3)	
Port	Select the Display port to connect to the External Device.	
Use System Area	Check this option to synchronize the system data area of the Display and the device (memory) of the External Device. When synchronized, you can use the External Device's ladder program to switch the display or display the window on the Display. Cf. GP-Pro EX Reference Manual "LS Area (Direct Access Method Area)" This feature can also be set in GP-Pro EX or in the Display's offline mode. Cf. GP-Pro EX Reference Manual "System Settings [Display Unit] - [System Area] Settings Guide" Cf. Maintenance/Troubleshooting Guide "Main Unit - System Area Settings"	

3 Communication Settings

This section provides examples of communication settings recommended by Pro-face for the Display and the External Device.

3.1 Setting Example 1

■ GP-Pro EX Settings

Communication Settings

To display the setup screen, from the [System Settings] workspace, select [Device/PLC].

Device/PLC 1		
Summary		Change Device/PLC
Manufacturer OMRC	IN Corporation Series CS/CJ/NJ Series EtherNet/IP	Port Ethernet (TCP)
Text Data Mode	1 Change	
Communication Settings		
Port No.	1024 🚔 🗹 Auto	
Timeout	3 * (sec)	
Retry	0 *	
Wait To Send	0 (ms) Default	
Device-Specific Settings		
Allowable Number of Devices/PLCs	Add Device	
No. Device Name	Settings	Add Indirect Device
👗 1 PLC1	Series=CS1 Series,IP Address=192.168.000.001,EIP L	

Device Settings

To display the [Individual Device Settings] dialog box, from [Device-Specific Settings] in the [Device/PLC] window, select the external device and click [Settings]

💣 Individual Dev	vice Settings 🛛 🗙		
PLC1			
Series CS1 Se	eries 💌		
If you change the se settings.	eries, please reconfirm all address		
IP Address	192. 168. 0. 1		
EIP Unit Version	2.0 🔽		
Tag Data	Unused Tag Data 🗾 💌		
	Import New Edit		
🔽 Automatic match	in tag address		
Collation error dis	played when tag is used		
Output tag collation	Output tag collation error		
Do not output			
	Default		
	OK (<u>O)</u> Cancel		

Notes

- Check with a network administrator about IP address. Do not duplicate the IP address on the same network.
- Set IP address on the External Device for IP address in Individual Device Settings.
- You need to set IP address on the Display in the offline mode of the Display.

External Device Settings

Use the ladder software (CX-Programmer) to configure communication settings for the External Device. Refer to your External Device manual for details.

- **1** Start up the ladder software.
- 2 From [PLC] menu, select [Edit] [I/O Table and Unit Setup] to display [PLC I/O Table] dialog box.
- **3** Right-click the Ethernet/IP port to be used.
- 4 Select [Unit Setup] and display the [Edit Parameters] dialog box.
- 5 Configure setup items in the [TCP/IP] tab as follows.

Setup Items	Setting Value
IP address	192.168.0.1
Subnet mask	255.255.255.0

- 6 Click [To PLC] and transfer the communication settings to the External Device.
- Notes
 - Check with a network administrator about IP address and subnet mask you want to use. Do not set the duplicate IP address.

3.2 Setting Example 2

GP-Pro EX Settings

Communication Settings

To display the setup screen, from the [System Settings] workspace, select [Device/PLC].

Device/PLC 1					
Summary					Change Device/PLC
Manufacturer OMRON Corpor	ation	Series	CS/CJ/NJ Series EtherNet/IP	Port	Ethernet (TCP)
Text Data Mode 1	<u>Jhange</u>				
Communication Settings					
Port No. 1024	🕂 🔽 Auto				
Timeout 3	÷ (sec)				
Retry 0					
Wait To Send 0	÷ (ms)	Defa	ult		
Device-Specific Settings					
Allowable Number of Devices/PLCs 16	Add Device				
No. Device Name	Settings			Ado Dev	l Indirect rice
👗 1 PLC1	Series=CJ2 Series	;,IP Addre:	ss=192.168.000.001,EIP U	200	+

Device Settings

To display the [Individual Device Settings] dialog box, from [Device-Specific Settings] in the [Device/PLC] window, select the external device and click [Settings]

💣 Individual De	vice Settings 🛛 🗙				
PLC1	PLC1				
Series CJ2 S	eries 💌				
If you change the s settings.	eries, please reconfirm all address				
IP Address	192. 168. 0. 1				
EIP Unit Version	2.0 💌				
Tag Data	Unused Tag Data 💌				
	Import New Edit				
🛛 🗹 Automatic match	in tag address				
Collation error displayed when tag is used					
Output tag collatio	n error				
Do not output	<u></u>				
	Default				
	OK (<u>O</u>) Cancel				

Notes

- Check with a network administrator about IP address. Do not duplicate the IP address on the same network.
- Set IP address on the External Device for IP address in Individual Device Settings.
- You need to set IP address on the Display in the offline mode of the Display.
- Refer to the following when using tag data.
- "5.3 CJ2 Series (Tag Specification)" (page 20)

External Device Settings

Use the ladder software (CX-Programmer) to configure communication settings for the External Device. Refer to your External Device manual for details.

- 1 Start up the ladder software.
- 2 From [PLC] menu, select [Edit] [I/O Table and Unit Setup] to display [PLC I/O Table] dialog box.
- **3** Right-click the Ethernet/IP port to be used.
- 4 Select [Unit Setup] and display the [Edit Parameters] dialog box.
- **5** Configure setup items in the [TCP/IP] tab as follow.

Setup Items	Setting Value
IP address	192.168.0.1
Subnet mask	255.255.255.0

6 Click [To PLC] and transfer the communication settings to the External Device.

Notes

• Check with a network administrator about IP address and subnet mask you want to use. Do not set the duplicate IP address.

3.3 Setting Example 3

GP-Pro EX Settings

Communication Settings

To display the setup screen, from the [System Settings] workspace, select [Device/PLC].

Device/PLC 1			
Summary			Change Device/PLC
Manufacturer OMRON Corporat	ion Series	CS/CJ/NJ Series EtherNet/IP	Port Ethernet (TCP)
Text Data Mode 1 <u>Ch</u>	ange		
Communication Settings			
Port No. 1024	🕂 🔽 Auto		
Timeout 3	(sec)		
Retry 0	-		
Wait To Send 0	🕂 (ms) 🛛 🖸	Default	
Device-Specific Settings			
Allowable Number of Devices/PLCs 16	Add Device		
No. Device Name	Settings		Add Indirect Device
👗 1 PLC1 📷	Series=NJ Series,IP Ad	dress=192.168.000.001,EIP Ur	

Device Settings

To display the [Individual Device Settings] dialog box, from [Device-Specific Settings] in the [Device/PLC] window, select the external device and click [Settings]

💰 Individual Devi	ce Settings 🛛 🗙			
PLC1				
Series NJ Se	ries 💌			
If you change the s settings.	eries, please reconfirm all address			
IP Address	192. 168. 0. 1			
EIP Unit Version	2.0 💌			
Tag Data	TagData01 💌			
	Import New New Edit			
🔽 Automatic match	in tag address			
Collation error displayed when tag is used				
Output tag collation	n error			
	Default			
	OK (<u>D</u>) Cancel			

Notes

- Check with a network administrator about IP address. Do not duplicate the IP address on the same network.
- Set IP address on the External Device for IP address in Individual Device Settings.
- You need to set IP address on the Display in the offline mode of the Display.
- Refer to the following when setting tag data.
- "5.4 NJ Series (Tag Specification)" (page 31)

External Device Settings

Use the ladder software (Sysmac Studio) to configure communication settings for the External Device. Refer to your External Device manual for details.

- 1 Start up the ladder software.
- 2 Click the [Configuration] of the [Multiviewer Explorer].
- **3** Double click [Controller Setup].
- 4 Double click [Built-in EtherNet/IP Port Setings] to display the setup screen.
- 5 Select [Fixed settings] from [IP Address] to set the IP address as follows.

Setup Items	Setting Value
IP address	192.168.0.1
Subnet mask	255.255.255.0

6 Transfer the communication settings to the External Device.

Notes

• Check with a network administrator about IP address and subnet mask you want to use. Do not set the duplicate IP address.

4 Setup Items

Set up the Display's communication settings in GP Pro-EX or in the Display's offline mode.

The setting of each parameter must match that of the External Device.

"3 Communication Settings" (page 6)

• You need to set IP address on the Display in the offline mode of the Display. Cf. Maintenance/Troubleshooting Guide "Ethernet Settings"

4.1 Setup Items in GP Pro-EX

Communication Settings

To display the setup screen, from the [System Settings] workspace, select [Device/PLC].

Device/PLC 1					
Summary					Change Device/PLC
Manufacturer OMRO	N Corporation	Series	CS/CJ/NJ Series EtherNet/	IP	Port Ethernet (TCP)
Text Data Mode	1 <u>Change</u>				
Communication Settings					
Port No.	1024 🕂 🗹 Auto)			
Timeout	3 📫 (sec)				
Retry	0 📫				
Wait To Send	0 📫 (ms)	Def	ault		
Device-Specific Settings					
Allowable Number of Devices/PLCs	Add Device				
No. Device Name	Settings				Add Indirect Device
👗 1 PLC1	Series=CJ2 Seri	es,IP Addr	ess=192.168.000.001,EIP U		+

Setup Items	Setup Description
Port No.	Use an integer from "1024 to 65535" to enter the port number of the Display. If you check [Auto], the port number will be automatically set.
Timeout	Enter the time (seconds) for which the Display waits for the response from the External Device, from "1 to 127".
Retry	In case of no response from the External Device, enter how many times the Display retransmits the command, from "0 to 255".
Wait To Send	Enter the standby time (milliseconds) from when the Display receives packets until it transmits the next command, from "0 to 255".
NOTE • Refer	to the GP-Pro EX Reference Manual for Indirect Device.

Cf. GP-Pro EX Reference Manual "Changing the Device/PLC at Runtime (Indirect Device)"

Device Settings

To display the [Individual Device Settings] dialog box, from [Device-Specific Settings] in the [Device/PLC] window, select the external device and click [Settings]

To connect multiple External Devices, from [Device-Specific Settings] in the [Device/PLC] window, click [Add Device] to add another External Device.

💰 Individual Dev	rice Settings 🛛 🗙			
PLC1				
Series CJ2 Se If you change the se settings.	ries ries, please reconfirm all address			
IP Address	192. 168. 0. 1			
EIP Unit Version	2.0 🔽			
Tag Data	plc1_sample 💌			
	Import New Edit			
Automatic match in tag address				
Collation error dis Output tag collation Do not output	played when tag is used error			
	Default			

Setup Items	Setup Description
Series	Select the model of the External Device.
IP address	 Set IP address of the External Device. NOTE Check with a network administrator about IP address. Do not set the duplicate IP address.
EIP Unit Version	Display supported EIP unit versions.
Tag Data	 When "CJ2 Series" or "NJ Series" is selected in [Series], select the tag data to define tags to the External Device. Select "Unused Tag Data" if you do not use tag data. Click [New] to create new tag data. When "CS1 Series" is selected, "Unused Tag Data" is set. CJ2 Series CF " ■ Tag List Dialog Settings" (page 22) NJ Series F " ■ Tag List Dialog Settings" (page 34)
Automatic match in tag address	Use this operation when the Display and External Device use the same tag names but have different configurations. When this check box is selected: Performs [Automatic match in tag address]. Tags are based on the External Device tag settings. When this check box is cleared: Does not perform [Automatic match in tag address]. When tag configurations are different, it produces a tag collation error.

Setup Items	Setup Description
Collation error displayed when tag is used	You can define when to display tag collation errors. When this check box is selected: Display error message when reading from or writing to tags with a collation error. When this check box is cleared: Display error message when restarting the Display.
Output tag collation error	You can define the location where to output tag collation errors. You can define either the [CF/SD Card] or [USB Storage]. Errors are output as a CSV file. If you do not want to output a CSV file, select [Do not output].

4.2 Offline Mode Settings

NOTE

• Refer to the Maintenance/Troubleshooting manual for information on how to enter offline mode or about the operation.

- Cf. Maintenance/Troubleshooting Guide "Offline Mode"
- The number of the setup items to be displayed for 1 page in the offline mode depends on the Display in use. Please refer to the Reference manual for details.

Communication Settings

To display the setting screen, from [Peripheral Equipment Settings] in offline mode, touch [Device/PLC Settings]. Touch the External Device you want to set from the displayed list.

Comm.	Device			
CS/CJ/NJ Series	EtherNet/IP		[TCP]	Page 1/1
			L J	
	Port No.	○ Fixed	● Auto 1024 ▼ ▲	
	Timeout(s) Retry Wait To Send(ms)			
	Exit		Back	2011/07/31 17:36:11

Setup Items	Setup Description
Port No.	Set the port number of the Display. Select either [Fixed] or [Auto]. When you select [Fixed], use an integer from 1024 to 65535 to enter the port number of the Display. When you select [Auto], the port number will be automatically assigned regardless of the entered value.
Timeout	Enter the time (seconds) for which the Display waits for the response from the External Device, from "1 to 127".
Retry	In case of no response from the External Device, enter how many times the Display retransmits the command, from "0 to 255".
Wait To Send	Enter the standby time (milliseconds) from when the Display receives packets until it transmits the next command, from "0 to 255".

Device Settings

To display the setting screen, touch [Device/PLC Settings] from [Peripheral Equipment Settings]. Touch the External Device you want to set from the displayed list, and touch [Device].

Comm.	Device			
	-			
CS/CJ/NJ Series	EtherNet/IP		[TCP]	Page 1/1
Devic	e/PLC Name PL	C1		-
Series IP Addre EIP Unit Collatio Output t	ss Version n error displaye ag collation err	ed when tag is us Por	CJ2 Series 192 168 Ø 2.0 ed • OFF Do not outp	1 ON ut 💌
	Exit		Back	2011/07/31 17:36:14

Setup Items	Setup Description
Device/PLC Name	Select the External Device to set as a device. Device/PLC name is the title of the External Device set with GP-Pro EX. (Initial value [PLC1])
Series	Displays the series of the External Device.
IP address	 Set IP address of the External Device. NOTE Check with a network administrator about IP address. Do not set the duplicate IP address.
EIP Unit Version	Displays supported EIP unit versions.
Collation error displayed when tag is used	You can define when to display tag collation errors. When ON: Display error message when reading from or writing to tags with a collation error. When OFF: Display error message when restarting the Display.
Output tag collation error	You can define the location where to output tag collation errors. You can define either the [CF/SD Card] or [USB Storage]. Errors are output as a CSV file. If you do not want to output a CSV file, select [Do not output].

5 Supported Device Addresses

The following table shows the range of supported device addresses. Please note that the actual supported range of the devices varies depending on the External Device to be used. Please check the actual range in the manual of your External Device.

Enter the External Device address in the dialog box below.

	が Input A	ddress			×
1	Device/PL(PLC1			•
	Specif	ication of ac	Idres:	S	
	Back				
	A B	С	7	8	9
	DE	F	4	5	6
			1	2	3
				0	
2	C Specif	ication of ta	9		
2					
					Ent
	🔽 Set as 🛙	Default Valu	9		

Select either [Specification of address] or [Specification of tag] to set addresses.

1. Specification of address	Enabled when the series of External Device is set to "CS1 Series" or "CJ2 Series". Enter addresses.	
2. Specification of tag	Enabled when the series of External Device is set to "CJ2 Series" or "NJ Series". Enter a tag name in the input tag control.	
• When [Set as Def address.	ault Value] is selected, the value displays as the default when entering a new	

5.1 CS1 Series

This address can be specified as system data area.

Device	Bit Address	Word Address	32 bit	Remarks
Channel IO Area	0000.00-6143.15	0000-6143		*1
Internal Auxiliary Relay	W000.00-W511.15	W000-W511		
Special Auxiliary Relay	A00000.00-A00959.15	A00000-A00959		*2
Hold Relay	Н0000.00-Н0511.15	Н0000-Н0511		
Timer (Completion Flag)	T0000-T4095	-		*3
Counter (Completion Flag)	C0000-C4095	-		*3
Timer (Preset Value)	-	T0000-T4095		
Counter (Preset Value)	-	C0000-C4095		
Data Memory	D00000.00-D32767.15	D00000-D32767		*1
EM Area (E0-EC)	E000000.00-EC32767.15	E000000-EC32767	Ţ	*4
EM Area (Current bank)	EM00000.00-EM32767.15	EM00000-EM32767		
Task Flag Area (Bit)	TKB000-TKB031	-		*3
Task Flag Area (Status)	TK000.00-TK031.07	ТК000-ТК030		÷ 2]*3
Index Registers	-	IR00-IR15		<u>ві t</u> 31 ^{*5}
Data Registers	-	DR00-DR15		<mark>віt151^{*5}</mark>

*1 Data memory addresses D30000-D31599 and Channel IO Area addresses 1500-1899 are used as the area for system settings on the External Device side; do not write data from the Display. Refer to your External Device manual for details.

*2 Cannot write to A000-A447.

*3 Write disabled

*4 Up to 13 banks (E0-EC) can be used. One bank is 32768 words. The number of banks differs depending on the CPU unit.

*5 Cannot write while in RUN mode.

NOTE

• Please refer to the GP-Pro EX Reference Manual for system data area.

Cf. GP-Pro EX Reference Manual "LS Area (Direct Access Method Area)"

• Refer to the precautions on manual notation for icons in the table.

"Manual Symbols and Terminology"

5.2 CJ2 Series (Device Address Specification)

This address can be specified as system data area.

Device	Bit Address	Word Address	32 bit	Remarks
Channel IO Area	0000.00-6143.15	0000-6143		*1
Internal Auxiliary Relay	W000.00-W511.15	W000-W511		
Special Auxiliary Relay	A00000.00-A01471.15 A10000.00-A11535.15	A00000-A01471 A10000-A11535		*2
Hold Relay	Н0000.00-Н0511.15	H0000-H0511		
Timer (Completion Flag)	T0000-T4095	-		*3
Counter (Completion Flag)	C0000-C4095	-		*3
Timer (Preset Value)	-	T0000-T4095		
Counter (Preset Value)	-	C0000-C4095		
Data Memory	D00000.00-D32767.15	D00000-D32767		*1
EM Area (E0-E18)	E000000.00-E1832767.15	E000000-E1832767	Ī	*4
EM Area (Current bank)	EM00000.00-EM32767.15	EM00000-EM32767		
Task Flag Area (Bit)	TKB000-TKB127	-		*3
Task Flag Area (Status)	TK000.00-TK127.07	TK000-TK126		÷ 2]*3
Index Registers	-	IR00-IR15		<u>ві t</u> 31 ^{*5}
Data Registers	-	DR00-DR15		ві t 15]*5

*1 Data memory addresses D30000-D31599 and Channel IO Area addresses 1500-1899 are used as the area for system settings in the External Device side, do not write data from the Display. Refer to your External Device manual for details.

*2 Cannot write to A000-A447 and A960-A11535.

*3 Write disabled

*4 Up to 25 banks (E0-E18) can be used. One bank is 32768 words. The number of banks differs depending on the CPU unit.

*5 Cannot write while in RUN mode.

NOTE

• Please refer to the GP-Pro EX Reference Manual for system data area.

Cf. GP-Pro EX Reference Manual "LS Area (Direct Access Method Area)"

• Refer to the precautions on manual notation for icons in the table.

"Manual Symbols and Terminology"

CJ2 Series (Tag Specification) 5.3

Data T	уре	Bit Address Word Address		32 bit	Remarks
Single Tag		<tagname></tagname>			*1 *2
BOOL	Array	<tagname>[0]- <tagname>[x-1]</tagname></tagname>	-	-	
UINT UINT BCD	Single Tag	<tagname>.00- <tagname>.15</tagname></tagname>	<tagname></tagname>		*1 *2
CHANNEL WORD	Array	<tagname>[0].00- <tagname>[x-1].15</tagname></tagname>	<tagname>[0]- <tagname>[x-1]</tagname></tagname>	ci (Hi	
	Single Tag	<tagname>.00- <tagname>.31</tagname></tagname>	<tagname></tagname>		*1 *2
REAL DWORD	Array	<tagname>[0].00- <tagname>[x-1].31</tagname></tagname>	<tagname>[0]- <tagname>[x-1]</tagname></tagname>		
STRING	Single Tag	-	<tagname></tagname>	[L/H]	*1
ULINT LINT ULINT BCD LWORD LREAL NUMBER	Single Tag Array	-	-	-	Tag specification disabled ^{*3}

*1 <TAGNAME>: The Tag Name includes the structure name if structure is required. The maximum number of characters for a Tag Name is 255 including delimiters and element number. The maximum number of characters when using D-Script is limited to 54.

BOOLTAG"
BOOLARRAY[5]"
NTTAG"
WORDTAG.15"
DINTTAG.31"
STRINGTAG"

*2 The notation of array size is indicated as follows. When the array size is represented as [x], the notational range is <TAGNAME>[0]-<TAGNAME>[x-1].

ULINT, LINT, ULINT BCD, LWORD, and LREAL are 4 word data types, so that tags cannot be set up at *3 address input. To display the device allocated to the 4 word data type tag, first register two tags of 2 word data type and divide the address mapped to the 4 word data type tag to map to them.

NUMBER is a data type to indicate constant so that tags cannot be set at address input.

- In GP-Pro EX, when the project is set up with a CJ2 Series device configured with [Specification of tag], and you use the [Copy from Another Project] command (available from the [Project] menu's [Utility] command), the address settings in the copied screens may change to "Undefined". Please check the address settings after running the screen copy command. However, if the CS/CJ Series EtherNet/IP driver is version 1.11.00 or later, and you are using GP-Pro EX version 2.60 or later, [Copy from Another Project] works without issue when the project is configured with the CS/CJ Series EtherNet/IP driver.
 - Please refer to the GP-Pro EX Reference Manual for system data area.

Cf. GP-Pro EX Reference Manual "LS Area (Direct Access Method Area)"

• Refer to the precautions on manual notation for icons in the table.

"Manual Symbols and Terminology"

Tag List Dialog Settings

• Tag list

To display the tag list, from GP-Pro EX go to [Individual Device Settings] and click [New] or [Edit].

Tag Data Name plc1_sample Comment sample		
Filter All S Tag_BOOL Tag_BOOL Tag_BOOL Tag_CHANNEL Tag_CHANNEL Tag_DINT Tag_DINT Array[32] Tag_DINT Tag_DWORD Array[32] Tag_DWORD Tag_DWORD_Array[32] Tag_DWORD_Array[32] Tag_INT Array[32] Tag_INT Tag_INT Tag2 Tag3 Tag2 Tag3 Tag2 Tag3 Tag5 Tag6 Tag5 Tag6 Tag7 Tag8 Tag9 Tag9	All Add Add Delete Edit View Import Export	List
0 Tags selected.	Total Indices: 21/20000	Total Indice
	OK Cancel	

Setup Items	Setup Description
Tag Data Name	Enter the Tag Data name.
Comment	Enter comments.
Filter	Filters tags displayed in the list. Filters tags using an arbitrary string. To filter by data type, select the data type from the pull down menu. Tags can be filtered by the following conditions from the pull down menu.All Displays all tags.
Scope	 Filters tags displayed in the list. To filter by scope, select a scope from the pull down menu. All Displays all filtered tags. Network Variable Displays tags specified as Network Variables.
List	Displays tags registered in the Tag Data. Displays a data type and comment when a cursor is moved over a tag.

Setup Items	Setup Description
Add	Create a new tag. ⁽ ⁽) ■ Creating a new tag" (page 27)
Delete	Deletes a selected tag.
Edit	Edits a selected tag.
View	Displays the configuration of the selected tag.
Import	Imports (add) tags from a CXR file.
Export	Exports registered tags to a CXR file.
The number of selected tags	Displays the number of selected tags.
Total Indices	Displays the total number of tag indices registered in the Tag Data. (Maximum 65279)

Importing Tag Data

- 1 Set a tag name and data type using CX-Programmer.
- $2\,$ Save the configurations in the CXR file.
- **3** From GP-Pro EX, go to the [Individual Device Settings] dialog box and from [Series], select [CJ2 Series].

💰 Individual Device Settings 🛛 🗙				
PLC1				
Series CJ2 Se If you change the se settings.	rries 💽 💽			
IP Address	192. 168. 0. 1			
EIP Unit Version	2.0 💌			
Tag Data	Unused Tag Data 💌			
	Import New Edit			
Automatic match i	in tag address			
Collation error displayed when tag is used				
Output tag collation				
	Default			
	OK (<u>0</u>) Cancel			

4 Click [Import New]. Select the CXR file to be imported and click [Open].

Look in:	🗀 Database				• •	🤣 📂 🖽	-
2	plc1_sample.	.cxr					
My Recent							
Documents							
Desktop							
b My Documents							
My Documents							
My Documents							
My Documents							
My Documents	Tag	Import All	Y	Vetwork V	'ariable Only		
vly Documents My Computer My Computer	Tag File name:	Import All	Y	Vetwork V	'ariable Only	T	Oper



5 Import is executed and Tag Data is generated.

💰 Individual Device Settings 🛛 🗙			
PLC1			
Series CJ2 Series If you change the series	eries eries, please reconfirm all address		
IP Address	192. 168. 0. 1		
EIP Unit Version	2.0 🔽		
Tag Data	plc1_sample		
	Import New New Edit		
🔽 Automatic match	in tag address		
Collation error dis	splayed when tag is used		
Output tag collation	n error		
	Default		
	OK (<u>O)</u> Cancel		

NOTE

• If tags which cannot be imported are stored in the CXR file, the tag data import dialog box to prompt the log output will be displayed.

^G • ↓ Log File Format" (page 25)

- For the tag information imported from the CXR file, the total number of tags must stay within 65279 (maximum).
- If the comments in the tag data stored in the CXR file have more than 32 characters, any character after the 32nd will be deleted when the data is saved.

◆ Log File Format

If tags which cannot be imported are stored in the CXR file, the log file of the following format can be output.

Source F	File Name: [CXR file full path]
Storage	Information: Size: [CXR file size] Bytes Last Update Date: [Last update date] Comment: [Comment] PLC Type: [PLC type name] Tag Count: [The number of registered tags in the CXR file]
Tags imp	oorted: [The number of imported tags]Tags
Tags cha	inged: [The number of changed tags]Tags
Tags not	imported: [The number of tags failed to import]Tags
Tags cha	inged: [Names of changed tags] : :
Tags not	imported: [Names of tags failed to be imported]

Order	Item	Description
1	Source File Name	Stores CXR file's full path.
2	Size	CXR file size (Byte)
3	Last Update Date	The most recent update data of the CXR file YYYY-MM-DD♦HH:MM(♦ represents a space character)
4	Comment	Comments registered in the CXR file (output 32 characters maximum)
5	PLC Type	Type the name of the External Device registered in the CXR file.
6	Tag Count	The number of tags registered in the CXR file.
7	Tags imported	The number of tags imported from the CXR file.
8	Tags changed ^{*1}	Registered tags changed to the CXR file information
9	Tags not imported	The number of tags which failed to import from the CXR file.
10	Tag names changed ^{*1}	The list of registered tags that are changed to the CXR file information
11	Tags not imported	The list of tags which failed to import from the CXR file.

*1 Only outputs when import (add) is selected in the tag list dialog box.

Importing from the Tag List dialog box

When importing tags using the Import Button in the Tag List dialog box, the [Tag] pull down menu of the displayed dialog box can be used to narrow the tag data to import.

Selection of Imp	ort File		? ×
Look in:	🗀 Database	🗾 🗿 🏂 📼 -	
My Recent Documents Desktop My Documents	plc1_sample.cx	r	
My Network Places	Tag File name: Files of type:	Import All Network Variable Only plc1_sample.cxr CXR files (".cxr) CA	ipen

Setup Items	Setup Description
Тад	 Select the tag data to import. Import All Imports all tags stored in the CXR file. Existing tags will be overwritten. New tags will be added. Import New Only Only new tags stored in the CXR file will be added. Import Matching Only Changes only the tag data stored in the CXR file which already exists in the current tags.
Network Variable Only	Select this check box only when importing tags specified as Network Variables. Clear the check box when importing tags specified as Global Variables.

NOTE

• If tags which cannot be imported are stored in the CXR file, the tag data import dialog box to prompt the log output will be displayed.

- For the tag information imported from the CXR file, the total number of tags must stay within 65279 (maximum).
- If the comments in the tag data stored in the CXR file have more than 32 characters, any character after the 32nd will be deleted when the data is saved.

♦ Exporting from the Tag List box

Click [Export] in the Tag List dialog box to display the export dialog box.

Selection of Expo	ort File						? ×
Save in:	🗀 Database			•	3 🦻	۳. 🔁	
My Recent Documents	plc1_sample.cx						
Desktop My Documents							
My Computer			-				
	PLC Type	CJ2H _					
My Network Places	File name: Save as type:	plc1_sample.cxr CXR files (*.cxr)				-	Open Cancel

Setup Items	Setup Description
PLC Type	Select the type of External Device.

■ Creating a new tag

1 Go to the [Individual Device Settings] dialog box from GP-Pro EX and select "CJ2 Series" from [Series].

💣 Individual Dev	vice Settings 🛛 🗙
PLC1	
Series CJ2 Se	eries eries, please reconfirm all address
settings.	
IP Address	192. 168. 0. 1
EIP Unit Version	2.0 💌
Tag Data	Unused Tag Data 💌
	Import New Edit
Automatic match	in tag address
Collation error dis	played when tag is used
Do not output	1 error
	Default
	OK (<u>D)</u> Cancel

2 Click [New]. Type the name of the new tag data in [Tag Data Name] and enter any comment in [Comment].

TagList				
Tag Data Name Comment	tagData01			
Filter All	•	Scope	All	•
				Add
				Delete
				Edit
				View
				Import
				Export
0 Tags selected.		1	Fotal Indices: C	0/20000
			0K.	Cancel

3 Click [Add] to display the [Tag] dialog box.

Tag			
Tag Name			
Data Type	WORD	•	
Array Dimensions	0	•	
Address	D00000		
Comment			
Network Varia	ble		
Public Only	C Input	C Output	
Links with the C	X-Server file		
		ОК	Cancel

- 4 Enter the Tag Name, Array Dimensions, Address, and Comment and select the Data Type to be used.
 When the [Network Variable] check box is cleared, the tag will be treated as a Global Variable.
 When the [Network Variable] check box is selected, select from Public Only, Input, or Output.
 To link the tag to the CX-Server file, select the [Links with the CX-Server file] check box.
 - ☞ " ◆ Set Tag Value Limits" (page 30)

Tag						
Tag Name	Tag_BOOL					
Data Type	WORD					
Array Dimensions	0 🗧					
Address	D00000					
Comment	Type of Data BOOL					
Network Varia	ble					
Public Only	C Input C Output					
Links with the CX-Server file						
	OK Cancel					

Generated controller tags are displayed in the list.

TagList Tag Data Name Comment	tagData01			
Filter All		Scope	All	Add Delete Edit View Import Export
1 Tags selecter	d.		Total Indices:	1/20000
			OK	Cancel

Set Tag Value Limits

1 Tag name input rule

The following input rules apply to tag names.

- A number cannot be used for a first letter.
- A device and address cannot be entered. (Example: D0000)
- !''#%&'()=-~^\\`@{[+;*:}]<>,.?/ and a space cannot be entered.
- For Network Variable, upper case and lower case characters are not distinguished.
- For Global Variable, upper case and lower case characters are distinguished.
- For Network Variable, "S/ED/EE/EF/E1A/E1B/E1C/E1D/E1E/E1F" cannot be registered.
- 2 Tag name length limitation

There is a limitation to the length of tag names depending on whether the [Links with the CX-Server file] check box has been checked or cleared.

Variable Type CX-Server Link Limitations of Tag name length		
Network Variable	ON	Shift-JIS: 32 Byte or less; UTF-8: 48 Byte or less
	OFF	UTF-8: 48 Byte or less
Global Variable	ON	Shift-JIS: 32 Byte or less
	OFF	Shift-JIS: 48 Byte or less

3 STRING Type Limitations

When a user selects the STRING data type, a CX-Server file cannot be linked. In addition, the array dimensions label will be changed to a size. The size can be specified by a value from 1 to 255.

4 Number Type Limitations

When a user selects the NUMBER data type, a Network Variable and array cannot be specified. In addition, the address label will be changed to a value. For values, up to 17 digit integers or decimals can be specified (including minus symbol and decimal points).

5 BOOL Type Limitations

When a user selects the BOOL data type and specifies a Network Variable and array, the starting address has to be set to 0. (Example: A0.0)

6 Address and Array Limitations

Any tag, except the NUMBER type, can specify any address. In addition, when the CX-Server file is not linked, address input is not necessary. In this case, auto address mapping will be used, however this tag cannot be mapped to a part. Also, data type tags in which the device size is 4 words (ULINT/LINT/ULINT BCD/LREAL/LWORD) cannot be mapped to a part.

Any tag, except the STRING and NUMBER type, can specify any array. The maximum array element of the device for tag specification is 32000. Set the number of elements so that the total of specified addresses and element number do not to exceed the maximum value of the specified device.

7 Comment Limitation

If the comments have more than 32 characters, any character after the 32nd will be deleted when the data is saved.

5.4 NJ Series (Tag Specification)

Data Type		Bit Address	Word Address	32 bit	Remarks
	Single Tag	<tagname></tagname>			
ROOL	1D Array	<tagname>[0]- <tagname>[x-1]</tagname></tagname>			*1 *2
BOOL	2D Array	<tagname>[0,0]- <tagname>[x-1,y-1]</tagname></tagname>	-		
	3D Array	<tagname>[0,0,0]- <tagname>[x-1,y-1,z-1]</tagname></tagname>			
	Single Tag	<tagname>.0- <tagname>.7</tagname></tagname>	<tagname></tagname>		*1 *2 *3
BYTE	1D Array	<tagname>[0].0- <tagname>[x-1].7</tagname></tagname>	<tagname>[0]- <tagname>[x-1]</tagname></tagname>		
SINT USINT	2D Array	<tagname>[0,0].0- <tagname>[x-1,y-1].7</tagname></tagname>	<tagname>[0,0]- <tagname>[x-1,y-1]</tagname></tagname>		
	3D Array	<tagname>[0,0,0].0- <tagname>[x-1,y-1,z- 1].7</tagname></tagname>	<tagname>[0,0,0]- <tagname>[x-1,y-1,z-1]</tagname></tagname>		
	Single Tag	<tagname>.00- <tagname>.15</tagname></tagname>	<tagname></tagname>		
	1D Array	<tagname>[0].00- <tagname>[x-1].15</tagname></tagname>	<tagname>[0]- <tagname>[x-1]</tagname></tagname>		
INT	2D Array	<tagname>[0,0].00- <tagname>[x-1,y-1].15</tagname></tagname>	<tagname>[0,0]- <tagname>[x-1,y-1]</tagname></tagname>	[L/H]	*1 *2
	3D Array	<tagname>[0,0,0].00- <tagname>[x-1,y-1,z- 1].15</tagname></tagname>	<tagname>[0,0,0]- <tagname>[x-1,y-1,z-1]</tagname></tagname>		
	Single Tag	<tagname>.00- <tagname>.15</tagname></tagname>	<tagname></tagname>		
UINT WORD	1D Array	<tagname>[0].00- <tagname>[x-1].15</tagname></tagname>	<tagname>[0]- <tagname>[x-1]</tagname></tagname>		
	2D Array	<tagname>[0,0].00- <tagname>[x-1,y-1].15</tagname></tagname>	<tagname>[0,0]- <tagname>[x-1,y-1]</tagname></tagname>		^1 *2
	3D Array	<tagname>[0,0,0].00- <tagname>[x-1,y-1,z- 1].15</tagname></tagname>	<tagname>[0,0,0]- <tagname>[x-1,y-1,z-1]</tagname></tagname>		

Data Type		Bit Address	Word Address	32 bit	Remarks
	Single Tag		<tagname></tagname>		
	1D Array		<tagname>[0]- <tagname>[x-1]</tagname></tagname>		*1 *2
REAL	2D Array	-	<tagname>[0,0]- <tagname>[x-1,y-1]</tagname></tagname>		
	3D Array		<tagname>[0,0,0]- <tagname>[x-1,y-1,z-1]</tagname></tagname>		
DINT UDINT DWORD	Single Tag	<tagname>.00- <tagname>.31 <tagname></tagname></tagname></tagname>			*1 *2
	1D Array	<tagname>[0].00- <tagname>[x-1].31</tagname></tagname>	<tagname>[0]- <tagname>[x-1]</tagname></tagname>		
	2D Array	<tagname>[0,0].00- <tagname>[x-1,y-1].31</tagname></tagname>	<tagname>[0,0]- <tagname>[x-1,y-1]</tagname></tagname>		
	3D Array	<tagname>[0,0,0].00- <tagname>[x-1,y-1,z- 1].31</tagname></tagname>	<tagname>[0,0,0]- <tagname>[x-1,y-1,z-1]</tagname></tagname>		
STRING	Single Tag	-	<tagname></tagname>		*1 *4

*1 <TAGNAME>: The Tag Name includes the structure name if structure is required. The maximum number of characters for a Tag Name is 255 including delimiters and element number. The maximum number of characters when using D-Script is limited to 54.

Ex.)	BOOL type single tag:	"BOOLTAG"
	BOOL array element:	"BOOLARRAY[5]"
	INT type single tag:	"INTTAG"
	WORD type bit address:	"WORDTAG.15"
	DINT type bit address:	"DINTTAG.31"
	STRING type word address	"STRINGTAG"

It is possible to use alphanumeric characters (upper and lower case) as well as underbars for both Tag Names and Element Names.

- The maximum number of characters is 127.
- Numbers and underbars cannot be used for the first character.
- The use of two underbars in succession is not possible.
- The use of [. , ! " \$ % ^ & * () + = { } [] / \ ? # @ ~] and spaces are not possible.
- *2 Array: Number of array element is included in the controller tag information. Since the element number starts from 0, maximum element number is [Element Number-1].

INTARRAY INT[256,256] can be used in the range of INTARRAY[0-255,0-255].

Array's maximum element number is 65535 including 2D or 3D.

1D Array	EX: ARRAY[65535](INT)	Element number: 65535
2D Array	EX: ARRAY[2,32767](BOOL)	Element number: 65534
3D Array	EX: ARRAY[1,1,16383](DINT)	Element number: 65532

- *3 BYTE, SINT and USINT: Handled as 8-bit devices in the External Device, but as 16-bit devices in GP-Pro EX. Therefore, 0 (zero) is set to under byte. When writing data to BYTE, SINT, or USINT devices from the Display, the lower byte is written. Upper byte is not written.
- *4 STRING: Available to define only 1 dimension. Maximum number of characters is 1986 half size characters.

NOTE • Please refer to the GP-Pro EX Reference Manual for system data area.

Cf. GP-Pro EX Reference Manual "LS Area (Direct Access Method Area)"

- Refer to the precautions on manual notation for icons in the table.
 - "Manual Symbols and Terminology"

Tag List Dialog Settings

• Tag list

To display the tag list, from GP-Pro EX go to [Individual Device Settings] and click [New] or [Edit].

TagList		
Tag Data Name TagData01		
Filter All		
Tag_Array[11] Tag_BOOL Tag_Struct.Type_BOOL	Add	
Tag_WORD	Edit	
	View	List
	Export	
0 Tags selected.	Total Indices: 5/20000	Total Indices
	OK Cancel	
The	number of selected tags	

Setup Items	Setup Description
Tag Data Name	Enter the Tag Data name.
Comment	Enter comments.
Filter	Filters tags displayed in the list. Filters tags using an arbitrary string. To filter by data type, select the data type from the pull down menu. Tags can be filtered by the following conditions from the pull down menu.All Displays all tags.
List	Displays tags registered in the Tag Data. Displays a data type and comment when a cursor is moved over a tag.
Add	Create a new tag. ⁽ ⁽) ■ Creating a new tag" (page 37)
Delete	Deletes a selected tag.
Edit	Edits a selected tag.
View	Displays the configuration of the selected tag.

Setup Items	Setup Description
Import	Imports (add) tags from a Clipboard. ^C " ■ Importing Tag Data" (page 35)
The number of selected tags	Displays the number of selected tags.
Total Indices	Displays the total number of tag indices registered in the Tag Data. (Maximum 20000)

Importing Tag Data

- 1 Set a tag name and data type using Sysmac Studio.
- 2 Select [Export Global Variables]-[CX-Designer] from the [Tool] menu. The tag list is copied to the clip board.
- **3** From GP-Pro EX, go to the [Individual Device Settings] dialog box and from [Series], select [NJ Series].

💰 Individual Devi	ce Settings 🛛 🗙
PLC1	
Series NJ Se	ries 💌
If you change the s settings.	eries, please reconfirm all address
IP Address	192. 168. 0. 1
EIP Unit Version	2.0 🔽
Tag Data	Unused Tag Data 💌
	Import New New Edit
🗵 Automatic match	in tag address
Collation error dis	splayed when tag is used
Output tag collation	n error
Do not output	<u> </u>
	Default
	OK (<u>D</u>) Cancel

4 Click the [Import New]. [Import Tag] is displayed.

Import Tags		
Tag Name	Data Type	Comment
Paste Tags Select All Unse	lect All	OK Cancel

 $5\,$ Click [Paste Tags], and paste the tag which is exported to the clipboard.

Import Tags		
Tag Name	Data Type	Comment
☑ Tag_BOOL	BOOL	
✓ Tag_WORD	WORD	
Tag_Struct.Type_BOOL	BOOL	
Tag_Struct.Type_WORD	BOOL	
✓ Tag_Array	INT[010]	
Paste Tags Select All Unse	elect All	OK Cancel

NOTE

• If the comments in the tag data stored in the tag list have more than 32 characters, any character after the 32nd will be deleted when the data is saved.

6 Check to tags to be imported, and click [OK].

💰 Individual	Device Settings
PLC1	
Series	NJ Series
If you chang settings.	e the series, please reconfirm all address
IP Address	192. 168. 0. 1
EIP Unit Vers	sion 2.0 💌
Tag Data	TagData01
	Import New New Edit
🔽 Automatic	match in tag address
Collation	error displayed when tag is used
Output tag	collation error
Do not out	put 💌
	Default
	OK (<u>O</u>) Cancel

■ Creating a new tag

1 Go to the [Individual Device Settings] dialog box from GP-Pro EX and select "NJ Series" from [Series].

💰 Individual Devic	e Settings	×
PLC1		
Series NJ Seri	es	•
If you change the se settings.	ries, please reconfirm	n all address
IP Address	192. 168. 0.	. 1
EIP Unit Version	2.0 🔽	
Tag Data	Unused Tag Data	•
	Import New	New Edit
🛛 🗹 Automatic match i	n tag address	
🔲 Collation error dis	played when tag is u	sed
Output tag collation	error	
		Default
	OK (<u>O</u>)	Cancel

2 Click [New]. Type the name of the new tag data in [Tag Data Name] and enter any comment in [Comment].

TagList	
TagData Name TagData01 Comment	
Filter All	
	Add
	Delete
	Edit
	View
	Import Export
0 Tags selected. Total Indices	: 0/20000

3 Click [Add] to display the [Tag] dialog box.

Tag				
Tag Name				
Data Type	NT	•		
Array Dimensions)	÷0	0	
Address				
Comment				
Network Variabl	e ———			
C Public Only	${f C}$ Input	C Output		
Links with the CX	Server file			
		(эк	Cancel

4 Enter the Tag Name, Array Dimensions, and Comment and select the Data Type to be used.

Tag			
Tag Name	Tag_BOOL		
Data Type	BOOL		
Array Dimensions	0 . 0 .		
Address			
Comment	Data Type BOOL		
- Network Varia	ble		
Public Only	O Input O Output		
Links with the CX-Server file			

Generated controller tags are displayed in the list.

TagList	
Tag Data Name TagData01 Comment	
Filter All	
Tag_BOOL	Add
	Delete
	Edit
	View
	Import Export
1 Tags selected. Total Indices: 1	/20000
ОК	Cancel



- It is not possible to create structures or tags of data type structure.
- Pre-defined tags by the ladder tool can not be used.
- Pre-defined structures can be used. However, it is not possible to create the tag whose data type is pre-defined structures.

6 Device Code and Address Code

Use device codes and address codes when you set "Device Type & Address" for the address type of the data display or other devices.

NOTE

• When using the Tag Data in CJ2 Series or NJ Series, device code and address code cannot be used.

Device	Device Name	Device Code (HEX)	Address Code
Channel IO Area	-	0080	Word Address
Internal Auxiliary Relay	W	0082	Word Address
Special Auxiliary Relay	А	0085	Word Address
Hold Relay	Н	0084	Word Address
Timer (Preset Value)	Т	0060	Word Address
Counter (Preset Value)	С	0061	Word Address
Data Memory	D	0000	Word Address
	E0	0010	Word Address
	E1	0011	Word Address
	E2	0012	Word Address
	E3	0013	Word Address
	E4	0014	Word Address
	E5	0015	Word Address
	E6	0016	Word Address
	E7	0017	Word Address
	E8	0018	Word Address
EM Area (E0-E18)	E9	0019	Word Address
	EA	001A	Word Address
	EB	001B	Word Address
	EC	001C	Word Address
	ED	001D	Word Address
	EE	001E	Word Address
	EF	001F	Word Address
	E10	0020	Word Address
	E11	0021	Word Address
	E12	0022	Word Address

Device	Device Name	Device Code (HEX)	Address Code
	E13	0023	Word Address
	E14	0024	Word Address
EM Area (E0-E18)	E15	0025	Word Address
	E16	0026	Word Address
	E17	0027	Word Address
	E18	0028	Word Address
EM Area (Current bank)	EM	0001	Word Address
Task Flag Area (Status)	ТК	0002	Value of Word Address / 2
Index Registers	IR	0003	Word Address
Data Registers	DR	0004	Word Address

7 Error Messages

Error messages are displayed on the Display screen as follows: "No.: Device Name: Error Message (Error Occurrence Area)". Each description is shown below.

Item	Description	
No.	Error number	
Device Name	Name of the External Device where an error has occurred. Device/PLC name is the title of the External Device set with GP-Pro EX. (Initial value [PLC1])	
Error Message	Displays messages related to an error that has occurred.	
	Displays the IP address or device address of the External Device where an error has occurred, or error codes received from the External Device.	
Error Occurrence Area	 NOTE Received error codes are displayed as "Decimal [Hex]". Device address is displayed as "Address: Device address". IP address is displayed as "IP address (Decimal): MAC address (Hex)". 	

Example of an Error Message

٠

"RHAA035:PLC1: Error has been responded for device write command (Error Code: 1[01H])"

NOTE

Refer to your External Device manual for details on received error codes.

• Please refer to "Display-related errors" of "Maintenance/Troubleshooting Guide" for a common error message to the driver.

■ Error Messages Unique to External Device

Error number	Error Message	Description
RHxx128	(Node Name): Error has been responded for initial communication command (Encapsulation Error Code: [(Hex)])	Error has been responded for initial communication command.
RHxx129	(Node Name): Error has been responded for device read command (Encapsulation Error Code: [(Hex)])	Error has been responded for device read command.
RHxx130	(Node Name): Error has been responded for device write command (Encapsulation Error Code: [(Hex)])	Error has been responded for device write command
RHxx131	(Node Name): Error has been responded for initial communication command (CIP Error Code: [(Hex)])	Error has been responded for initial communication command.
RHxx132	(Node Name): Error has been responded for device read command (CIP Error Code: [(Hex)])	Error has been responded for device read command.
RHxx133	(Node Name): Error has been responded for device write command (CIP Error Code: [(Hex)])	Error has been responded for device write command
RHxx134	(Node Name): Error has been responded for initial communication command (General STS Code: [(Hex)], Additional STS Code: [(Hex)])	Error has been responded for initial communication command.

Error number	Error Message	Description
RHxx135	(Node Name): Error has been responded for device read command (General STS Code: [(Hex)], Additional STS Code: [(Hex)])	Error has been responded for device read command.
RHxx136	(Node Name): Error has been responded for device write command (General STS Code: [(Hex)], Additional STS Code: [(Hex)])	Error has been responded for device write command
RHxx137	(Node Name): To get the tag information failed (The tag counts which failed to get: (Decimal))	Received from the External Device an error response to the get address packet. On the External Device, register the tags you are accessing from the Display.
RHxx144	(Node Name): Matching of the tag failed (The tag counts which failed in matching: (Decimal))	Failed when matching tags. Ensure tags on the Display and tags on the External Device are matching.
RHxx145	(Node Name): Tag is being collated.Please wait for a while.	Collating tags on the External Device and Display. In the driver's [Individual Device Settings] dialog box, when the [Automatic match in tag address] check box is selected, a collation error displays when changing the value of a collated tag on the External Device.
RHxx146	(Node Name): The CF card has not been inserted, or the CF card hatch is open.	The CF Card is not inserted or CF Card cover is open. Check the CF Card and CF Card cover.
RHxx147	(Node Name): USB storage location not found.	USB storage is not connected. Check the USB storage device.
RHxx148	(Node Name): Failed to save file.	 Unable to save tag collation error file due to one of the following. Check the number of files and the available space in the storage device where you are saving the tag collation error file. Failed to create the CJTAG directory. Failed to open the file. Failed to write the file.
RHxx149	(Node Name): Tag is not registered ((Tag Name))	On tag collation, identified that a tag was not registered on the External Device. Register the tag in the External Device.
RHxx150	(Node Name): Data type is different ((Tag Name), GP-Pro EX: (Data Type) / PLC: (Data Type))	On tag collation, identified that data types between the Display and External Device are different. Please match tag data types.

Error number	Error Message	Description
RHxx151	(Node Name): Number of array dimensions is different ((Tag Name), GP-Pro EX: (Array Size) / PLC: (Array Size))	On tag collation, identified that array dimensions or size of STRING data between the Display and External Device are different. Please match the size of tag arrays and STRING data types.
RHxx152	(Node Name): Device is different ((Tag Name), GP- Pro EX: (Device Address) / PLC: (Device Address))	On tag collation, identified that tag device addresses between the Display and External Device are different. Please match tag device addresses.
RHxx153	(Node Nama): SD card access error (Error Status: [(Decimal)])	Unable to access the SD card Check the SD Card. Error status 1: SD card is not inserted. 2: Unmount 3: Unformatted 4: Write-protect 5: Others