



# Device/PLC Connection Manuals



#### **About the Device/PLC Connection Manuals**

Prior to reading these manuals and setting up your device, be sure to read the "Important: Prior to reading the Device/PLC Connection manual" information. Also, be sure to download the "Preface for Trademark Rights, List of Units Supported, How to Read Manuals and Documentation Conventions" PDF file. Furthermore, be sure to keep all manual-related data in a safe, easy-to-find location.

# **PREFACE**

Thank you for purchasing the GP Screen Editor Software, "GP-PRO/PB III for Windows Ver. 6.3" for use with Pro-face's GP series operator interfaces.

Please read this manual carefully in order to use this software properly, and be sure to keep this manual handy for future reference.

#### **NOTES**

- (1) The copyrights to all programs and manuals included in the GP-PRO/PB III for Windows Ver. 6.3 (hereinafter referred to as "this product") are reserved by the Digital Electronics Corporation. Digital grants the use of this product to its users as described in the "Software Operating License Conditions" documentation, included with this product's CD-ROM. Any actions violating the above-mentioned conditions are prohibited by both Japanese and foreign regulations.
- (2) The contents of this manual have been thoroughly inspected. However, if you should find any errors or omissions in this manual, please inform your local GP representative of your findings.
- (3) Regardless of article (2), the Digital Electronics Corporation shall not be held responsible for any damages or third party claims resulting from the use of this product.
- (4) Differences may occur between the descriptions found in this manual and the actual functioning of this product. Therefore, the latest information on this product is provided in data files (i.e. Readme.txt files, etc.) and in separate documents. Please consult these sources as well as this manual prior to using the product.
- (5) Even though the information contained in and displayed by this product may be related to intangible or intellectual properties of the Digital Electronics Corporation or third parties, the Digital Electronics Corporation shall not warrant or grant the use of said properties to any users and/or other third parties.
- (6) The specifications set out in this manual are for overseas products only. As a result, some differences may exist between the specifications given here and for those of the identical Japanese product. Digital Electronics Corporation accepts no liability for issues related to the intellectual property rights of third parties or any issues related to the use of the information contained in or displayed by this product.

© Copyright 2003 Digital Electronics Corporation. All rights reserved. Digital Electronics Corporation, September 2003

For the rights to trademarks and trade names, see "TRADEMARK RIGHTS".

# TRADEMARK RIGHTS

All company or product names used in this manual are the trade names, trademarks (including registered trademarks), or service marks of their respective companies.

This product omits individual descriptions of each of these rights.

Trademark / Trade Name	Right Holder
Microsoft, MS, MS-DOS, Windows, Windows 95, Windows 98, Windows Me, Windows NT, Windows 2000, Windows XP, Windows Explorer, Microsoft Excel	Microsoft Corporation, USA
Intel, Pentium	Intel Corporation, USA
Pro-face	Digital Electronics Corporation (in Japan and other countries)
Ethernet	Western Digital Electric Corporation, USA
IBM, VGA, IBM Compatible	International Business Machines Corporation (IBM), USA

The following terms differ from the above mentioned formal trade names and trademarks.

Term used in this manual	Formal Trade Name or Trademark
Windows 95	Microsoft® Windows®95 Operating System
Windows 98	Microsoft® Windows®98 Operating System
Windows Me	Microsoft® Windows®Me Operating System
Windows NT	Microsoft® Windows NT® Operating System
Windows 2000	Microsoft® Windows®2000 Operating System
Windows XP	Microsoft® Windows®XP Operating System

# LIST OF SUPPORTED MODELS

The following table lists the models compatible with GP-PRO/PB III for Windows Ver.6.3 The following series names or product names are used in the descriptions contained in this manual.

**■** List of Supported GPs

	Series	Product Name	Model	GP Type
			GPH70-LG11-24V	0011701
		GP-H70L	GPH70-LG41-24VP	GPH70L
	GP-H70 series		GPH70-SC11-24V	0.00.000
		GP-H70S	GPH70-SC41-24VP	GPH70S
			GP270-LG11-24V	
		GP-270L	GP270-LG21-24VP	GP270L
			GP270-LG31-24V	
	GP-270 series		GP270-SC11-24V	
		GP-270S	GP270-SC21-24VP	GP270S
			GP270-SC31-24V	
			GP370-LG11-24V	
			GP370-LG21-24VP	
		GP-370L	GP370-LG31-24V	GP370L
			GP370-LG41-24VP	
	GP-370 series		GP370-SC11-24V	
			GP370-SC21-24VP	
		GP-370S	GP370-SC31-24V	GP-370S
			GP370-SC41-24VP	<del> </del>
			GP470-EG11	
	CD 470 aariaa	GP-470E		GP470
D70	GP-470 series	GP-4/0E	GP470-EG21-24VP	GP470
P70 series			GP470-EG31-24V	
		GP-570L	GP570-LG11-24V	GP570L
			GP570-LG21-24V	
	GP-570 series		GP570-SC11	
		GP-570S	GP570-SC21-24VP	
			GP570-SC31-24V	
			GP570-TC11	GP570
		GP-570T	GP570-TC21-24VP	
			GP570-TC31-24V	
		GP-57JS	GP57J-SC11	
		GP-570VM	GP570-TV11	GP570VM
	GP-571 series	GP-571T	GP571-TC11	GP571T
		GP-675S	GP675-SC11	
	GP-675 series	GP-675T	GP675-TC11	GP675
		[5, 5/5]	GP675-TC41-24VP	
	GP-870 series	GP-870VM	GP870-PV11	GP870VM
	GP-37W2 series	GP-37W2B	GP37W2-BG41-24V	GP37W2
		GP-377L	GP377-LG11-24V	GP377L
	GP-377 series	GF-3//L	GP377-LG41-24V	GF3//L
	GP-377 Series	GP-377S	GP377-SC11-24V	GP377S
ı		GP-3773	GP377-SC41-24V	GP3775
	CD 277D	CD 277DT	GP377R-TC11-24V	CD277D
	GP-377R series	GP-377RT	GP377R-TC41-24V	—— GP377R
	OD 477D'	CD 477DE	GP477R-EG11	004770
	GP-477R series GP-477RE	GP-4//RE	GP477R-EG41-24VP	—— GP477R
P77R series		00.5==5.5	GP577R-SC11	
		GP-577RS	GP577R-SC41-24VP	
	GP-577R series		GP577R-TC11	GP577R
		GP-577RT		

	Series	Product Name	Model	GP Type
	GP-2301H series	GP-2301HL	GP2301H-LG41-24V	GP2301HL
	000H ries	GP-2301HS	GP2301H-SC41-24V	GP2301HS
36	GP-2401H series	GP-2401HT	GP2401H-TC41-24V	GP2401H
t .		GP-2300L	GP2300-LG41-24V	GP2300L
	GP-2300 series	GP-2300S	GP2300-SC41-24V	GP2300S
		GP-2300T	GP2300-TC41-24V	GP2300
		GP-2301L	GP2301-LG41-24V	GP2301L
	GP-2301 series	GP-2301S	GP2301-SC41-24V	GP2301S
		GP-2301T	GP2301-TC41-24V	GP2301
	GP-2400 series	GP-2400T	GP2400-TC41-24V	GP2400
	GP-2401 series	GP-2401T	GP2401-TC41-24V	GP2401
SP2000		GP-2500L	GP2500-LG41-24V	GP2500L
eries	00.0500	GP-2500S	GP2500-SC41-24V	GP2500S
	GP-2500 series		GP2500-TC11	CD2500
		GP-2500T	GP2500-TC41-24V	GP2500
		GP-2501L	GP2501-LG41-24V	GP2501L
	00.0504	GP-2501S	GP2501-SC11	GP2501S
	GP-2501 series	GP-2501T	GP2501-TC11	GP2501
	OD 0000	OD 0/00T	GP2600-TC11	000/00
	GP-2600 series	GP-2600T	GP2600-TC41-24V	GP2600
	GP-2601 series	GP-2601T	GP2601-TC11	GP2601

### **■** List of Supported GLCs

Series		Product Name	Model	GP Type
GLC100 series	GLC100 series	GLC100L	GLC100-LG41-24V	GLC100L
OLO 100 SCITES	OLO 100 SCITES	GLC100S	GLC100-SC41-24V	GLC100S
GLC300 series	GLC300 series	GLC300T	GLC300-TC41-24V	GLC300T
	GLC2300 series	GLC2300L	GLC2300-LG41-24V	GLC2300L
GLC2000 series	GLC2400 series	GLS2300T	GLC2300-TC41-24V	GLC2300
02000 301103		GLC2400T	GLC2400-TC41-24V	GLC2400
	GLC2600 series	GLC2600T	GLC2600-TC41-24V	GLC2600

### **■** List of Supported STs

Series	Product name	Model	GP Type
ST 400	ST 400	ST400-AG41-24V	ST 400
series	ST 401	ST401-AG41-24V	ST 401
301103	ST 402	ST402-AG41-24V	ST 402

#### **■** List of Supported Factory Gateway

Product name	Model	GP Type
Factory Gateway	FGW_SE41_24V	Factory Gateway FGW-SE



To use the GPWeb and GPViewer functions with the Factory Gateway, you must have GPPRO/PB III C-Package02 or later installed.

# **HOW TO USE THIS MANUAL**

#### ■Structure of this Manual

The "Tag Reference manual" is the second of four manuals for this product, and explains how to use the "GP-PRO/PB III for Windows Ver. 6.3" software (hereafter referred to as "this product"). Please refer to all of these manuals when using this product.

In addition to these manuals, data files containing supplemental information on updated functions are also provided.

To read these files, click on the [Start] button in your Windows OS main screen and select the [Programs]→[Pro-face]→[ProPB3Win] menu. Then click on the [Read Me] selection.

For detailed information about GP series products, please refer to each GP's "User Manual". (Optionally available)

Vol. 1	Operation Manual	Describes this product's operation procedures and all standard functions. (provided as PDF data)
Vol. 2	Tag Reference Manual	Describes the functions and detailed settings for all GP-PRO/PBIII Tags. (provided as PDF data)
Vol. 3	Parts List	Describes this product's pre-made Parts and symbols. (provided as PDF data)
Vol. 4	Device/PLC Connection Manual (This Manual)	Describes the methods for connecting the GP to other, supported manufacturer Device/PLCs. (provided as PDF data)

Screen Data Layout Sheets are useful for designing tag address settings, etc. and example sheets are installed as part of the GP-PRO/PBIII for Windows standard installation.

The following two layout sheets, "Device Allocation Table" and "Tag Layout Sheet", are in Microsoft Excel format and are located in the PDF Manual CD-ROM. The following folder and file names are used.

Folder Name	File Name	Contents
	Device1E.xls	Device Allocation Table
Pro-face\ propbwin\sheet	TAG1E.xls	
	TAG2E.xls	Tag Lavout Choot
	TAG3E.xls	Tag Layout Sheet
	TAG4E.xls	

For information on the use of Microsoft Excel, please refer to the Excel software's User Manual.

#### **■** Designation of Supported Models

The functions and settings supported by each model may vary depending on the supported models. In this manual, explanations given are based on the variation of the "Series" and "Product name" described in the "List of Supported Models".

## MANUAL SYMBOLS AND TERMINOLOGY

This manual uses the following symbols and terminology.

If you have any questions about the contents of this manual, please contact your local GP distributor.

Also, If you have any question about your personal computer or Windows, please contact your PC distributor or manufacturer.

#### ■Safety Symbols and Terms

This manual uses the following symbols and terms to identify important information related to the correct and safe operation of this product.

Symbol	Description
Warning	Indicates a potentially hazardous situation that could result in serious injury or death.
Caution	Indicates a potentially hazardous situation that could result in minor injury or equipment damage.
Important	Indicates a potentially damaging action or dangerous situation that could result in abnormal equipment operation or data loss.
Careful!	Indicates instructions or procedures that must be performed to ensure correct product use.
STOP	Indicates instructions or procedures that must not be performed.

#### **■**General Information Symbols and Terms

This manual uses the following symbols and terms for general information.

Symbol	Description
Note:	Provides hints on correct product use, or supplementary information.
<b>▼</b> Reference <b>▲</b>	Indicates an item's related information (manual name, chapter, section, sub-section).
Esc Ctrl	Refers to keys on the computer keyboard.
ESC CIII	<b>▼Reference</b> ■ Keyboard Compatibility List
IBM Compatible Indicates a PC that can run the Windows® operating systematical systems.	
PLC	PLC (Programmable Logic Controller, sequencer), including thermoregulator, inverter, etc.
Generic name for the "GP Series" of programmable op interface made by the Digital Electronics Corporation.  For a list of compatible GP products please see "Comparting Products and Environmental Specifications".  **Reference** LIST OF SUPPORTED MODELS IN Supported GPs**	
GLC	Generic name for the GLC Series of Graphic Logic Controllers made by Digital Electronic Corporation.  ➤ Reference LIST OF SUPPORTED MODELS ■ List of Supported GLCs

# WHEN USING GLC2000 SERIES UNITS

GLC2000 Series units are equipped with the same features as GP2000 units, with the addition of control-related features. As a result, please change the word "GP" to "GLC" when reading this manual. However, please remember that GLC Series units cannot use AUX output or Sound output.

Be sure to understand this manual thoroughly before using your GLC unit.

# WHEN USING ST SERIES UNITS

In this manual, read the word "GP" ("GP2301L") as "ST". However, ST units have certain restrictions owing to hardware specification differences with GP-2301L units. Be sure to understand this manual thoroughly before using your ST unit. Functions incompatible with your ST unit, 

\*\*Reference\*\* Operation Manual [WHEN USING ST SERIES UNITS] section, Operation Manual 2.11.2 Restrictions