

# INDEX

- A**  
ACTION-Specific Trigger Condition/Process List 33-58  
Add Node  
    GP Series Node . . . . . 31-31  
    Pro-Server EX Node . . . . . 31-25  
    SP-5B40/WinGP / SP-5B10 / GP4000/LT4000  
    Series / GP3000 Series / LT3000 Nodes . . . 31-26  
API Functions . . . . . 27-2  
Array of Symbols . . . . . 29-20  
Automatic Download of GP Filing Data . . . . . 18-7  
Automatic Upload of GP Filing Data . . . . . 17-7
- C**  
Create form using Excel 5-9, 6-8, 6-39, 9-7, 12-9,  
12-37  
Create Histogram . . . . . 5-76  
Create Pareto Graph . . . . . 5-74  
Create Scatter Graph . . . . . 5-75
- D**  
Data Read Performance Measurement . . . . . 29-5  
Data settings to be received by ACTION . . . . . 33-34  
Data Transfer . . . . . 26-2  
Data Transfer (Collection Type) . . . . . 19-40  
Data Transfer (Distribute Type) . . . . . 19-34  
Device Access Log . . . . . 29-40  
Device Backup . . . . . 21-5  
Device Logging . . . . . 5-41  
Device Monitor . . . . . 28-16  
Device OneShot . . . . . 6-62  
Device Restore . . . . . 22-4  
Download from the database . . . . . 14-12  
    A setup of details . . . . . 14-26
- E**  
Edit Symbol . . . . . 32-37  
Excel Operation Function . . . . . 5-69  
Export Nodes and Symbols . . . . . 25-7
- F**  
Factory Gateway Configuration Tool . . . . . 24-11
- G**  
Global Constant Setting . . . . . 32-40  
GP Capture Data Saving . . . . . 11-25  
Grouping . . . . . 29-12
- I**  
Import Device Cache Buffer . . . . . 29-35  
Import Nodes and Symbols . . . . . 25-7
- L**  
Log Data Upload . . . . . 9-26  
Log Viewer . . . . . 28-33
- N**  
Network Settings . . . . . 34-4  
    "GP Series NODE Settings" Screen . . . . . 34-6  
    "Node settings other than GP series node settings"  
    Screen . . . . . 34-8
- O**  
Open Network Project File . . . . . 3-6  
Option Settings . . . . . 34-10
- P**  
Printout . . . . . 35-2  
Pro-Server EX Environmental Settings . . . . . 34-2
- Q**  
QC Chart . . . . . 5-73
- R**  
Recipe . . . . . 12-59  
Remote Logoff . . . . . 23-5  
Remote logon . . . . . 23-3
- S**  
Sample Wizard . . . . . 3-8  
Save Network Project . . . . . 23-10, 23-13  
Save SRAM Data Backup . . . . . 20-6  
Sequence Diagram by Trigger Condition . . . . . 33-49  
Set Password . . . . . 23-8, 23-12, 25-6  
Setting of symbol monitor . . . . . 28-26  
Start Application . . . . . 16-8  
Status Monitor . . . . . 28-3, 28-9  
Symbol Monitor . . . . . 28-20, 28-25

---

Symbol Registration Screen . . . . . 32-34

## T

Trial Version . . . . . 1-27

### Trigger Condition

At Device Change . . . . . 33-9

At Device OFF . . . . . 33-17

At Device On . . . . . 33-15

Constant Cycle . . . . . 33-8

ON Time . . . . . 33-7

Power ON . . . . . 33-6

When conditional expression satisfied (excluding the case that the node is GP Series) . . . . . 33-21

When partner node turned Off (excluding the case that the node is GP Series) . . . . . 33-24

Set Trigger Condition Details . . . . . 33-25

When partner node turned On (excluding the case that the node is GP Series) . . . . . 33-23

While conditional expression satisfied (excluding the case that the node is GP Series) . . . . . 33-19

While Device OFF . . . . . 33-13

While Device On . . . . . 33-11

## U

Upload of GP JPEG Data . . . . . 11-7

Upload to the database . . . . . 8-10

A setup of details . . . . . 8-25

## W

Writes Data from CSV file . . . . . 13-9

Writes Data to CSV file . . . . . 7-8

Writes Data to E-Mail . . . . . 15-8