


“How to Set Read Method”

- In read method of OPCGroup Object IOPCAsyncIO2 Interface, switching the read type (cache/device) from the Setting of INI file got enabled.


➤ Setup Procedure

The read type (cache/device) can be changed by describing “AsyncIO2ReadType=CACHE” or “AsyncIO2ReadType=DEVICE” in the Server section of OPCPRO.INI file in the folder (Default is "C: ¥Program Files¥Pro-face¥Pro-Server with Studio") in which the OPC server is installed. Note **if these descriptions are not found, cache read is adopted**. In Local/Remote server, the selected method (cache/device) can be checked from the Menu [View] [Setting].

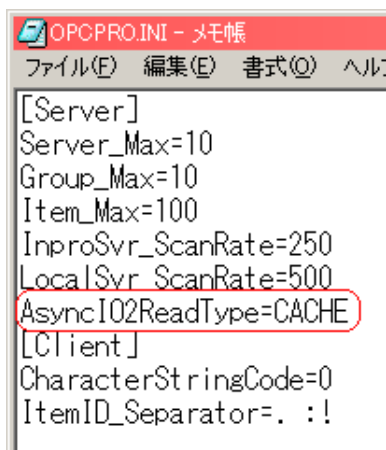

```
[Server]
Server_Max=10
Group_Max=10
Item_Max=10
InproSvr_ScanRate=250
LocalSvr_ScanRate=500
AsyncIO2ReadType=CACHE
[Client]
CharacterStringCode=0
ItemID_Separator=. :!
```

OPCPRO.INI

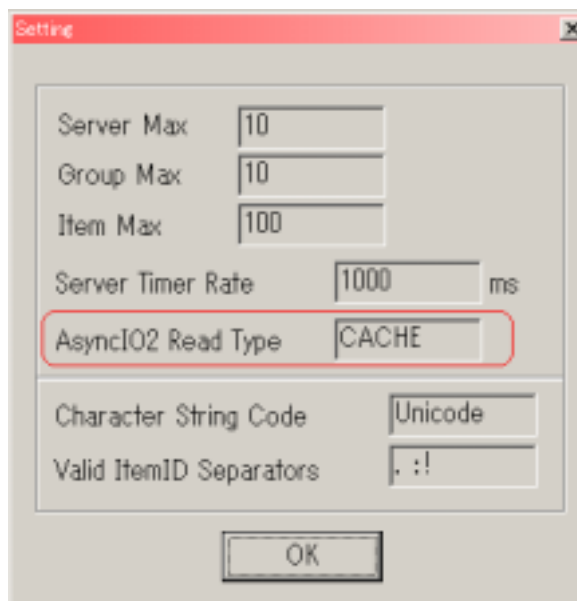

Menu [View] [Setting]