

Index

Numerics

16 levels	9-34
16384 colors	9-34
256 colors	9-34
3-speed blink	9-34
4096 colors	9-34
65536 colors	9-34

A

address	
symbols	5-49
address action	25-94
address block conversion	5-90
address block display	17-19
address conversion pattern, changing device type using .	
7-22	
address list	
confirm	5-29
display	5-30
address settings	5-99
addresses	
converting multiple	5-37
alarm	19-1
backup history	19-69
bit monitoring	19-20
direct selection	19-103
feature list	19-149
freeze mode	19-118
group	19-72
history	19-19, 19-30
list view	19-13
parts	19-89
printing history	19-143
settings	19-63
space requirements for history data	19-73
summary	19-72, 19-122
text	19-148
word monitoring	19-24
alarm file	
location	19-59
name	19-59
alarm history data	25-30
alarm language, changing	15-66
alarms	
displaying, scripts	20-17
align	
center	15-64, 15-65
fixed position	15-63
rows	15-63, 15-64, 15-65
API communication	37-161
application, triggering	21-67
attributes, change	5-64
attributes, changing	9-30

B

backlight color settings	5-156
backup data, create	33-37
backup SRAM	19-73
backup SRAM capacity	5-84
banner display	19-72
bar code reader	8-2, 8-4
base screen, change	19-35
basic operations	5-1
bit logic system variables	A-85
bit operation examples	21-97
bit states	
16	13-13, 13-23
5	13-8
blink, setting up	9-37
blue-mode monochrome LCD	9-34
BMP/JPEG, pasting	9-64
buzzer	26-1, 26-7, 26-10

C

call and display pictures	10-4, 10-11, 10-17
call screen	9-50, 9-51
calling a function	20-59
caution for saving to storage devices	19-61
CF Card	
cautions for saving to	24-136
cautions for use	5-169
copy to	33-29
handling precautions	24-137
initialize	33-37, 33-43
output folder	5-85
save cautions	5-168
setting folder	5-43
transfer project files using	33-36
CF Card Connection	33-28
CF card handling precautions	19-61
CF Card to USB memory	A-77
CF Card usage warnings	12-25
CF Card, handling precautions	25-117
CF file operation	21-35
change view	5-162
character code	
list, displaying characters not available in	9-76
table	9-72
character codes	6-6
clear area	16-26, 16-41
color	
codes	10-50
combinations	10-48
fill	9-10, 9-13, 9-15, 9-17, 9-22
palette	9-36
color code table	A-62
colors	
list of available	9-34
setting	9-34

command and status	19-58
command list	21-100
commands	21-1
common setting	5-101
common settings	5-155
communicating with multiple devices/PLCs	7-1
communication	
cycle time	A-21
error code	A-21
overview	A-2
communication state, confirming	7-14
compare memory	21-9
compare projects	33-25
comparison, conditions	21-75
compatibility	2-2
condition action	25-91
Condition Name Search Feature	25-100
conditional	
branch calculation examples	21-98
expressions	21-70
conditional expressions	20-48
control word address for data saving to storage device ..	
19-58	
conversion	
devices before and after	2-6
model names before and after	2-2
convert projects	2-2
coordinates, changing	9-33
copy memory	21-11, 21-14
copy tool	37-171
copying from other projects	5-94
creating reports	34-3
cross reference	5-93
cross references	5-30
CSV data	
display	25-81
displaying	25-30, 25-36
editing	25-40
flow	25-4
printing	25-41
transfer	25-56, 25-61, 25-89
CSV file, reading	21-51
CSV format	25-30
cursor shape	19-120

D

data	
add	11-10
buffer to internal device	21-87
changing values	14-37
comparison	11-13
display	14-1, 14-42
input	14-1
range, prevent entering data outside allowed ..	
14-29	
store mode	21-42
subtract	11-10
write	11-8
data block display	

displaying/clearing a graph	17-22
Data Block Display graph mechanism	17-59
data blocks, copying	20-12
data capacity per screen	5-165
data sampling	24-1
date/time display	14-101
debug function	21-65
debugging projects	34-3
default screen display on GP power up, choosing ...	
12-7	
delay feature	11-71
delete file	21-57
Device Access API	37-90, 37-170
device monitor	A-41
device/PLC	5-142
device/PLC series settings	5-80
device/PLC system data area allocation	A-22
device/PLC, changing	7-17, 7-28
direct access and memory link, using together	A-37
direct access method	7-7, 7-9, 12-24, A-4
direct access method plus memory link method 7-8, 7-10	
display alarm message (banner) position	19-8
display historical data	17-51
display position point	10-10
display scan time	A-21, A-36
display settings	5-78
display system settings	5-111
display unit settings	5-112
displayed text, changing	15-8
double touch	11-24
download from external storage	33-36
DRAM	24-101
draw	9-1
drawing	
arcs/pies	9-14
by pixels	9-6
circles/ovals	9-11
line/polyline	9-7
polygons	9-16
rectangles	9-8
scales	9-18
tables	9-20
drawing using other languages	A-68
D-Scripts	20-2

E

Enable System Data Area	12-11, 12-16, 18-20
enable system data area	26-9, 26-12
error check	5-96
event recorder	27-22, 27-84
example system environment	1-4
external operation from multiple GPs	19-146

F

File Manager	
moving	25-39
overview	25-86
file name, changing	21-49
filing data	25-46, 25-52

capacity	25-110
flow	25-5
transfer	25-108
fixed pin	9-49
fixed pins, display	9-80
fixing/unfixing object position	9-49
font settings	6-19
font types	6-2, 6-4
fonts, adding/deleting	6-5
forced screen switching	A-14, A-28
free space on storage device	12-24
function name	20-65

G

global D-Scripts	20-2
Global Window	18-4, 18-14
GP to PC	
receiving project files	33-9, 33-18
GP-Pro EX	1-2
GP-PRO/PBIII for Windows	2-2
graph	
data block display	17-55
historical trend	17-40
meter	17-36
normal	17-25
part settings	17-24
statistical	17-34
grids, setting up	9-57
group function	11-72
Group Number function	14-114
Guide Display	9-79

H

Handling API	37-79, 37-170
header/footer	5-57
hierarchical screen change	12-20
historic data	17-15
HMI system variables (#H system variables)	A-102

I

image fonts	6-15
image registration	10-23
index file	25-101
initialize memory	21-21, 21-22
input	
permitting	14-57, 14-61, 14-89, 14-93
sequential	14-33
input code table	9-76
input equipment settings	8-21
Input Order function	14-113
instructions, inserting	29-47
integer logic system variables	A-89
interlock	11-15
interlock touch action control	14-25
internal device address	A-5, A-7
internal device to data buffer	21-85
IPC Settings	37-155

J

Japanese FEP	16-42
JPEG file of screen capture	12-17

K

keep transfer	29-75
keypad	
creating	16-10
packages of	16-36
popup	16-3, 16-39
registration	16-23
setup	16-3, 16-7
system	16-21
user	16-22
keys	16-27

L

ladder monitor	A-42
lamp settings	13-30
language	
change settings	15-53
changing	15-16, 15-23
line chart	17-11, 17-15, 24-14
line types, setting	9-37
Local Window	18-4, 18-7
logic editor	29-99
logic memory, confirming	29-112
logic monitor, starting and stopping	29-90
logic operation examples	21-96
logic program, correcting errors	29-83
logic system variables (#L system variables)	A-85
loop feature	12-24
loop function	25-107
LS area	A-9

M

main window	5-75
mark registration	9-81, 9-83
mark restrictions	9-85
Marks, display image created with	9-66
memory	
operation	21-7
ring	21-15
memory link method	12-24, A-6
Memory Loader	33-63
memory loader	33-36
Message Display	19-135
message display	15-37
messages (text), changing and displaying	15-4
monochrome	
16 levels	9-34
LCD	9-34
move range and move direction	10-22
movie	
converting files	27-41
saving to CF card	27-13
saving to FTP server	27-16
selecting at run time	27-33

using file manager to play	27-38
moving picture	10-17
moving the file manager	27-40
multi-function	11-32
multifunction feature	11-72
multilanguage	15-16, 15-23

N

number of features per screen	5-165
numbering, automatic	25-106
numeric display	14-44

O

objects

aligning	9-32
duplicating	9-28
editing	9-26
enlarging/reducing	9-27
grouping	9-31
moving	9-28
reversing	9-33
rotating	9-32
ungrouping	9-31
offset address calculation examples	21-99
online edit	29-83
online monitor	29-77
online update	2-21
operand settings	29-58
operating environment	3-3, 3-4
operation example	21-96
operation results	20-66
operator	21-77
option settings	5-147
output file list	21-56
overlapping pictures	10-8, 10-13

P

package contents	3-2
package registration	9-85
parameter for read/write	37-93
part ID, display	9-80
Part Palette	9-41
Parts Toolbox	5-77
parts, editing	9-38
password	33-31
password input window	22-7
passwords	5-25, 5-86, 5-88, 22-1
editing	5-26
remove/change	33-34
patterns, setting	9-37
PC project simulation	32-1
PC to GP	
sending project files	33-6, 33-13
using modem to transfer screen data	33-49
pen recorder	17-42
Peripheral List	5-139
Picture Display	19-134
picture display	10-25

pictures	9-6
placing pictures registered in package	9-53
play list	
creating file	27-26
using	27-26
position point, display	10-16, 10-51
print	
batch	19-66
cancel	34-23
current screen	34-13
feature	34-10
format	19-67
introduction	34-3
layout	34-7
project settings	34-33
real-time	19-66
rich text file, format	34-3
printer	
configuring	34-11
connecting	34-8, 34-10
types of	34-9
printer operation	21-59
processing	14-81
programming D-Scripts	20-2
project converter	2-11
project files	
backup	5-20
create	5-7
setup	5-7
project information	5-41
project simulation on PC	32-1
properties	5-81, 5-105
Pro-Server EX	37-11

R

read area, internal device	17-59
read file	21-54
real-time images, displaying	27-8
receiving data	33-67
recipes	
CSV data	25-9, 25-17, 25-25
CSV format	25-9
data	25-30
data, transfer	25-63
filing data	25-42
overview	25-2
save to CF card	25-10
settings	25-56
transfer	25-67
transfer CSV data	25-3
transfer filing data	25-3
Reflect in Device/PLC	12-15
registering	
new part images	9-45
pictures in package	9-55
screen as template	9-62
registering addresses	29-13
Remote PC Access (RPA)	

input	36-20	scrolling alarm messages	19-6
window display	36-16	search	5-71
replace	5-71	search and replace	5-71
resolution, convert	5-94, 5-112	search memory	21-18
RPA (Remote PC Access)		security	
key code	36-4	level list	22-11
overview	36-2	passwords	22-1
VNC server, installing	36-2	settings	22-9
rungs and branching, inserting	29-39	select screen from templates	9-60
S		sending data	33-66
sampled data	25-30	shift memory	21-23
sampling		show address	9-80
CSV format	24-20	Show Grid	9-80
data	24-14	show history	19-90
data display	24-93, 24-116	show limit value	14-108
data storage methods	24-112	Show Ruler	9-80
data, timing	24-104	show scale	17-62
display format of data	24-30	show text window	19-42
group list	24-37	simulation on PC	32-1
if data cannot be sampled	24-120	SIO port operation	21-25
overview	24-2	SIO port operations	20-62
saving data to CF Card	24-20	Snap to Grid	9-79
structure	24-99	sound	26-1, 26-13
usage capacity of data	24-101	sound options	11-46
sampling settings	17-11	speaker	26-3
saving		Special Data Display	25-71
alarm history	19-54	special relay	A-19, A-34
CSV format	19-54	SRAM auto backup	5-171
to CF Card/USB storage	19-57	SRAM backup	24-100
saving to CF Card	12-17	SRAM backup, about	25-109
screen capture	5-171, 12-17, 12-24	standard font	6-3
screen colors, changing	5-63	state list	11-49
screen data list window	5-106	statistical data display	14-104
screen display, turning off	35-8, 35-10	STN color LCD	9-34
screen information	5-161	stop communications	7-12
screen list	5-103	stroke font	6-3
screen saver	35-1, 35-8	sub display	
screens		help	19-34
copying	5-66	using global window	19-136
saving displayed	12-17	using local window	19-136
screens, changing	12-4, 12-9, 12-12, 12-20	supported functions, list by device	1-5
script		supported models	3-7
commands	21-1	switch	
programming	21-1	bit	11-41
script I/O settings	5-145	Change Screen	11-58
scripts		color-changing	11-27
creating	20-23	label	11-51
creating global	20-41	radio	11-34
error code list	20-67	Selector	11-69
extended	20-2	Special	11-59
extended, structure of	20-22	Word	11-54
function summary	20-27	Switch Lamp	11-38
Global D-Script	20-53	switches	11-1
main function	20-27	symbol variable	5-158
operation	20-5	symbol variables, importing/exporting	29-26
printing from	20-21	system	
programming	20-59	area	A-25
		data area	A-11, A-26

variables	A-84
system data area	7-9
system settings	5-97
system settings window	5-111

T

template registration	5-163
text	
display area	15-63, 15-64, 15-65
operation	21-80
operation error status	21-89
registration	15-49
table settings	15-51
text alarm	19-126
Text Data Mode	5-143
text display	14-84
text settings	9-77
text table	15-16, 15-23, 15-31, 15-36
TFT color LCD	9-34
time schedule	23-1, 23-11
time, adjusting	35-1, 35-4
time-base	14-72
toolbar, customizing	29-6
touch areas, display	9-80
transfer project files	33-6
transfer settings	33-59
Transfer Tool	33-57
installation requirements	3-6
installing	33-68
transfer via Ethernet (LAN)	33-12
transfer via USB cable	33-5
trigger action	A-53
trigger condition	20-46
two-dimensional code reader	8-4, 8-12

U

Ultra VNC Server, RPA	36-7
upload to external storage	33-36, 33-43
usable address	A-4, A-7
USB memory to CF Card	A-77
USB storage handling instructions	24-137
user-defined functions	
creating	20-58
setup of	20-44
utility settings	5-90

V

VB.NET 2003 Program	37-57
Video	27-1
video	
before and after malfunction	27-20
recording	27-1
Video Control Area, example use of	27-132
View Addresses in the Address Map	5-32
VNC server, RPA	36-7

W

window frame	37-162
--------------------	--------

Window Part	18-21
Window Screen	19-136
windows	
changing displayed	18-11, 18-17
creating	18-4
displaying	18-7
displaying multiple on single screen	18-30
Windows XP Embedded	37-11
WinGP	37-2
API	37-34
executing the application	37-71
handling API	37-56
license key code	37-2
Prohibit Double Calling API	37-120
read or write data	37-38
Reading Text in VB	37-121
SDK	37-13
starting	37-26
VB.Net 2003 Program Examples	37-39
VB6 Program Example	37-65
WinGP, exiting	21-69
work flow to start of operation	4-2, 4-3
work space	5-97
write to file	21-44
writing text	9-23

X

XOR display	10-28, 10-47
-------------------	--------------

Z

Zoom Box	5-77
----------------	------