
Table of Contents

Preface	1
Trademark Rights	2
How To Use This Manual	3
Manual Symbols and Terminology	5
Instructions for Safe Use	7
Inquiry	8
Contact Information 8	
Table of Contents	9

Chapter 1 Welcome to GP-Pro EX

1.1	About GP-Pro EX	1-2
1.1.1	Features	1-2
1.1.2	Main features of GP-Pro EX Version 2.0 or later	1-3
1.2	Model Environment	1-4
1.3	List of Supported Functions by Device	1-5
1.3.1	GP-3200 Series	1-5
1.3.2	GP-3300 Series	1-7
1.3.3	GP-3400 Series	1-10
1.3.4	GP-3500 Series	1-13
1.3.5	GP-3600/3700 Series	1-15
1.3.6	LT 3000 Series	1-18
1.3.7	IPC Series (PC/AT)	1-20

Chapter 2 Using GP-Pro EX

2.1	Compatibility with Pro-face® Software	2-2
2.1.1	Compatible Software Versions	2-2
2.1.2	Model Names Before and After Conversion	2-2
2.1.3	Devices before and after Conversion	2-6
2.1.4	Using the Project Converter	2-11
2.1.5	Setting up the Project Converter	2-15
2.1.6	Error Messages	2-17
2.2	How to Update Software	2-21
2.2.1	Working with Online Update	2-21

Chapter 3 Environment

3.1	Package Content	3-2
3.2	Operating Environment	3-3
3.2.1	GP-Pro EX Operating Environment Requirements	3-3
3.2.2	Transfer Tool Installation Requirements	3-5

3.3	Supported Model List	3-6
3.3.1	GP3000 Series	3-6
3.3.2	LT3000 Series	3-8
3.3.3	IPC Series (PC/AT)	3-8

Chapter 4 Development Process

4.1	Creating HMI Displays	4-2
4.2	Creating HMI Displays and Logic Programs	4-3

Chapter 5 Start to Finish

5.1	Settings Menu	5-2
5.2	Starting/Creating/Saving/Finishing	5-9
5.2.1	Introduction	5-9
5.2.2	Setup Procedure	5-10
5.3	Backing Up a Project File	5-23
5.3.1	Introduction	5-23
5.3.2	Setup Procedure	5-24
5.4	Entering a Password in a Project File	5-27
5.4.1	Introduction	5-27
5.4.2	Setup Procedure	5-28
5.5	Confirming the Address List Used in a Project File	5-31
5.5.1	Introduction	5-31
5.5.2	Setup Procedure	5-32
5.6	Converting Multiple Addresses	5-40
5.6.1	Introduction	5-40
5.6.2	Setup Procedure	5-41
5.7	Viewing the Project Information	5-44
5.7.1	Introduction	5-44
5.7.2	Setup Procedure	5-45
5.8	Copying a Screen from Another Project	5-48
5.8.1	Introduction	5-48
5.8.2	Setup Procedure	5-49
5.9	Registering Addresses with Comprehensive Names	5-52
5.9.1	Introduction	5-52
5.9.2	Setup Procedure	5-53
5.10	Using Headers and Footers on a Screen	5-61
5.10.1	Introduction	5-61
5.10.2	Setup Procedure	5-62
5.11	Changing the Screen Number/Title/Screen Color	5-67
5.11.1	Introduction	5-67
5.11.2	Setup Procedure	5-68
5.12	Copying/Deleting a Screen	5-70

5.12.1	Introduction	5-70
5.12.2	Setup Procedure	5-71
5.13	Searching/Replacing Parts Addresses, Labels, and Comments	5-74
5.13.1	Introduction	5-74
5.13.2	Setup Procedure	5-75
5.14	Changing Attributes of Parts in block	5-78
5.14.1	Details	5-78
5.14.2	Procedure	5-79
5.15	Settings Guide	5-85
5.15.1	Main Window Part Names	5-85
5.15.2	[New] Settings Guide	5-89
5.15.3	[Properties] Settings Guide	5-91
5.15.4	[Utility] Settings Guide	5-101
5.15.5	[Work Space] Settings Guide	5-109
5.15.6	[System Settings] Setting Guide	5-128
5.15.7	[Preferences] Settings Guide	5-166
5.15.8	[Common Settings] Setting Guide	5-175
5.15.9	[Screen] Settings Guide	5-179
5.16	Restrictions	5-184
5.16.1	Restrictions for Creating Screens	5-184
5.16.2	Restrictions on Saving Data	5-189

Chapter 6 Font

6.1	Font Types	6-2
6.2	Defining Stroke Font and Standard Font	6-3
6.2.1	Introduction	6-3
6.2.2	Setup Procedure	6-11
6.3	Image Font	6-14
6.3.1	Introduction	6-14
6.3.2	Setup Procedure	6-15
6.4	[Font] Settings Guide	6-18
6.5	Restrictions	6-19
6.5.1	Restrictions for Standard Font	6-19
6.5.2	Restrictions for Image Font	6-19

Chapter 7 Communicating with Multiple Devices/PLCs

7.1	Settings Menu	7-2
7.2	Connecting to Multiple Device/PLCs	7-3
7.2.1	Introduction	7-3
7.2.2	Setup Procedure	7-4
7.2.3	Structure	7-8
7.3	Disconnecting Multiple Connected Devices/PLCs	7-12

7.3.1	Introduction	7-12
7.3.2	Setup Procedure	7-12
7.4	Changing a Device/PLC	7-18
7.4.1	Introduction	7-18
7.4.2	Setup Procedure	7-19
7.5	Settings Guide	7-29
7.5.1	[Change Device/PLC] Settings Guide	7-29
7.5.2	[Address Conversion Method Specification] Settings Guide	7-31
7.6	Restrictions	7-35

Chapter 8 Draw

(Figures/Text)

8.1	Settings Menu	8-2
8.2	Drawing Pictures	8-6
8.2.1	Drawing Picture Lists	8-6
8.2.2	Drawing by Pixels	8-7
8.2.3	Drawing Line/Polyline	8-8
8.2.4	Drawing Rectangles	8-10
8.2.5	Drawing Circles/Ovals	8-13
8.2.6	Drawing Arcs/Pies	8-16
8.2.7	Drawing Polygons	8-18
8.2.8	Drawing Scales	8-20
8.2.9	Drawing Tables	8-23
8.3	Writing Text	8-26
8.3.1	Setup Procedure	8-26
8.4	Editing Objects	8-29
8.4.1	Introducing Edit Tools	8-29
8.4.2	Selection Method	8-30
8.4.3	Enlarging and Reducing the Size	8-31
8.4.4	Moving Objects	8-31
8.4.5	Duplicate	8-32
8.4.6	Changing Attributes	8-34
8.4.7	Grouping (Ungrouping)	8-35
8.4.8	Order	8-36
8.4.9	Aligning	8-37
8.4.10	Rotating Right or Left	8-38
8.4.11	Reversing X-Axis (Vertical)/Y-Axis (Horizontal)	8-39
8.4.12	Changing Coordinates	8-40
8.4.13	Protecting Objects That You do not Want to Edit	8-41
8.5	Changing Colors, Line Types and Patterns	8-42
8.5.1	Setting Colors	8-42
8.5.2	Setting Blinks	8-49

8.5.3	Setting Line Types	8-50
8.5.4	Setting Patterns	8-51
8.6	Editing a Part	8-52
8.6.1	Editing Parts	8-52
8.6.2	Creating Your Own Parts	8-59
8.6.3	Registering Frequently Used Parts as Your Favorites	8-63
8.7	Using a Screen Multiple Times	8-65
8.7.1	Setup Procedure	8-65
8.8	Editing a Picture on Another Screen	8-68
8.8.1	Placing Pictures Registered in the Package	8-68
8.8.2	Registering Pictures in the Package	8-70
8.9	Creating a Screen from a Template	8-72
8.9.1	Setting up Grids	8-72
8.9.2	Selecting a Screen from Template	8-75
8.10	Pasting an Image	8-78
8.10.1	Target Image	8-78
8.10.2	Pasting BMP/JPEG Procedure	8-79
8.11	Drawing a Detailed Picture	8-85
8.11.1	Drawing a Valve	8-85
8.11.2	Displaying a Character External to the Character Code	8-91
8.12	Settings Guide	8-97
8.12.1	Text Settings Guide	8-97
8.12.2	Package List Setup Guide	8-99
8.12.3	Preferences (Screen Edit Style) Setup Guide	8-101
8.12.4	Common (Mark Registration) Settings Guide	8-104
8.13	Restrictions	8-106
8.13.1	Restrictions for Drawing (Text)	8-106
8.13.2	Restrictions for Pasting BMP/JPEG	8-106
8.13.3	Package Registration Restrictions	8-107
8.13.4	Restrictions on Marks	8-107
8.13.5	Restrictions for Screen Display	8-107

Chapter 9 Displaying Pictures

9.1	Settings Menu	9-2
9.2	Changing a Picture with Bit ON/OFF	9-4
9.2.1	Introduction	9-4
9.2.2	Setup Procedure	9-5
9.3	Displaying Alternate Pictures	9-10
9.3.1	Introduction	9-10
9.3.2	Procedure	9-10
9.4	Moving a Picture	9-15

9.4.1	Introduction	9-15
9.4.2	Setup Procedure	9-15
9.5	Settings Guide	9-20
9.5.1	Common (Image Registration) Settings Guide	9-20
9.5.2	Picture Display Settings Guide	9-22
9.6	Restrictions	9-47
9.6.1	Restrictions for Picture Display (ON/OFF Display)	9-47
9.6.2	Restrictions for Picture Display (State Display)	9-52
9.6.3	Restrictions for Picture Display (Move Display)	9-53
9.6.4	Restrictions for Picture Display (CF Image Display)	9-55

Chapter 10 Switches

10.1	Settings Menu	10-2
10.2	Creating a Bit Switch	10-4
10.2.1	Introduction	10-4
10.2.2	Setup Procedure	10-5
10.3	Inverting a Bit ON/OFF	10-7
10.3.1	Introduction	10-7
10.3.2	Setup Procedure	10-8
10.4	Writing a Value	10-10
10.4.1	Introduction	10-10
10.4.2	Setup Procedure	10-11
10.5	Increasing/Decreasing a Value	10-13
10.5.1	Introduction	10-13
10.5.2	Setup Procedure	10-14
10.6	Conditionally ON Bit Switches (Comparison)	10-16
10.6.1	Introduction	10-16
10.6.2	Setup Procedure	10-17
10.7	Using Interlock to Prevent Malfunctions	10-19
10.7.1	Introduction	10-19
10.7.2	Setup Procedure	10-20
10.8	Creating a Delayed Operation Switch	10-22
10.8.1	Introduction	10-22
10.8.2	Setup Procedure	10-23
10.9	Setting a Delay Time for Switch OFF	10-25
10.9.1	Introduction	10-25
10.9.2	Setup Procedure	10-26
10.10	Confirming Before Turning a Switch ON (Double Touch)	10-28
10.10.1	Introduction	10-28
10.10.2	Setup Procedure	10-29
10.11	Creating a Color-Changing Switch	10-31
10.11.1	Introduction	10-31

10.11.2	Setup Procedure	10-32
10.12	Performing Multiple Functions with One Switch	10-34
10.12.1	Introduction	10-34
10.12.2	Setup Procedure	10-35
10.13	Creating a Radio Switch	10-38
10.13.1	Introduction	10-38
10.13.2	Setup Procedure	10-39
10.14	Switch Lamp Parts Settings Guide	10-42
10.14.1	Bit Switch	10-45
10.14.2	Word Switch	10-59
10.14.3	Change Screen Switch	10-63
10.14.4	Special Switch	10-64
10.14.5	Selector Switch	10-74
10.15	Restrictions for Switches	10-75
10.15.1	Restrictions on the Delay Feature	10-76
10.15.2	Restrictions on the Multifunction Feature	10-77
10.15.3	Group Function Limitations	10-77

Chapter 11 Changing and Saving Screens

11.1	Settings Menu	11-2
11.2	Changing Screens by Touch	11-4
11.2.1	Introduction	11-4
11.2.2	Setup Procedure	11-5
11.3	Choosing the Screen to Display when the GP Turns on	11-7
11.3.1	Introduction	11-7
11.3.2	Setup Procedure	11-8
11.4	Changing Screens from a Device/PLC	11-10
11.4.1	Introduction	11-10
11.4.2	Setup Procedure	11-11
11.5	Changing the Displayed Screen from both Touch and a Device/PLC	11-13
11.5.1	Introduction	11-13
11.5.2	Setup Procedure	11-14
11.6	Saving the Displayed Screen	11-18
11.6.1	Introduction	11-18
11.6.2	Setup Procedure	11-19
11.7	Changing the Displayed Screen by Hierarchical Structure	11-21
11.7.1	Introduction	11-21
11.7.2	Setup Procedure	11-22
11.8	Restrictions	11-25
11.8.1	Restrictions for Screen Change	11-25
11.8.2	Restrictions for Screen Capture	11-26

Chapter 12 Windows

12.1	Settings Menu	12-2
12.2	Creating Windows	12-4
12.2.1	Introduction	12-4
12.2.2	Setup Procedure	12-5
12.3	Displaying Windows	12-7
12.3.1	Introduction	12-7
12.3.2	Setup Procedure	12-8
12.4	Changing the Displayed Window	12-11
12.4.1	Introduction	12-11
12.4.2	Setup Procedure	12-12
12.5	Displaying the Same Window on All Screens	12-14
12.5.1	Introduction	12-14
12.5.2	Setup Procedure	12-15
12.6	Changing the Displayed Window on All Screens	12-17
12.6.1	Introduction	12-17
12.6.2	Setup Procedure	12-18
12.7	Window Part Settings Guide	12-21
12.7.1	Bit Action	12-22
12.7.2	Word Action	12-23
12.7.3	Activate Switch	12-26
12.8	Restrictions for Windows	12-29
12.8.1	Restrictions for Window Screens	12-29
12.8.2	Restrictions for Window Screens	12-30

Chapter 13 Using Lamps

13.1	Settings Menu	13-2
13.2	Turning the Lamp ON/OFF with the ON/OFF Bit	13-4
13.2.1	Introduction	13-4
13.2.2	Setup Procedure	13-5
13.3	Switching by Turning Multiple Bits ON/OFF (Up to 5 States)	13-8
13.3.1	Introduction	13-8
13.3.2	Setup Procedure	13-9
13.4	Switching by a Combination of Multiple Bits (Up to 16 States)	13-13
13.4.1	Introduction	13-13
13.4.2	Setup Procedure	13-14
13.5	Switching by the Word Address Bit Change (Bit Settings)	13-19
13.5.1	Introduction	13-19
13.5.2	Setup Procedure	13-20
13.6	Change When Word Address Value Changes	13-25
13.6.1	Introduction	13-25
13.6.2	Setup Procedure	13-26

13.7	Procedure for Creating a Lamp	13-31
13.8	Lamp Settings Guide	13-33
13.8.1	Common to All Parts	13-33
13.8.2	Lamp Feature	13-35
13.8.3	Color	13-38
13.8.4	Label	13-39

Chapter 14 Data Display and Data Input

14.1	Settings Menu	14-2
14.2	Displaying/Inputting Numeric Data	14-5
14.2.1	Introduction	14-5
14.2.2	Setup Procedure	14-6
14.3	Displaying/Inputting Text Data	14-8
14.3.1	Introduction	14-8
14.3.2	Setup Procedure	14-9
14.4	Displaying Numerical Data as an Alarm	14-12
14.4.1	Introduction	14-12
14.4.2	Setup Procedure	14-12
14.5	Color-coding and Displaying Multiple Ranges	14-16
14.5.1	Introduction	14-16
14.5.2	Setup Procedure	14-17
14.6	Displaying the Date and Time	14-22
14.6.1	Introduction	14-22
14.6.2	Setup Procedure	14-22
14.7	Preventing Operational Errors By Using Interlock	14-24
14.7.1	Introduction	14-24
14.7.2	Setup Procedure	14-25
14.8	Prevent Entering Data Outside the Allowed Range	14-28
14.8.1	Introduction	14-28
14.8.2	Setup Procedure	14-28
14.9	8 x16 Dots Sequential Input	14-31
14.9.1	Introduction	14-31
14.9.2	Setup Procedure	14-31
14.10	Changing Values by Adding/Subtracting	14-34
14.10.1	Introduction	14-34
14.10.2	Setup Procedure	14-34
14.11	Data Display Settings Guide	14-39
14.11.1	Numeric Display	14-41
14.11.2	Text Display	14-81
14.11.3	Date/Time Display	14-97
14.11.4	Statistical Data Display	14-100
14.11.5	Show Limit Value	14-105

14.12	Restrictions	14-107
14.12.1	Text Display Restrictions	14-107
14.12.2	Limitations of Time-Base Function	14-109
14.13	How Data Input Order Works	14-110
14.13.1	Set Input Order	14-110
14.13.2	Set Input Order by Group	14-111

Chapter 15 Keypad Input

15.1	Settings Menu	15-2
15.2	Popup Keypad Display	15-3
15.2.1	Introduction	15-3
15.2.2	Setup Procedure	15-3
15.3	Constant Keypad Display	15-6
15.3.1	Introduction	15-6
15.3.2	Setup Procedure	15-6
15.4	Customizing the Keypad Layout	15-9
15.4.1	Introduction	15-9
15.4.2	Setup Procedure	15-9
15.5	Setup Guide	15-21
15.5.1	Keypad Settings Guide	15-21
15.5.2	Common (Keypad Registration) Settings Guide	15-24
15.5.3	Key Part Settings Guide	15-28
15.6	Restrictions	15-38
15.6.1	Restrictions for Popup Keypad	15-38
15.6.2	Restrictions for Keypad Direct Placement	15-39
15.6.3	Restrictions for Keypad Customization	15-39
15.6.4	Restrictions for Clear Area	15-40
15.6.5	Restrictions for Japanese FEP	15-41

Chapter 16 Bar Code/USB Keyboard Inputs

16.1	Settings Menu	16-2
16.2	Connecting a Barcode/Two-dimensional Code Reader	16-4
16.2.1	Introduction	16-4
16.2.2	Setup Procedure	16-5
16.2.3	Barcode Inputs	16-16
16.3	Display USB Keyboard Inputs	16-19
16.3.1	Details	16-19
16.3.2	Setup Procedure	16-20
16.4	Settings Guide	16-24
16.4.1	[Input Equipment Settings] Settings Guide	16-24
16.5	Restrictions	16-30
16.5.1	Bar Code Restrictions	16-30

16.5.2	USB Keyboard Restrictions	16-31
--------	---------------------------------	-------

Chapter 17 Displaying and Changing Text

17.1	Settings Menu	17-2
17.2	Changing and Displaying Messages (Text)	17-4
17.2.1	Introduction	17-4
17.2.2	Setup Procedure	17-5
17.3	Changing the Displayed Text	17-8
17.3.1	Introduction	17-8
17.3.2	Setup Procedure	17-9
17.4	Changing Languages (Multilanguage)	17-16
17.4.1	Introduction	17-16
17.4.2	Setup Procedure	17-17
17.5	Changing a Text's Language (Multilanguage)	17-25
17.5.1	Introduction	17-25
17.5.2	Setup Procedure	17-26
17.6	Importing/Exporting Registered Text Tables for Use in Different Projects	17-33
17.6.1	Introduction	17-33
17.6.2	Setup Procedure	17-34
17.6.3	Text Table File Format	17-38
17.7	Settings Guide	17-39
17.7.1	Message Display Settings Guide	17-39
17.7.2	Common (Text Registration) Settings Guide	17-52
17.7.3	Text Table Settings Guide	17-54
17.7.4	Switch/Lamp - Label (Enable Text Table) Settings Guide	17-59
17.7.5	Drawing Text (Using the Text Table) Settings Guide	17-61
17.7.6	Alarm Part - Item/Details (Text Table) Settings Guide	17-63
17.7.7	Alarm (Enable Text Table) Settings Guide	17-64
17.7.8	Placing Text When Using Text Tables	17-65
17.8	Restrictions	17-69
17.8.1	Restrictions on Message Display	17-69
17.8.2	Language Change (Multilanguage) Restrictions	17-69
17.8.3	Restrictions on Text Table Converter	17-71

Chapter 18 Graph Display

18.1	Settings Menu	18-2
18.2	Displaying the Current Value in a Bar/Circle/Tank Graph	18-4
18.2.1	Introduction	18-4
18.2.2	Procedure	18-5
18.3	Displaying Alarms in a Bar/Circle/Tank Graph	18-7
18.3.1	Introduction	18-7
18.3.2	Procedure	18-8

18.4	Using Line Charts	18-11
18.4.1	Introduction	18-11
18.4.2	Procedure	18-12
18.5	Using a Line Chart to View Historic Data	18-15
18.5.1	Introduction	18-15
18.5.2	Procedure	18-16
18.5.3	Operating Procedure	18-19
18.6	Displaying Multiple Addresses Concurrently (Block Display)	18-25
18.6.1	Introduction	18-25
18.6.2	Procedure	18-26
18.6.3	Displaying/Clearing a Data Block Display Graph	18-28
18.7	Settings Guide	18-30
18.7.1	Graph Part Settings Guide	18-30
18.7.2	Historical Trend Graph Settings Guide	18-46
18.7.3	Data Block Display Graph Settings Guide	18-68
18.8	Restrictions	18-84
18.8.1	Restrictions for Graphs	18-84
18.8.2	Restrictions for Historical Trend Graphs	18-84
18.8.3	Data Block Display Graph Restrictions	18-88

Chapter 19 Alarm

19.1	Settings Menu	19-2
19.2	Scrolling Alarm Messages	19-8
19.2.1	Introduction	19-8
19.2.2	Setup Procedure	19-12
19.3	Viewing Active Alarms in a List	19-15
19.3.1	Introduction	19-15
19.3.2	Setup Procedure	19-16
19.4	Acknowledging the Alarm History	19-21
19.4.1	Introduction	19-21
19.4.2	Setup Procedure	19-22
19.5	Working with Alarm History	19-32
19.5.1	Introduction	19-32
19.5.2	Setup Procedure	19-33
19.6	Displaying Help (Sub Display)	19-36
19.6.1	Introduction	19-36
19.6.2	Setup Procedure	19-37
19.7	Viewing Alarms by Line	19-50
19.7.1	Introduction	19-50
19.7.2	Setup Procedure	19-51
19.8	Storing Alarm Messages in the CF Card or USB Storage Device	19-56
19.8.1	Details	19-56

19.8.2	Setup Procedure	19-57
19.8.3	Structure	19-59
19.9	Read data when Alarms occur	19-64
19.9.1	Details	19-64
19.9.2	Setting Procedure	19-65
19.10	Settings Guide	19-72
19.10.1	Common (Alarm) Settings Guide	19-72
19.10.2	Alarm Parts Settings Guide	19-105
19.10.3	Text Alarm Part Settings Guide	19-144
19.11	Restrictions	19-160
19.11.1	Restrictions for Printing Alarm History	19-160
19.11.2	Restrictions for Sub Display/Details	19-161
19.11.3	Restrictions for Running External Operations from Multiple Display Units	19-163
19.11.4	Text Alarm Part Restrictions	19-165
19.12	Alarm Feature List	19-166

Chapter 20 Using Scripts (Programming without Parts)

20.1	Settings Menu	20-2
20.2	Conditional Operations	20-5
20.3	Copying Data in Blocks	20-12
20.4	Displaying an Alarm When an Error Occurs	20-17
20.5	Communicating with Unsupported Peripheral Devices	20-21
20.6	Procedure for Creating Scripts	20-39
20.6.1	Procedure for Creating D-Scripts/Global D-Scripts	20-39
20.6.2	Procedure for Creating Extended Scripts	20-41
20.6.3	Setting Up User-Defined Functions	20-42
20.7	Triggered Condition Setup	20-44
20.7.1	Continuous Action	20-44
20.7.2	Timer	20-44
20.7.3	Bit	20-45
20.7.4	Condition Expression	20-46
20.8	Settings Guide	20-51
20.8.1	D-Script/Common [Global D-Script] Settings Guide	20-51
20.8.2	User-Defined Functions Settings Guide	20-56
20.9	Restrictions	20-57
20.9.1	D-Script/Global D-Script Restrictions	20-57
20.9.2	Extended Script Restrictions	20-61
20.9.3	Restrictions on User-Defined Functions	20-63
20.9.4	Notes on Operation Results	20-64
20.9.5	Errors	20-65
20.10	Program Instructions/Conditional Expressions	20-66

20.10.1	Bit Operation	20-71
20.10.2	Draw	20-72
20.10.3	Memory Operation	20-76
20.10.4	SIO Port Operation	20-97
20.10.5	CF File Operation/USB File Operation	20-107
20.10.6	Printer Operation	20-133
20.10.7	Others	20-139
20.10.8	Conditional Expressions	20-144
20.10.9	Comparison	20-148
20.10.10	Operator	20-150
20.10.11	Text Operation	20-154
20.10.12	Operation Example	20-170

Chapter 21 Enhancing Security

21.1	Settings Menu	21-2
21.2	Creating Limited Access Screens	21-4
21.2.1	Setup Procedure	21-4
21.3	Limiting Screen Access by Authority	21-7
21.3.1	Setup Procedure	21-7
21.4	Disable All Touch Operations for the Timing	21-10
21.4.1	Detail	21-10
21.4.2	Procedure	21-11
21.5	Save Operation History	21-12
21.5.1	Detail	21-12
21.5.2	Procedure	21-13
21.6	Password/User ID Input Window	21-16
21.6.1	Introduction to "Level Mode" and "User ID Mode"	21-16
21.7	Settings Guide	21-19
21.7.1	Common (Security Settings) Settings Guide	21-19
21.7.2	Common Settings (Operation Log Settings) Guide	21-29
21.8	Restrictions	21-54
21.8.1	Restrictions on Passwords and IDs	21-54
21.8.2	Restrictions on the global interlock	21-56
21.8.3	Restrictions on the operation log	21-57

Chapter 22 Scheduling Operations

22.1	Settings Menu	22-2
22.2	Turning ON/OFF a Motor at the Designated Time	22-3
22.2.1	Setup Procedure	22-3
22.3	Changing the Temperature at the Designated Time	22-7
22.3.1	Setup Procedure	22-7
22.4	Common Time Schedule Settings Guide	22-11

22.4.1	Time Schedule Tab	22-11
22.4.2	[Time Schedule] Dialog Box Settings Guide	22-12
22.5	Restrictions	22-22

Chapter 23 Data Sampling

23.1	An Introduction to the Sampling Feature	23-2
23.1.1	What is the Sampling Feature?	23-2
23.2	Settings Menu	23-3
23.3	Sampling Data at Constant Intervals	23-5
23.3.1	Introduction	23-5
23.3.2	Setup Procedure	23-6
23.4	Sampling Data at Specific Periods	23-10
23.4.1	Introduction	23-10
23.4.2	Setup Procedure	23-11
23.5	Displaying Sampled Data	23-14
23.5.1	Introduction	23-14
23.5.2	Setup Procedure	23-15
23.6	Saving Sampling Data to CF Card/USB storage	23-20
23.6.1	Introduction	23-20
23.6.2	Setup Procedure	23-21
23.6.3	CF Card/USB Storage Save Operation	23-23
23.7	Display/Save Sampled Data in CSV with a Custom Format	23-30
23.7.1	Introduction	23-30
23.7.2	Setup Procedure	23-31
23.8	Settings Guide	23-37
23.8.1	Common (Sampling) Settings Guide	23-37
23.8.2	Sampling Data Display Guide	23-104
23.9	Sampling Structure	23-110
23.9.1	Summary	23-110
23.9.2	The Sampling Action	23-115
23.9.3	About Sampling Data Display	23-126
23.9.4	About Save in CF Card/USB Storage	23-131
23.9.5	Printing	23-134
23.9.6	Writing to the Internal Device	23-140
23.10	Restrictions	23-144
23.10.1	Data Sampling Restrictions	23-144
23.10.2	Display Restrictions	23-146
23.10.3	Restrictions on CF Card/USB Storage Save	23-147
23.10.4	Restrictions on Printing	23-149

Chapter 24 Setting Recipes

24.1	Recipes	24-2
------	---------------	------

24.1.1	What are Recipes?	24-2
24.1.2	Types of Recipes	24-3
24.2	Settings Menu	24-6
24.3	Creating CSV Data Recipes	24-10
24.3.1	Introduction	24-10
24.3.2	Setup Procedure	24-11
24.4	Transferring CSV Data Recipes Using Touch	24-18
24.4.1	Introduction	24-18
24.4.2	Setup Procedure	24-19
24.4.3	Transfer Process	24-24
24.5	Transferring CSV Data Recipes from the Device	24-26
24.5.1	Introduction	24-26
24.5.2	Setup Procedure	24-27
24.5.3	Transfer Process	24-30
24.6	Displaying/Editing CSV data on the Screen	24-31
24.6.1	Introduction	24-31
24.6.2	Setup Procedure	24-32
24.6.3	Operating Procedure	24-37
24.7	Creating Filing Data Recipes	24-43
24.7.1	Introduction	24-43
24.7.2	Setup Procedure	24-44
24.8	Transferring Recipes (Filing Data) Using Manual Transfer	24-47
24.8.1	Introduction	24-47
24.8.2	Setup Procedure	24-48
24.8.3	Transfer Process	24-52
24.9	Transferring Recipes (Filing Data) Using Automatic Transfer	24-53
24.9.1	Introduction	24-53
24.9.2	Setup Procedure	24-54
24.9.3	Transfer Process	24-56
24.10	Settings Guide	24-57
24.10.1	Common [Recipe] Setup Guide	24-57
24.10.2	[Special Data Display] Settings Guide	24-72
24.11	Mechanism of Transfer CSV Data Setup	24-91
24.11.1	How to Transfer CSV Data	24-91
24.11.2	Control Word Address	24-93
24.11.3	About Condition Name Search Feature	24-101
24.11.4	About Automatic Numbering	24-107
24.12	Mechanism of Filing Data Transfer	24-109
24.12.1	Filing Data Structure	24-109
24.12.2	Transferring Item Name and Block Number	24-112
24.12.3	Manual Transfer Via the Internal Device	24-114
24.13	Restrictions	24-117
24.13.1	Restrictions on Transferring CSV Data	24-117

24.13.2	Restrictions on Displaying/Editing/Printing CSV Data	24-121
24.13.3	Restrictions on Transferring Filing Data	24-124

Chapter 25 Using Audio Notifications

25.1	Settings Menu	25-2
25.2	Announcing Alarms with Sound	25-3
25.2.1	Introduction	25-3
25.2.2	Setup Procedure	25-4
25.3	Sounding the GP Buzzer from a Device/PLC	25-7
25.3.1	Introduction	25-7
25.3.2	Setup Procedure	25-8
25.4	Triggering a Buzzer Sound from the GP	25-10
25.4.1	Introduction	25-10
25.4.2	Setup Procedure	25-11
25.5	Settings Guide	25-13
25.5.1	Common (Sound) Settings Guide	25-13
25.6	Restrictions	25-16

Chapter 26 Recording and Playing Video

26.1	Settings Menu	26-2
26.2	Displaying Video Camera Output	26-8
26.2.1	Introduction	26-8
26.2.2	Setup Procedure	26-9
26.3	Recording Video	26-12
26.3.1	Introduction	26-12
26.3.2	Setup Procedure	26-13
26.4	Recording Video Before and After a Malfunction	26-20
26.4.1	Introduction	26-20
26.4.2	Setup Procedure	26-21
26.5	Playing Movies	26-25
26.5.1	Introduction	26-25
26.5.2	Setup Procedure	26-26
26.5.3	Converting Movie Files	26-41
26.6	Displaying Multiple Video Camera Outputs Simultaneously	26-50
26.6.1	Introduction	26-50
26.6.2	Setup Procedure	26-51
26.7	Displaying PC Screen	26-59
26.7.1	Introduction	26-59
26.7.2	Setup Procedure	26-60
26.8	Saving Video Output as Still Images	26-65
26.8.1	Introduction	26-65
26.8.2	Setup Procedure	26-66

26.9	Settings Guide	26-74
26.9.1	[Video/Movie] Settings Guide	26-74
26.9.2	[FTP Server] Settings Guide	26-94
26.9.3	Common [Movie] Settings Guide	26-96
26.9.4	[Movie Player] Settings Guide	26-98
26.9.5	Common [Video Module] Settings Guide	26-118
26.9.6	[Video Module] Settings Guide	26-127
26.9.7	Video Module Display Settings Guide	26-142
26.10	Restrictions	26-145
26.10.1	Restrictions on Movie Features	26-146
26.10.2	Restrictions on Video Module Features	26-149

Chapter 27 Using Logic Functions

27.1	Setup Menu	27-2
27.2	Switching Screens Using a Logic Program	27-4
27.2.1	Detail	27-4
27.3	Generating a Pulse at One Second Intervals	27-5
27.3.1	Detail	27-5
27.4	Entering the Timer Value on the Screen	27-6
27.4.1	Detail	27-6
27.5	Moving Data Between Connection Devices	27-7
27.5.1	Detail	27-7

Chapter 28 Logic Programming

28.1	Logic Programming Steps	28-2
28.2	Preparing to Create Logic Programs	28-3
28.2.1	Use Logic Feature	28-3
28.2.2	Logic Type	28-3
28.2.3	Logic Screen Logic Screen Part Name	28-5
28.2.4	Customizing the Toolbar	28-6
28.3	Registering Addresses	28-13
28.3.1	Usable Addresses	28-13
28.3.2	To use addresses with flexible names (Variable Format)	28-20
28.3.3	To use prepared addresses (Address Format)	28-32
28.3.4	Using External Addresses	28-37
28.3.5	Using Internal Addresses	28-39
28.3.6	System Variable	28-41
28.4	Inserting Rungs and Branches	28-42
28.4.1	Editing Rungs	28-42
28.4.2	Inserting and Deleting Branches	28-49
28.5	Insert Ladder Instructions	28-51
28.5.1	Editing Instructions	28-51

28.5.2	Subroutines and Labels	28-59
28.6	Allocating Addresses to Instructions	28-66
28.6.1	Operand Settings	28-66
28.7	Input Comments	28-72
28.7.1	Adding Titles	28-72
28.7.2	Adding Rung Comments	28-74
28.7.3	Symbol Variable Comments	28-76
28.7.4	[Comment List] Window	28-78
28.8	Logic Operations with Power ON	28-81
28.9	Transferring Logic Programs	28-84
28.10	Correcting Logic Program Errors	28-86
28.11	To monitor logic programs on the computer (Online Monitor)	28-88
28.11.1	Online Monitoring Procedures	28-89
28.11.2	Monitor/Change the Current Value of Symbol Variables	28-90
28.11.3	Adjusting the Setting Values for the PID Instruction	28-93
28.11.4	To edit logic programs that are being monitored (Online Edit)	28-95
28.12	To monitor logic programs on the GP (Logic Monitor)	28-99
28.12.1	Starting and Ending the Logic Monitor	28-100
28.12.2	Logic Monitor Functions	28-102
28.13	Convenient features to create/edit logic	28-109
28.13.1	Replacing Parts in Instructions and Instructions in Parts	28-109
28.13.2	Checking the Size for Creating Programs	28-123
28.13.3	Logic To adjust Scan Time	28-128
28.13.4	To enhance security	28-138
28.13.5	Using Reference Features to Search Logic Programs	28-140
28.13.6	Using Previously Created Logic Programs	28-144
28.13.7	To delete unused symbol variables at once	28-152
28.14	Settings Guide	28-154
28.14.1	[Logic Programs] Setting Guide	28-154
28.14.2	[Work Space] Settings Guide	28-155
28.15	Restrictions	28-161
28.15.1	Delay of Scan Time	28-161
28.15.2	Restriction of Online Monitor	28-163
28.15.3	Restriction of Logic Monitor	28-164
28.15.4	Restriction of Logic Action when the power is ON	28-164

Chapter 29 Ladder Instructions

29.1	Instructions	29-2
29.2	Instruction Notation List	29-6
29.2.1	Basic Instructions	29-6
29.2.2	Timer Instruction	29-8
29.2.3	Counter Instruction	29-8

29.2.4	R/W Instructions	29-10
29.2.5	Arithmetic Operation	29-11
29.2.6	Time Operation	29-13
29.2.7	Logical Operation	29-14
29.2.8	Transfer Instructions	29-16
29.2.9	Shift Instructions	29-17
29.2.10	Rotation Instructions	29-19
29.2.11	Function Operations	29-21
29.2.12	Trigonometric Function	29-23
29.2.13	Other Functions	29-25
29.2.14	Arithmetic Compare	29-26
29.2.15	Time Compare	29-27
29.2.16	Date Compare	29-28
29.2.17	Data Conversion Instructions	29-29
29.2.18	Type Conversion Instructions	29-31
29.2.19	I/O Driver	29-33
29.3	About Addresses You can Set up as Operands	29-34
29.3.1	Connection Device Address	29-34
29.3.2	Symbol	29-34
29.3.3	LS Address	29-35
29.3.4	USR area	29-36
29.3.5	System Variable	29-37
29.3.6	Variable	29-38
29.3.7	Logic Device when using the Address Format	29-41
29.4	Number of Steps Per Instruction	29-42
29.5	Instruction Descriptions	29-43
29.5.1	Bit Instructions	29-43
29.5.2	Pulse Instruction	29-57
29.5.3	Program Control	29-61
29.5.4	Timer Instruction	29-81
29.5.5	Counter Instruction	29-94
29.5.6	R/W Instructions	29-101
29.5.7	Operation (Arithmetic)	29-110
29.5.8	Operation (Time)	29-160
29.5.9	Operation (Logical)	29-170
29.5.10	Operation (Transfer)	29-201
29.5.11	Calculation Instruction (Shift Instruction)	29-232
29.5.12	Operation (Rotation Instruction)	29-270
29.5.13	Function Instruction	29-310
29.5.14	Function Instruction	29-354
29.5.15	Compare Instruction (Arithmetic)	29-405
29.5.16	Compare (Time)	29-435
29.5.17	Compare (Date)	29-459

29.5.18	Convert (Data)	29-483
29.5.19	Convert Type	29-519
29.5.20	I/O Driver Instructions	29-573

Chapter 30 Controlling External I/O

30.1	Controlling External I/O	30-2
30.1.1	Summary	30-2
30.1.2	Mapping Addresses (variables) to I/O Terminals	30-3
30.2	Settings Guide	30-8
30.2.1	I/O Screen Settings Guide	30-8
30.3	Controlling GP External I/O	30-9
30.3.1	Detail	30-9
30.3.2	Setup Procedure	30-9
30.3.3	[I/O Driver Settings] Setting Guide	30-12
30.4	Using FlexNetwork External I/O	30-13
30.4.1	Detail	30-13
30.4.2	Procedure	30-15
30.4.3	I/O Terminal Operations	30-18
30.4.4	[I/O Driver] Settings Guide	30-19
30.5	Controlling External I/O in LT	30-24
30.5.1	Summary	30-24
30.5.2	Mapping I/O (Common)	30-26
30.5.3	Interface Specification	30-46
30.5.4	Standard Input	30-49
30.5.5	Standard Output	30-52
30.5.6	High Speed Counter (Common)	30-54
30.5.7	High Speed Counter (Single-phase Settings)	30-56
30.5.8	High speed counter (2-phase settings)	30-81
30.5.9	PWM Output	30-88
30.5.10	Normal Pulse Output	30-97
30.5.11	Acceleration/Deceleration Pulse Output	30-105
30.5.12	Pulse Catch	30-121
30.5.13	Error information	30-123
30.5.14	Restrictions	30-126
30.6	Controlling I/O in LT and EX Modules	30-127
30.6.1	Detail	30-127
30.6.2	Setup Procedure	30-129
30.6.3	I/O Driver's [External Driver] Settings Guide	30-131
30.6.4	Error information	30-139
30.6.5	Restrictions	30-145
30.7	Controlling External I/O by Using HTB	30-146
30.7.1	Summary	30-146

30.7.2	Setting Procedure	30-148
30.7.3	Allocating I/O (Common)	30-152
30.7.4	Standard I/O	30-155
30.7.5	Expanding I/O Using EX Module	30-161
30.7.6	Using I/O Driver Instructions	30-180
30.7.7	[I/O Driver] Settings Guide	30-188
30.7.8	Error information	30-205
30.7.9	Restrictions	30-210
30.7.10	List of HTB Objects	30-211

Chapter 31 Simulation

31.1	Settings Menu	31-2
31.2	Checking the Display operation on the PC.	31-3
31.2.1	Details	31-3
31.2.2	Procedure	31-4
31.3	Checking the operation of the I/O driver on the PC	31-8
31.3.1	Details	31-8
31.3.2	Procedure	31-9
31.4	Settings Guide	31-14
31.4.1	Setting Guide for [GP-Pro EX Simulation]	31-14
31.4.2	[Address View] Settings Guide	31-18
31.4.3	[I/O View] Settings Guide	31-21
31.5	Restrictions	31-23

Chapter 32 Transferring Projects and Data

32.1	Settings Menu	32-2
32.2	Transferring Project Files via USB Cable Transfer	32-5
32.2.1	Introduction	32-5
32.2.2	Transfer Process	32-6
32.3	Transferring Project Files via Ethernet (LAN)	32-12
32.3.1	Introduction	32-12
32.3.2	Transfer Process	32-13
32.4	Comparing Project Changes Prior to Transfer	32-25
32.4.1	Introduction	32-25
32.4.2	Comparison Procedure	32-26
32.5	Transferring Data Only to a CF Card	32-28
32.5.1	Introduction	32-28
32.5.2	Transfer Process	32-29
32.6	Transferring with Passwords	32-31
32.6.1	Introduction	32-31
32.6.2	Setup Procedure	32-32
32.6.3	Remove/Change Transfer Password	32-34

32.7	Transferring project files using a CF Card or USB storage	32-36
32.7.1	Introduction	32-36
32.7.2	Transfer Process	32-37
32.8	Updating Remote Screen Data via Modem	32-48
32.8.1	Introduction	32-48
32.8.2	Transfer Process	32-49
32.9	Checking Errors	32-53
32.9.1	Introduction	32-53
32.9.2	Setup Procedure	32-54
32.10	Setting Up Transfer Tool	32-56
32.10.1	[Transfer Settings] Settings Guide	32-59
32.10.2	[Modem] Settings Guide	32-65
32.10.3	How Sending Data Works	32-66
32.10.4	How Receive Works	32-67
32.10.5	Installing the Transfer Tool	32-68
32.11	Restrictions	32-70
32.11.1	Transfer Restrictions	32-70
32.11.2	Restrictions for Transfer Using Ethernet	32-70
32.11.3	Restrictions on Transfer Using a COM Port	32-71
32.11.4	Restrictions on CF Card Connection	32-71
32.11.5	Restrictions on Modem Transfer	32-71
32.11.6	Restrictions on Memory Loader	32-72

Chapter 33 Print

33.1	Settings Menu	33-2
33.2	Printing the Project Settings	33-4
33.2.1	Detail	33-4
33.2.2	Setup Procedure	33-5
33.2.3	Print Layout	33-8
33.3	Printing GP data	33-9
33.3.1	Details	33-9
33.3.2	Printer Setup Procedure	33-14
33.4	Printing the Current Screen	33-20
33.4.1	Details	33-20
33.4.2	Operation Method	33-21
33.4.3	Setup Procedure	33-23
33.5	Cancel Printing	33-30
33.5.1	Details	33-30
33.5.2	How to Cancel Printing	33-31
33.5.3	Setup Procedure	33-33
33.6	Settings Guide	33-40
33.6.1	Print Settings Guide	33-40

33.6.2	System Settings [Printer] Settings Guide	33-55
33.7	Restrictions	33-60
33.7.1	Restrictions for Printing from the GP	33-60
33.7.2	Restrictions of GP Remote Printer Server	33-62

Chapter 34 Adjusting the Time and Screen Saver

34.1	Settings Menu	34-2
34.2	Adjusting the Time	34-4
34.2.1	Detail	34-4
34.2.2	Setup Procedure	34-5
34.3	Using the Screen Saver	34-8
34.3.1	Turning off the Screen When Not in Use	34-8
34.3.2	Turning OFF the Screen from a Device/PLC	34-10
34.4	Restrictions	34-12
34.4.1	Restrictions for Adjusting the Clock	34-12
34.4.2	Restrictions for Turning OFF the Screen	34-12

Chapter 35 Display or Operate a Computer from the GP

35.1	Action Environment	35-2
35.1.1	Summary	35-2
35.1.2	VNC Server	35-2
35.2	Settings Menu	35-3
35.3	Display/Operate the computer screen on the GP	35-4
35.3.1	Introduction	35-4
35.3.2	Procedure	35-6
35.3.3	Operating Procedure	35-22
35.4	Settings Guide	35-23
35.4.1	Remote PC Access Window Display Settings Guide	35-23
35.4.2	System Settings [Input Equipment Settings] - [Remote PC Access Input] Settings Guide	35-29
35.4.3	Remote PC Access Window Display Setting Guide	35-30
35.5	Restrictions	35-31
35.5.1	Remote PC Access Window Display Unit Restrictions	35-31
35.5.2	Remote PC Access Window Restrictions	35-32
35.5.3	Server Computer Connection Restrictions	35-33
35.5.4	RPA Popup Keypad Restrictions	35-34
35.5.5	USB Keyboard for RPA Restrictions	35-34
35.5.6	USB mouse for RPA Restrictions	35-35

Chapter 36 Use the Computer to Display and Operate GP Data

36.1	What are GP-Viewer EX and Web Server?	36-2
------	---	------

36.1.1	GP-Viewer EX	36-3
36.1.2	Web Server	36-5
36.2	GP-Viewer EX Operation Environment and Development Flow	36-6
36.2.1	Target models	36-6
36.2.2	Development Process	36-13
36.3	Web Server Operation Environment and Development Flow	36-14
36.3.1	Target models	36-14
36.3.2	Supported Features	36-16
36.3.3	Development Process	36-17
36.4	Settings Menu	36-18
36.4.1	Setting Up GP-Viewer EX	36-18
36.4.2	Web Server Settings	36-19
36.5	Using GP-Viewer EX to Display and Operate with Data from Display Units	36-22
36.5.1	Introduction	36-22
36.5.2	Procedure	36-23
36.6	Restricting Access to GP-Viewer EX	36-30
36.6.1	Introduction	36-30
36.6.2	Procedure	36-31
36.7	Displaying Addresses on the Web Server and Changing Address Values	36-35
36.7.1	Introduction	36-35
36.7.2	Procedure	36-36
36.7.3	Operating Procedure	36-42
36.8	Displaying Alarm information on the Web Server	36-48
36.8.1	Introduction	36-48
36.8.2	Operating Procedure	36-49
36.9	Displaying Alarm Information as RSS Data on the Web Server	36-50
36.9.1	Introduction	36-50
36.9.2	Setup Procedure	36-51
36.10	Using the Web Server to Transfer Files to the CF Card or USB Storage	36-53
36.10.1	Introduction	36-53
36.10.2	Setup Procedure	36-54
36.10.3	Operating Procedure	36-58
36.11	Restricting Access to the Web Server	36-60
36.11.1	Introduction	36-60
36.11.2	Setup Procedure	36-61
36.11.3	Operating Procedure	36-66
36.12	Settings Guide	36-67
36.12.1	Standard Template HTML Setting Guide	36-67
36.12.2	System Settings [Display Unit] - [Remote Viewer] Settings Guide	36-74
36.13	Using Synchronous and Asynchronous Modes with GP-Viewer EX	36-78
36.13.1	Screen Mode	36-78
36.13.2	On GP-Viewer EX Startup	36-78
36.13.3	When Changing Screens	36-79

36.13.4	When Running Screen Operations	36-84
36.14	Restrictions	36-86
36.14.1	GP-Viewer EX Restrictions	36-86
36.14.2	Web Server Restrictions	36-87

Chapter 37 WinGP (GP Operations on IPC Series)

37.1	WinGP Overview	37-2
37.1.1	What is WinGP?	37-2
37.1.2	Full Configuration	37-3
37.1.3	Differences between IPC and GP	37-4
37.2	Operation Environment	37-6
37.2.1	Supporting Models	37-6
37.2.2	Supported Protocols	37-7
37.2.3	Model Environment	37-9
37.2.4	Application Development Environment	37-9
37.3	Development Process	37-10
37.3.1	Development Process	37-10
37.3.2	Setup Procedure	37-11
37.4	Settings Menu	37-33
37.5	Retrieve WinGP information or Operate WinGP from user application	37-34
37.5.1	Introduction	37-34
37.5.2	Procedure	37-35
37.5.3	Samples of Read/Write data (device access API)	37-38
37.5.4	Sample to retrieve the WinGP status and change the settings (Handling API) ..	37-56
37.6	Running the Application from WinGP	37-71
37.6.1	Introduction	37-71
37.6.2	Switch Startup Settings	37-72
37.6.3	D-Script startup settings	37-75
37.7	Keep History of Error Messages Displayed in WinGP	37-77
37.7.1	Detail	37-77
37.7.2	Setup Procedure	37-78
37.8	API Function List	37-79
37.8.1	Handling API	37-79
37.8.2	Device Access API	37-89
37.9	Settings Guide	37-156
37.9.1	System Settings [Display Unit Settings] [IPC Settings] Settings Guide	37-156
37.9.2	Window Frame Settings Guide	37-164
37.9.3	ProjectCopy (Copy Tool) Settings Guide	37-166
37.10	Restrictions	37-167
37.10.1	Restrictions On Install	37-169
37.10.2	Restrictions on Window Frames	37-171
37.10.3	Restrictions on using Windows XP Embedded	37-173

37.10.4	Restriction on AP Communication	37-173
37.10.5	Transfer Restrictions	37-174
37.10.6	Restrictions on error logs	37-174

Appendix

A.1	Communication	A-2
A.1.1	Settings Menu	A-2
A.1.2	Communicating with a Device/PLC Using the Direct Access Method	A-4
A.1.2.1	Details	A-4
A.1.3	Using the Memory Link Method with Unsupported Devices/PLCs	A-7
A.1.3.1	Details	A-7
A.1.4	LS Area (Direct Access Method)	A-9
A.1.4.1	LS Area List	A-9
A.1.4.2	System Data Area	A-11
A.1.4.3	Special Relay	A-23
A.1.4.4	Device/PLC System Data Area Allocation Procedure	A-26
A.1.5	System Area (Memory Link Area)	A-29
A.1.5.1	System Area List	A-29
A.1.5.2	System Data Area	A-31
A.1.5.3	Special Relay	A-39
A.1.6	Restrictions	A-42
A.1.6.1	GP Internal Device Restrictions	A-42
A.1.6.2	Special Relay Restrictions	A-42
A.1.6.3	Restrictions when Using Direct Access and Memory Link Together	A-43
A.1.6.4	Restrictions when Using the USR Area	A-46
A.2	Monitoring the Value of Device Addresses (Device monitor)	A-47
A.2.1	Detail	A-47
A.2.2	Setup Procedure	A-50
A.2.3	Operating Procedure	A-51
A.2.4	Restrictions	A-60
A.3	Executing Multiple Actions (Programs) with a Switch Operation	A-61
A.3.1	Trigger Action Parts Settings Guide	A-61
A.3.2	Triggered Action Restrictions	A-78
A.4	Drawing Using Other Languages	A-79
A.4.1	Details	A-79
A.4.2	Setup Procedure	A-80
A.5	Transferring Data Between a CF Card and a USB Memory Device	A-90
A.5.1	Detail	A-90
A.5.2	Setup Procedure	A-91
A.5.3	Operating Procedure	A-93
A.6	System Variables	A-96
A.6.1	Logic System Variables (#L System Variables)	A-97
A.6.2	HMI system variables (#H system variables)	A-116

Chapter Using ST3000 Series

1.	Supported Models	1-2
----	------------------------	-----

2.	Pro-face® Software Compatibility	1-2
3.	Features Supported	1-3
4.	Differences with the GP	1-6