

Index

Numerics

16 levels	8-36
16 State	13-13
16384 Colors	8-36
256 Colors	8-36
3-speed blink	8-36
4096 Colors	8-36
5 State	13-8
65536 Colors	8-36

A

About Backup SRAM	19-79, 24-116, 25-106
About GP-Pro EX	1-2
Add Data	10-13
Add/Delete Font	6-5
Address Action	25-92
Address Block Conversion	5-47, 5-116
Address Format	29-17
Address Monitor	29-95
Address Refresh	29-124
Address Settings Window	5-128
Adjusting the Time	35-4
Adjusting Time	35-1
Alarm Feature List	19-163
Alarm History	19-21, 19-31
Alarm History Backup	19-75
Alarm History Data	25-29
Alarm List View	19-15
Alarm parts	19-102
Alarm Settings	19-69
Alarms	19-1
Align	8-33, 17-74, 17-76, 17-77
Allow Input	14-58, 14-62, 14-93, 14-97
Animation	8-86, 20-1, 22-23
API	38-35
API Communication	38-170
Application Trigger	21-145
Automatic Numbering	25-103
AUX Output	10-56
Auxiliary Line	18-135

B

Backing Up a Project File	5-23
Backup	5-187
Backup SRAM Capacity	5-107
Banner	19-78
Bar Code Reader	16-2, 16-4
Base Layer	20-50
Batch Print	19-72
Bit Logic System Variables	A-89
Bit Monitoring	19-22
Bit Switch	10-51, 10-90
Block Display	18-43
Blue-mode monochrome LCD	8-36
BMP/JPEG, Pasting	8-70

Branch	29-34
Bulletin Message	5-155, 17-44
Buzzer	10-56, 26-1, 26-7, 26-10

C

Calculation Examples	21-176, 21-177, 21-178, 21-179
Call and Display Pictures	9-4, 9-10, 9-17
Calling a Function	21-60
CAN Specification	30-149
Cancel Printing	34-37
CANopen	30-149
Caution When Saving to a CF Card	5-211, 19-60, 24-155
Center	17-75, 17-77
CF Card	5-212, 33-30
CF Card; initialize	33-38, 33-44
CF Card Cautions for Use	5-211, 11-27, 19-60, 24-156, 25-115
CF Card Connection	33-29
CF Card Folder	5-53, 5-108
CF File Operation	21-110
Change Attribute	5-75, 8-30
Change Backlight Color	5-199
Change Base Screen	19-36
Change File Name	21-125
Change Screen Color	5-74
Change Screen Switch	10-69, 10-99
Change View	5-205
Changing a Device/PLC	7-18
Changing Alarm Language	17-96
Changing and Displaying Messages (Text)	17-4
Changing Coordinates	8-35
Changing Device/PLC	7-40
Changing Screens	11-4, 11-10, 11-13, 11-21
Changing the Displayed Text	17-8
Changing Values	14-37
Character Code Table	8-81
Character Codes	6-6
Checking Memory Usage	29-112
Choosing the Screen to Display when the GP Turns on	11-7
Clear Area	15-37, 15-50
Collectively Editing Symbol Variables	29-151
Color Animation	20-25
Color Code Table	A-68
Color Code	9-52
Color Palette	8-39
Color Setup	8-36
Color-Changing Switch	10-31
Color	9-50
Command and Status	19-58
Commands/Conditional Expressions	21-68
Comment	29-63
Comment List	29-160
Common Settings	5-198
Common Settings Window	5-130

Communicating with Multiple Devices/PLCs	7-1	Display Historical Data	18-87
Communication	A-2	Display Position Point	9-9, 9-16, 9-53
Communication Cycle Time	A-25	Display Scan Time	A-25, A-40
Communication Error Code	A-25	Display Settings	5-145
Compare Memory	21-81	Display Settings	5-102
Compare projects	33-25	Display Unit	5-147
Comparison	10-16, 21-153	Displaying Alarms	21-17
Compatibility	2-2	Displaying Characters Not Available In Character Code Table	8-85
Condition Action	25-89	Displaying CSV Data	25-35
Condition Name Search Feature	25-97	Displaying/Clearing a Data Block Display Graph	18-46
Conditional Expressions	21-49, 21-148	Documenting	34-4
Confirm Address List	5-38	Double Touch	10-28
Confirming the Communication State	7-15	Download from external storage	33-37
Convert	2-2	DRAM	24-117
Convert Resolution	5-146	Draw	8-1
Converting Movie Files	27-43	Drawing Arcs/Pies	8-15
Copy A Screen	5-77	Drawing Circles/Ovals	8-13
Copy Memory	21-83, 21-87	Drawing Dots	8-8
Copy Tool	38-181	Drawing in Other Languages	A-74
Copying Data in Blocks	21-12	Drawing Line/Polyline	8-9
Copying From Other Projects	5-120	Drawing Polygons	8-17
Create Backup Data	33-38	Drawing Rectangles	8-11
Creating Project Files	5-9	Drawing Scales	8-19
Creating Scripts	21-42	D-Script	21-2
Cross Reference	5-39, 5-119	Duplicate	8-28
CSV Data	25-4, 25-10, 25-18, 25-25, 25-29	E	
CSV Data Transfer	25-3, 25-54, 25-59, 25-87	Edit	8-25
CSV Format	24-20, 25-10, 25-29	Editing CSV Data	25-39
Cursor Shape	19-135	Editing Parts	8-44
D		Enable System Data Area	11-12, 11-17, 12-21, 26-9, 26-12
Data	21-166	Enlarging and Reducing	8-27
Data Block Display Graph	18-94	Error Check	5-124, 5-191
Data Block Display Graph Structure	18-99	Ethernet Multilink	5-177, 7-31
Data Capacity Per Screen	5-208	Event Recorder	27-23, 27-87
Data Display	14-1, 14-42	Expert Mode	5-104, 20-47
Data Input	14-1	Extended Script	21-2
Data read/write	38-39	External Operation on Multiple GPs	19-160
Data Sampling	24-1	F	
Data Storage Mode	21-118	File Manager	25-83
Date/Time Display	14-104	File Name	19-59
Debug Function	21-143	Filing Data	25-5, 25-41, 25-44, 25-50
Debugging	34-4	Filing Data Capacity	25-107
Delay Feature	10-114	Filing Data Transfer	25-3, 25-61, 25-65, 25-105
Delete File	21-135	Fill	8-12, 8-14, 8-16, 8-18, 8-22
Device Access API	38-99, 38-180	Fixed Pin	5-135, 8-35
Device Conversion	7-23	Fixed Position	17-74
Device Monitor	A-46	Flip	8-34
Device/PLC	5-181	Font	6-18
Device/PLC Series Settings	5-103	Font Types	6-2, 6-4
Device/PLC System Data Area Allocation	A-26	Free Space on Storage Device	11-26
Devices Before and After Conversion	2-7	Freeze Mode	19-134
Direct access and memory link, using together	A-42	Front Layer	20-50
Direct Access Method	7-8, 7-10, 11-25, A-4	FTP Server	5-212, 34-15
Direct Access Method + Memory Link Method	7-9, 7-11		
Direct Selection	19-118		
Display Address List	5-39		
Display Alarm Message (Banner) Position	19-10		

Function Key 38-79, 39-1
Function Name 21-65

G

Global D-Script 21-2
Global Function Key 39-9
Global interlock 22-11, 22-48
Global Window 12-5, 12-15
GP Remote Printer Server 34-9
GP-PRO/PBIII for Windows 2-2
GP-Viewer 7-34
Graph 18-51
Graphic 8-7
Grid Setup 8-63
Group Number Function 14-122
Grouping 8-31
Groups 10-115, 19-77

H

Hand-held GP 39-1
Handling API 38-57, 38-89, 38-180
Header/Footer 5-68
Hierarchical screen change 11-21
Historical Data Display 18-32
Historical Trend Graph 18-67
HMI system variables (#H system variables) A-107
Horizontal Animation 20-32
Hue 20-31

I

If data cannot be sampled 24-137
IIS FTP Service 34-16
IL 5-193, 5-197, 5-206, 29-37
Image Font 6-14
Image Registration 9-23
Import Data Link 29-167
Index File 25-98
Initialize Memory 21-95, 21-96
Input Code Table 8-85
Input Display 14-115, 15-22
Input Equipment Settings 16-22
Input in Sequence 14-33
Input Order Function 14-121
Install Transfer Tool 33-72
Instructions 29-41, 29-105
Integer Logic System Variables A-94
Interlock 10-19, 14-25
Interlock Settings 22-47
Internal Device Address A-5, A-7
Internal Device To Data Buffer 21-164
IPC Settings 38-164

J

Japanese FEP 15-51
JPEG file, screen capture 11-18

K

Kanji Conversion 15-39, 15-51

Key code 36-4, 38-2
Keypad 15-3, 15-7
Keypad Registration 15-34
Keys 15-38

L

Label 10-61, 29-53
Ladder 5-193, 5-197, 5-206
Ladder Instruction Insertion 29-41
Ladder Instructions Icon List 29-146
Ladder Monitor A-48
Lamp 13-31
Language 5-187
Language Change Settings 17-64
Layer Separator 20-50
Limit Value Display 15-22
Line Chart 18-13, 18-32 24-14
Line Type Setup 8-43
List of Script Error Code 21-67
Load Screen 8-56, 8-57
Local Function Key 39-6
Local Window 12-4, 12-8
Lock Password 5-34
Logic Memory 29-112
Logic monitor 29-92
Logic Program Error Correction 29-77
Logic Program Restriction 29-115
Logic System Variables (#L system variables) A-89
Logic View 32-26
Loop 11-26
Loop Function 25-104
LS Area A-8

M

Main Functions 21-27
Main Window 5-97
Manual symbols and terminology 5
Mark 8-75, 8-105
Mark Registration 8-102, 8-103
Master GP 7-27
Memory Link Method 11-25, A-6
Memory Loader 33-37, 33-67
Memory Operation 21-78
Memory Restriction 29-115
Memory Ring 21-88
Message Display 17-47
Meter Graph 18-63
Model Environment 1-5
Model Names Before and After Conversion 2-2
Monitor Step 5-196
Monochrome 16 Levels 8-36
Monochrome LCD 8-36
Move 8-27
Move Range and Move Direction 9-22
Movie 27-27, 27-35
Movie Converter 27-43
Moving Display 9-17
Moving The File Manager 25-38, 27-42

Multifunction	10-37, 10-115
Multilanguage	17-15, 17-24

N

Name Of Each Part Of The Screen	5-97
Normal Graph	18-52
Normalized Data	18-122
Number Of Features That Can Be Placed On A Screen 5-208	
Number of Scripts	21-60
Number Of Windows	12-31
Numeric Display	14-44

O

One Shot	10-56
Online Editing	29-86
Online Monitor	29-79
Online Updates	2-23, 5-187
Operand	5-192, 29-7, 29-57
Operand Settings	29-57
Operating Environment	3-3, 3-4
Operation	21-6
Operation Example	21-176
Operation Lock	5-177, 7-34, 10-76, 37-13
Operation Results	21-66
Operation Switch	39-6
Operator	21-155
Other Languages	17-15, 17-24
Output File List	21-133
Overlapping pictures	9-8, 9-12
Overview	36-2

P

Package Content	3-2
Package Registration	8-61, 8-105
Parameter for read/write	38-102
Part Name	29-7
Parts Palette	8-46
Parts Toolbox	5-100
Password	5-27, 5-109, 5-112, 29-127, 33-32
Passwords For Edit Project	5-28
Passwords Remove/Change	33-35
Pattern Setup	8-43
Pen Recorder	18-69
Peripheral List	5-178
Picture Display	9-25, 19-148
PID Monitor	29-161
Placing Graphics Registered in a Package	8-59
Play list	27-27
Popup Keypad	15-3, 15-48
Position Animation	20-32
Precautions	7fa
Preferences	5-187
Prevent Entering Data Outside Allowed Range	14-29
Preview	5-17
Print Feature	34-12
Print Format	19-73
Print Layout	34-8

Printer Configuration	34-14, 34-25
Printer Operation	21-137
Printer Output	21-21
Printer	34-12
Printer Types	34-11
Printing Alarm History	19-157
Printing CSV Data	25-40
Procedure for Creating Scripts	21-23
Processing	14-84
Program	21-2
Prohibit Double Calling API	38-131
Project Converter	2-12
Project File	5-9
Project Information	5-51
Print	34-4, 34-47
Properties	5-104
Properties Window	5-135
Pro-Server EX	38-13
Protecting Objects	8-35
Pulse	29-62

R

Radio Switch	10-39
Read Area	18-99
Read CSV File	21-127
Read File	21-130
Reading Text in VB	38-132
Real-time Print	19-72
Real-Time Video	27-8
Receive	33-9, 33-18, 33-71
Recipe Data	25-29
Recipes	25-2
Recipes Settings	25-54
Recording Video Before and After a Malfunction	27-21
Reflect in Device/PLC	11-16
Register Date and Time	23-1
Registering Addresses	29-8
Remote PC Access (RPA) input	36-27
Remote PC Access (RPA) Window Display	36-21
Replace	5-81
Retentive Transfer	29-75
Rich Text File	34-4
Rotate	8-34
Rotation	20-38
Rung and Branch Insertion	29-27
Running the Application from WinGP	38-73, 38-79

S

Sampled Data	24-14
Sampling	18-13, 18-28, 24-2, 24-120, 24-128
Sampling Data	25-29
Sampling Data Display	24-108, 24-132
Sampling Data Display Format	24-30
Sampling Group List	24-37
Sampling Structure	24-115
Save as CSV	19-54
Save Location	19-59
Save to a CF Card Control Word Address	19-58

Save to CF card	11-18, 19-54, 24-20, 25-10	State List	10-59
Saving a Movie File to the CF Card	27-14	Statistical Data Display	14-107
Saving a Movie File to the FTP Server	27-17	Statistical Graph	18-61
Saving the Displayed Screen	11-18	Steps	29-7
Saving to a CF card	19-57	STN Color LCD	8-36
Scan Time	29-117, 29-120, 29-169	Stop Communications	7-13
Screen Capture	5-213, 11-18, 11-26	Stroke Font	6-3
Screen Data List Window	5-137	Structure of Extended Scripts	21-22
Screen Display, Turning Off	35-8, 35-10	Sub Display	19-35
Screen Hard Copy	34-27	Sub Display Using a Global Window	19-151
Screen Information	5-204	Sub Display Using a Local Window	19-151
Screen List Window	5-133	Subroutines	5-202, 29-49
Screen Saver	35-1, 35-8	Subtract Data	10-13
Script	5-194, 21-2, 21-54	Summary	19-78, 19-137
Script I/O Settings	5-185	Supported Colors	8-36
Script Operation Overview	21-27	Supported Functions, List By Device	1-5
Scrolling Alarm Messages	19-8	Supported Model List	3-8
Search	5-81, 5-139	Switch Lamp	10-48
Search Memory	21-91	Switches	10-1
Search/Replace	5-81	Symbol	5-59, 29-8
Security	29-127	Symbol Variable	29-8, 29-115
Security level list	22-46	Symbol Variable Settings	5-201
Security Settings	22-40	System Keypad	15-31
Selector List Parts	10-88	System Area	A-29
Selector Switch	10-86	System Data Area	7-10, A-10, A-30
Send	33-6, 33-13, 33-70	System Settings Window	5-126, 5-145
Send Web Site	33-60	System Variable	29-9, 29-26, A-88
Setting Up Blink	8-43		
Setting Up User-Defined Functions	21-45	T	
Shift Memory	21-97	Text Table	17-62
Show Address	8-101	Template Registration	5-206
Show CSV	25-78	Template, Save As	8-68
Show Fixed Pin	8-100	Templates, Selecting a Screen	8-66
Show Grid	8-99	Text	8-91
Show History	19-103	Text Alarm	19-141, 19-162
Show Limit Value	14-113	Text Data Mode	5-182
Show Parts ID	8-101	Text Display	14-87, 19-149
Show Ruler	8-100	Text Display Area	17-74, 17-75, 17-76
Show Scale	18-102	Text Operation	21-159
Show Text Window	19-43	Text Operation Error Status	21-168
Show Touch Area	8-100	Text Registration	17-61
Simulation	32-1	Text Table	17-15, 17-24, 17-31, 17-36
SIO Port Operation	21-62, 21-100	TFT Color LCD	8-36
Site Transfer	33-64	Thin Out	18-75
Slave GP	7-27	Time Schedule	23-10
Snap to Grid	8-98	Time zone	37-83
Sound	26-1, 26-13	Time-Base	14-74
Space Requirements for Alarm History Data	19-79	Time-Base Function	14-74
Speaker	26-3	Toolbar Customization	29-144
Special Data Display	25-69	Transfer project files	33-6
Special Operation	10-100	Transfer project files using CF Card	33-37
Special Relay	A-23, A-38	Transfer Settings	33-61
Special Switch	10-70	Transfer Tool	33-58
SRAM Auto Backup	5-213	Transfer Tool Installation Requirements	3-6
Standard Font	6-3	Transferring Project Files via Ethernet (LAN)	33-12
Standard Line	18-79	Transfer via USB transfer cable	33-5
Starting and Ending the Logic Monitor	29-90	Transparent Parts	10-49, 14-43, 18-51
Startup	5-1	Trigger Action	A-59

Trigger	21-47
Two-dimensional Code Reader	16-4, 16-11

U

Ungrouping	8-31
Upload to external storage	33-37, 33-44
Usable Addresses	A-4, A-6
Usage Capacity of Sampled Data	24-117
USB memory to CF card	A-82
USB storage	5-212
USB storage handling instructions	24-156
USB Storage Device Handling Instructions	5-212
User Keypad	15-22, 15-33
User-created Keypad	15-10
User-Defined Functions	21-59
Using File Manager to Play Movies	27-39
Using Logic	29-3
Using Modem to Transfer Screen Data to a Remote GP 33-50	
Using the Web Server to Transfer Files to the CF Card or USB Storage	37-60
Utility	5-116

V

Variable	29-8
Variable format	29-10
VB.NET 2003 Program	38-58
VB.NET 2003 Program Example	38-40
VB6 Program Example	38-67
Vertical Animation	20-35
Video Control Area, Example Use Of	27-136
Video	27-1
Video Recording	27-1
View Addresses In Address Map	5-42
Visibility	20-22
VNC Server	36-2
VNC server, RPA	36-7

W

Watch List	29-165
Web Server	37-1
Window Frame	38-171
Window Part	12-22
Window Screen	19-151
Window, Changing Displayed	12-12, 12-18
Windows XP Embedded	38-13
Windows, Creating	12-4
Windows, Displaying	12-8
WinGP	38-2, 38-28
WinGP SDK	38-15
WinGP, exiting	21-147, 38-28
Word Monitoring	19-26
Word Operation	10-95
Word Switch	10-65
Work Space	5-126
Write Data	10-10
Write File	21-121
Writing Text	8-23

X

XOR display	9-29, 9-49
XY Block Display Scatter Graph	18-125
XY Historical Scatter Graph	18-111

Z

Zoom Box	5-101
----------------	-------