

# Index

- A**
- Abnormal termination ..... 1-10
  - Address Block Conversion ..... 1-111
  - Address Block Conversion on Model Change ..... 1-112
  - AddressMonitor ..... 2-45, 2-174
  - Administrator ..... 1-4
  - Alarm ..... 1-113, 1-134, 1-136
  - Analog ..... 2-39
  - Analog settings ..... 2-156
  - API communication ..... 1-194
- B**
- Backlight ..... 2-12, 2-18, 2-79
  - Backup ..... 1-17, 2-11
  - Backup data ..... 1-29, 2-104, 2-172
  - Backup SRAM ..... 1-131, 1-183, 2-31, 2-98, 2-105
  - Bar Code Settings ..... 2-24, 2-93
  - Brightness Control ..... 2-10, 2-175
  - Built-in Function ..... 1-113
  - Buzzer ..... 1-61, 2-15, 2-79
- C**
- Calibration ..... 2-39, 2-101
  - Calibration Touch Panel ..... 2-39, 2-101
  - CANopen Driver ..... 2-54
  - CF card ..... 1-28
  - CF memory loader ..... 1-154, 2-171
  - CF memory loader tool ..... 1-28
  - CF Starting ..... 2-171
  - Check Board ..... 2-153
  - Check CANopen Master ..... 2-54
  - Check CANopen Slave ..... 2-55
  - Check Color Tone ..... 2-103
  - Check COM1/COM2/LAN ..... 2-40, 2-102
  - Check Display Pattern ..... 1-63, 2-99
  - Check Font ..... 2-100
  - Check Touch Panel ..... 2-39, 2-101
  - Checking Communication ..... 2-49, 2-118
  - Clock ..... 1-182, 1-183, 2-11
  - Color ..... 2-173
  - Comment ..... 1-148, 2-77, 2-110, 2-117
  - Communication line ..... 1-76, 1-77, 1-78, 1-79
  - Communication settings ..... 2-21, 2-91
  - Communication speed ..... 1-75, 2-93, 2-95
  - Contrast
    - 2-10, 2-80, 2-128, 2-129, 2-130, 2-132, 2-134, 2-175
  - Controller function execution time ..... 2-57
  - Cross cable ..... 1-22, 1-45
  - Cross cursor ..... 2-19
  - Cross-hair cursor ..... 2-167
- D**
- Data ..... 1-11, 1-17, 1-29, 1-30, 1-31, 1-60, 1-61
  - Data Display ..... 1-72, 1-74, 1-75, 1-76, 1-78, 1-80, 2-93
  - Debug Settings ..... 2-146
  - Default ..... 2-173
  - Detach hardware ..... 2-142
  - Device address
    - 1-72, 1-73, 1-74, 2-82, 2-83, 2-111, 2-118
  - Device Monitor ..... 2-174
  - Device read command ..... 1-172, 1-174, 1-176
  - Device write command ..... 1-172, 1-173, 1-174
  - Device/PLC Settings ..... 2-91
  - DeviceNet (Slave) unit ..... 1-93, 1-215
  - DIO settings ..... 2-154
  - Display scan time ..... 1-80
  - Display Settings ..... 2-80
  - Dot ..... 2-101
  - Download ..... 2-171
  - Driver ..... 1-16, 1-77, 1-79
  - D-script
    - 1-72, 1-74, 1-75, 1-79, 1-80, 1-113, 1-131, 2-80
  - Duplicate ..... 1-120
- E**
- Ethernet ..... 1-19, 1-70, 2-22
  - Ethernet settings ..... 2-25, 2-85
  - EX module ..... 1-95, 1-215, 2-52
  - EXM Driver ..... 1-202, 2-154
  - Explorer ..... 1-48
  - Export ..... 1-112, 1-118, 1-121
  - Extended Script ..... 1-132, 1-186
  - Extended Settings ..... 2-86
- F**
- Firewall ..... 1-24
  - FLEX NETWORK ..... 2-48
  - FLEX NETWORK unit ..... 1-84, 1-207, 2-115
  - Forced transfer ..... 2-67
  - Frame Settings ..... 2-145
- G**
- General ..... 2-127
  - GP-Viewer EX ..... 1-157
- H**
- Hatch ..... 1-28, 1-181
  - Home ..... 2-76, 2-109, 2-116
- I**
- I/O ..... 1-30, 1-147
  - I/O Check ..... 1-83, 2-47, 2-112
  - I/O Driver Settings ..... 2-112, 2-113
  - I/O Monitor
    - 1-81, 1-85, 2-46, 2-48, 2-113, 2-119, 2-152
  - Images ..... 1-119
  - Import ..... 1-112, 1-118, 1-119
  - Initial screen ..... 1-58, 2-13, 2-14, 2-78
  - Initial Start Mode screen ..... 1-30
  - Initialization ..... 2-31
  - Initialization Menu Settings ..... 2-97

|                                         |             |
|-----------------------------------------|-------------|
| Initialization of the backup SRAM ..... | 2-34, 2-98  |
| Initialization of the CF card .....     | 2-33, 2-98  |
| Initialization of the user memory ..... | 2-32, 2-97  |
| Install .....                           | 1-4         |
| Instruction operand .....               | 1-138       |
| IP address .....                        | 2-25        |
| IPC .....                               | 2-68, 2-138 |

## K

|              |              |
|--------------|--------------|
| Keypad ..... | 1-134, 1-136 |
|--------------|--------------|

## L

|                              |                                                              |
|------------------------------|--------------------------------------------------------------|
| Ladder Monitor .....         | 2-174                                                        |
| Ladder program .....         | 1-61, 1-80                                                   |
| Liquid crystal display ..... | 2-99                                                         |
| Lithium battery .....        | 1-183                                                        |
| Log in .....                 | 1-4                                                          |
| Logic program .....          | 1-138, 1-155,<br>2-44, 2-45, 2-58, 2-59, 2-111, 2-117, 2-150 |
| LogicMonitor .....           | 2-44, 2-174                                                  |
| Loopback cable .....         | 1-82, 1-83, 2-40, 2-46, 2-47                                 |
| LS Area .....                | 1-77, 1-79                                                   |

## M

|                                                                      |                             |
|----------------------------------------------------------------------|-----------------------------|
| Main Unit Setting .....                                              | 2-150                       |
| Main Unit Settings<br>2-78, 2-111, 2-117, 2-127, 2-133, 2-139, 2-167 |                             |
| Maintenance Menu .....                                               | 2-99                        |
| Mark .....                                                           | 1-120                       |
| Memory .....                                                         | 1-4, 1-12, 1-17, 2-31       |
| Memory check .....                                                   | 1-148                       |
| Memory Information .....                                             | 2-38, 2-102                 |
| Memory loader tool .....                                             | 1-28                        |
| Memory-resident software .....                                       | 1-13, 1-25, 1-26            |
| Menu and Error Settings .....                                        | 1-55, 1-57, 1-59, 2-3, 2-80 |
| Modem .....                                                          | 1-30, 1-153                 |
| Movie Converter .....                                                | 1-107                       |
| Multilingual Manager .....                                           | 1-7                         |

## N

|                          |                                       |
|--------------------------|---------------------------------------|
| Network Settings .....   | 2-144                                 |
| New Project File .....   | 1-110                                 |
| Noise .....              | 1-68, 1-73, 1-76, 2-128, 2-130, 2-135 |
| NTFS format .....        | 1-28                                  |
| Numeric touch keys ..... | 2-5                                   |

## O

|                             |           |
|-----------------------------|-----------|
| Offline mode menu .....     | 2-16      |
| Online monitoring .....     | 1-155     |
| Online update .....         | 1-33      |
| Operating environment ..... | 1-4, 1-12 |
| Operation Settings .....    | 2-79      |

## P

|                           |                          |
|---------------------------|--------------------------|
| Package Window .....      | 1-120                    |
| Part List .....           | 1-121                    |
| Pass-through .....        | 1-36, 1-40               |
| Password .....            | 1-17, 1-27, 1-29         |
| Password settings .....   | 2-3, 2-27, 2-96          |
| Peripheral Settings ..... | 2-20, 2-91, 2-112, 2-118 |

|                           |                           |
|---------------------------|---------------------------|
| Pin .....                 | 1-172, 1-187, 2-21        |
| Play .....                | 2-132                     |
| PLC .....                 | 1-171, 2-91               |
| Position .....            | 2-173                     |
| Power supply .....        | 1-58, 1-187, 1-205, 2-150 |
| Print .....               | 1-122, 2-23, 2-92         |
| Printer Settings .....    | 2-23, 2-92                |
| PROFIBUS .....            | 1-90, 1-214               |
| PROFIBUS Slave Unit ..... | 1-90                      |
| Project file .....        | 1-11, 1-14, 2-64, 2-104   |
| Project Information ..... | 1-131                     |
| ProjectCopy .....         | 1-155                     |
| Pro-Server EX .....       | 1-177, 2-26               |

## R

|                              |             |
|------------------------------|-------------|
| RAAA*** .....                | 1-180       |
| RAAE*** .....                | 1-189       |
| REAA*** .....                | 1-191       |
| Received data .....          | 1-171       |
| Recording .....              | 2-130       |
| Remote Viewer Settings ..... | 2-73, 2-88  |
| Reset .....                  | 2-171       |
| Restart IPC .....            | 2-141       |
| RFAF*** .....                | 1-191       |
| RGB .....                    | 2-103       |
| RGB Screen .....             | 2-173       |
| RGE**** .....                | 1-197       |
| RPA Function .....           | 1-122       |
| RS-232C .....                | 1-69, 2-102 |
| RS-422 .....                 | 1-69, 2-102 |

## S

|                                 |                     |
|---------------------------------|---------------------|
| Sampling Settings .....         | 1-131               |
| Screen .....                    | 2-173               |
| Screen Management .....         | 1-111               |
| Screen Settings .....           | 2-7, 2-78           |
| Script error .....              | 1-33                |
| Script Settings .....           | 2-95                |
| Search Window .....             | 1-112               |
| Security Password .....         | 2-29, 2-96          |
| Security settings .....         | 1-33, 1-34, 1-117   |
| Self-diagnosis .....            | 1-26, 2-2           |
| Setup .....                     | 1-62, 2-26          |
| Show Terminals .....            | 2-151               |
| Simulation .....                | 1-149               |
| Sink type .....                 | 1-82, 2-46, 2-112   |
| SIO .....                       | 1-185, 1-186, 2-102 |
| Sound Settings .....            | 1-117               |
| Source type .....               | 1-82, 2-47, 2-112   |
| Specify file name and run ..... | 2-143               |
| Standby mode .....              | 2-12, 2-78          |
| Start .....                     | 1-7, 1-10           |
| Start Explorer .....            | 2-142               |
| Start Task Manager .....        | 2-143               |
| Startup .....                   | 1-110               |
| Status LED .....                | 1-54, 1-58, 2-18    |
| STD Driver .....                | 1-199, 2-151        |
| Straight cable .....            | 1-22, 1-45          |
| Switch .....                    | 1-54, 1-56, 2-3     |

|                            |                   |
|----------------------------|-------------------|
| Symbol Variable List ..... | 1-119             |
| System area .....          | 1-60, 1-61, 1-179 |
| System Area Settings ..... | 2-84              |
| System error .....         | 1-192, 2-81       |
| System Menu .....          | 2-80, 2-171       |
| System Password .....      | 2-96              |

## T

|                                |                  |
|--------------------------------|------------------|
| Template .....                 | 1-120            |
| Text Table .....               | 1-118, 1-136     |
| Touch operation .....          | 2-18, 2-79       |
| Touch sound .....              | 2-15             |
| Transfer .....                 | 1-14, 1-150, 2-2 |
| Transfer from CF to SRAM ..... | 2-104            |
| Transfer from SRAM to CF ..... | 2-66, 2-105      |
| Transfer Project File .....    | 2-104            |

## U

|                                             |                   |
|---------------------------------------------|-------------------|
| Unit .....                                  | 2-133             |
| Upload .....                                | 1-28, 1-29, 2-171 |
| USB .....                                   | 2-94, 2-103       |
| USB storage .....                           | 2-171             |
| USB transfer cable .....                    | 1-14, 1-97        |
| USB-Serial (RS-232C) conversion cable ..... | 1-98              |
| User memory (FEPR0M) .....                  | 2-6, 2-31         |
| User-defined function .....                 | 1-113             |

## V

|                               |                            |
|-------------------------------|----------------------------|
| Variable .....                | 1-119, 2-44, 2-45, 2-174   |
| VD Display Settings .....     | 2-62, 2-63, 2-134          |
| VD Operation Settings .....   | 2-133                      |
| Video display .....           | 2-60                       |
| Video Settings .....          | 2-127, 2-128, 2-130, 2-132 |
| Video window .....            | 2-134, 2-135               |
| Virtual COM port Driver ..... | 1-38                       |
| VM unit .....                 | 1-92, 2-60                 |
| VM Unit Settings .....        | 2-133                      |
| Volume .....                  | 2-173                      |

## W

|                                                         |                                         |
|---------------------------------------------------------|-----------------------------------------|
| Watchdog error .....                                    | 1-198                                   |
| Web Server .....                                        | 2-89                                    |
| When the GP supporting the CANopen master is used ..... | 2-159                                   |
| Window Settings .....                                   | 2-81                                    |
| WinGP .....                                             | 1-57, 1-107, 1-108, 1-122, 1-193, 2-138 |
| WinGP SDK .....                                         | 1-108                                   |

