

Device/PLC Connection Manuals



About the Device/PLC Connection Manuals

Prior to reading these manuals and setting up your device, be sure to read the "Important: Prior to reading the Device/PLC Connection manual" information. Also, be sure to download the "Preface for Trademark Rights, List of Units Supported, How to Read Manuals and Documentation Conventions" PDF file. Furthermore, be sure to keep all manual-related data in a safe, easy-to-find location.

Koyo Electronics Industries Connectable Devices

The following tables list the devices that can be connected and used with the GP.

■ PLCs

◆ 1:1 Connection

Series Name	CPU	Link Unit	Comments	Device type in Screen Editor	GP Series GLC 2000 Series	GLC 100 Series GLC 300 Series
KOSTAC SG	SG-8	Link I/F on CPU unit	Disconnect the programming console when communicating	KOYO KOSTAC-SG8 series	○	x
		G-01DM				
KOSTAC SU	SU-5 SU-6	Link I/F on CPU unit				
		U-01DM				
	SU-6B	Link I/F on CPU unit				
KOSTAC SZ	SZ-4	Link I/F on CPU unit				
KOSTAC SR	SR-21 SR-22	E-02DM-R1		KOYO KOSTAC-SR21/22 series		
DL205	D2-240	Link I/F on CPU unit*1		KOYO DL-205/405 Series		
DL405	D4-430	D4-DCM				
	D4-440	D4-DCM	Link I/F on CPU unit*1			
DL305	D3-330	D3-DCM		KOYO DL-305 Series		

* 1 Connected to CPU module's general communication port.