

# Device/PLC Connection Manuals

---



## About the Device/PLC Connection Manuals

Prior to reading these manuals and setting up your device, be sure to read the "Important: Prior to reading the Device/PLC Connection manual" information. Also, be sure to download the "Preface for Trademark Rights, List of Units Supported, How to Read Manuals and Documentation Conventions" PDF file. Furthermore, be sure to keep all manual-related data in a safe, easy-to-find location.

# RKC INSTRUMENT INC. Connectable Devices

The following tables list the devices that can be connected and used with the GP.

## ■ Controller

Series	Controller *1	Note	Device type in Screen Editor
<b>CB</b>	CB100 Z-1021 CB400 Z-1021 CB500 Z-1021 CB700 Z-1021 CB900 Z-1021	Applicable for Modbus protocol	RKC CB/SR-Mini (MODBUS)
	CB100□□□□-□□*□□-5□/□ CB400□□□□-□□*□□-5□/□ CB500□□□□-□□*□□-5□/□ CB700□□□□-□□*□□-5□/□ CB900□□□□-□□*□□-5□/□		RKC CB/REX-F/LE100 (RKC)
<b>SR-Mini</b>	H-PCP-A Z-1021		
<b>SR Mini HG (H-PCP-J)</b>	H-PCP-J-□4□-D*□□		
	H-PCP-J-□5□-D*□□		
	H-PCP-J-□□1-D*□□		
	H-PCP-J-□□4-D*□□		
<b>MA900</b>	MA900-4□□□□-□□-□*□□□□-□6/□	Applicable for Modbus protocol	RKC CB/SR-Mini (MODBUS)
	MA900-4□□□□-□□-□*□□□□-□7/□		
	MA900-4□□□□-□□-□*□□□□-□8/□		
	MA901-8□□□□-□□-□*□□□□-□6/□		
	MA901-8□□□□-□□-□*□□□□-□7/□		
	MA901-8□□□□-□□-□*□□□□-□8/□		
<b>HA900</b>	HA900-□□-□□-□*□□-□□□8□-□/□/□		
	HA900-□□-□□-□*□□-□□□6-□/□/□		
	HA900-□□-□□-□*□□-□□□7-□/□/□		
	HA900-□□-□□-□*□□-□□□8-□/□/□		
	HA901-□□-□□-□*□□-□□□6□-□/□/□		
	HA901-□□-□□-□*□□-□□□8□-□/□/□		
	HA901-□□-□□-□*□□-□□□6-□/□/□		
	HA901-□□-□□-□*□□-□□□7-□/□/□		
	HA901-□□-□□-□*□□-□□□8-□/□/□		

\*1 The model data, indicated by "□", will vary depending on the type of option.

Series	Controller *1	Note	Device type in Screen Editor
<b>HA400</b>	HA400-□□-□□-□*□□-□□6□-□/□/□	Applicable to Modbus protocol	RKC CB/SR-Mini (MODBUS)
	HA400-□□-□□-□*□□-□□8□-□/□/□		
	HA400-□□-□□-□*□□-□□□6-□/□/□		
	HA400-□□-□□-□*□□-□□□7-□/□/□		
	HA400-□□-□□-□*□□-□□□8-□/□/□		
	HA401-□□-□□-□*□□-□□6□-□/□/□		
	HA401-□□-□□-□*□□-□□8□-□/□/□		
	HA401-□□-□□-□*□□-□□□6-□/□/□		
	HA401-□□-□□-□*□□-□□□7-□/□/□		
	HA401-□□-□□-□*□□-□□□8-□/□/□		
<b>SA200</b>	SA200□□□□-□□-□*□□-6□/□/□□		
<b>SRX</b>	X-TIO-A-□□-□□*□□		
<b>SRV</b>	V-TIO-A-□□-□□*□□		
<b>REX-F</b>	F400□□□□-□□*□□-□□□-1□		RKC CB/REX-F/LE100 (RKC)
	F700□□□□-□□*□□-□□□-1□		
	F900□□□□-□□*□□-□□□-1□		
	F400□□□□-□□*□□-□□□-4□		
	F700□□□□-□□*□□-□□□-4□		
	F900□□□□-□□*□□-□□□-4□		
	F400□□□□-□□*□□-□□□-5□		
	F700□□□□-□□*□□-□□□-5□		
	F900□□□□-□□*□□-□□□-5□		
<b>LE100</b>	LE100-□□*□5□□-□□		

\*1 The model data, indicated by "□", will vary depending on the type of option.