

# Device/PLC Connection Manuals

---



## About the Device/PLC Connection Manuals

Prior to reading these manuals and setting up your device, be sure to read the "Important: Prior to reading the Device/PLC Connection manual" information. Also, be sure to download the "Preface for Trademark Rights, List of Units Supported, How to Read Manuals and Documentation Conventions" PDF file. Furthermore, be sure to keep all manual-related data in a safe, easy-to-find location.

 



## 2.16 Siemens

### 2.16.1 System Structure

The following describes the system structure for connecting the GP to Siemens PLCs.

**Reference** The Cable Diagrams mentioned in the following tables are listed in the section titled "2.16.2 Cable Diagrams".

#### ■ SIMATIC S5 Series (using Link I/F <3964/3964R via RK512 Protocol>)

 


CPU	Link I/F	Cable Diagram	GP
			
90U, 95U, 100U	CP521 S1	RS-232C (Cable Diagram 1)	GP Series
115U	CP524 CP525		
115U (CPU944)	CPU unit Link I/F <sup>*1</sup>		
135U, 155U	CP524 CP525		
135U, 155U (CPU928B)	CPU unit Link I/F <sup>*1</sup>		

\*1 Connect to SI2 Port.



- Supports both 3964 and 3964R protocols. The GP automatically discriminates between the two. For better error detection, the 3964R is recommended.
- The PLC must be running a communication type ladder program to share data with the Device/PLC.

■ **SIMATIC S5 Series (CPU Direct)**

 


CPU *1	Cables	GP
		
90U, 95U, 100U (CPU100/102/103), 115U (CPU941/942/943/ 944), 135U/155U (CPU922/928/928B)	Digital's current loop converter *2 GP000-IS11-O	GP Series *3

\*1 Connect to the Programming port.

 

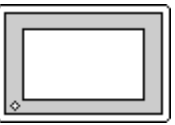
\*2 Due to the size of its connector, this cable cannot be used for GP-270, GP-370, and GP-377R series units.


\*3 Cannot be connected to GP2000, GLC2000 and ST Series units.

■ **SIMATIC S7-200 Series (PPI Connection)**

 


CPU	Cables	GP
		
CPU212, CPU214	RS422 (Cable Diagram 2)	GP Series


■ **SIMATIC S7-200 Series (MPI Direct)**

CPU	Cables	GP
		
CPU214, CPU215, CPU216, CPU221, CPU222, CPU224, CPU226	RS-422 (Cable Diagram 10) RS-422 1:n Communication (Cable Diagram 11) RS-422 n:1 Communication (Cable Diagram 12)	GP/GLC Series




\*1 Refer to this section's  Connectable GP/GLC units for SIMATIC S7-200/300/400 Series (MPI Direct).


■ **SIMATIC S7-300 Series (MPI Direct)**

CPU	Cable Diagram	GP
		
CPU312IFM CPU313 CPU314	RS-422 (Cable Diagram 10)	GP/GLC Series <sup>1</sup>
CPU314IFM CPU315 CPU315-2DP	RS-422 1:n Communication (Cable Diagram 11)	
CPU316 CPU316-2DP CPU318-2	RS-422 n:1 Communication (Cable Diagram 12)	

*\*1 Refer to this section's  Connectable GP/GLC units for SIMATIC S7-200/300/400 Series (MPI Direct).*

■ **SIMATIC S7-400 Series (MPI Direct)**

CPU	Cable Diagram	GP
		
CPU412-1 CPU412-2DP CPU413-1 CPU413-2DP	RS-422 (Cable Diagram 10)	GP/GLC Series <sup>1</sup>
CPU414-1 CPU414-2DP CPU414-3DP	RS-422 1:n Communication (Cable Diagram 11)	
CPU416-1 CPU416-2DP CPU416-3DP CPU-417-4	RS-422 n:1 Communication (Cable Diagram 12)	

*\*1 Refer to this section's  Connectable GP/GLC units for SIMATIC S7-200/300/400 Series (MPI Direct).*

◆ Connectable GP/GLC units for SIMATIC S7-200/300/400 Series  
(MPI Direct)


Series Name		Product Name	187500bps *1	
GP70 Series	GP-377 Series	GP-377-LG41-24V	Rev. J or higher	
		GP-377-SC41-24V	Rev. J or higher	
	GP-37W2 Series	GP-37W2B	Rev. L or higher	
GP77R Series	GP-377R Series	GP-377RT	—	
	GP-477R Series	GP-477RE	—	
	GP-577R Series	GP-577RS	—	
		GP-577RT	—	
GP2000 Series	GP-2300 Series	GP-2300L	Rev. I or higher	
		GP-2300S	All Rev.	
		GP-2300T	Rev. I or higher	
	GP-2301 Series	GP-2301L	Rev. I or higher	
		GP-2301S	Rev. I or higher	
		GP-2301T	All Rev.	
	GP-2400 Series	GP-2400T	Rev. H or higher	
	GP-2401 Series	GP-2401T	All Rev.	
	GP-2500 Series	GP-2500L	Rev. B or higher	
		GP-2500S	Rev. A or higher	
		GP-2500T (Only GP2500-TC41-24V)	Rev. C or higher	
	GP-2501 Series	GP-2501S	Rev. A or higher	
		GP-2501T	Rev. A or higher	
	GP-2600 Series	GP-2600T (Only GP2600-TC41-24V)	Rev. C or higher	
	GP-2601 Series	GP-2601T	All Rev.	
	GP2000H Series	GP-2301H Series	GP-2301HL	All Rev.
			GP-2301HS	All Rev.
		GP-2401H Series	GP-2401HT	All Rev.
	GLC2000 Series	GLC2300 Series	GLC-2300L	Rev. I or higher
GLC-2300T			Rev. I or higher	
GLC2400 Series		GLC-2400T	Rev. E or higher	
GLC2600 Series		GLC-2600T	Rev. A or higher	
ST Series	ST400 Series	ST402	All Rev.	

\*1 When using a unit that cannot operate at 187500bps, be sure to select another data transfer speed. **Reference** 2.16.4 Environment Setting Example




- When transferring data using a GLC2000 unit at 187500bps, be sure to either set the Ladder Scan Time to 8 times longer than the Logic Time, or set the Percent Scan at 10%.
- For setting information, refer to your "Pro-Control Editor User Manual".


◆ Connection Structure  
1:n RS-422 2-wire type

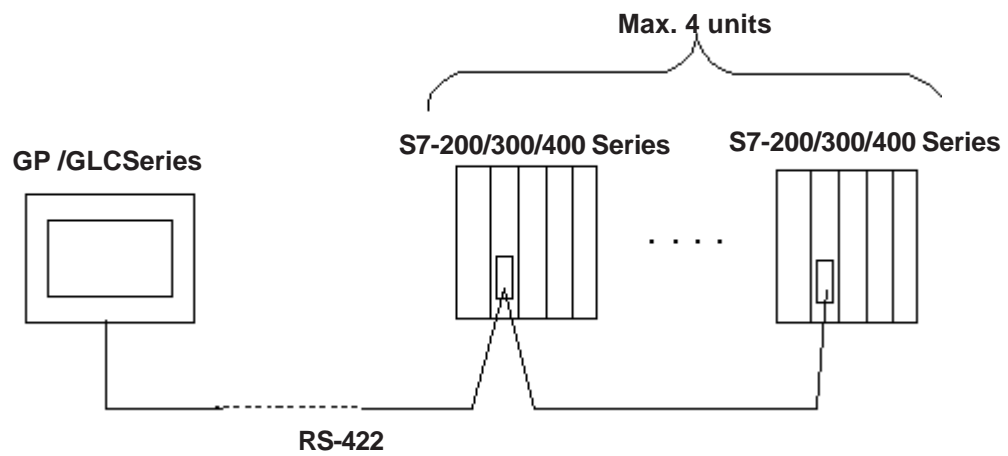

n:1 RS-422 2-wire type

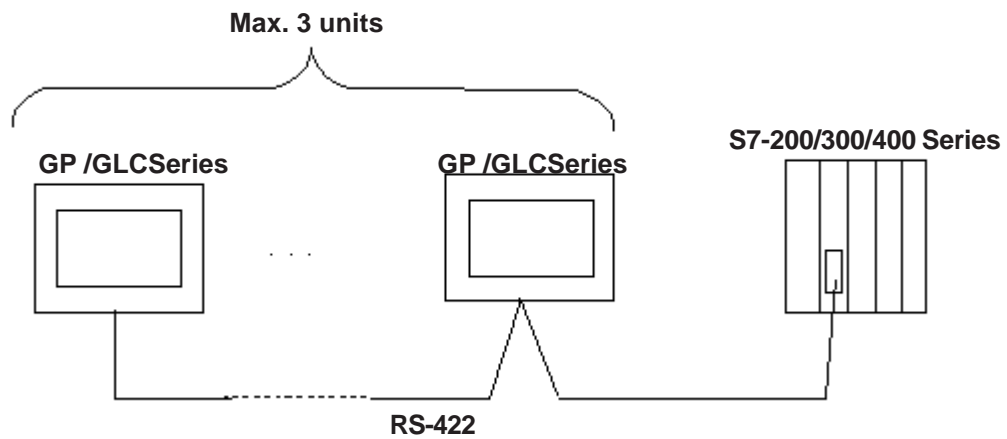

n:m RS-422 2-wire type

 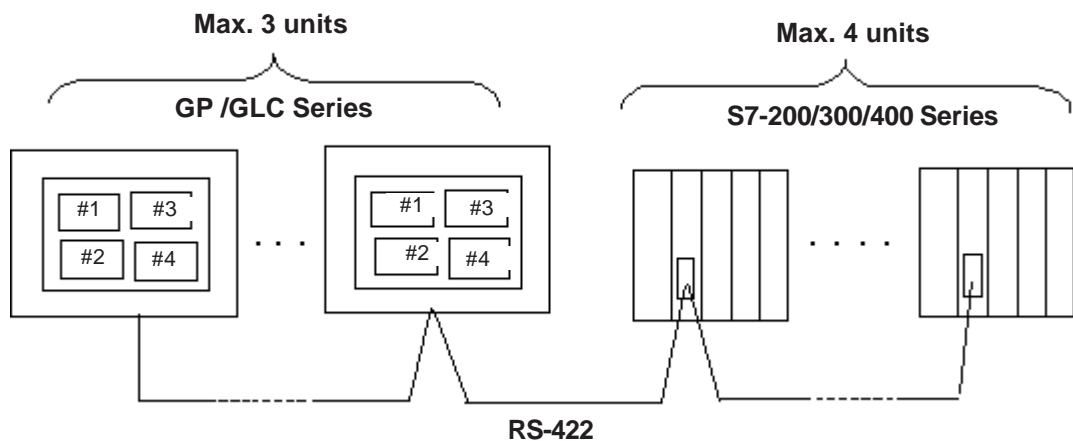

 


\* The connections 1:n and n:1 can be made on the same line.






**Note:** For details about MPI Network, refer to Siemens's Manual.

 


 
■ SIMATIC S7-300 Series (MPI via adapter)

CPU	Link I/F	GP
		
CPU312IFM, CPU313, CPU314, CPU315, CPU315-2DP	Digital's GP070-MPI-41	GP/GLC Series

■ SIMATIC S7-400 Series (MPI via adapter)

CPU	Link I/F	GP
		
CPU413-2DP	Digital's GP070-MPI-41	GP Series

■ SIMATIC S7-300Series (Using Adapter <3964/RK512 >)

 


 
CPU	Link I/F	Cable Diagram	GP
			
CPU313, CPU314, CPU315, CPU315-2DP	CP340 <sup>*1</sup> CP341	RS-232C (Cable Diagram 3)	GP Series

*\*1 When using the CP340 Link I/F an "Interpreter program" is required on the PLC. This is contained in the GP-PRO/PBIII for Windows CD-ROM 's "CP340" folder. Please see "README" file in this folder in order to install this program.*

 




**This driver cannot be used with the CPU312IFM.**

■ SIMATIC S7-400 Series (Using Adapter <3964/RK512 >)

CPU	Link I/F	Cable Diagram	GP
			
CPU413-2DP	CP441-2	RS-422 (Cable Diagram 4)	GP/GLC Series

■ SIMATIC 505 Series

CPU	Cable Diagram	GP
		
545-1101, 545-1102, 545-1103, 545-1104, 545-1105, 545-1106, 555-1101, 555-1102, 555-1103, 555-1104, 555-1105, 555-1106	RS-232C Port 1 Connection (Cable Diagram 5)	GP Series
545-1101, 545-1102, 555-1101, 555-1102	RS-422(4-wire type) Port 2 Connection (Cable Diagram 6)	
545-1104, 545-1105, 545-1106, 555-1103, 555-1104, 555-1105, 555-1106	RS-422(4-wire type) Port 2 Connection (Cable Diagram 7)	
545-1103, 545-1104, 545-1105, 545-1106, 555-1103, 555-1104, 555-1105, 555-1106	RS-232C Port 2 Connection (Cable Diagram 8)	
545-1101, 545-1102, 555-1101, 555-1102	RS-232C Port 2 Connection (Cable Diagram 9)	



**2.16.2 Cable Diagrams**

The cable diagrams illustrated below and the cable diagrams recommended by Siemens may differ, however, using these cables for your PLC operations will not cause any problems.




*Ground your PLC's FG terminal according to your country's applicable standard. For details, refer to the corresponding PLC manual.*




- **Connect the FG line of the Shield cable to either the GP or PLC, depending on your environment. When using a Housing and Grounding the FG line, be sure to use an electrical conductor.**
- **For the RS-232C connection, use a cable length 15m or less.**
- **If a communications cable is used, it must be connected to the SG (signal ground).**


**Cable Diagram 1 (RS-232C)**

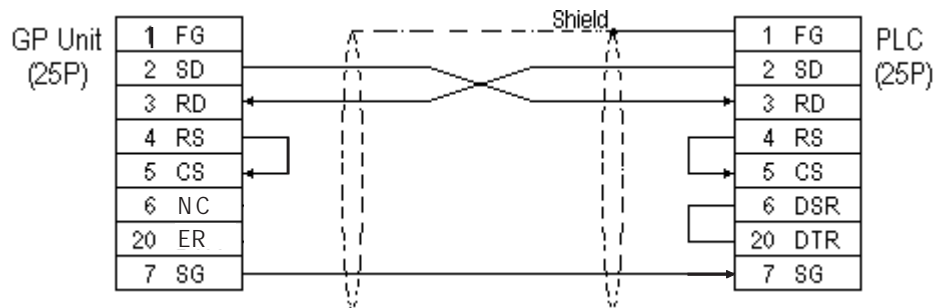


**Cable Diagram 2 (RS-422)**

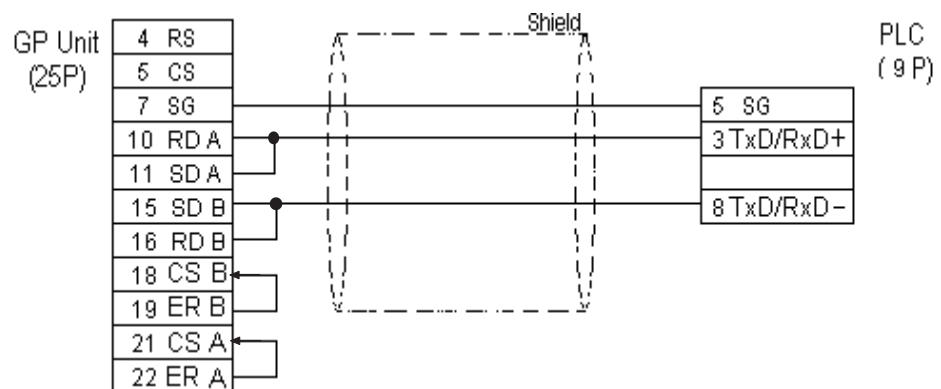


Cable Diagram 3 (RS-232C)

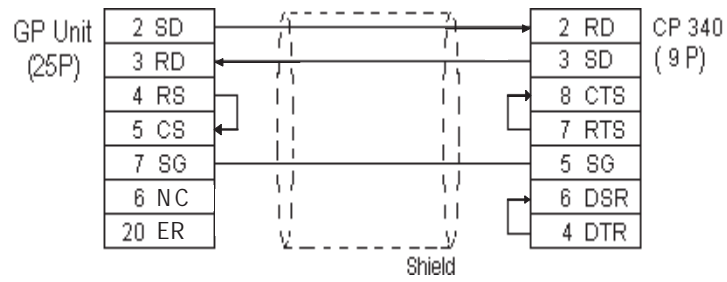

Cable Diagram 4 (RS-422)

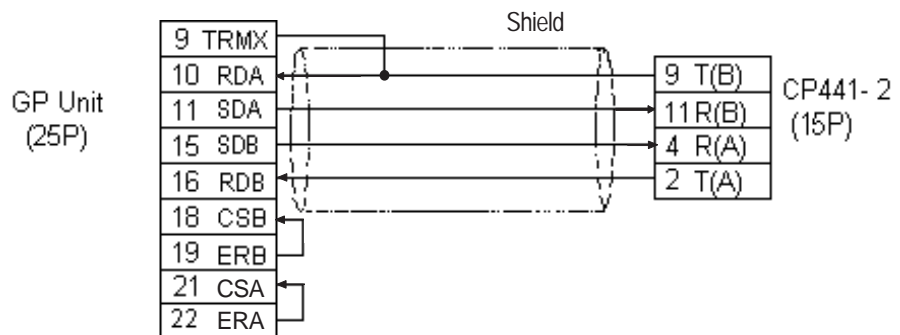


Cable Diagram 5 (RS-232C)

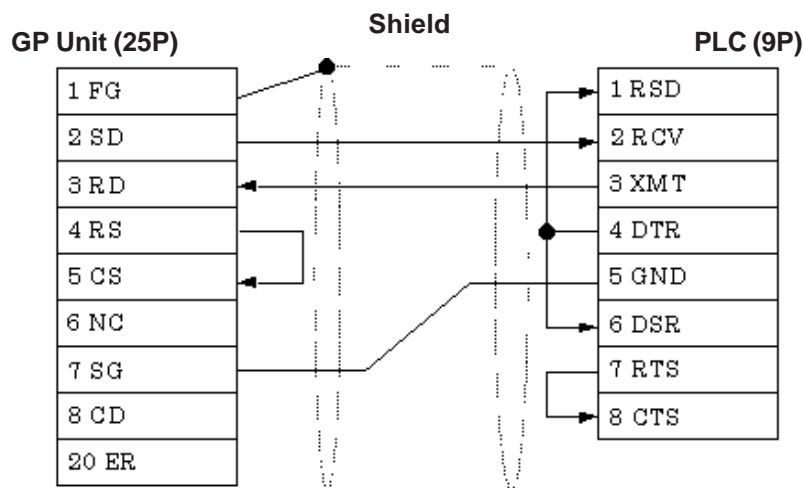


**Cable Diagram 6 (RS-422)**

- When using Digital's RS-422 connector terminal adapter, GP070-CN10-O

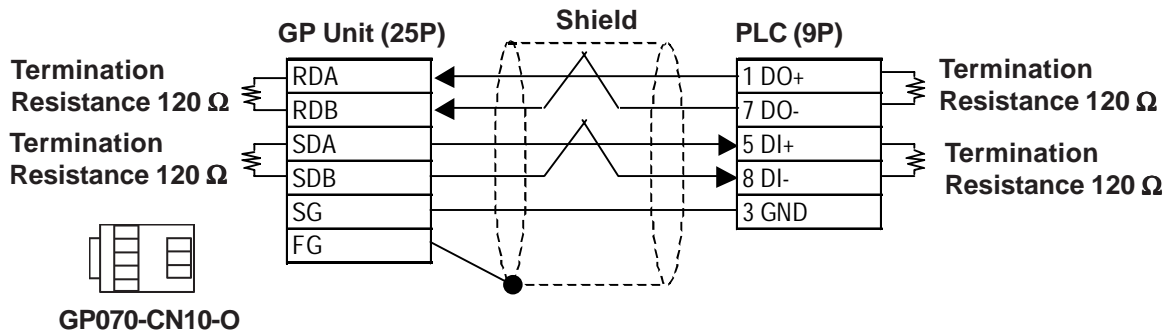


- When making your own cable connections

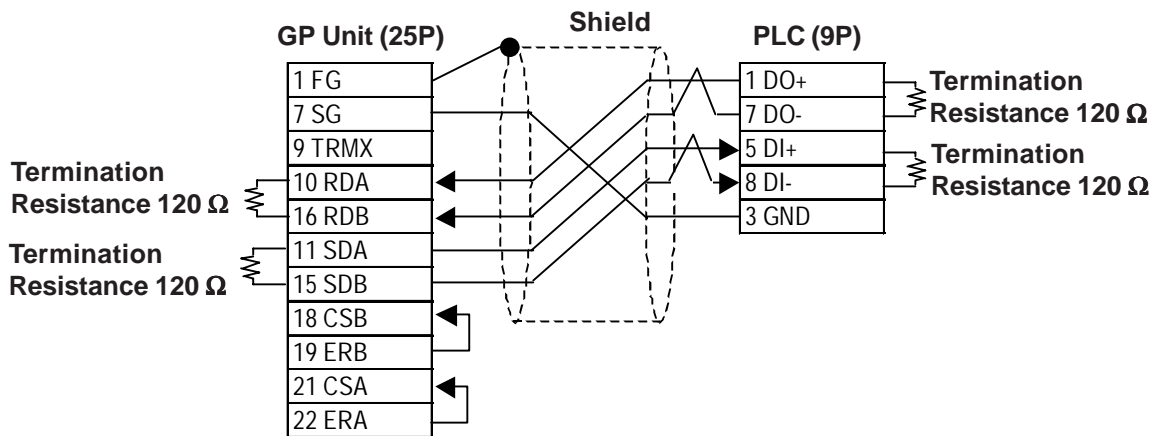


**Cable Diagram 7 (RS-422)**


- When using Digital's RS-422 connector terminal adapter, GP070-CN10-O

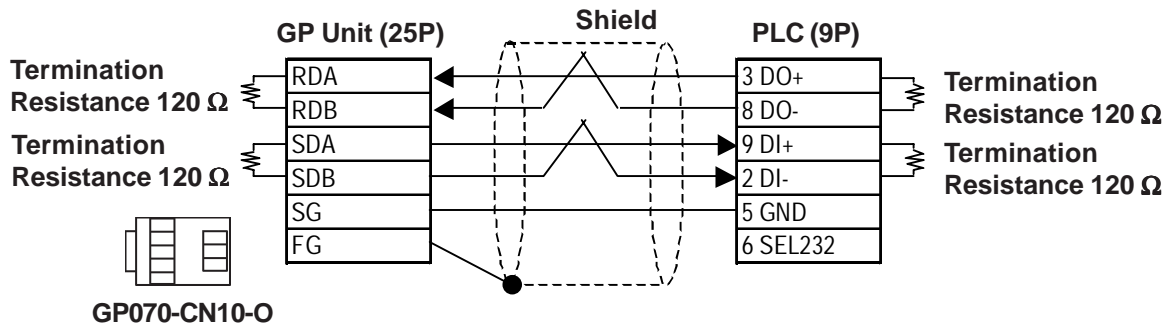


- When making your own cable connections

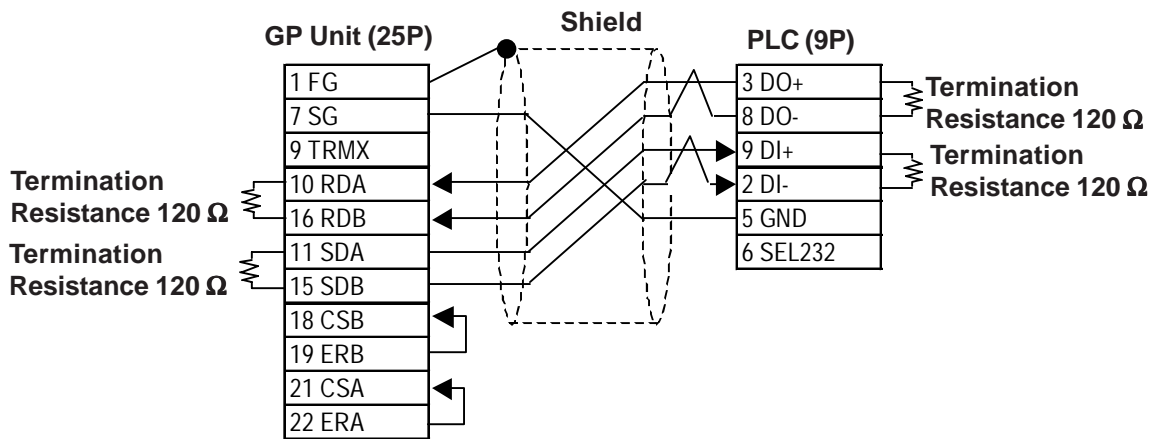

**Cable Diagram 8 (RS-232C)**

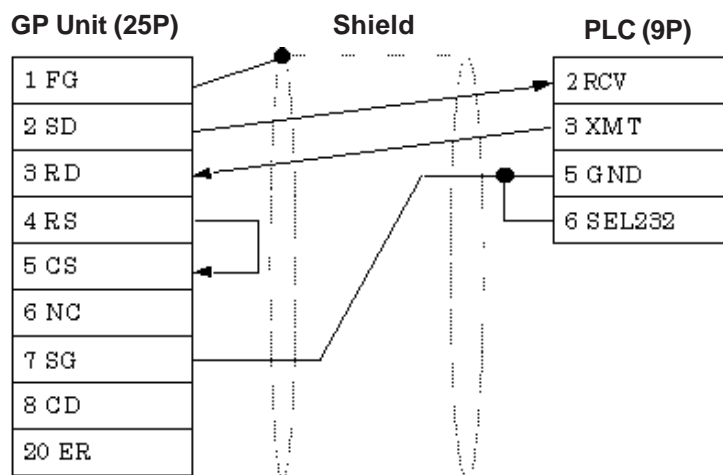

Cable Diagram 9 (RS-232C)

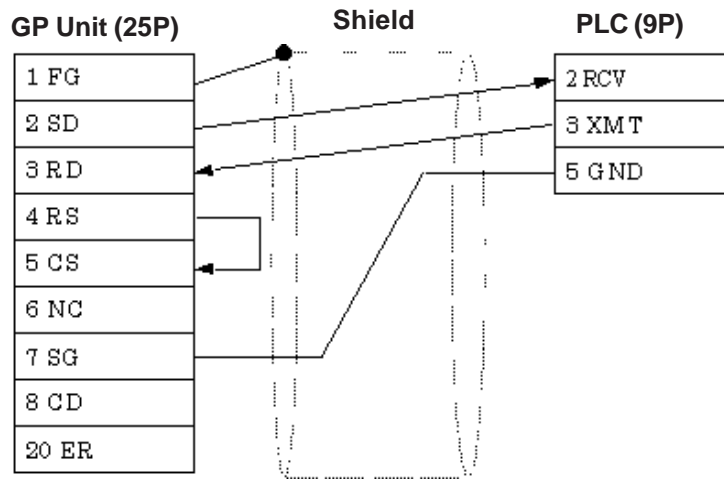


Cable Diagram 10 (RS-422 2-wire type)




- Use a cable length 50m or less for a single segment.

- When using Digital's RS-422 connector terminal adapter, GP070-CN10-O

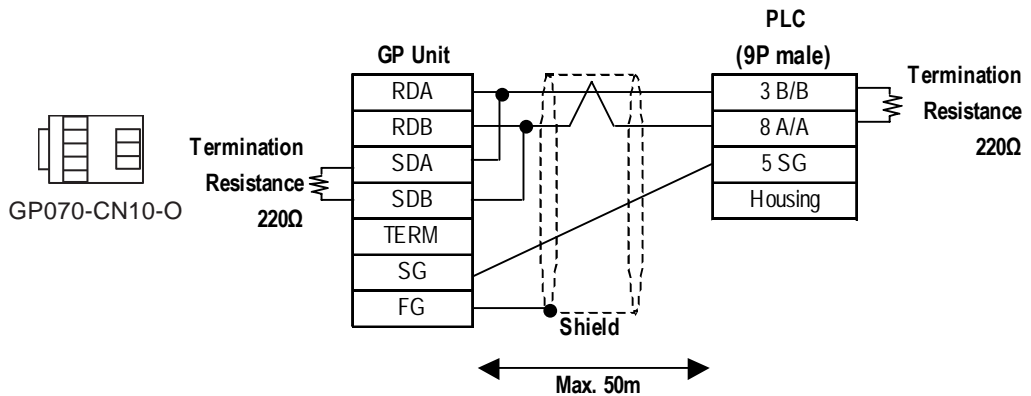


- When making your own cable connections

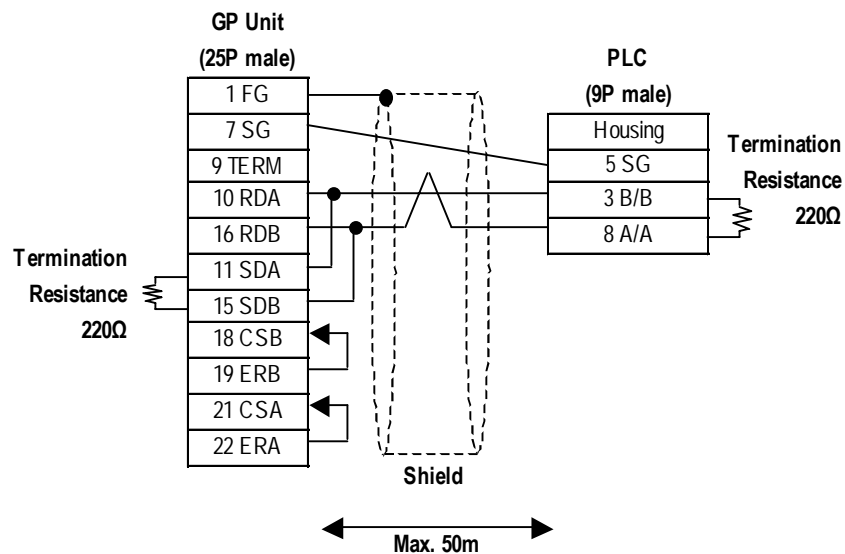


When using the following PLCs (MPI and Profibus port are the same type), the following cable diagram also can be used.

318-2(6ES7 318 2AJ00), 412-1(6ES7 412 1XF03), 412-2DP(6ES7 412 2XG00),414-2DP(6ES7 414 2XG03), 414-3DP(6ES7 414-3XJ00), 416-2DP(6ES7 416 2XK02), 416-3DP(6ES7 416-3XL00), 417-4(6ES7 417-4XL00)

- When using Digital's RS-422 connector terminal adapter, GP070-CN10-O and Siemens's Profibus Connector.

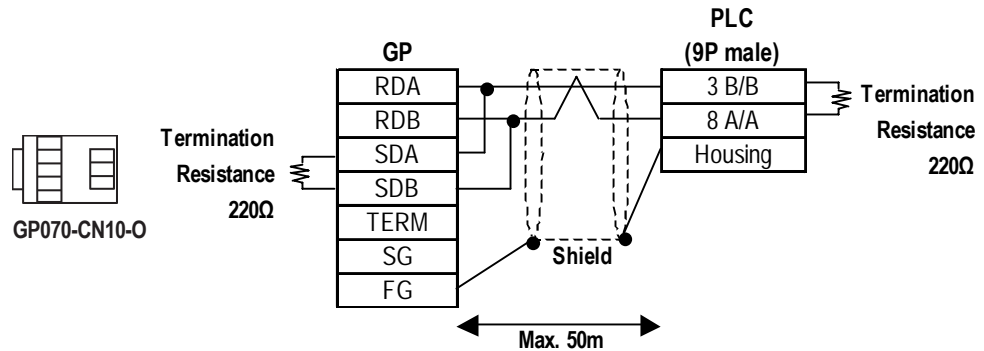

- When making your own cable connections

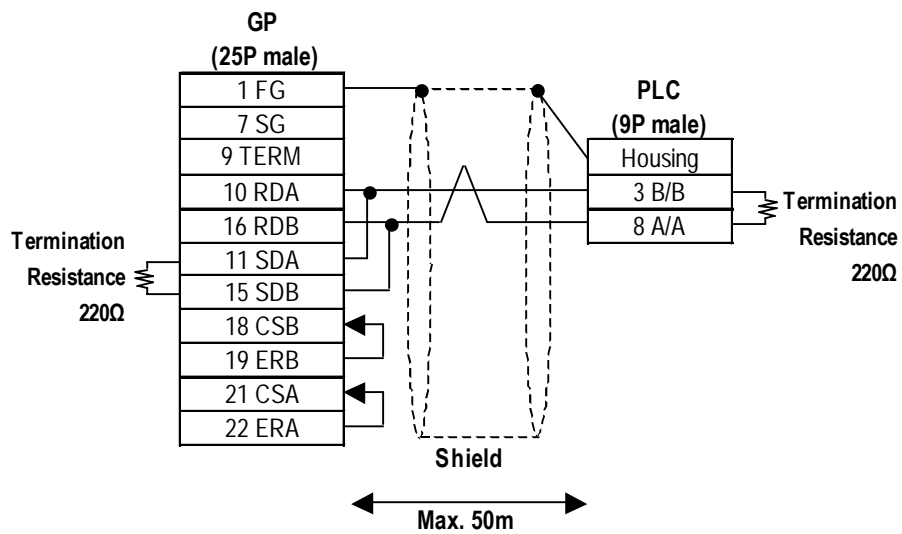


Cable Diagram 11 (RS-422 2-wire type)




- Use a cable length less than 50m for a single segment.

- When using Digital's RS-422 connector terminal adapter, GP070-CN10-O

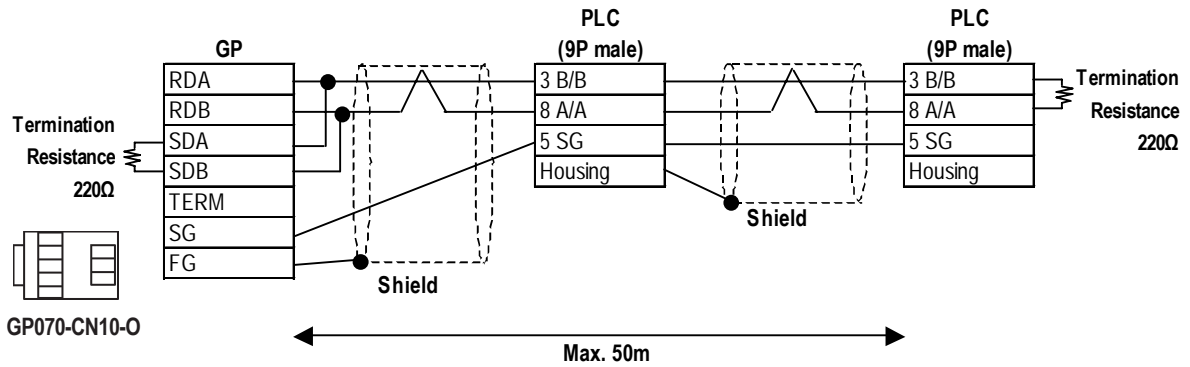

- When making your own cable connections

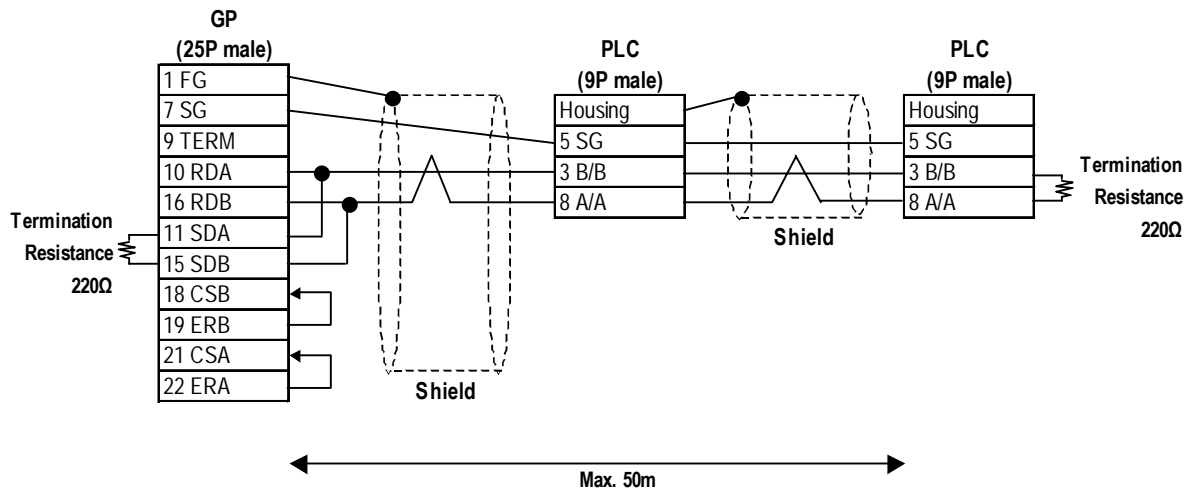


**Note:** When making your own cable connections, we recommend to use the terminal between the cables because the PLC side connector is Dsub 9-pin connector.


When using the following PLCs (MPI and Profibus port are the same type), the following cable diagram also can be used.

318-2(6ES7 318 2AJ00), 412-1(6ES7 412 1XF03), 412-2DP(6ES7 412 2XG00),414-2DP(6ES7 414 2XG03), 414-3DP(6ES7 414-3XJ00), 416-2DP(6ES7 416 2XK02), 416-3DP(6ES7 416-3XL00), 417-4(6ES7 417-4XL00)

- When using Digital's RS-422 connector terminal adapter, GP070-CN10-O and Siemens's Profibus Connector.

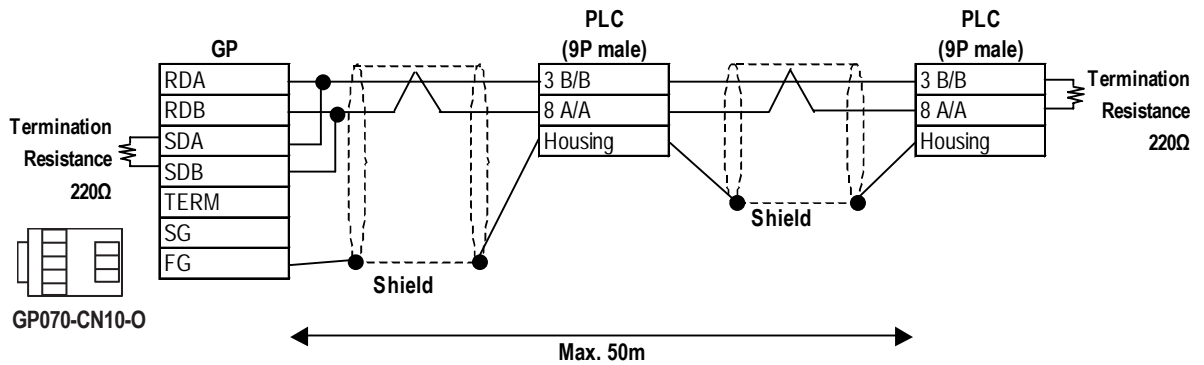

- When making your own cable connections

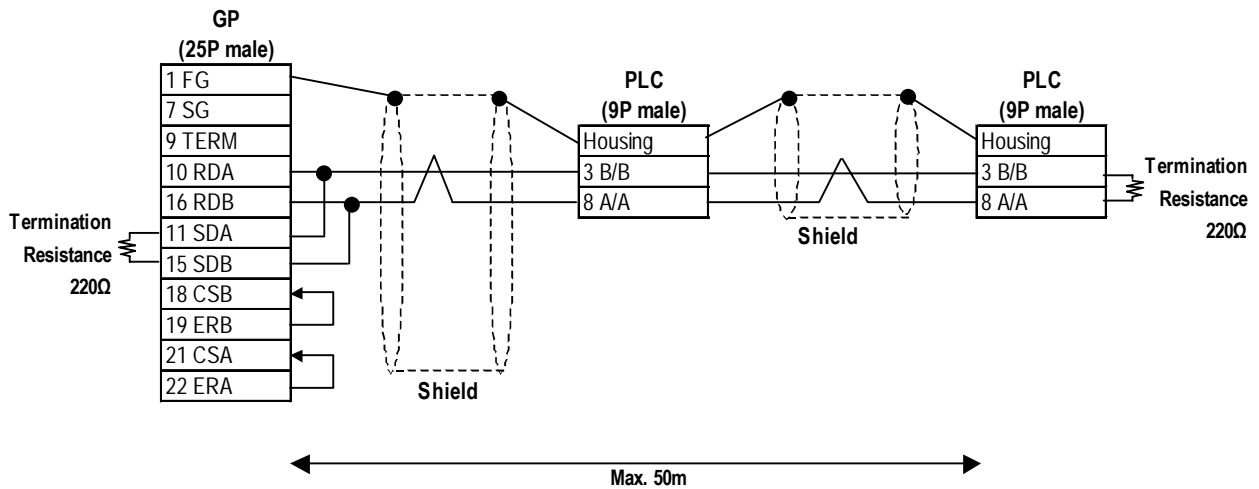




Cable Diagram 12 (RS-422 2-wire type)



- Use a cable length less than 50m for a single segment.


- When using Digital's RS-422 connector terminal adapter, GP070-CN10-O

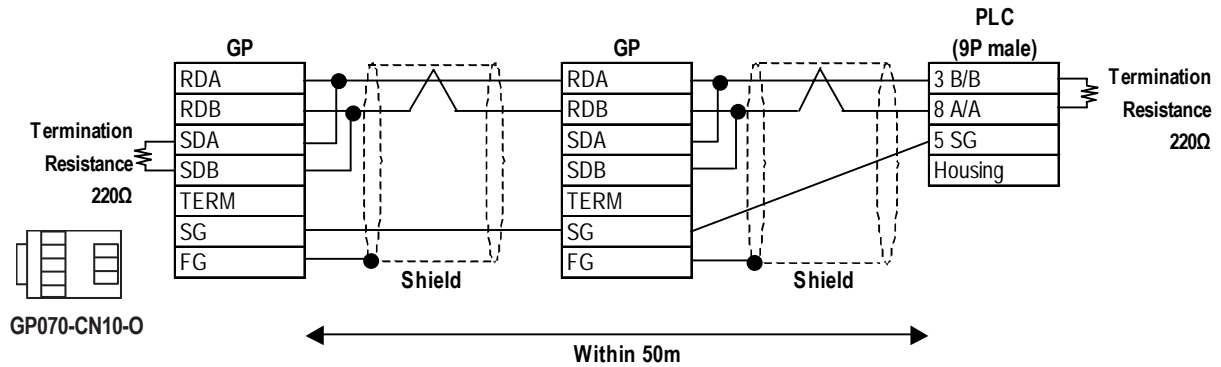

When using the following PLCs (MPI and Profibus port are the same type), the following cable diagram also can be used.

318-2(6ES7 318 2AJ00), 412-1(6ES7 412 1XF03), 412-2DP(6ES7 412 2XG00), 414-2DP(6ES7 414 2XG03), 414-3DP(6ES7 414-3XJ00), 416-2DP(6ES7 416 2XK02), 416-3DP(6ES7 416-3XL00), 417-4(6ES7 417-4XL00)

- When using Digital's RS-422 connector terminal adapter, GP070-CN10-O and Siemens's Profibus Connector.

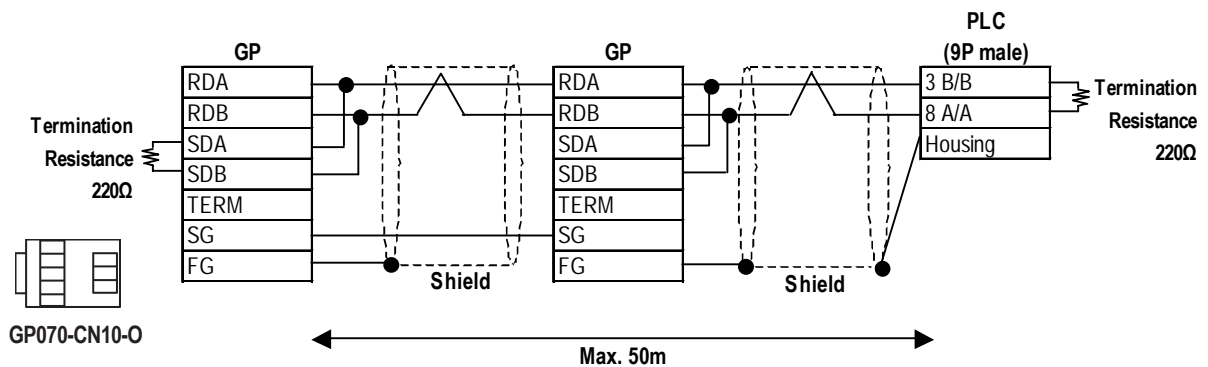
 


**2.16.3 Supported Devices**

The following tables describe the range of devices supported by the GP.

**■ SIMATIC S5 Series (using Adapter)**


 
 

 
 Setup System Area here.

Device	Bit Address	Word Address	Particulars
Data Register	---	D003000 ~ D255255	 *1*2
Extended Data Register	---	X003000 ~ X255255	 *1*2

H/L

**■ SIMATIC S5 Series (CPU Direct)**


 Setup System Area here.

Device	Bit Address	Word Address	Particulars
Input Relay	I0000 ~ I1277	IW000 ~ IW126	 *3
Output Relay	Q0000 ~ Q1277	QW000 ~ QW126	 *3
Internal Relay	F0000 ~ F2557	FW000 ~ FW254	 *3
Timer	---	T000 ~ T255	
Counter	---	C000 ~ C255	
Data Register	---	D002000 ~ D255255	 *1*4
Extended Data Register	---	X002000 ~ X255255	 *1*4*5

H/L

\* 1 The range for the Data Register and the Extended Data Register must also be set up in the PLC. Communication will not occur with the GP when the System Area range is not setup.

\* 2 The Data Register and Extended Data Register is as illustrated below.

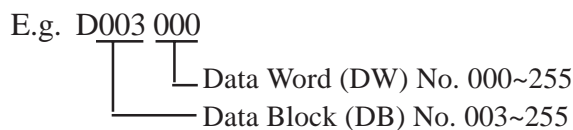


\* 3 The bit device illustration for the PLC side is different.

E.g.

GP	PLC
Q0007	Q0.7

\* 4 The Data Register and Extended Data Register is as illustrated below.

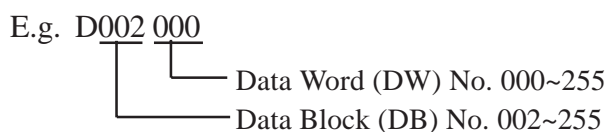





 

\* 5 The Extended Data Register is possible only with S5 135U/155U.



**Note:** For information about Bit Write process differences, see the end of this section.

■ **SIMATIC S7-200 Series (PPI Connection)**




 

 
 Setup System Area here.

Device	Bit Address	Word Address	Particulars	
Input	I00 ~ I77	IW0 ~ IW6	 *1	
Output	Q00 ~ Q77	QW0 ~ QW6	 *1	
Internal Memory	M000 ~ M317	MW00 ~ MW30	 *1	
Special Memory	SM000 ~ SM857	SMW00 ~ SMW84	 *1	
Timer Bit	T000 ~ T127	---	H/L	
Counter Bit	C00 ~ C63	---		
Variable Memory	---	 VW0000 ~ VW4094		 *1
Timer Word	---	TW000 ~ TW127		
Counter Word	---	CW000 ~ CW127		

\*1 The bit position is the last digit entered. There is no '.' delimiter - e.g. I3.7 is equivalent to I37 in GP-PRO/PBIII.

■ **SIMATIC S7-200 Series (MPI Direct)**

 Setup System Area here.

Device	Bit Address	Word Address	Particulars
Input	I0000.0 ~ I0015.7	IW0000 ~ IW0014	 *1
Output	Q0000.0 ~ Q0015.7	QW0000 ~ QW0014	 *1
Internal	M0000.0 ~ M0031.7	MW0000 ~ MW0030	 *1
Timer	---	T0000 ~ T0255	*1
Counter	---	C0000 ~ C0255	*1
Variable Memory	---	 VW0000 ~ VW5118	  *1


 
 
 
 
 
\*1 Cannot be written in. When performing data write, a Host communication Error (02:FB) will occur.  **Reference**  2.16.5 Error Codes




- **Pro-Server cannot read/write.**
- **When connecting multiple GP units, be sure to set each unit's system area top address so that it does not overlap the system area of another GP.**

■ SIMATIC S7-300/400 Series (MPI Direct/MPI via adapter)

 Setup System Area here.

Device	Bit Address	Word Address	Particulars
Input	E00000.0 ~ E00127.7	EW00000 ~ EW00126	 *1
Output	A00000.0 ~ A00127.7	AW00000 ~ AW00126	 *1
Internal Memory	M00000.0 ~ M00255.7	MW00000 ~ MW00254	 *1
Timer		T00000 ~ T00127	*2 *3 H/L
Counter		Z00000 ~ Z00063	*2 *3
Data Block		DB1W00000 ~ DB60W65532	  *3 *4
Data Block	DB1.DBX0.0 ~ DB65535.DBX65533.7	DB1.DBW0 ~ DB65535.DBW65532	 *5 *6

- \*1 When using a GP70 Series unit (except for GP-377 Series units), only devices of the PLC registered as #1 in the Target Node (PLC) area can be used. All other GP/GLC units can use PLC device #1 to #4, set up in the Target Node (PLC) area. For Target Node setting, refer to 2.16.4 Environment Setup.
- \*2. Data write cannot be performed. If data write is attempted, a Host Communication error (02:FB) will occur. **Reference** 2.16.5 Error Codes
- \*3. Only the PLC device registered as #1 in the Target Node (PLC) area can be used. For Target Node setting, refer to 2.16.4 Environment Setup.
- \*4 The addressing format for entering on GP-PRO/PB III is different from the convention used in the S7-300/400 - e.g. DB63W00020 is equivalent to DB63.DBW20.
- \*5 When Data Blocks other than DB61 in a 1:1 Connection or using a 1:n connection designating data blocks for multiple PLCs, use this address. However, the maximum number of data blocks is 40. GP70 Series units (except for GP-377 Series units) cannot use this devices.
- \*6 When using the Data Block Device, be sure to perform the settings via GP-PRO/PBIII for Windows' [GP Setup] - [Mode Settings] - [MPI Network] - [Data Block Configuration] menu.

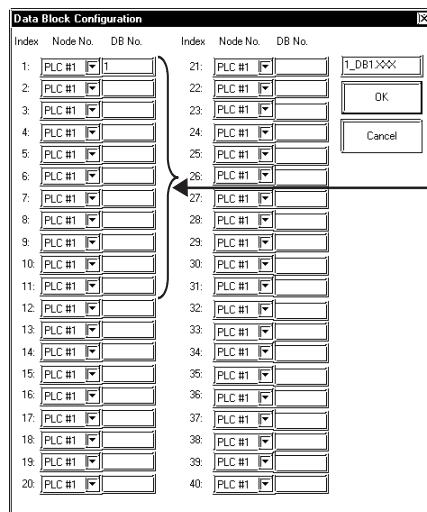

**Set up (enter) the Data Block No. you want to use**



- **Pro-Server read/write of devices using data blocks DB1.DBW0 to DB65535.DBW65532 is not possible. With other devices, read/write is possible only with the PLC registered as #1 in the Target Node (PLC) area. For Target Node setting, refer to 2.16.4 Environment Setup.**
- **When designating indirect addresses for E-tags and K-tags, devices using data blocks DB1.DBW0 to DB65535.DBW65532 cannot be used.**
- **When connecting multiple GP units, be sure to set each unit's system area top address so that it does not overlap the system area of another GP.**

◆ **Setting the GP-PRO/PBIII for Windows**

To set any Part or Tag on the GP-PRO/PBIII, specify the registration number of the PLC when entering the address. If not, the last entered device number is assumed. (The default value is 01).

To use a registration number, previously register that number by selecting MPI Network from the Mode Settings tab of the GP Settings window.

- **When setting an N-tag connecting to SIMATIC S7-200 Series units (MPI Direct)**

**Device name**

**Address**

**Bit position**

**Target PLC No. Select a PLC's registered Number #1 to #4 in the Target Node (PLC) area.**

**Reference**  
2.16.4 Environment Setup

**1\_VW0000**

**Device address**

**PLC's Registered Number setting in the Target Node (PLC) area.**

- When setting an N-tag connecting to SIMATIC S7-300/400 Series units (MPI Direct/MPI via Adapter)

**Device name**

**Data Block**

**Address**

**Bit position**

**Target PLC No.**  
Select a PLC 's registered Number #1 to #4 in the Target Node (PLC) area.

**Reference**  
2.16.4 Environment Setup

**1\_DB1.DBW0**  
Device address

PLC's Registered Number setting in the Target Node (PLC) area.

■ SIMATIC S7-300/400 (via 3964/RK512)

Setup System Area here.

Device	Bit Address	Word Address	Particulars
Data Memory	DB1W000000 ~ DB60W002547	DB1W000000 ~ DB60W00254	*1*2 H/L



**Note:** It is possible to enable/disable the Block Check Character (BCC) in PLC to GP communications. This can be performed via the GP's OFFLINE mode, or, via the GP-PRO/PBIII Editor's Mode Area's "Option" Command.

\*1 Some Data Blocks are reserved for the 3964 interpreter program: DB2, DB3, DB5 & DB10.

\*2 The addressing format for entering settings in GP-PRO/PB III is different from the convention used in the S7-300/400 - e.g. DB63W00020 is equivalent to DB63.DBW20.

■ SIMATIC 505 Series

Setup System Area here.

Device	Bit Address	Word Address	Particulars
Variable Memory	—————	V00001 ~ V26624	
Word Input	—————	WX00001 ~ WX08192	*1 L/H
Word Output	—————	WY00001 ~ WY08192	
Discrete Input accessed as bit	X0001 ~ X8192	—————	
Discrete Output accessed as bit	Y0001 ~ Y8192	—————	
Control Relay Accessed as bit	CR00001 ~ CR32768	—————	
Loop Gain	—————	LKC0001 ~ LKC0064	*2
Loop Reset	—————	LTI0001 ~ LTI0064	*2
Loop Rate	—————	LTD0001 ~ LTD0064	*2
Loop Alarm High Limit	—————	LHA0001 ~ LHA0064	*2
Loop Low Alarm Limit	—————	LLA0001 ~ LLA0064	*2
Loop Process Variable	—————	LPV0001 ~ LPV0064	*2
Loop PV High Limit	—————	LPVH0001 ~ LPVH0064	*2
Loop PV Low Limit	—————	LPVL0001 ~ LPVL0064	*2
Loop Orange Deviation Limit	—————	LODA0001 ~ LODA0064	*2
Loop Yellow Deviation Alarm Limit	—————	LYDA0001 ~ LYDA0064	*2
Loop Sample Rate	—————	LTS0001 ~ LTS0064	*2
Loop Setpoint	—————	LSP0001 ~ LSP0064	*2
Loop Output	—————	LMN0001 ~ LMN0064	*2
Loop Error	—————	LERR0001 ~ LEERR0064	*1 *2
Loop Bias	—————	LMX0001 ~ LMX0064	*2
Loop Alarm High-High Limit	—————	LHHA0001 ~ LHHA0064	*2
Loop Low-Low Alarm Unit	—————	LLLA0001 ~ LLLA0064	*2
Loop Rate of Change Alarm Limit	—————	LRCA0001 ~ LRCA0064	*2
Loop Setpoint High Point	—————	LSPH0001 ~ LSPH0064	*2

(Continued on next page)

■ SIMATIC 505 Series

Device	Bit Address	Word Address	Particulars	
Loop Setpoint Low Limit	_____	LSPL0001 ~ LSPL0064	*2	L/H
Loop Alarm Deadband	_____	LADB0001 ~ LADB0064	*2	
Loop V-flags	_____	LVF0001 ~ LVF0064		
Most Significant Word of Loop C-flags	_____	LCFH0001 ~ LCFH0064		
Least Significant Word of Loop C-flags	_____	LCFL0001 ~ LCFL0064		
Analog Alarm/Alarm Acknowledge Flags	_____	AADB0001 ~ AADB0128	*2	L/H
Most Significant Word of Analog Alarm C-flags	_____	ACFH0001 ~ ACFH0128		
Least Significant Word of Analog Alarm C-flags	_____	ACFL0001 ~ ACFL0128		
Analog Alarm Error	_____	AERR0001 ~ AERR0128	*1*2	L/H
Analog Alarm High Alarm Limit	_____	AHA0001 ~ AHA0128	*2	
Analog Alarm High-High Alarm Limit	_____	AHHA0001 ~ AHHA0128	*2	
Analog Alarm Low Alarm Limit	_____	ALA0001 ~ ALA0128	*2	
Analog Alarm Low-Low Alarm Limit	_____	ALLA0001 ~ ALLA0128	*2	
Analog Alarm Loop Orange Deviation Alarm Limit	_____	AODA0001 ~ AODA0128	*2	
Analog Alarm Process Variable	_____	APV0001 ~ APV0128	*2	
Analog Alarm Rate of Change Alarm Limit	_____	ARCA0001 ~ ARCA0128	*2	
Analog Alarm Setpoint	_____	ASP0001 ~ ASP0128	*2	
Analog Alarm SP High Limit	_____	ASPH0001 ~ ASPH0128	*2	
Analog Alarm SP Low Limit	_____	ASPL0001 ~ ASPL0128	*2	
Analog Alarm Sample Rate	_____	ATS0001 ~ ATS0128	*2	
Analog Alarm Yellow Deviation Alarm Limit	_____	AYDA0001 ~ AYDA0128	*2	
Timer/Counter Preset	_____	TCP0001 ~ TCP1024	*3	
Timer/Counter Current	_____	TCC0001 ~ TCC1024	*3	
Drum Counter Preset	_____	DCP0101 ~ DCP6416	*3*4	
Drum Step Preset	_____	DSP0001 ~ DSP0064	*3*5*6	
Drum Step Current	_____	DSC0001 ~ DSC0064	*3*5*6	
Status Word	_____	STW0001 ~ STW0222	*1	
Drum Count Current	_____	DCC0001 ~ DCC0064	*1	

(Continued on next page)



(From previous page)

- \*1 *The GP cannot write data to this device. Use it only for reading.*
- \*2 *This device uses Float. When this type of device is used, only the E-tag and K-tag's "32 bit Float" setting can be used.*
- \*3 *32 bit reading / writing, or reading / writing a K-tag's text string cannot be performed.*
- \*4 *Address entry method:*
  - Enter 1.01 as "101"*
  - Enter 1.02 as "102"*
  - Enter 1.03 as "103"*
  - ...*
  - Enter 1.16 as "116"*
  - Enter 2.01 as "201"*
  - Enter 2.02 as "202"*
  - ...*
  - Enter 64.15 as "6415"*
  - Enter 64.16 as "6416"*
- \*5 *Entry range is from 0 to 15 (dec.)*
- \*6 *+1 is added to all data input from the GP to the PLC. -1 is added to all data output from the PLC to the GP.*

<i>GP</i>	<i>→</i>	<i>PLC</i>	
<i>1</i>	<i>→</i>	<i>2</i>	<i>( "1" entered from the GP is changed to "2" in the PLC. )</i>
<i>5</i>	<i>←</i>	<i>6</i>	<i>( "6" sent from the PLC to the GP will become "5". )</i>

**2.16.4 Environment Setup**

The following lists Digital's recommended PLC and GP communication settings.

**■ SIMATIC S5 Series (using Link I/F)**

GP Setup		Link I/F Setup	
Baud Rate	19200 bps	Baud Rate	19200 bps
Data Length	8 bits	Data Bit	8 bits
Stop Bit	1 bit	Stop Bit	1 bit
Parity Bit	Even	Parity Bit	Even
Data Flow Control	ER Control	---	
Communication Format (RS-232C)	RS-232C	---	
Communication Format (RS-422)	4-wire type	---	
Unit No.	0 (fixed)	---	

**■ SIMATIC S5 Series (CPU Direct)**

GP Setup		PC Link Unit Setup
Baud Rate	9600 bps (fixed)	---
Data Length	8 bits (fixed)	---
Stop Bit	1 bit (fixed)	---
Parity Bit	Even (fixed)	---
Data Flow Control	ER Control (fixed)	---
Communication Format	RS-232C (fixed)	---
Unit No.	0 (fixed)	---

**System Data Area Setup**

- SYSTEM DATA AREA START DB—used to setup the Data Register's Data Block (DB) Number.
- SYSTEM DATA AREA START DW—used to setup the Data Register's Data Word (DW) Number.

**Reference** "2.16.3 Supported Devices"

If Link I/F is used, the system's number is indicated before the DB (Data Block) on the INITIALIZE area's [SETUP OPERATION SURROUNDINGS] screen. Changing this number, however, is not necessary since this data will be used only for future expansion.



- The method of writing bits will differ depending on the GP series.

<GP-\*30 series>

When the bit write operation (other than *Reverse*) is performed, the corresponding word address will set the bits to 0 (except the designated bits).

<Except GP-\*30 series>

When the bit write operation is performed, the GP reads the PLC's corresponding word address and turns a bit ON, then send back to PLC. Do not write to the word address from the ladder program in the middle of this operation.

- When running a GP-\*30 Series ladder program, be aware of the above points.

■ SIMATIC S7-200 Series (PPI Connection)

GP Setup		PC Link Unit Setup
Baud Rate	9600 bps	---
Data Bit	8 bits	---
Parity Bit	Even	---
Stop Bit	1 bit	---
Data Flow Control	ER Control	---
Communication Format	RS-422 2-wire type	---
GP No.	1	---
PLC No.	2	2

■ SIMATIC S7-200 Series (MPI Direct)


GP Setup			PLC Setup		
Baud Rate <sup>*1</sup>	19200 bps		Baud Rate	19200 bps	
Data Length	8 bits (fixed)		_____	_____	
Stop Bit	1 bit (fixed)		_____	_____	
Parity Bit	Even (fixed)		_____	_____	
Data Flow Control	ER (fixed)		_____	_____	
Communication Format	RS-422 2-Wire type (fixed)		_____	_____	
Highest Node No. <sup>*2*3</sup>	31		Highest Address <sup>*3</sup>	31	
GP is Only Master <sup>*4</sup>	ON		_____	_____	
Local Node (GP) <sup>*5</sup>	1		_____	_____	
Target Node (PLC)	No. of PLCs <sup>*7</sup>	1	_____	_____	
	Node Number <sup>*8</sup>	#1	2	MPI Address <sup>*6</sup>	2
		#2	Depending on the PLC's MPI Address	MPI Address <sup>*6</sup>	0 to 126
		#3	Depending on the PLC's MPI Address	MPI Address <sup>*6</sup>	0 to 126
		#4	Depending on the PLC's MPI Address	MPI Address <sup>*6</sup>	0 to 126

- \*1 Baud Rate can be 9600bps, 19200bps or 187500bps depending on the PLC unit's Baud rate. However, certain GP units cannot use the 187500bps speed.  
**Reference** 2.16.1 System Structure SIMATIC S7-200 Series (MPI Direct)  
 If the 187500bps speed is used with incompatible GP Series units, a Host Communication error (02:F2) will occur.  
**Reference** 2.16.5 Error Codes
- \*2 15/31/63/126 can be selected. Be sure this setting is the same as the PLC unit's Highest Address setting.
- \*3 15/31/63/126 can be selected. On a single network, choose the value that is higher than the maximum value of the GP's Local Node or the PLC's MPI Address. For example, if the maximum value is 16, then select 31. Specify the smallest practical value for the maximum node address. This will shorten the time required for initializing the network.
- \*4 When MPI master does not exist on a single network, a GP can be master. When GP is master, set to ON.
- \*5 Set the GP's unit number. Setting range is from 0 to 126, and the maximum number of GP units that can be connected is 3. Be sure this number is not used as a PLC's Node No.
- \*6 Set the PLC unit's node number. Setting range is from 0 to 126, and the maximum number of PLCs that can be connected is 4. Be sure this number is not used as a GP and another PLC unit's Node No.
- \*7 Select the number of PLCs to use for data communication.
- \*8 Register the PLC's MPI Address. This setting can only be entered using the GP-PRO/PBIII software. The GP unit's OFFLINE mode cannot be used.
- \*9 Selecting (check mark) this checkbox enables the Time Master settings. When the Time Master is enabled, the Time Interval set via the PLC overwrites the Master PLC's GP time data. Use the PLC's ladder software to perform master PLC settings. Select the [H/W Configuration] -> CPU menu's [Diagnostics Properties] -> Diagnostics/Clock feature. For details, refer to your PLC's Operation Manual.



**Note:**

The following diagram is Siemens S7-200 Series MPI Network setting window. This window is displayed by clicking on the [MPI Network] button in the [GP System Setup]-[Mode Settings] tab. The number in the diagram refers to the footnote number as shown above.

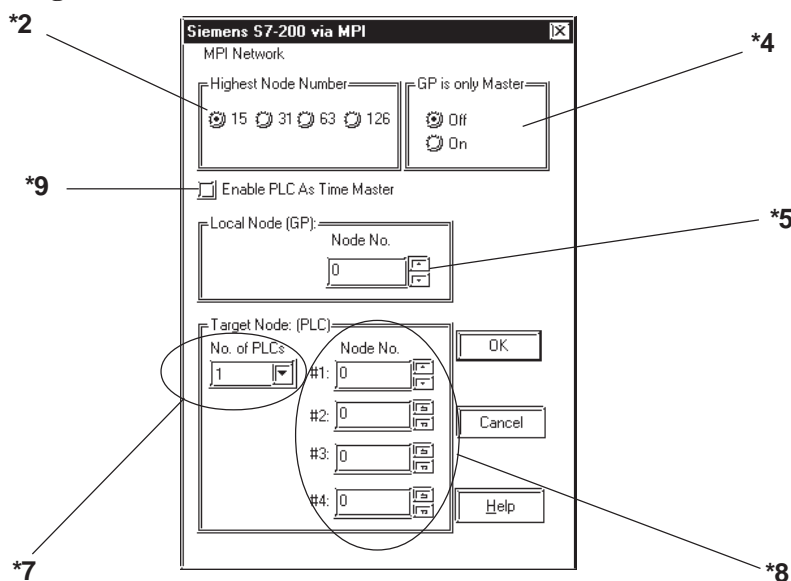

<SIMATIC S7-200 Series MPI Network Setting Window>



**Be sure to perform MPI Network settings prior to performing MPI communication.**

■ SIMATIC S7-300/400 Series (MPI Direct / MPI via adapter)

GP Setup		PLC Setup			
Baud Rate <sup>*1</sup>	19200 bps	Baud Rate <sup>*9</sup>	_____		
Data Length	8 bits (fixed)	_____	_____		
Stop Bit	1 bit (fixed)	_____	_____		
Parity Bit	Odd (fixed)	_____	_____		
Data flow Control	ER (fixed)	_____	_____		
Communication Format (MPI Direct Connection)	RS-422 (2-wire)	_____	_____		
Communication Format (MPI via Adapter)	RS-232C	_____	_____		
Highest Node No. <sup>*2*3</sup>	31	Highest Address <sup>*3</sup>	31		
Connection Method <sup>*4</sup>	via Adapter (fixed)	_____	_____		
Local Node (GP) <sup>*5</sup>	1	_____	_____		
Target Node (PLC)	No. of PLCs <sup>*7</sup>	1	_____		
	Node Num <sup>*8</sup>	#1	2	MPI Address <sup>*6</sup>	2
		#2	Depending on the PLC MPI Address	MPI Address <sup>*6</sup>	0 to 126
		#3	Depending on the PLC MPI Address	MPI Address <sup>*6</sup>	0 to 126
		#4	Depending on the PLC MPI Address	MPI Address <sup>*6</sup>	0 to 126

\*1 Baud Rate speed can be 19200bps or 187500bps depending on the PLC's unit baud rate. However, certain GP units cannot use the 187500bps speed.

▼ **Reference** 2.16.1 System Structure ◆ Connectable GP/GLC units for SIMATIC S7-200/300/400 Series (MPI Direct).

If 187500bps is used with an incompatible GP Series unit, a Host Communication error (02:F2) will occur. ▼ **Reference** 2.16.5 Error Codes

When using an MPI via Adapter connection, Baud Rate speed can be 19200bps, 38400bps or 115200bps. However, when using another adapter, Baud Rate speed can only be 19200bps.

\*2 15/31/63/126 can be selected. Be sure this setting is the same as the PLC unit's Highest Address setting.

\*3 15/31/63/126 can be selected. On a single network, choose the value that is higher than the maximum value of the GP's Local Node or the PLC's MPI Address. For example, if the maximum value is 16, then select 31. Specify the smallest practical value for the maximum node address. This will shorten the time required for initializing the network.

\*4 Set the Connection Method.

\*5 Set the GP's unit number. Setting range is from 0 to 126, and the maximum number of GP units that can be connected is 3. Be sure this number is not used as a PLC's Node No.

\*6 Set the PLC unit's node number. Setting range is from 0 to 126, and the maximum number of PLCs that can be connected is 4. Be sure this number is not used as a GP and another PLC unit's Node No.

\*7 Select the number of PLCs to use for data communication. Setting range is from 1 to 4.

\*8 Register the PLC's MPI Address. Depending on the No. of PLC setting, from #2 to #4 can be set. This setting can only be entered using the GP-PRO/PBIII software. The GP unit's OFFLINE mode cannot be used.

\*9 The Baud Rate Setting is not required when using MPI via Adaptor connection.

\*10 Selecting (check mark) this checkbox enables the Time Master settings. (The Time Master feature can only be used when the Connection method is Direct). When the Time Master is enabled, the Time Interval set via the PLC overwrites the Master PLC's GP time data. Use the PLC's ladder software to perform master PLC settings. Select the [H/W Configuration] -> CPU menu's [Diagnostics Properties] -> Diagnostics/Clock feature to perform the settings. For details, refer to your PLC's Operation Manual.



**Note:**

The following diagram is Siemens S7-300/400 Series MPI Network setting window. This window is displayed by clicking on the [MPI Network] button in the [GP System Setup]-[Mode Settings] tab. The number in the diagram refers to the footnote number as shown above.

<SIMATIC S7-300/400 Series MPI Network Setting Window>

■ **SIMATIC S7-300/400 (Using Adapter< 3964/RK512>)**

GP Setup		PC Link Unit Setup
Communication-format	RS-232C	---
Baud Rate	19200 bps	---
Data Bit	8 bits	---
Parity Bit	Even	---
Stop Bit	1 bit	---
Data Flow Control	ER Control	---



**Note:**

It is possible to enable/disable the Block Check Character (BCC) in communications between the PLC and the GP. This configuration can be performed via the Editor's [Mode] -> [Option] menu.

■ **SIMATIC 505**

GP Setup		PLC Settings	
Baud Rate	19200 bps	Baud Rate	19200 bps
Data Length	7 bits	Data Length	7bits (fixed)
Stop Bit	1 bit	Stop Bit	1bit (fixed)
Parity Bit	Odd	Parity Bit	Odd (fixed)
Data Flow Control	ER Control	_____	_____
Communication Format (RS-232C)	RS-232C	Communication Format (RS-232C)	Turn on the Dip Switch 1 on CPU.
Communication Format (RS-422)	RS-422 (4-wire type)	Communication Format (RS-422)	Turn on the Dip Switch 1 on CPU.

**2.16.5** Error Codes

## &lt;MPI Error Codes&gt;

An error code specific to the MPI is displayed in the lower left corner of the GP screen like "Host communication error (02:\*\*:##)." \*\* stands for the error code specific to the MPI. ## stands for the Node No. of the PLC on which the error has occurred. Error Codes F0, F2 and F3 is not displayed the Node No. of the PLC

**■ Error Codes**

Error Code	Description
F0	The cable is not connected. The PLC's power is OFF.
F1	Unable to locate target node.
F2	GP does not support 187500bps data transfer speed.
F3	A Timeout has occurred on the MPI network.
F4	Failed to connect to Target Node.
F5	Designated device or address does not exist, or other similar problem.