

36



Error Information

| | | |
|------|---|-------|
| 36.1 | 'Pro-Studio EX' Error | 36-2 |
| 36.2 | 2-Way Driver Error Messages and Syslog Features | 36-9 |
| 36.3 | 'Pro-Server EX' Error..... | 36-16 |
| 36.4 | Error Message..... | 36-58 |

36.1 'Pro-Studio EX' Error

| Error Message | Cause and Troubleshooting | Reference |
|--|---|------------------------------------|
| An undefined error occurred. | Some of the files configuring the program may be lost or damaged. Please check the destination folder of the installation. | - |
| Cannot open the network project. | The project info has contradiction. Please confirm that the project file is not damaged. | - |
| XX was not found. Please check whether the file name and the file storage location are correct. | Please check whether the network project file registered in the history information exists in the specified location. If moved, please specify and open the moved file. | - |
| Failed to save the network project file. | Please find the cause of the error, following the direction of the message. | - |
| Failed to create a backup file. | Please find the cause of the error, following the direction of the message. | - |
| Cannot open XX. | Loading may be failed due to erroneous configuration of project information, or a different version of network project file may be specified. Please confirm the program version. | - |
| Failed to write to the file. | Please specify the different location and re-write. | - |
| Cannot start the application. Application path: XX | The file configuring the program does not exist in the specified location. Please check whether the file exists in the displayed file path. If not existing, please reinstall. | 'Pro-Server EX Installation Guide' |
| The specified folder doesn't exist. Please check the folder name and specify a correct one again. | Please specify a correct folder. | - |
| Cannot open the PRW file. | Some of the files may be damaged. Please check the project file. | - |
| Cannot open the PRX file. | Some of the files may be damaged. Please check the project file. | - |
| PRW file was not found. | Please check whether the PRW file exists in the specified path. | - |
| ProPB may not be installed, or Auto-transfer may be invalid. | Please install the version accepting auto-transfer function of 'GP-PRO/PB III for Windows'. | - |
| Cannot start because ProPB is already running. | Please exit the running 'GP-PRO/PB III for Windows'. | - |
| Cannot start ProPB. | Please check if 'GP-PRO/PB III for Windows' is installed. When installed, 'GP-PRO/PB III for Windows' may be damaged, please install it again. | - |
| Error was found in the transfer preparation flag. | The specified screen project file may have been broken. Please specify an undamaged screen project file. | - |
| Nonexistent PLC code is used. Please check the installation status of driver. | Protocol installed in 'Pro-server EX' is not the latest version. Please update the protocol driver online. | - |

| Error Message | Cause and Troubleshooting | Reference |
|--|--|-----------|
| PLC type does not match. Please check the PLC type settings. | Protocol installed in 'Pro-server EX' is not the latest version. Please update the protocol driver online. | - |
| Cannot access the specified file. | The file may not exist in the specified location, or be controlled by access right. Please confirm the specified file again. | - |
| The specified file in PRW was not found. | Some of the files may be damaged. Please check the project file. | - |
| No PRW file name has been input. | Please input a PRW file name. | - |
| Failed to create a temporary saving file. | The temporary file creation folder may have little free space. Please check the space of the drive, and increase it if insufficient. | - |
| The specified file is not a PRW file. | Please specify a file of which extension is ".prw". | - |
| The specified screen project file is broken. Please specify the proper screen project file. | The specified screen project file may have been broken. Please specify an undamaged screen project file. | - |
| Failed to find symbol table file. | Some of the files may be damaged. Please check the project file. | - |
| Failed to get the device address. | Some of the files may be damaged. Please check the project file. | - |
| Failed to delete the temporary file. | Please execute it again. | - |
| Failed to read the setting file. | The specified screen project file may have been broken. Please specify an undamaged screen project file. | - |
| Failed to open the project file. | Please check if the specified screen project file exists. If yes, the specified screen project file may have been broken. Please specify an undamaged screen project file. | - |
| Failed to read the screen project file. | The specified screen project file may have been broken. Please specify an undamaged screen project file. | - |
| Error was found in the specified screen project file. | Some of the files may be damaged. Please check the project file. | - |
| No necessary data in the screen project file. | Some of the files may be damaged. Please check the project file. | - |
| Failed to create a temporary file. | The temporary file creation folder may have little free space. Please check the space of the drive, and increase it if insufficient. | - |
| The specified file is not a screen project file. Please specify a screen project file created by GP-Pro EX. | Please specify a file of which extension is ".prx". | - |
| Failed to access the file obtained from display unit. | Some of the files may be damaged. Please check the project file. | - |

| Error Message | Cause and Troubleshooting | Reference |
|--|--|------------------------------------|
| No data in the specified file was found. | Some of the files may be damaged. Please check the project file. | - |
| Network project file have been already opened. | Network project file specified by the other 'Pro-Studio EX' have been opened. Therefore, please make edition in this file. | - |
| Please specify a group. | Please specify the group and execute it. | - |
| You don't have the right of access to the file XX. | Please check the access right to the specified network project. | - |
| No specified XX file was found. | Please check whether the specified file or folder exists. If you specified a network-destination file, please check whether the network is normal. | - |
| The specified file XX is unsupported or broken. | Please check the file format and the application that created the file. | - |
| The specified file XX is the one of an unsupported version. The necessary data table does not exist. | Please check the file format and the application that created the file. | - |
| The specified file XX is currently used by another program. | The specified file or some tables in the file are currently used by another application and locked. Please close the application and do the operation again. | - |
| A system error occurred during the access to the file XX. Operation will be interrupted. | Please check whether the specified file is not broken. Also, please confirm that the versions of OS, Service Pack, Internet Explorer, Office, etc. are supported. If not solved, install it again. | - |
| A system error occurred during the internal operation of the network project. | Please reboot your PC. If not solved, install it again. | 'Pro-Server EX Installation Guide' |
| A system error occurred during the internal operation (Redo) of the network project. | Please reboot your PC. If not solved, install it again. | 'Pro-Server EX Installation Guide' |
| A system error occurred during the internal operation (Undo) of the network project. | Please reboot your PC. If not solved, install it again. | 'Pro-Server EX Installation Guide' |
| Insufficient disk space | Please check the space of the drive, and increase it if insufficient. | - |
| The media is write-protected. | Please check whether the file or folder is under control of access right. | - |
| The file does not exist or you do not have the access right. | Please check whether the file or folder is under control of access right. | - |
| The media is not ready. | Please find the cause of the error, following the direction of the message. | - |
| The symbol configuration is invalid. | Please delete the symbol sheet and register the symbols again. | - |

| Error Message | Cause and Troubleshooting | Reference |
|--|--|---|
| The Content folder of the installation-destination directory has no ACTION info. | Please execute Updating Installation to restore the ACTION. | - |
| DLL Load Error: | Please execute Updating Installation to restore the ACTION. | - |
| Failed in the latest update. | Please press Reference button and create the link again. | - |
| The specified node has been already registered in Device/PLC other than memory link. Please select existing node where memory link is registered, or register the node by changing its name. | Please select a node where memory link is set to Device/PLC, or specify a node, which is not registered. | "31.5 Setting Guide" |
| Cannot access the device access log file. | Please check whether the specified file exists. If exists, please confirm the right of access to the file. | "29.6 Device Access Log" |
| The XXth line of the device access log file is invalid. | Please correct or delete the specified line, and import the device cache buffer again. | "29.5.2 Import Registration from Device Access Log" |
| The no. of records in 1 cache buffer exceeded 1000. Import will be aborted. | The no. of device access log specifying the same node exceeds 1000. Please keep 1000 or less. | "29.5.2 Import Registration from Device Access Log" |
| In the device access log file, Node XX exists, which is not registered in the network project file. A line using an unregistered Node cannot be imported. | Please add the node, and import the device cache buffer again. | "29.5.2 Import Registration from Device Access Log" |
| Failed to read the alias file. | Confirm the text substitution table settings in editing the template file. | "5.1.2 Setting Guide" |
| No recipe with the specified record no. exists. | Confirm the No. of recipe record settings in editing the template file. | "12.3 Setting Guide" |
| The cell arrow settings are invalid. Scale or Arrow Start/End Value is wrong. | Confirm the cell arrow settings in editing the template file. | "5.3.2 Setting Guide" |
| Cannot write device values converted to strings. If you want to write them, please cancel the Replace specification. | You cannot write device values converted to strings. Please release the converting specification in writing. | "5.1.2 Setting Guide" |
| Cannot perform Test Read. Please confirm the followings. - The network project file (npx) has been correctly loaded into Pro-Server EX. - The target node is participating. - The cable is not broken. | Please confirm the followings. - if the network project file (npx) has been correctly loaded into Pro-Server EX. - if the target node is participating. - if the cable is not broken. | - |

| Error Message | Cause and Troubleshooting | Reference |
|---|--|--------------------------------|
| Cannot perform Test Write. Please confirm the followings. - The network project file (npx) has been correctly loaded into Pro-Server EX. - The target node is participating. - The cable is not broken. | Please confirm the followings. - if the network project file (npx) has been correctly loaded into Pro-Server EX. - The target node is participating. - The cable is not broken. | - |
| The Action Area was too small, so a portion of the data was cut off. | The Action output range is too small. Please expand the Action area in editing the template file. | Chapter of Excel Report Action |
| Could not identify the record no. because the recipe record no. has not been set Please configure the specification method of the record no. in the Recipe Settings dialog. | Please configure the specification method of the record no. in the Recipe Settings dialog. | "12.3 Setting Guide" |
| The Action Area was too small, so cannot write. | The Action output range is too small. Please expand the Action area in editing the template file. | Chapter of Excel Report Action |
| The Action area is too small. | The Action output range is too small. Please expand the Action area in editing the template file. | Chapter of Excel Report Action |
| Cannot execute the Trigger Button because ProEasy.dll was not found. Please confirm that 'Pro-Server EX' has been installed. | Please confirm that 'Pro-Server EX' has been installed. | - |
| During execution of the Trigger Button, a ProEasy.dll not supporting Pro-Server EX was used. Please confirm that 'Pro-Server EX' has been installed. | Please confirm that 'Pro-Server EX' has been installed. | - |
| Cannot execute the Trigger Button because an error occurred while writing device to Pro-Server EX. Pro-Server EX Error Code: | Please open the Action settings and create the Trigger Button again. | "5.6.2 Setting Guide" |

| Error Message | Cause and Troubleshooting | Reference |
|--|------------------------------------|-----------------------|
| <p>The Button Name is invalid.</p> <p>\nThe first character of the Button Name must not be a numeral.</p> <p>\nThe following symbols cannot be used. \nspace, !, " : / \ = @ []</p> <p>\nUsing two underscores in a row is not allowed.</p> | Confirm the button name. | "5.6.2 Setting Guide" |
| The Button Name is too long. It must be within 32 characters. | | |
| Cannot confirm that the Button Name is correct because ProEasy.dll was not found. Do you want to continue configuration? | | |
| Cannot check whether the button name is correct because a ProEasy.dll not supporting Pro-Server EX was used during executing the Trigger Button. Do you want to continue configuration? | | |
| The Caption Name is too long. It must be within 256 characters. | Please confirm the Button Caption. | "5.6.2 Setting Guide" |
| Cannot check for Button Name overlapping because Excel Form Action Add-in was not found. The Button Name will be saved as it is. | Confirm the button name. | "5.6.2 Setting Guide" |
| The specified Button Name is already in use. Please specify another Button Name. | | |
| The following characters are invalid in a file name. (\ / : * ? " < >) | Confirm the file name. | "5.5.3 Setting Guide" |
| The following characters are invalid in a folder name. (/ * ? " < >) | Confirm the folder name. | "5.5.3 Setting Guide" |
| The following characters are invalid in a sheet name.(: \ / ? * []) | Confirm the sheet name. | "5.5.3 Setting Guide" |
| In the File Name Specification, you have not set any file name. Please set one. | Please set the file name. | "5.5.3 Setting Guide" |
| In the Folder Name Specification, you have not set any folder name. Please set one. | Please set the folder name. | "5.5.3 Setting Guide" |
| In the Sheet Name Specification, you have not set any sheet name. Please set one. | Please set the sheet name. | "5.5.3 Setting Guide" |

| Error Message | Cause and Troubleshooting | Reference |
|--|---|-----------------------|
| Macro Execution has not been set. Please set one. | Please set the Macro execution. | "5.5.3 Setting Guide" |
| Please set a folder name. | Please specify the folder of the file to be exported. | "5.5.3 Setting Guide" |
| Cannot set the same Action Areas in a line. | Please set the Action for different areas in a line. | "5.5.3 Setting Guide" |
| Up to 32 Unicode characters can be inputted as a trigger command name. | Confirm the trigger command name. | "5.5.3 Setting Guide" |
| The inputted character is invalid. | | |
| No trigger condition found. Please check that one or more trigger conditions have been registered. | Please register the new trigger condition. | "5.5.3 Setting Guide" |
| No trigger button found. Please check that one or more trigger buttons have been registered | Please register the new trigger button. | "5.5.3 Setting Guide" |

36.2 2-Way Driver Error Messages and Syslog Features

When an error occurs, the 2-Way driver shows the following errors in the left bottom of the display unit screen.

| Screen Display | Meaning |
|----------------|--------------------|
| SYSTEM ERROR | System call error |
| 2Way ERROR | 2-Way Driver error |

System Errors

A system error is a fatal error.

2-Way Errors

A 2-Way error is an error that has occurred due to the 2-Way Driver.

When a 2-Way error occurs, the [2-Way Transfer Error Code] is saved to the display unit's LS2075 address.

Syntax: 2Way ERROR(<Cause No. >:<Error No. 1>:<Error No. 2>:<Error No. 3>)

| Reason Code | Error Type | | | | Cause | Required action | 2-Way Error Code |
|-------------|------------|--------|--------|--------|---|--|------------------|
| | | 1 | 2 | 3 | | | |
| 30 | Fatal | Unused | Unused | Unused | Insufficient GP resources. | Internal problem. Please contact the Pro-face customer care center when it occurred. | FF30 |
| 31 | Fatal | Unused | Unused | Unused | Cannot release GP resources | Internal problem. Please contact the Pro-face customer care center when it occurred. | FF31 |
| 32 | Fatal | Unused | Unused | Unused | Cannot release GP resources | Internal problem. Please contact the Pro-face customer care center when it occurred. | FF32 |
| 40 | Fatal | Unused | Unused | Unused | IP address & Port number are not registered | Either the display unit's IP address or the port number has not been set. Reset it such as on the offline screen. | FF40 |
| 41 | Fatal | Unused | Unused | Unused | The symbol state is different than GLC control. | The symbol state is different than GLC control. The GLC symbol differs from the symbol imported to the network project of Pro-Server. Import the latest symbol to the network project, and then transfer it to GLC | FF41 |

| Reason Code | Error Type | | | | Cause | Required action | 2-Way Error Code |
|-------------|------------|--------|------------------------------|--|---|--|------------------|
| | | 1 | 2 | 3 | | | |
| 51 | Fatal | Unused | Unused | Refer to protocol stack error code | Protocol Stack Call up error. | This means that an error occurred with the display unit's communication program (TCP/IP). Indicates that an error occurred with the display unit communication program (TCP/IP). Check the contents of the Ethernet setting in the offline screen. | FF51 |
| F0 | Warning | 0 | Unused | 2580 | After transmit command was sent, Device Write was ignored due to insufficient Receiver memory | Receiving memories may lack at the node to be provided. Either lengthen the issuing interval of the provider command or decrease the volume of sending data. | 2580 |
| | | 0 | Unused | 25A8 | After transmit command was sent, Receiver unable to find data. | Network project files are different between the node to be provided and the provider source. Transfer the same network project file. | 25A8 |
| | | 0 | Unused | 25A9 | After transmit command (with reply) was sent, no reply was received from Receiver. | Either communication damage has occurred or provider information may differ. Either check communication state or transfer the network project file again. | 25A9 |
| | | 0 | Unused | Code is different from above | Refer to "36.4 Error Message". | | |
| | | C0 | Code is different from above | | For the GP node(s) connected to 'Pro-Server EX', error codes start with C0. Refer to "36.3 'Pro-Server EX' Error" for more details. | | |
| | | 1 | Except display unit | Refer to the manual of each PLC maker. | After issuing a provider command, device write failed at the node to be provided. Refer to the manual of each PLC maker. | Write failed due to a communication error occurred with PLC. Refer to the operation manual of the PLC maker and check workaround corresponding to the error code. | FFF0 |

Protocol Stack Error Codes

The following protocol stack error codes are displayed on the display unit screen.

| Error Code | Meaning | Required action |
|------------|--|--|
| 1000 | Current node IP Address entry failed during initialization | The IP address setup of the self node is incorrect. Reset it such as on the offline screen. |
| 1005 | Initialization failed | Check if the Ethernet unit is normally set. |
| 1006 | Transmit Halt processing failed | Internal problem. Please contact the Pro-face customer care center when it occurred. |
| 1007 | Initialization is performed again, without previous initialization being completely terminated | Internal problem. Please contact the Pro-face customer care center when it occurred. |
| 1008 | Provider Node Port number error | The port number of the self node is out the designated range. Reset it such as on the offline screen. |
| 1009 | Receiver Node port number error. | The port number of the partner node is out the designated range. Reset it such as on the offline screen. |
| 100A | Receiver Node IP Address error. | The IP address setup of the partner node is incorrect. Reset it such as on the offline screen. |
| 100B | UDP was used to register this port number | The port number of PLC communication overlaps with that for 2Way. Check the setup of the self node port. |
| 100C | TCP was used to connect an adjacent port with a port having the same number. | The TCP port is used for the same partner node using the same port number. Check if the port number of the partner node is duplicated. |
| 100D | Protocol Stack establishment refused | Internal problem. Please contact the Pro-face customer care center when it occurred. |
| 100E | Protocol Stack Open Failure(value)was returned | Internal problem. Please contact the Pro-face customer care center when it occurred. |
| 100F | The(communication)connection has been cut. | The TCP connection is closed by the partner node. Check if there are any problems with the communication setup. |
| 1010 | All connections are currently in use. | The communication connection with the display unit is at maximum. Exit one application, and then reconnect it. |
| 1013 | Receiver has aborted(communication). | The TCP connection is aborted by the partner node. Check if there are any problems with the communication setup. |
| 101D | No Ethernet controller | Expansion Ethernet unit is required when using GP-2401/GP-2501/GP-2601 Series units |
| 1030 | No response from the protocol stack. | Internal problem. Please contact the Pro-face customer care center when it occurred. |
| 1032 | No response from the Receiver. | A problem occurred on communication with the partner node. Check the connection state including cables. |

NOTE

- When the error type is fatal, the 2-Way Driver cannot be restored.
 - When the error type is Warning, the 2-Way Driver continues to operate. Once the cause of the error is removed, the error display will disappear when the display unit's screen changes.
 - When the Reason Code is "F0", the "<Alarm Issued Time>" and "<Receiver IP Address>" will also be displayed.
-

SYSLOG

If the SYSLOG file(SYSLOG.EXE), located inside the Pro-Server's system folder, is started, the following data can be checked.

The 2-Way Driver downloaded to the display unit can perform a variety of tasks, among them being the output of SYSLOG data.

You can select the type of SYSLOG data output via the display unit OFFLINE mode's [SYSLOG Information Settings].

The correspondence of the Output Level and the output producing SYSLOG Priority level is shown below.

| Output Level | SYSLOG Output Priority Level |
|--------------|------------------------------|
| 0 | No correspondence |
| 1 | INFO, |
| 2 | INFO,NOTICE |
| 3 | INFO,NOTICE,WARNING |
| 4 | INFO,NOTICE,WARNING,DEBUG |

SYSLOG Output Information

| SYSLOG Level | ECOM Response | SYSLOG Text |
|--------------|-------------------|--|
| INFO | Starts ONLINE | gp[17]:start online |
| INFO | Starts OFFLINE | gp[17]:start offline |
| WARNING | Processing Failed | gp[17]:bel:fail,<Processing Failed Text><Argument1> |
| DEBUG | Device Read | gp[17]:rdev:<Argument2> |
| DEBUG | Device Write | gp[17]:wdev:<Argument2> |
| DEBUG | Command Received | gp[17]:bel:<Command Text1>,recv from <IP address>(<port>)<Argument3> |
| DEBUG | Command Sent | gp[17]:bel:<Command Text2>,send to <IP address>(<port>)<Argument3> |
| DEBUG | s201 File Read | gp[17]:s201:<Command Text3>< Argument4> send to<IP address> |

| Failed Processing String | Meaning |
|-----------------------------------|--|
| read device | Failed in reading from the device |
| write device | Failed in writing to the device. |
| sync provide, response timeout | No return data received from the receiver node after providing data. |
| sync provide, fail to read device | Failed in reading from the device when providing data. |
| lack memory | Command ignored due to insufficient 2-Way driver memory. |
| first trigger on | The command to enable the first trigger failed. |
| second trigger on | The command to enable the second trigger failed. |
| backup data read | Failed in reading the backup data. |

| Command String 1 | Contents |
|-------------------|-----------------------------|
| response | Receives the response. |
| sync provide | Provides the data. |
| read device | Reads from the device. |
| write device | Writes to the device. |
| get node property | Reads the node property. |
| first trigger on | Enables the first trigger. |
| second trigger on | Enables the second trigger. |
| backup data read | Reads the backup data. |

| Command String 2 | Contents |
|---|---|
| sync provide, broadcast | Provides the data(Broadcast, no response). |
| sync provide, send each | Provides the data(Peer to Peer, no response). |
| sync provide, broadcast and wait for response | Provides the data(Broadcast, with response). |
| sync provide, send each and wait for response | Provides the data(Peer to Peer, with response). |
| sync provide, response | Provide data response. |
| read device, response | Device read response. |
| write device, response | Device write response. |
| write device, response(retry) | Write to device(Retry)response. |
| get node property, response | Read node property response. |
| first trigger on, response | First trigger enable response. |
| second trigger on, response | Second trigger enable response. |
| backup data read, response | Read backup data response. |

| Command String 3 | Contents |
|----------------------|---|
| register as sender | Registers provide data command as sender(provider). |
| register as receiver | Registers provide data command as receiver. |

Argument1(<String>=<Value>)

| String | Value | Value display format |
|--------|-----------|----------------------|
| err | Error No. | Hex. |
| pr | ProjectID | Hex. |
| ow | OwnerApp | Hex. |
| ma | MajorNo | Hex. |
| mi | MinorNo | Hex. |

Argument2(<String>=<Value>)

| Character string | Value | Value display format |
|------------------|--------------------|----------------------|
| code | Device Code | Hex. |
| addr | Device Address | Hex. |
| pack | DataPack | Hex. |
| kind | DataKind | Hex. |
| count | Data count by Word | Hex. |
| d0 | First data (1WORD) | Hex. |

Argument3(<String>=<Value>)

| Character string | Value | Value display format |
|------------------|-----------|----------------------|
| pr | ProjectID | Hex. |
| ow | OwnerApp | Hex. |
| ma | MajorNo | Hex. |
| mi | MinorNo | Hex. |
| dl | DataLen | Hex. |
| va | Validity | Hex. |

Argument4(<String>=<Value>)

| Character string | Value | Value display format |
|------------------|----------------|----------------------|
| rn | ResourceNo | Hex. |
| pack | DataPack | Hex. |
| kind | DataKind | Hex. |
| count | ProvidCount | Hex. |
| howto | HowTo | Hex. |
| ext | ExtDevType | Hex. |
| code | Device Code | Hex. |
| addr | Device Address | Hex. |
| retry | RetryCount | Hex. |
| wait | RetryWaitTime | Hex. |

36.3 'Pro-Server EX' Error

36.3.1 "REAA****" Error Info

| Error Code* | Error Message | Cause and Troubleshooting | Reference |
|--|---|---|--|
| 0xC0A10001 REAA001 -1063190527 3231776769 | Failed to read the device set in the "Transfer Source" of the "Action/Data Transfer (XX)". (XX: Action/Data Transfer Name) | Failed to read the device specified as "Transfer from". Please confirm the device set in "Action/Data Transfer" of Pro-Studio EX. | Chapter of corresponding Action |
| 0xC0A10002 REAA002 -1063190526 3231776770 | Failed to write the device set in the "Transfer Source" of the "Action/Data Transfer (XX)". (XX: Action/Data Transfer Name) | Failed to write the device specified as "Transfer to". Please confirm the device set in "Action/Data Transfer" of Pro-Studio EX. | Chapter of corresponding Action |
| 0xC0A10003 REAA003 -1063190525 3231776771 | Could not store the IP address of the node where the error occurred. (Trigger Condition: XX) (XX: Trigger condition name) | Could not store the IP address of the abnormal node. Please confirm "Save Abnormal IP Address in" set in the screen of "Set Trigger Condition Details" of 'Pro-Studio EX'. | "◆ "Set Trigger Condition Details" Screen" of "33.1.1 Types of Trigger Conditions" |
| 0xC0A10004 REAA004 -1063190524 3231776772 | Could not store the error code (Trigger Condition: XX) (XX: Trigger condition name) | Could not store the error code. Please confirm "Save Error Code in" set in the screen of "Set Trigger Condition Details" of 'Pro-Studio EX'. | "◆ "Set Trigger Condition Details" Screen" of "33.1.1 Types of Trigger Conditions" |
| 0xC0A10005 REAA005 -1063190523 3231776773 | Could not write the "Processing Result Success-or-Failure Bit" (Trigger Condition: XX) (XX: Trigger condition name) | Failed to write the "Processing Result Success-or-Failure Bit". Please confirm "Bit Showing Processing Result (Success/Failure)" set in the screen of "Set Trigger Condition Details" of 'Pro-Studio EX'. | "◆ "Set Trigger Condition Details" Screen" of "33.1.1 Types of Trigger Conditions" |
| 0xC0A10006 REAA006 -1063190522 3231776774 | Could not write the "Processing Completion Bit" (Trigger Condition: XX) (XX: Trigger condition name) | Failed to write the "Processing Completion Bit". Please confirm "Processing Completion Bit" set in the screen of "Set Trigger Condition Details" of 'Pro-Studio EX'. | "◆ "Set Trigger Condition Details" Screen" of "33.1.1 Types of Trigger Conditions" |
| 0xC0A10007 REAA007 -1063190521 3231776775 | Could not clear the "Trigger Condition device" (Trigger Condition: XX) (XX: Trigger condition name) | Failed to clear the "Trigger Condition Device". Please confirm the device set in the screen of "Set Trigger Condition Details" of 'Pro-Studio EX'. | "33.1.1 Types of Trigger Conditions" |
| 0xC0A10008 REAA008 -1063190520 3231776776 | Could not read the "Trigger Condition device" (Trigger Condition: XX) (XX: Trigger condition name) | Failed to read the "Trigger Condition Device". Please confirm the device set in the screen of "Set Trigger Condition Details" of 'Pro-Studio EX'. | "33.1.1 Types of Trigger Conditions" |

- * - 1st line: Error code
2nd line: Integrated error code
3rd line: Error code with decimal code
4th line: Error code without decimal code

| Error Code* | Error Message | Cause and Troubleshooting | Reference |
|--|---|--|---------------------------------|
| 0xC0A10009 REAA009 -1063190519 3231776777 | Could not write the "Receive Notification Device" (Action/Data Transfer: XX) (XX: Action/Data Transfer name) | Failed to write to the "Receive Notification Device". Please confirm "Receive Notification Device" set in the screen of "ACTION Node/Process Completion Notification Settings" of 'Pro-Studio EX'. | Chapter of corresponding Action |
| 0xC0A1000A REAA010 -1063190518 3231776778 | Transfer NPX changes: Unable to run Action/Data Transfer (XX). Reason: XX | Transfer network project to all participating nodes related to [Action/Data Transfer]. | 34.3 Option Settings |
| 0xC0A1000B REAA011 -1063190517 3231776779 | Compare NPX Project on Connection do not match. As a result, unable to run Action/Data Transfer. | | |
| 0xC0A1000C REAA012 -1063190516 3231776780 | Data transfer information in the source and destination nodes do not match. | | |
| 0xC0A1000D REAA013 -1063190515 3231776781 | Data transfer information in the source and destination nodes do not match. (Location XX-XX) | | |
| 0xC0A1000E REAA014 -1063190514 3231776782 | Data transfer destination node and runtime versions are not compatible. | Update to a new version of the run time on all participating nodes related to [Action/Data Transfer]. | |
| 0xC0A10010 REAA016 -1063190512 3231776784 | Could not use the XX port (No: XX). (XX: Part name/No.) | The system port number may be in use. | - |
| 0xC0A10011 REAA017 -1063190511 3231776785 | Attempted to access a write-protect area (XX) (XX: Device name) | Cannot write to Write Inhibit Area (LS0000-LS0019, LS2032-LS2095, LS9000-LS9999) via D-Script or Network. | - |
| 0xC0A10012 REAA018 -1063190510 3231776786 | Attempted to access a device outside the address range (XX) (XX: Device name) | Attempted to access an out-of-range device. | - |

* - 1st line: Error code
2nd line: Integrated error code
3rd line: Error code with decimal code
4th line: Error code without decimal code

| Error Code* | Error Message | Cause and Troubleshooting | Reference |
|--|---|---|------------------------------|
| 0xC0A10015 REAA021 -1063190507 3231776789 | An invalid ID (Node, Device, Address) has been specified. | An invalid ID was specified. Attempted to access a nonexistent device. | - |
| 0xC0A10016 REAA022 -1063190506 3231776790 | An invalid ID (Node, Device, Address) has been specified. | An invalid ID was specified. Attempted to access a nonexistent device. | |
| 0xC0A1001A REAA026 -1063190502 3231776794 | Illegal/Undefined Device Address | An invalid device was specified. Attempted to access a nonexistent device. | - |
| 0xC0A1001B REAA027 -1063190501 3231776795 | Illegal/Undefined Device Address | | |
| 0xC0A1001C REAA028 -1063190500 3231776796 | Illegal/Undefined Device Address | | |
| 0xC0A1002A REAA042 -1063190486 3231776810 | Could not complete 'Action/Data Transfer (XX)' within the time of Data Transfer Timeout. | An error may have occurred during communication with a network node or a connected device/PLC. Check the devices configured in Pro-Studio's [Action/Data Transfer]. | - |
| 0xC0A1002B REAA043 -1063190485 3231776811 | Could not start 'Action/Data Transfer (XX)' because the previous 'Action/Data Transfer (XX)' had been executed. | Wait awhile, then run [Action/Data Transfer] again. | - |
| 0xC0A1001D REAA029 -1063190499 3231776797 | Unable to use device's Device ID (XX) | Define the equipment ID that matches the series associated with the indirect devic/PLC. | "GP-Pro EX Reference Manual" |
| 0xC0A10030 REAA048 -1063190480 3231776816 | Warning: You cannot use some of Pro-Server features because the network-project file is in an old format. | Please transfer the network-project file again using the latest 'Pro-Studio EX'. | - |
| 0xC0A10031 REAA049 -1063190479 3231776817 | Warning: You cannot use some of Pro-Server features because the network-project file is in a new format. | Please execute forced transfer using the latest 'GP-Pro EX'. Then transfer the network-project file again using 'Pro-Studio EX'. | - |
| 0xC0A10032 REAA050 -1063190478 3231776818 | You cannot use Pro-Server features because the network-project file is in an unusable old format. | Please transfer the network-project file again using the latest 'Pro-Studio EX'. | - |

* - 1st line: Error code
2nd line: Integrated error code
3rd line: Error code with decimal code
4th line: Error code without decimal code

| Error Code* | Error Message | Cause and Troubleshooting | Reference |
|--|--|--|-----------|
| 0xC0A10033 REAA051 -1063190477 3231776819 | You cannot use Pro-Server features because the network-project file is in an unusable new format. | Please execute forced transfer using the latest 'GP-Pro EX'. Then transfer the network-project file again using 'Pro-Studio EX'. | - |
| 0xC0A10034 REAA052 -1063190476 3231776820 | You cannot use Pro-Server features because the network-project file is in an unknown format or damaged. | Please transfer the network-project file again using 'Pro-Studio EX'. | - |
| 0xC0A10040 REAA064 -1063190464 3231776832 | A communication error occurred during communication with the destination node. Please confirm that the network connection to the node has been properly established. | Please forcibly transfer the system using 'GP-Pro EX'. | - |
| 0xC0A10041 REAA065 -1063190463 3231776833 | The destination node did not responded within the specified time. Please confirm that the network connection to the node has been properly established. | Please check whether the network cable between the local node and the destination node etc. is correctly connected. | - |
| 0xC0A10042 REAA066 -1063190462 3231776834 | The destination node did not responded within the specified time. Please confirm that the network connection to the node has been properly established. | Please check whether the network cable between the local node and the destination node etc. is correctly connected. | - |
| 0xC0A10043 REAA067 -1063190461 3231776835 | Communication with the destination Node stopped because the destination or local Node closed. | Please check whether the network cable between the local node and the destination node etc. is correctly connected. | - |
| 0xC0A10044 REAA068 -1063190460 3231776836 | Unable to connect to server. Server authentication failed. | Please enter the correct authentication information on the viewer. | - |
| 0xC0A10045 REAA069 -1063190459 3231776837 | You do not have permission to run the operation in the viewer. | Increase the security level on the viewer. | - |
| 0xC0A10046 REAA070 -1063190458 3231776838 | [Writing from GP-Viewer] of the server setup is disable. The process can not be executed. | Tried to write into the Device/PLC by pressing the switch from the viewer while [Writing from GP-Viewer] is disabled in the server settings. Change the setting if writing is necessary. This error also occurs when the screen is switched from 'GP-Viewer EX' in the synchronous mode. | - |

* - 1st line: Error code
2nd line: Integrated error code
3rd line: Error code with decimal code
4th line: Error code without decimal code

| Error Code* | Error Message | Cause and Troubleshooting | Reference |
|--|--|---|------------------------------|
| 0xC0A1004A REAA074 -1063190454 3231776842 | Failed to write to SRAM. | Failed to update SRAM. Update SRAM again. | - |
| 0xC0A1004B REAA075 -1063190453 3231776843 | Failed to read from SRAM. | Failed to update SRAM. Update SRAM again. | - |
| 0xC0A10050 REAA080 -1063190448 3231776848 | Can not load Web Server. | Please forcibly transfer the system using 'GP-Pro EX'. | - |
| 0xC0A10051 REAA081 -1063190447 3231776849 | Web Server is not trasferred | Please forcibly transfer the system using 'GP-Pro EX'. | - |
| 0xC0A10052 REAA082 -1063190446 3231776850 | Can not start Web Server | Please forcibly transfer the system using 'GP-Pro EX'. | - |
| 0xC0A10060 REAA096 -1063190432 3231776864 | Master IP address in Ethernet Multilink is invalid or uses IP address of the display unit (XX). | Change the master node's IP address (node that is displaying the message) and transfer the screen project again. Or, change the IP address of the current node. | "GP-Pro EX Reference Manual" |
| 0xC0A10070 REAA112 -1063190416 3231776880 | Failed to read data. Too many addresses to read from server. Or, too many GP-Viewer EX may be connected. | Edit the screen project to reduce the number of used device points, then transfer again. Or, reduce the number of simultaneous GP-Viewer connections to a single server. | |
| 0xC0A10071 REAA113 -1063190415 3231776881 | Too many devices to register in the device cache. Direct read will be used instead.(XX) | Reduce the number of device points that are registered as the Always type in the device cache. | |

* - 1st line: Error code
2nd line: Integrated error code
3rd line: Error code with decimal code
4th line: Error code without decimal code

36.3.2 "RYAA****" Error Info

| Error Code* | Error Message | Cause and Troubleshooting | Reference |
|--|---|--|----------------------|
| 0xC0AF0001 RYAA001 -1062273023 3232694273 | The specified shared memory already exists. | A fatal error occurred. Please perform forced transfer of 'GP-Pro EX', and then execute transfer again. | "26.1 Setting Guide" |
| 0xC0AF0002 RYAA002 -1062273022 3232694274 | The specified shared memory does not exist. | | |
| 0xC0AF0003 RYAA003 -1062273021 3232694275 | A shared memory already exists, but its memory size is less than specified. | Please close another application or restart the OS. | - |
| 0xC0AF0004 RYAA004 -1062273020 3232694276 | Cannot create a shared memory due to insufficiency of memory or resource. | | |
| 0xC0AF0005 RYAA005 -1062273019 3232694277 | Could not start TdasEngine because it is already in execution or termination. | A fatal error occurred. Please perform forced transfer of 'GP-Pro EX', and then execute transfer again. | "26.1 Setting Guide" |
| 0xC0AF0006 RYAA006 -1062273018 3232694278 | Could not stop TdasEngine because it is already in suspension or termination. | | |
| 0xC0AF0007 RYAA007 -1062273017 3232694279 | Could not register the operation in TdasEngine. | | |
| 0xC0AF0008 RYAA008 -1062273016 3232694280 | Cannot execute State Transition of TdaInfo because a small service is now in transition. | A fatal error occurred. Please perform forced transfer of 'GP-Pro EX', and then execute transfer again. | "26.1 Setting Guide" |
| 0xC0AF0009 RYAA009 -1062273015 3232694281 | The device name (XX) specified as the destination NODE does not exist. (XX: Device/PLC name) | Device name specified by the node for 'Pro-Server Ex' and that for the display unit does not match. Please match these names. In the case that these name match, the network project may not be transferred to the remote node. Please transfer the network project to the remote node again. | "25.1 Setting Guide" |

- * - 1st line: Error code
 2nd line: Integrated error code
 3rd line: Error code with decimal code
 4th line: Error code without decimal code

| Error Code* | Error Message | Cause and Troubleshooting | Reference |
|--|--|---|----------------------|
| 0xC0AF000A RYAA010 -1062273014 3232694282 | Cannot execute the operation due to the invalid state of the small service. | A fatal error occurred. Please perform forced transfer of 'GP-Pro EX', and then execute transfer again. | "26.1 Setting Guide" |
| 0xC0AF000B RYAA011 -1062273013 3232694283 | Cannot execute the operation because the small service is not in operation. | | |
| 0xC0AF000C RYAA012 -1062273012 3232694284 | Cannot execute the operation because the small service is in suspension. | A fatal error occurred. Please perform forced transfer of 'GP-Pro EX', and then execute transfer again. | "26.1 Setting Guide" |
| 0xC0AF000D RYAA013 -1062273011 3232694285 | The I/F of an unsupported small service was called. | | |
| 0xC0AF0010 RYAA016 -1062273008 3232694288 | Could not register the item because of insufficient memory. | Please close another application or restart the OS. | - |
| 0xC0AF0011 RYAA017 -1062273007 3232694289 | Accessed a device in which no item is registered. | A fatal error occurred. Please perform forced transfer of 'GP-Pro EX', and then execute transfer again. | "26.1 Setting Guide" |
| 0xC0AF0012 RYAA018 -1062273006 3232694290 | Accessed an out-of-range device. | Attempted to access an out-of-range device. | - |
| 0xC0AF0013 RYAA019 -1062273005 3232694291 | Failed to register the specified cluster because an invalid item is specified in it. | A fatal error occurred. Please perform forced transfer of 'GP-Pro EX', and then execute transfer again. | "26.1 Setting Guide" |
| 0xC0AF0014 RYAA020 -1062273004 3232694292 | The specified data type is invalid. | | |

- * - 1st line: Error code
2nd line: Integrated error code
3rd line: Error code with decimal code
4th line: Error code without decimal code

| Error Code* | Error Message | Cause and Troubleshooting | Reference |
|--|---|---|---------------------------------|
| 0xC0AF0015 RYAA021 -1062273003 3232694293 | The specified access type is illegal. | A fatal error occurred. Please perform forced transfer of 'GP-Pro EX', and then execute transfer again. | "26.1 Setting Guide" |
| 0xC0AF0016 RYAA022 -1062273002 3232694294 | The specified data type is illegal. | | |
| 0xC0AF0017 RYAA023 -1062273001 3232694295 | The no. of data you specified is too many to write (Please reduce it to XX or fewer) (XX: Data number) | | |
| 0xC0AF0018 RYAA024 -1062273000 3232694296 | The operation result to write is below the lower limit value. | Attempted to write an out of range value. Please change the setting to write an in-range value. | "27 Designing Your Own Program" |
| 0xC0AF0019 RYAA025 -1062272999 3232694297 | The operation result to write is beyond the upper limit value. | | |
| 0xC0AF001A RYAA026 -1062272998 3232694298 | Could not send processing request to the network destination due to insufficient memory. | Please close another application or restart the OS. | - |
| 0xC0AF001B RYAA027 -1062272997 3232694299 | The specified group was not found. | A fatal error occurred. Please perform forced transfer of 'GP-Pro EX', and then execute transfer again. | "26.1 Setting Guide" |
| 0xC0AF001C RYAA028 -1062272996 3232694300 | The two compared access tickets differ in their nodes, equipment, or devices. | A fatal error occurred. Please perform forced transfer of 'GP-Pro EX', and then execute transfer again. | "26.1 Setting Guide" |
| 0xC0AF001D RYAA029 -1062272995 3232694301 | The specified access ticket is not for this node. | | |
| 0xC0AF001E RYAA030 -1062272994 3232694302 | Could not register the cache because of insufficient memory. | Please close another application or restart the OS. | - |

- * - 1st line: Error code
2nd line: Integrated error code
3rd line: Error code with decimal code
4th line: Error code without decimal code

| Error Code* | Error Message | Cause and Troubleshooting | Reference |
|--|--|---|---------------------------------------|
| 0xC0AF0020 RYAA032 -1062272992 3232694304 | The access ticket you tried to use in block access is not of the block type. | A fatal error occurred. Please perform forced transfer of 'GP-Pro EX', and then execute transfer again. | "25.1 Setting Guide" |
| 0xC0AF0021 RYAA033 -1062272991 3232694305 | The small service to process was not found. | | |
| 0xC0AF0022 RYAA034 -1062272990 3232694306 | The size of block access to the device exceeded the limit. | The max buffer size for Device Block Write/Read is 10KB. Please set a size less than that. | - |
| 0xC0AF0025 RYAA037 -1062272987 3232694309 | The no. of requests to Read/Write via network at a time exceeded the limit (XX). (XX: Device no.) | Please recheck the settings of requests from 'Pro-Server EX' and 'GP-Pro EX' to the network destination, and redesign the system to limit the no. of requests to the max value. | - |
| 0xC0AF0030 RYAA048 -1062272976 3232694320 | Communication error occurred during communication with the destination node. Please confirm that the network connection to the node has been properly established. | Please check whether the network cable between the local node and the destination node etc. is correctly connected. | "2.2 Connecting PC with display unit" |
| 0xC0AF0031 RYAA049 -1062272975 3232694321 | The destination node did not responded within the specified time. Please confirm that the network connection to the node has been properly established. | - | - |
| 0xC0AF0032 RYAA050 -1062272974 3232694322 | The destination node did not responded within the specified time. Please confirm that the network connection to the node has been properly established. | - | - |
| 0xC0AF0033 RYAA051 -1062272973 3232694323 | Communication with the destination Node stopped because the destination or local Node closed. | Please place remote node online. Or restart Pro-Server EX. | - |
| 0xC0AF0040 RYAA064 -1062272960 3232694336 | Failed to read the device. | The data may have been read into an illegal or undefined device address. Please specify a proper device address. | - |
| 0xC0AF0041 RYAA065 -1062272959 3232694337 | Failed to write the device. | The data may have been written into an illegal or undefined device address. Please specify a proper device address. | |

* - 1st line: Error code
2nd line: Integrated error code
3rd line: Error code with decimal code
4th line: Error code without decimal code

| Error Code* | Error Message | Cause and Troubleshooting | Reference |
|--|--|---|------------------------------|
| 0xC0AF0045 RYAA069 -1062272955 3232694341 | The specified request is not supported. | Please upgrade 'GP-Pro EX' to a supported version by transferring the system with 'GP-Pro EX'. Or the Node Type set in the 'Pro-Studio EX' Node Settings may be different from the actual model. Please confirm that the Node Type is properly set. | "31.5 Setting Guide" |
| 0xC0AF0046 RYAA070 -1062272954 3232694342 | The specified request is not supported. | Please upgrade 'GP-Pro EX' to a supported version by transferring the system with 'GP-Pro EX'. | 'GP-Pro EX Reference Manual' |
| 0xC0AF0050 RYAA080 -1062272944 3232694352 | The project ID of the network project file is different (A different NPJ is being used). | Please transfer the network project file with 'Pro-Studio EX' again. | "25.1 Setting Guide" |
| 0xC0AF0051 RYAA081 -1062272943 3232694353 | The network project file does not have necessary data. | | |
| 0xC0AF0052 RYAA082 -1062272942 3232694354 | The network project file is damaged. | Please transfer the network project file with 'Pro-Studio EX' again. If it's not solved, after performing forced transfer of 'GP-Pro EX', please transfer the network project file with 'Pro-Studio EX' again. | "25.1 Setting Guide" |
| 0xC0AF0053 RYAA083 -1062272941 3232694355 | The network project file does not exist. | | |
| 0xC0AF0060 RYAA096 -1062272928 3232694368 | Failed to transfer data to GP. | Please confirm that the Device/ PLC connected to the display unit works properly. Or, please transfer the network project file with 'Pro-Studio EX' again. | "25.1 Setting Guide" |
| 0xC0AF0061 RYAA097 -1062272927 3232694369 | Failed to read the device from GP. | Accessed a read-protect area. Please change the settings to avoid this. | - |
| 0xC0AF0062 RYAA098 -1062272926 3232694370 | Failed to write the device to GP. | Accessed a write-protect area. Please change the settings to avoid this. | - |
| 0xC0AF0063 RYAA099 -1062272925 3232694371 | In device access to GP, the device no. was out of range. | An invalid device was specified. Attempted to access a nonexistent device. | - |

* - 1st line: Error code
2nd line: Integrated error code
3rd line: Error code with decimal code
4th line: Error code without decimal code

| Error Code* | Error Message | Cause and Troubleshooting | Reference |
|--|---|---|--|
| 0xC0AF0064 RYAA100 -1062272924 3232694372 | Failed to transfer data to GP. (The destination NODE does not respond.) | <p>The Destination Node does not respond. Please check and run the following:</p> <ul style="list-style-type: none"> • The network cable is properly connected • The destination node is ON, and • The IP address in the Node Setting of 'Pro-Studio EX' is correct. • Transfer the network project file again using 'Pro-Studio EX'. <p>When communicating with a GP series node, the error may arise when there is congestion in the network environment or when communication is slow between the GP series node and external device. When you think these are the reasons for the error, please enter a longer time in the [GP Series Node Settings] screen's [Device R/W Timeout] setting.</p> | <p>"2.2 Connecting PC with display unit"</p> <p>"31.5 Setting Guide"</p> <p>"34.2 Network Setup"</p> |
| 0xC0AF0065 RYAA101 -1062272923 3232694373 | Failed to read the device from GP. (The destination NODE does not respond.) | <p>The Destination Node does not respond. Please check the followings:</p> <ul style="list-style-type: none"> • The network cable is properly connected • The destination node is ON, and • The IP address in the Node Setting of 'Pro-Studio EX' is correct. <p>When communicating with a GP series node, the error may arise when there is congestion in the network environment or when communication is slow between the GP series node and external device. When you think these are the reasons for the error, please enter a longer time in the [GP Series Node Setting] screen's [Device R/W Timeout] setting.</p> | <p>"2.2 Connecting PC with display unit"</p> <p>"31.5 Setting Guide"</p> <p>"34.2 Network Setup"</p> |
| 0xC0AF0066 RYAA102 -1062272922 3232694374 | Failed to write the device to GP. (The destination NODE does not respond.) | <p>The Destination Node does not respond. Please check the followings:</p> <ul style="list-style-type: none"> • The network cable is properly connected • The destination node is ON, and • The IP address in the Node Setting of 'Pro-Studio EX' is correct. <p>When communicating with a GP series node, the error may arise when there is congestion in the network environment or when communication is slow between the GP series node and external device. When you think these are the reasons for the error, please enter a longer time in the [GP Series Node Setting] screen's [Device R/W Timeout] setting.</p> | |

- * - 1st line: Error code
2nd line: Integrated error code
3rd line: Error code with decimal code
4th line: Error code without decimal code

36.3.3 "SAAA***" Error Info

| Error Code* | Error Message | Cause and Troubleshooting | Reference |
|--|---|--|------------------------------------|
| 0xC0B00001 SAAA001 -1062207487 3232759809 | System Error | Please reboot your PC. If not solved, install it again. | - |
| 0xC0B00002 SAAA002 -1062207486 3232759810 | Cannot process due to a shortage of OS resource or memory. | | 'Pro-Server EX Installation Guide' |
| 0xC0B00003 SAAA003 -1062207485 3232759811 | Cannot execute any new process until the Pro-Server EX returns a processing result. | | |
| 0xC0B00005 SAAA005 -1062207483 3232759813 | The process was interrupted because 'Pro-Server EX' was terminated. | Please exit all the applications before you close 'Pro-Server EX'. | - |
| 0xC0B00006 SAAA006 -1062207482 3232759814 | The process was interrupted because 'Pro-Server EX' was terminated during the process. | | |
| 0xC0B00007 SAAA007 -1062207481 3232759815 | The specified connector has already been registered. The application is already in execution. | Please reboot your PC. If not solved, install it again. | 'Pro-Server EX Installation Guide' |
| 0xC0B00008 SAAA008 -1062207480 3232759816 | An error occurred in an OLE function. Cannot convert the data. | | |
| 0xC0B0000A SAAA010 -1062207478 3232759818 | Cannot refer to the resource because Pro-Server EX has not been started. | | |
| 0xC0B0000B SAAA011 -1062207477 3232759819 | Cannot request the system to execute processing because Pro-Server EX has not been started. | | |
| 0xC0B0000C SAAA012 -1062207476 3232759820 | The system is broken. Cannot process. | | |

* - 1st line: Error code
 2nd line: Integrated error code
 3rd line: Error code with decimal code
 4th line: Error code without decimal code

| Error Code* | Error Message | Cause and Troubleshooting | Reference |
|--|--|--|------------------------------------|
| 0xC0B00010 SAAA016 -1062207472 3232759824 | The action is not in progress. Cannot process. Cannot process. | (1) From the task tray, select [Action], and confirm that the box of [Disable Actions] is unchecked. If checked, please clear it. (2) Please review the timing of the action. | - |
| 0xC0B00011 SAAA017 -1062207471 3232759825 | An error occurred when accessing the XX file. The file is locked (shared) or broken. (XX: File name) | Please reboot your PC. If not solved, install it again. | 'Pro-Server EX Installation Guide' |
| 0xC0B00012 SAAA018 -1062207470 3232759826 | Too many connectors to register. | Please confirm that the Pro-Server EX handle is correctly generated and destructed. | "27.5 System APIs" |
| 0xC0B00020 SAAA032 -1062207456 3232759840 | Cannot open the PRW file. | Please check whether the specified file name is correct. If correct, the file may be broken. | - |
| 0xC0B00021 SAAA033 -1062207455 3232759841 | To import a PRW file, a GP-ProPB III supporting auto transfer is required. Not having that kind of GP-ProPB III installed, this PC cannot import a PRW file. | Please install the version accepting auto-transfer function of 'GP-PRO/PB III for Windows'. | - |
| 0xC0B00022 SAAA034 -1062207454 3232759842 | Cannot import a PRW file while GP-Pro PB III is running. Please close the GP-Pro PBIII for installation. | Please exit the running 'GP-PRO/PB III for Windows'. | - |
| 0xC0B00023 SAAA035 -1062207453 3232759843 | Cannot import a PRW file because GP-ProPB III could not start. | Please check if 'GP-PRO/PB III for Windows' is installed. When installed, 'GP-PRO/PB III for Windows' may be damaged, please install it again. | - |
| 0xC0B00024 SAAA036 -1062207452 3232759844 | Cannot prepare for transfer correctly. The file may be damaged. | The specified screen project file may have been broken. Please specify an undamaged screen project file. | "31.5 Setting Guide" |
| 0xC0B00026 SAAA038 -1062207450 3232759846 | Cannot access the specified file. | Please confirm that the screen project file is not in current use. If in use, please close the file. | - |
| 0xC0B00027 SAAA039 -1062207449 3232759846 | No PRW file name has been entered. | Please input the file name of the screen project file. | - |

* - 1st line: Error code
2nd line: Integrated error code
3rd line: Error code with decimal code
4th line: Error code without decimal code

| Error Code* | Error Message | Cause and Troubleshooting | Reference |
|--|---|--|-------------------------|
| 0xC0B00028 SAAA040 -1062207448 3232759848 | The specified file is not a PRW file. | Please specify a file of which extension is ".prw". | "31.5.3 GP Series Node" |
| 0xC0B00029 SAAA041 -1062207447 3232759849 | Failed to get device info from the PRX file. | The specified screen project file may have been broken. Please specify an undamaged screen project file. | |
| 0xC0B0002A SAAA042 -1062207446 3232759850 | Failed to get symbol info from the PRX file. | The specified screen project file may have been broken. Please specify an undamaged screen project file. | "31.5 Setting Guide" |
| 0xC0B0002B SAAA043 -1062207445 3232759851 | Failed to get the device address from the PRX file. | | |
| 0xC0B0002C SAAA044 -1062207444 3232759852 | Failed to get setting info from the PRX file. | | |
| 0xC0B0002D SAAA045 -1062207443 3232759853 | Failed to create a temporary file. | The temporary file creation folder may have little free space. Please check the space of the drive, and increase it if insufficient. | - |
| 0xC0B0002E SAAA046 -1062207442 3232759854 | Cannot open the PRX file. | Please check whether the specified file name is correct. If correct, the file may be broken. | "31.5 Setting Guide" |
| 0xC0B0002F SAAA047 -1062207441 3232759855 | Failed to delete the temporary file. | Please execute it again. | - |
| 0xC0B00030 SAAA048 -1062207440 3232759856 | The specified screen file has an error. | The specified screen project file may have been broken. Please specify an undamaged screen project file | "31.5 Setting Guide" |
| 0xC0B00031 SAAA049 -1062207439 3232759857 | The PRX file does not have necessary data. | | |
| 0xC0B00032 SAAA050 -1062207438 3232759858 | The specified file is not a PRX file. | Please specify a file of which extension is ".prx". | "31.5 Setting Guide" |

* - 1st line: Error code
 2nd line: Integrated error code
 3rd line: Error code with decimal code
 4th line: Error code without decimal code

| Error Code* | Error Message | Cause and Troubleshooting | Reference |
|--|--|--|--|
| 0xC0B00033 SAAA051 -1062207437 3232759859 | Cannot access the file acquired from display unit. | Some of the obtained files may be damaged. Please execute the operation again. | - |
| 0xC0B00034 SAAA052 -1062207436 3232759860 | The setting contents of the network project is abnormal. | Please execute Consistency Check with 'Pro-Studio EX'. After correcting detected errors, please transfer the network project again. | "26.1 Setting Guide" |
| 0xC0B00035 SAAA053 -1062207435 3232759861 | The file is broken. | The project file is broken. Please use the file additionally saved in 'GP-Pro EX'. | 'GP-Pro EX Reference Manual' |
| 0xC0B00036 SAAA054 -1062207434 3232759862 | Cannot handle this file version. | The project file was saved in a new format. Please use the latest 'Pro-Studio EX'. | - |
| 0xC0B00037 SAAA055 -1062207433 3232759863 | Cannot handle this file type. | The project file was saved in an unsupported format. Please use the latest 'Pro-Studio EX'. | - |
| 0xC0B00038 SAAA056 -1062207432 3232759864 | The version of the protocol driver used in PRX is different from that of the protocol driver installed in Pro-Server EX. | Please confirm that no change has been made to devices and nodes. Please install or update the protocol driver that is necessary. | "31.5 Setting Guide" |
| 0xC0B00060 SAAA096 -1062207392 3232759904 | Cannot open the network project file. The file does not exist or you don't have the access right. | Please check the specified file and the specification method of the network project file. | "24.1 Try to connect with Factory Gateway" |
| 0xC0B00061 SAAA097 -1062207391 3232759905 | Cannot open the network project file. | Please check the specified file and the specification method of the network project file. If they are correct, and the phenomenon still reoccurs even if you restart the PC, please install 'Pro-Server EX' again. | "24.1 Try to connect with Factory Gateway" |
| 0xC0B00062 SAAA098 -1062207390 3232759906 | The network project file is broken. Cannot read. Please confirm whether the file you specified is a real network project file. | Please check whether the specified file is not broken. | - |
| 0xC0B00063 SAAA099 -1062207389 3232759907 | Cannot write to the network project file. | Please confirm that the disk space is sufficient, and that you have the access right to the file/folder. | - |

- * - 1st line: Error code
2nd line: Integrated error code
3rd line: Error code with decimal code
4th line: Error code without decimal code

| Error Code* | Error Message | Cause and Troubleshooting | Reference |
|--|--|---|--|
| 0xC0B00064 SAAA100 -1062207388 3232759908 | The file is not a network project file, or its version is old. Cannot read the data. | Please specify a network project file. If you have already specified one, it may have been broken. Please specify an undamaged network project file. | "24.1 Try to connect with Factory Gateway" |
| 0xC0B00065 SAAA101 -1062207387 3232759909 | The specified device was not found in (XX). It may have been deleted or renamed. Please check it again. (XX: NODE name) | Please confirm the Device/PLC, following the direction of the message. | - |
| 0xC0B00066 SAAA102 -1062207386 3232759910 | The specified NODE (XX) has not been registered. There is a conflict. Please check it again. (XX: NODE name) | When you delete a Node, please review all the things using the Node. (1) Data Transfer feature (2) Cache feature (3) ACTION feature (4) Trigger Condition etc. Once a Node is deleted, even if you add the same Node, the settings remain disabled (They are not restored). Please check the settings again. | "24.1 Try to connect with Factory Gateway" |
| 0xC0B00067 SAAA103 -1062207385 3232759911 | The specified NODE info is incorrect. No NODE info exists. | | |
| 0xC0B00068 SAAA104 -1062207384 3232759912 | The device setting in the system area of the specified node has an error. Please check the device you set. | If it has one or more device other than memory link, you must specify a system area device/PLC and a system area device address. Please confirm the specifications. | "31.5 Setting Guide" |
| 0xC0B00069 SAAA105 -1062207383 3232759913 | (XX: XX) is invalid as a device/symbol. Cannot analyze. (XX: Device/Symbol name) | Please confirm the symbol, following the direction of the message. | "32.6 Setting Guide" |
| 0xC0B0006A SAAA106 -1062207382 3232759914 | The trigger condition of (XX) is invalid. The node involved in this trigger condition may have been deleted. Please check it again. (XX: Trigger condition name) | Please confirm the trigger condition, following the direction of the message. | "33.1.1 Types of Trigger Conditions" |
| 0xC0B0006B SAAA107 -1062207381 3232759915 | There is a conflict with communication functions because the action data was deleted. Please check it again. | Please confirm the action settings, following the direction of the message. | Chapter of corresponding Action |
| 0xC0B0006C SAAA108 -1062207380 3232759916 | The network setting is broken. | Please review the network settings. | "34.2 Network Setup" |

- * - 1st line: Error code
 2nd line: Integrated error code
 3rd line: Error code with decimal code
 4th line: Error code without decimal code

| Error Code* | Error Message | Cause and Troubleshooting | Reference |
|--|---|--|--------------------------------------|
| 0xC0B0006D SAAA109 -1062207379 3232759917 | There is a conflict with symbol info because the device was deleted. Please check it again. | Deleting a Device/PLC disables all the related information. Please review all the information related to the Device/PLC. Once a Device/PLC is deleted, even if you add the same Device/PLC, the settings remain disabled (They are not restored). Please check the settings again. | "31.5 Setting Guide" |
| 0xC0B0006E SAAA110 -1062207378 3232759918 | There is a conflict with symbol info because the node was deleted. Please check it again. | Please confirm the symbol, following the direction of the message. | "32.6 Setting Guide" |
| 0xC0B0006F SAAA111 -1062207377 3232759919 | Too many trigger conditions. The number must be within XX. (XX: Number) | Please reduce the no. of trigger conditions, following the direction of the message. | "33.2 Editing Trigger Conditions" |
| 0xC0B00070 SAAA112 -1062207376 3232759920 | (Symbol Sheet: XX Group: XX) has too large total size of device data. Please divide the group. (XX Bytes or less) | Please reduce the no. of group symbol data (array element count, member count, or data count of each member), following the direction of the message. | "29.3 Grouping Symbols" |
| 0xC0B00071 SAAA113 -1062207375 3232759921 | Too many actions to register. | Please reduce the no. of registered actions. | Chapter of corresponding Action |
| 0xC0B00072 SAAA114 -1062207374 3232759922 | Unsupported trigger condition is set for the node (XX) (A GP Series node has trigger-condition restrictions. For more details, please refer to the manual). (XX: NODE name) | Please confirm the trigger condition, following the direction of the message. Please confirm the trigger condition, following the direction of the message. | "33.1.1 Types of Trigger Conditions" |
| 0xC0B00073 SAAA115 -1062207373 3232759923 | The trigger condition (XX) is for a GP Series node. Logic operation is not supported in this type of trigger condition. (XX: Trigger condition name) | | |
| 0xC0B00074 SAAA116 -1062207372 3232759924 | The structure of a sheet/group in the symbol sheet of (XX) is collapsed. Please create it again. | Please re-create the group symbol, following the direction of the message. | "32.6 Setting Guide" |
| 0xC0B00075 SAAA117 -1062207371 3232759925 | No trigger condition exists in (XX). The trigger condition may have been deleted. Please check it again. | Please confirm those using the trigger condition (data transfer feature, action feature, etc.), following the direction of the message. | "32.1 Symbol and Symbol Sheet" |

- * - 1st line: Error code
2nd line: Integrated error code
3rd line: Error code with decimal code
4th line: Error code without decimal code

| Error Code* | Error Message | Cause and Troubleshooting | Reference |
|--|--|--|---------------------------------|
| 0xC0B00076 SAAA118 -1062207370 3232759926 | The node specified in the trigger condition used in (XX) does not exist. The node may have been deleted. Please check it again. | Please confirm the trigger condition, following the direction of the message. | "32.1 Symbol and Symbol Sheet" |
| 0xC0B00077 SAAA119 -1062207369 3232759927 | The transfer-source constant value specified in data transfer (XX) has an error. (XX: Data transfer name) | Please confirm that the constant value is proper for the data type. | Chapter of corresponding Action |
| 0xC0B00078 SAAA120 -1062207368 3232759928 | (Symbol Sheet: XX, Symbol: XX Address: XX and Address: XX) is invalid as a device address. | Please confirm the settings of the symbol sheet, following the direction of the message. | "32.6 Setting Guide" |
| 0xC0B00079 SAAA121 -1062207367 3232759929 | Because of the non-bit type symbol in the previous line, consecutive bit type is unavailable for (Symbol Sheet: XX, Symbol: XX, and Address: XX). Please check it again. | | |
| 0xC0B0007A SAAA122 -1062207366 3232759930 | Because of the bit type symbol in the previous line, consecutive non-bit type is unavailable for (Symbol Sheet: XX, Symbol: XX, and Address: XX). Please check it again. | Please confirm the settings of the symbol sheet, following the direction of the message. | "32.6 Setting Guide" |
| 0xC0B0007B SAAA123 -1062207365 3232759931 | Cannot specify consecutive from the previous line for (Symbol Sheet: XX Symbol: XX Address: XX). Please check whether it is within the device range. | | |
| 0xC0B0007C SAAA124 -1062207364 3232759932 | (Symbol Sheet: XX Symbol: XX Address: XX) is beyond the valid device range. | | |
| 0xC0B0007D SAAA125 -1062207363 3232759933 | (Symbol Sheet: XX Symbol: XX) does not have any valid symbols before. Cannot judge for which device the bit specification is. | | |
| 0xC0B0007E SAAA126 -1062207362 3232759934 | (Symbol Sheet: XX Group: XX) does not have any valid symbols. A group must have at least 1 symbol. | Please confirm the settings of the symbol sheet, following the direction of the message. | "32.6 Setting Guide" |
| 0xC0B0007F SAAA127 -1062207361 3232759935 | (Symbol Sheet: XX) has nonconsecutive symbols. Cannot set them in array. | | |

- * - 1st line: Error code
2nd line: Integrated error code
3rd line: Error code with decimal code
4th line: Error code without decimal code

| Error Code* | Error Message | Cause and Troubleshooting | Reference |
|--|--|---|------------------------------------|
| 0xC0B00080 SAAA128 -1062207360 3232759936 | (Symbol Sheet: XX Array Group: XX) has too many devices to support. | Please confirm the settings of the symbol sheet, following the direction of the message. | "32.6 Setting Guide" |
| 0xC0B00081 SAAA129 -1062207359 3232759937 | (Symbol Sheet: XX Array Group: XX) is beyond the valid device range. | | |
| 0xC0B00082 SAAA130 -1062207358 3232759938 | The specified NODE (XX) has not been registered in the network project. (XX: NODE name) | Please reboot your PC. If not solved, install it again. | 'Pro-Server EX Installation Guide' |
| 0xC0B00083 SAAA131 -1062207357 3232759939 | The specified NODE (XX) is not a GP Series NODE. (XX: NODE name) | | |
| 0xC0B00084 SAAA132 -1062207356 3232759940 | The device of the specified NODE (XX) is not supported. (XX: NODE name) | | |
| 0xC0B00085 SAAA133 -1062207355 3232759941 | In (Data Transfer: XX Transfer Source: XX Transfer Destination: XX), the data types are different. In data transfer to/from a GP Series NODE, the source and the destination must have the same data type. | Please confirm the settings of the data transfer feature, following the direction of the message. | Chapter of corresponding Action |
| 0xC0B00086 SAAA134 -1062207354 3232759942 | Cannot transfer the data. In (Data Transfer: XX Transfer Source: XX Transfer Destination: XX), the source and the destination have different group structures. | Please confirm the settings of the data transfer feature, following the direction of the message. | Chapter of corresponding Action |
| 0xC0B00087 SAAA135 -1062207353 3232759943 | Cannot transfer the data. In (Data Transfer: XX Transfer Source: XX Transfer Destination: XX), the data type of the transfer destination is unsupported. | | |

* - 1st line: Error code
2nd line: Integrated error code
3rd line: Error code with decimal code
4th line: Error code without decimal code

| Error Code* | Error Message | Cause and Troubleshooting | Reference |
|--|--|---|---------------------------------|
| 0xC0B00088 SAAA136 -1062207352 3232759944 | Cannot transfer the data. In (Data Transfer: XX Transfer Source: XX Transfer Destination: XX), the data type of the transfer source is unsupported. | Please confirm the settings of the data transfer feature, following the direction of the message. | Chapter of corresponding Action |
| 0xC0B00089 SAAA137 -1062207351 3232759945 | In (Data Transfer: XX Transfer Source: XX Transfer Destination: XX), the data types are different. Please set the same data type. | | |
| 0xC0B0008A SAAA138 -1062207350 3232759946 | In (Data Transfer: XX Transfer Source: XX Transfer Destination: XX), the data count is 0 or out of range. | | |
| 0xC0B0008B SAAA139 -1062207349 3232759947 | In (Data Transfer: XX Transfer Source: XX Transfer Destination: XX), word access to a 32-bit device of a GP Series Node is specified. This access method is not supported. | | |
| 0xC0B0008C SAAA140 -1062207348 3232759948 | In (Data Transfer: XX Transfer Source: XX Transfer Destination: XX), the transfer source is out of the valid device range. | Please confirm the settings of the data transfer feature, following the direction of the message. | Chapter of corresponding Action |
| 0xC0B0008D SAAA141 -1062207347 3232759949 | In (Data Transfer: XX Transfer Source: XX Transfer Destination: XX), the transfer destination is out of the valid device range. | | |
| 0xC0B0008E SAAA142 -1062207346 3232759950 | The specified action was not found in (XX). Please check it again. | Please confirm the action settings, following the direction of the message. | Chapter of corresponding Action |
| 0xC0B0008F SAAA143 -1062207345 3232759951 | (Data Transfer: XX Transfer Source Group: XX) has too large total buffer size of device data. Please divide the group. (XX Bytes or less) | Please reduce the no. of group symbol data (array element count, member count, or data count of each member), following the direction of the message. | "29.3 Grouping Symbols" |
| 0xC0B00090 SAAA144 -1062207344 3232759952 | (Data Transfer: XX Transfer Source Group: XX) has too large total device size. Please divide the group. (XX Bytes or less) | | |
| 0xC0B00091 SAAA145 -1062207343 3232759953 | (Device Cache: XX) has too large total device size. Please divide the device cache. (XX Bytes or less) | In the 'Pro-Studio EX' Feature screen, please reduce the no. of devices in the device cache. | "29.3 Grouping Symbols" |

- * - 1st line: Error code
2nd line: Integrated error code
3rd line: Error code with decimal code
4th line: Error code without decimal code

| Error Code* | Error Message | Cause and Troubleshooting | Reference |
|--|--|---|---------------------------------|
| 0xC0B00092 SAAA146 -1062207342 3232759954 | Too many device caches are registered. Please reduce them. (X or less) | In the 'Pro-Studio EX' Feature screen, please reduce the no. of registered device caches. | "29.3 Grouping Symbols" |
| 0xC0B00093 SAAA147 -1062207341 3232759955 | (Device Cache: XX) has too many records. Please reduce them. (XX or less) | In the 'Pro-Studio EX' Feature screen, please reduce the no. of records in the device cache. | "29.3 Grouping Symbols" |
| 0xC0B00094 SAAA148 -1062207340 3232759956 | Too many NODEs are registered. Please reduce them. (XX NODEs or less) | In the 'Pro-Studio EX' Node setting screen, please reduce the no. of registered nodes. | "31.5 Setting Guide" |
| 0xC0B00095 SAAA149 -1062207339 3232759957 | (Symbol Sheet: XX Symbol: XX No. of Devices: XX) is beyond the range of the no. of devices. (Valid Range: XX-XX) | In the 'Pro-Studio EX' Symbol screen, please reduce the no. of the devices in the symbol. | "32.6 Setting Guide" |
| 0xC0B00096 SAAA150 -1062207338 3232759958 | (Symbol Sheet: XX Group: XX) has the no. of rows beyond the limit. Please reduce it. (XX rows or less) | In the 'Pro-Studio EX' Symbol screen, please reduce the no. of the devices registered in the group. | "29.3 Grouping Symbols" |
| 0xC0B00097 SAAA151 -1062207337 3232759959 | The NODE (XX) is set to the IP address of the local PC. Please change the NODE Type to Pro-Server EX NODE or WinGP NODE, or change the IP address. (XX: NODE name) | In the 'Pro-Server EX' Node screen, please confirm that the "Node Type" and the "IP Address" are correct. | "31.5 Setting Guide" |
| 0xC0B00098 SAAA152 -1062207336 3232759960 | The network project size exceeded the limit. | In the 'Pro-Studio EX' Feature screen, please reduce the no. of action or data transfer settings. | Chapter of corresponding Action |
| 0xC0B0009A SAAA154 -1062207334 3232759962 | In (Symbol Sheet: XX Symbol: XX), the type or the no. of symbols is undefined. Cannot create Symbol/Group Configuration Info. | In the 'Pro-Studio EX' Symbol screen, please specify symbol no. and type. | "32.6 Setting Guide" |
| 0xC0B0009C SAAA156 -1062207332 3232759964 | In a symbol sheet, 2 symbol/group names are the same. (Symbol Sheet: XX Name1: XX Name2: XX) | In the 'Pro-Studio EX' Symbol screen, please specify symbol type. | "32.6 Setting Guide" |
| 0xC0B0009D SAAA157 -1062207331 3232759965 | The device driver of (Node: XX) is not supported (Necessary driver has not been installed). | Please install device differences. | - |

- * - 1st line: Error code
2nd line: Integrated error code
3rd line: Error code with decimal code
4th line: Error code without decimal code

| Error Code* | Error Message | Cause and Troubleshooting | Reference |
|--|---|--|--|
| 0xC0B000A8 SAAA168 -1062207320 3232759976 | (Trigger Condition: xx:xx) In Distribution and Action, Broadcast Service to WinGP NODEs is not available. To communicate with a WinGP NODE, change the communication-method setting in the trigger condition to Individual Communication. | Change the communication setting in the trigger condition from Broadcast communication to Individual Communication. | ◆ "Set Trigger Condition Details" Screen |
| 0xC0B000A9 SAAA169 -1062207319 3232759977 | (xx:xx)The specified Device/Symbol is beyond the valid device range. | Following the message, check the settings on the feature screen. | |
| 0xC0B000AC SAAA172 -1062207316 3232759980 | When On Connection is Transfer NPX changes, you cannot include GP series nodes. When using GP series, open Pro-Studio and from the [Setting] menu select [Option Settings]. In the dialog box, set On Connection to Compare ID. (GP series node: xx). | Select [NPX ID] under [Compare NPX Project on Connection] on the [Option Settings] screen. | "34.3 Option Settings" |
| 0xC0B000AD SAAA173 -1062207315 3232759981 | When On Connection is Transfer NPX changes, the data transfer communication method cannot be set to General Broadcast. Either change the communication method to Individual Communication, or On Connection to Compare ID. (Trigger Condition set up with General Broadcast : xx) | Execute one of the following steps. <ul style="list-style-type: none"> • Select [Individual Communication] under [Communication Method] on the "Set Trigger Condition Details" screen • Select [NPX ID] under [Compare NPX Project on Connection] on the [Option Settings] screen | ◆ "Set Trigger Condition Details" Screen "34.3 Option Settings" |
| 0xC0B000AE SAAA174 -1062207314 3232759982 | (XX: XX) Cannot use the specified data type to the specified device. | Display the setup screen for the feature that shows up as an error in Pro-Studio EX. For the defined device, set up the appropriate data type again. | - |
| 0xC0B000AF SAAA175 -1062207313 3232759983 | (Symbol Sheet: XX Symbol: XX Address : XX) Cannot register the specified device as the symbol. | Display the symbol sheet that shows up as an error in Pro-Studio EX, and delete the symbol. In the location where the symbol is used, reference the device directly. | - |
| 0xC0B000E0 SAAA224 -1062207264 3232760032 | Warning: In different symbol sheets, 2 symbol/group names are the same. To use the same name, please specify both sheet names. (Symbol Sheet1: XX Symbol Sheet2: XX The Same Name: XX) | In the 'Pro-Studio EX' Symbol setting screen, please change the name to avoid name overlapping. | "32.6 Setting Guide" |

* - 1st line: Error code
2nd line: Integrated error code
3rd line: Error code with decimal code
4th line: Error code without decimal code

| Error Code* | Error Message | Cause and Troubleshooting | Reference |
|--|---|--|--|
| 0xC0B000E1 SAAA225 -1062207263 3232760033 | Warning: In different symbol sheets, 2 symbol/group names are the same. To use the same name, please specify both sheet names. (Symbol Sheet: XX The Same Symbol: (Sheet: XX Name: XX)) | In the 'Pro-Studio EX' Symbol setting screen, please change the name to avoid name overlapping. | "32.6 Setting Guide" |
| 0xC0B000E2 SAAA226 -1062207262 3232760034 | Warning: (Data Transfer: XX Transfer Source: XX Transfer Destination: XX) has different data sizes. The transfer data size is conformed to the size of the transfer source (XX). | When using the data transfer feature, the data size settings of the transfer destination and the source must be the same. | "19.2 Setting Guide" |
| 0xC0B000E3 SAAA227 -1062207261 3232760035 | Warning: The no. of registered ACTIONs exceeded XX. Performance can be affected because ACTIONs use a lot of resources. Please consider reducing the no. (XX: Number) | ACTIONs use a lot of PC resources. Therefore, although up to 3000 ACTIONs can be registered, recommended no. is 100 or less in view of performance. | Chapter of corresponding Action |
| 0xC0B000E4 SAAA228 -1062207260 3232760036 | Warning: The array variable(xx) has too many elements for API Communication for WinGP to access the whole array. In API Communication for WinGP, only xx elements from the head are accessible. | (1) Try to divide the array elements into several parts before registration in 'GP-Pro EX'. (2) If you cannot divide them, try to use 'Pro-Server EX' instead of WinGP SDK. Because 'Pro-Server EX' has the function to automatically divide the array variables, the number of which elements exceeds the accessible limit for one time, and register them as multiple symbols, when you import a 'GP-Pro EX' project file into a network project. | - |
| 0xC0B000E5 SAAA229 -1062207259 3232760037 | (Data transfer:xx Transfer Source:xx Transfer Destination:xx) Cannot use Tag in Communication Method using General Broadcast. | Change the communication method of the trigger condition from broadcast communication to individual communication. | ◆ "Set Trigger Condition Details" Screen |
| 0xC0B000E6 SAAA230 -1062207258 3232760038 | (Data transfer:xx Transfer Source:xx Transfer Destination:xx) Cannot set Data Trancefer to Node which does not support the Tag. | Change the device address in the transfer destination to a node that supports tags. | "19.2 Setting Guide" |
| 0xC0B000E7 SAAA231 -1062207257 3232760039 | (Trigger Condition:xx Address:xx) Cannot use the specified deviece address or data type. | Change the device address specified as the trigger condition. | "33.1.1 Types of Trigger Conditions" |

* - 1st line: Error code
2nd line: Integrated error code
3rd line: Error code with decimal code
4th line: Error code without decimal code

| Error Code* | Error Message | Cause and Troubleshooting | Reference |
|--|--|--|--|
| 0xC0B000E8 SAAA232 -1062207256 3232760040 | (Data transfer:xx Transfer Source:Constant Value Transfer Destination:xx) Cannot use Tag in Communication Method using General Broadcast. | Change the communication method of the trigger condition from broadcast communication to individual communication. | ◆ "Set Trigger Condition Details" Screen |
| 0xC0B000E9 SAAA233 -1062207255 3232760041 | Data type is different in (Data Transfer:xx Transfer Source:Constant Value Transfer Destination:xx). Set the same data type. | Match the data types of the transfer destination and transfer source. | "19.2 Setting Guide" |
| 0xC0B000EA SAAA234 -1062207254 3232760042 | Cannot execute data transfer because 8-bit of Day/Time data type is included in the group of (Data Transfer:xx Transfer Source:xx Transfer Destination:xx). | When running data transfer of a group that contains 8 Bit and Date/Time data types, group it all together. | "19.2 Setting Guide" |
| 0xC0B000EB SAAA235 -1062207253 3232760043 | (Trigger Condition:xx Address:xx) Cannot specify the same address as the one specified in [Bit Showing Completion of the Process]. ([Trigger Condition]-[Detail Settings]-[Completion Notification]-[Bit Showing Completion of the Process]) | When the trigger condition is [When Device ON (OFF)] and [Turn OFF the Specified Device Address after Processing], the specified device address is the same as the [Detail Settings] screen's [Bit Showing Completion of the Process] field. Set to a different address. | ◆ "Set Trigger Condition Details" Screen |
| 0xC0B000F0 SAAA240 -1062207248 3232760048 | Value read is incorrect or out of range, it cannot be displayed in the form of type TIME. | Please select the appropriate data type for the device. If the selected data type is correct, you may have to format the associated value on the device. | - |
| 0xC0B000F1 SAAA241 -1062207247 3232760049 | Value read is incorrect or out of range, it cannot be displayed in the form of type TIME_OF_DAY. | | - |
| 0xC0B000F2 SAAA242 -1062207246 3232760050 | Value read is incorrect or out of range, it cannot be displayed in the form of type DATE. | | - |
| 0xC0B000F3 SAAA243 -1062207245 3232760051 | Value read is incorrect or out of range, it cannot be displayed in the form of type DATE_AND_TIME. | | - |

- * - 1st line: Error code
2nd line: Integrated error code
3rd line: Error code with decimal code
4th line: Error code without decimal code

36.3.4 "SAAF****" Error Info

| Error Code* | Error Message | Cause and Troubleshooting | Reference |
|--|--|---|------------------------------------|
| 0xC0B00201 SAAF001 -1062206975 3232760321 | Cannot initialize TCP/IP. | From [Control Panel]-[Network Connection], please confirm that connection setting is enabled and that the TCP/IP protocol has been installed, which can be confirmed in the property of the connection setting. 'Pro-Server EX' does not work without the TCP/IP. | - |
| 0xC0B00203 SAAF003 -1062206973 3232760323 | This PC does not have a valid IP address allocated. Please check the TCP/IP environment of this PC. | Please confirm that the LAN card works properly. Please check the LAN cable, too. | "2.1.2 Necessary Equipment |
| 0xC0B00204 SAAF004 -1062206972 3232760324 | Cannot load the PLCInfo.xml file. | Please update the protocol driver. If it does not solve the problem, please install 'Pro-Server EX' again. | 'Pro-Server EX Installation Guide' |
| 0xC0B00205 SAAF005 -1062206971 3232760325 | Cannot load the Editor Driver. | | |
| 0xC0B00206 SAAF006 -1062206970 3232760326 | An error occurred in Active X I/F. | Please confirm that the OS version is appropriate. If the phenomenon still reoccurs despite the restart, please install 'Pro-Server EX' again. | 'Pro-Server EX Installation Guide' |
| 0xC0B00207 SAAF007 -1062206969 3232760327 | Cannot execute because of the version inconsistency of DLL and EXE for 'Pro-Server EX'. The program XX will be shut down. (XX: Program name) | Please confirm that there are not two or more different versions or DLLs of 'Pro-Server EX' in a PC. Only 1 version of 'Pro-Server EX' can be installed in a PC. | - |
| 0xC0B00208 SAAF008 -1062206968 3232760328 | Cannot open the INI file ('XX') of the ACTION Contents. (XX: File name) | Please reboot your PC. If it does not solve the problem, please install 'Pro-Server EX' again. | 'Pro-Server EX Installation Guide' |
| 0xC0B00209 SAAF009 -1062206967 3232760329 | The file Core. ID was not found. | | |

- * - 1st line: Error code
2nd line: Integrated error code
3rd line: Error code with decimal code
4th line: Error code without decimal code

| Error Code* | Error Message | Cause and Troubleshooting | Reference |
|--|---|--|------------------------------------|
| 0xC0B0020A SAAF010 -1062206966 3232760330 | Cannot start the ACTION Content used by the ACTION 'XX'. The ACTION Content does not exist or is broken. Please install it again. (XX: Action name) | Necessary ACTION content may not exist in the PC. Please confirm that it has been successfully installed. If it has been installed and this error still occurs, the registry registration may be insufficient. Please perform registry registration with 'Pro-Studio EX'. | - |
| 0xC0B0020B SAAF011 -1062206965 3232760331 | ProNet.dll has not been correctly installed. | Please reboot your PC. If it does not solve the problem, please install 'Pro-Server EX' again. | 'Pro-Server EX Installation Guide' |
| 0xC0B0020C SAAF012 -1062206964 3232760332 | Cannot start 'Pro-Server EX'. Please close all the applications that use 'Pro-Studio EX' or 'Pro-Server EX', and try again. | Cannot start 'Pro-Server EX' because 'Pro-Server EX' or an application using 'Pro-Server EX' did not possibly stop normally. Please close 'Pro-Server EX' and all the applications running on it, and then try again. | - |
| 0xC0B0020D SAAF013 -1062206963 3232760333 | Present log-on user is not permitted to create the resource of the OS. This function is not available. | Please give the right to create global objects to a logon user. Or, execute as Administrator. | - |
| 0xC0B00211 SAAF017 -1062206959 3232760337 | This API is not supported. | The API you tried to use is unavailable. Please consider another method. | "27 Designing Your Own Program" |
| 0xC0B00212 SAAF018 -1062206958 3232760338 | The specified string is invalid as a device address. | Please reconfirm the address specification method. Please confirm that no change has been made to devices and nodes. Please confirm that the necessary device driver has been installed. | - |
| 0xC0B00213 SAAF019 -1062206957 3232760339 | The specified device supports bit access only. | Please confirm the device to access and access method. | "32.6 Setting Guide" |
| 0xC0B00214 SAAF020 -1062206956 3232760340 | The specified device driver is not supported (The necessary device driver has not been installed). | Please install device differences. | 'Pro-Server EX Installation Guide' |

- * - 1st line: Error code
2nd line: Integrated error code
3rd line: Error code with decimal code
4th line: Error code without decimal code

| Error Code* | Error Message | Cause and Troubleshooting | Reference |
|--|--|--|------------------------------------|
| 0xC0B00215 SAAF021 -1062206955 3232760341 | The parameter value is invalid. | In the case it occurred while you were using the API, please check the API parameters. In the case it occurred while you were using some feature, please check the settings of the feature. | "27 Designing Your Own Program" |
| 0xC0B00216 SAAF022 -1062206954 3232760342 | The device no. is out of range. | Please check the device no. | - |
| 0xC0B00217 SAAF023 -1062206953 3232760343 | The specified device does not exist. | Please check the group symbol specification. | "31.5 Setting Guide" |
| 0xC0B00218 SAAF024 -1062206952 3232760344 | The specified group symbol does not exist. | Please check the group symbol specification. | "29.3 Grouping Symbols" |
| 0xC0B0021A SAAF026 -1062206950 3232760346 | In Queuing Access, read-access and write-access, or cache access and direct access, cannot be mixed. | Please confirm that no different access method exists between the start of queuing and the actual access. If there is the necessity of using a different access method, please use another queuing access. | "27.4 Queuing Access Control APIs" |
| 0xC0B0021D SAAF029 -1062206947 3232760349 | The specified node has not been registered in the network project. | Please check the node specification. | "31.5 Setting Guide" |
| 0xC0B0021F SAAF031 -1062206945 3232760351 | The API was redundantly called. The specified access handle for Pro-Server EX is already running. | If there is the necessity of calling the API at the same time, please use another Pro-server handle. Or, please consider using EasySetWaitType() or EasySetWaitTypeM() to avoid calling the API at the same time. | "27.5 System APIs" |
| 0xC0B00220 SAAF032 -1062206944 3232760352 | In data-type conversion, the data type of the conversion source/destination is unsupported. | Please check the contents of the Variant type. | - |
| 0xC0B00221 SAAF033 -1062206943 3232760353 | The specified backup-data type is unsupported. | Please check the data type specification. | - |

* - 1st line: Error code
2nd line: Integrated error code
3rd line: Error code with decimal code
4th line: Error code without decimal code

| Error Code* | Error Message | Cause and Troubleshooting | Reference |
|--|---|---|------------------------------------|
| 0xC0B00222 SAAF034 -1062206942 3232760354 | Failed to open the SRAM backup data file or to create its copy in the PC. | Please check the specifications of the destination file/folder in the PC, disk space, and the access right to the file etc. | "20.2 Setting Guide" |
| 0xC0B00223 SAAF035 -1062206941 3232760355 | In Read/Write Backup Data, failed to access the file. | In reading or writing SRAM Backup Data, an error occurred accessing the specified file. Please check the free space of the PC and the file access right, and then execute it again. | "20.2 Setting Guide" |
| 0xC0B00224 SAAF036 -1062206940 3232760356 | In Write SRAM Backup Data, the specified file size is too large. It must be 96KB or less. | Please confirm that the file specified in Write SRAM Backup Data is correct. Also, please specify a file of the size of 96Kbytes or less. | "20.2 Setting Guide" |
| 0xC0B00225 SAAF037 -1062206939 3232760357 | Numeric value error. Please set a correct value. | Please confirm that the string is valid as a numeric value. | - |
| 0xC0B00226 SAAF038 -1062206938 3232760358 | The specified data count is 0 or out of range. | Please check the data count. | Chapter of corresponding Action |
| 0xC0B00227 SAAF039 -1062206937 3232760359 | The max number of access destinations is too high (It must be 1500 or less). | Please consider dividing it for successful access. | - |
| 0xC0B00228 SAAF040 -1062206936 3232760360 | The total buffer size of the data to access is too high. (It must be 1MB or less.) | | |
| 0xC0B00230 SAAF048 -1062206928 3232760368 | Cannot start Pro-Server EX. | Please reboot your PC. If it does not solve the problem, please install 'Pro-Server EX' again. | 'Pro-Server EX Installation Guide' |
| 0xC0B00231 SAAF049 -1062206927 3232760369 | Cannot start Pro-Studio EX. | | |
| 0xC0B00232 SAAF050 -1062206926 3232760370 | Cannot start the device monitor. | | |

* - 1st line: Error code
2nd line: Integrated error code
3rd line: Error code with decimal code
4th line: Error code without decimal code

| Error Code* | Error Message | Cause and Troubleshooting | Reference |
|--|---|--|------------------------------------|
| 0xC0B00233 SAAF051 -1062206925 3232760371 | Cannot start the symbol monitor. | Please reboot your PC. If it does not solve the problem, please install 'Pro-Server EX' again. | 'Pro-Server EX Installation Guide' |
| 0xC0B00234 SAAF052 -1062206924 3232760372 | Cannot start the status monitor. | | |
| 0xC0B00235 SAAF053 -1062206923 3232760373 | Cannot start the log viewer. | | |
| 0xC0B00236 SAAF054 -1062206922 3232760374 | Cannot start the device access log. | | |
| 0xC0B00237 SAAF055 -1062206921 3232760375 | Cannot read backup data from the specified NODE. | A Pro-Server EX node is specified. Reading backup data is possible on remote nodes other than a Pro-Server EX node. Specify a remote node other than a Pro-Server EX node. | "21.2 Setting Guide" |
| 0xC0B00238 SAAF056 -1062206920 3232760376 | Reading out logging data is not allowed. | Please change the setting not to execute Read Logging Data. | "18.2 Setting Guide" |
| 0xC0B00239 SAAF057 -1062206919 3232760377 | Reading out trend data is not allowed. | Please change the setting not to execute Read Trend Data. | "18.2 Setting Guide" |
| 0xC0B00240 SAAF064 -1062206912 3232760384 | The specified access handle for Pro-Server EX is invalid. | Please check the handle value. It must be other than 0, correctly created, and not discarded. | "27.5 System APIs" |
| 0xC0B00241 SAAF065 -1062206911 3232760385 | Cannot continue because this command is unsupported. | Please reboot your PC. If it does not solve the problem, please install 'Pro-Server EX' again. | 'Pro-Server EX Installation Guide' |
| 0xC0B00242 SAAF066 -1062206910 3232760386 | Cannot process because Pro-Server EX stopped. | Please exit all the applications before you close 'Pro-Server EX'. | - |
| 0xC0B00243 SAAF067 -1062206909 3232760387 | While waiting for a processing result from the server, the API received the application quitting message. | If you do not want to receive WM_QUIT, please use a multihandle system API in EasySetWaitTypeM(2). | "27.5 System APIs" |

* - 1st line: Error code
2nd line: Integrated error code
3rd line: Error code with decimal code
4th line: Error code without decimal code

| Error Code* | Error Message | Cause and Troubleshooting | Reference |
|---|---|--|---|
| 0xC0B00244 SAAF068 -1062206908 -1062206908 | The file name consists of more than 256 characters. Supposed to be within 256 characters. | Please check the file name specification. | "24.1 Try to connect with Factory Gateway" |
| 0xC0B00245 SAAF069 -1062206907 3232760389 | Queuing access registration has not started. | Please check the program sequence. | "27.4 Queuing Access Control APIs" |
| 0xC0B00246 SAAF070 -1062206906 3232760390 | Actual queuing access has not been made. | | |
| 0xC0B00247 SAAF071 -1062206905 3232760391 | The device access to the specified no. failed. | Please check the cable/device requirements. | "2.2 Connecting PC with display unit" |
| 0xC0B00248 SAAF072 -1062206904 3232760392 | The device access with the specified no. has not been registered. Please check the preregistered access count and no. | Please check the program sequence. | "27 Designing Your Own Program" |
| 0xC0B00249 SAAF073 -1062206903 3232760393 | Cache access to an action is not supported. | Please confirm the device name in cache registration is not the same as the action name. | "29.5 Cache Registration of Frequently Used Devices" |
| 0xC0B0024A SAAF074 -1062206902 3232760394 | Queuing access/group access to an action is not supported. | (1) Please confirm you are not trying to have queuing access to the action. (Please confirm the device name is different from the action name) (2) Please confirm there exists no device symbol nor device address that is the same as the action name. | "27.4 Queuing Access Control APIs" "29.3 Grouping Symbols" |
| 0xC0B0024B SAAF075 -1062206901 3232760395 | Cannot execute an unregistered ACTION. | Please confirm that no device/symbol of the same name as this ACTION has been registered in Data Transfer etc. | - |
| 0xC0B0024C SAAF076 -1062206900 3232760396 | The specified group no. is not within the range of sampling data group no. | Please review the API parameters. | "27 Designing Your Own Program" |
| 0xC0B0024D SAAF077 -1062206899 3232760397 | In Queuing Access, Read and Write cannot be mixed. | Please check the sequence of the program. | "27 Designing Your Own Program" |

* - 1st line: Error code
2nd line: Integrated error code
3rd line: Error code with decimal code
4th line: Error code without decimal code

| Error Code* | Error Message | Cause and Troubleshooting | Reference |
|--|--|---|---------------------------------|
| 0xC0B0024E SAAF078 -1062206898 3232760398 | The specified data type can not be used for the specified device. | Check if you can use the specified data type. | - |
| 0xC0B0024F SAAF079 -1062206897 3232760399 | The input value is invalid or out of range. | Check if the format of the entered text string or the format of the binary value is correct. | - |
| 0xC0B00250 SAAF080 -1062206896 3232760400 | No word exists. | Please review the API parameters. | "27 Designing Your Own Program" |
| 0xC0B00251 SAAF081 -1062206895 3232760401 | Invalid name/word. Illegal characters are included. | | |
| 0xC0B00252 SAAF082 -1062206894 3232760402 | The specified node has not been registered in the network project. | Please review the API parameters. Please confirm that the loaded network project is the one you need. | "27 Designing Your Own Program" |
| 0xC0B00253 SAAF083 -1062206893 3232760403 | The specified device has not been registered. | | |
| 0xC0B00254 SAAF084 -1062206892 3232760404 | Array Index Specification Error | Please check the array specification method. | "29.4 Array of Symbols" |
| 0xC0B00255 SAAF085 -1062206891 3232760405 | The specified device is an undefined symbol or an invalid address. | Please check the device address specification method. | "32.6 Setting Guide" |
| 0xC0B00256 SAAF086 -1062206890 3232760406 | The symbol name is invalid, or the group specification is too deeply nested. | | |
| 0xC0B00257 SAAF087 -1062206889 3232760407 | Index specification is unavailable for a string-type symbol. | | |
| 0xC0B00258 SAAF088 -1062206888 3232760408 | The specified index value is too high. | | |

* - 1st line: Error code
 2nd line: Integrated error code
 3rd line: Error code with decimal code
 4th line: Error code without decimal code

| Error Code* | Error Message | Cause and Troubleshooting | Reference |
|--|--|--|-----------------------------|
| 0xC0B00259 SAAF089 -1062206887 3232760409 | Group symbol specification is unavailable for this device specification. | Please check the device address specification method. | "32.6 Setting Guide" |
| 0xC0B0025A SAAF090 -1062206886 3232760410 | Please specify a group symbol to specify a device. | | |
| 0xC0B0025B SAAF091 -1062206885 3232760411 | The symbol sheet name is invalid, or it is unavailable for the specified device. | | |
| 0xC0B0025C SAAF092 -1062206884 3232760412 | Device names are redundantly specified. | Please check the specification method of the node and the device address. | "31.5 Setting Guide" |
| 0xC0B0025E SAAF094 -1062206882 3232760414 | Failed to analyze the option-specifying string. | In the case it occurred while you were using the API, please check the API parameters. In the case it occurred while you were using some feature, please check the settings of the feature. | - |
| 0xC0B0025F SAAF095 -1062206881 3232760415 | The specified data type can not be used for the specified device. | Check if you can use the specified data type. | - |
| 0xC0B00260 SAAF096 -1062206880 3232760416 | An error occurred when connecting to the Display Unit. | The PC LAN card may not be available. If it is disabled, please enable it. | "2.1.2 Necessary Equipment" |
| 0xC0B00261 SAAF097 -1062206879 3232760417 | An error occurred when connecting to the Display Unit. | | |
| 0xC0B00262 SAAF098 -1062206878 3232760418 | Failed to read the file. | Please confirm that the specified file exists in the CF-card folder. If exists, please confirm the right of access to the file. | - |
| 0xC0B00263 SAAF099 -1062206877 3232760419 | Failed to write to the file. | Please check the access right to the write destination. If there is no problem with the access right, please check whether the CF-card has enough free space. | - |

* - 1st line: Error code
2nd line: Integrated error code
3rd line: Error code with decimal code
4th line: Error code without decimal code

| Error Code* | Error Message | Cause and Troubleshooting | Reference |
|--|--|---|--|
| 0xC0B00264 SAAF100 -1062206876 3232760420 | The specified file was not found. | Please confirm that the specified file exists. | - |
| 0xC0B00265 SAAF101 -1062206875 3232760421 | Failed to delete the file. | Please confirm that the specified file exists in the CF-card folder. If exists, please confirm the right of access to the file. | - |
| 0xC0B00266 SAAF102 -1062206874 3232760422 | Failed to rename the file. | Please confirm that the specified file exists in the CF-card folder. If it does, please check the access right to the file and whether the new file name does not contain any forbidden characters. | - |
| 0xC0B00267 SAAF103 -1062206873 3232760423 | Cannot open the file list retention file. | Please check the access right to the destination folder. If there is no problem with the access right, please check whether the drive has enough free space. | - |
| 0xC0B00269 SAAF105 -1062206871 3232760425 | No file name has been inputted. | Please input a file name. | - |
| 0xC0B0026A SAAF106 -1062206870 3232760426 | Too long file path. | Please shorten the file path. | - |
| 0xC0B0026C SAAF108 -1062206868 3232760428 | Connection to the Display unit was reset. | After confirming the remote node is still on and the cable is properly connected, please execute it again | "2.2 Connecting PC with display unit" |
| 0xC0B0026D SAAF109 -1062206867 3232760429 | The destination NODE does not respond. | | |
| 0xC0B0026E SAAF110 -1062206866 3232760430 | Could not complete the operation because connection was broken during the process. | | |
| 0xC0B0026F SAAF111 -1062206865 3232760431 | Cannot connect to the specified node because it does not exist. | Please load the network project file in which the specified Node name is registered into 'Pro-Server EX'. | "24.1 Try to connect with Factory Gateway" |

- * - 1st line: Error code
2nd line: Integrated error code
3rd line: Error code with decimal code
4th line: Error code without decimal code

| Error Code* | Error Message | Cause and Troubleshooting | Reference |
|--|---|--|---------------------------------|
| 0xC0B00272 SAAF114 -1062206862 3232760434 | The parameter value is invalid. | Please review the inputted parameter, and set a correct value. | "27 Designing Your Own Program" |
| 0xC0B00273 SAAF115 -1062206861 3232760435 | Failed to get the file list in the CF-card. | Please confirm that the specified file type is correct. Also, please check the access right to the destination folder. If there is no problem with the access right, please check whether the drive has enough free space. | - |
| 0xC0B00274 SAAF116 1062206860 3232760436 | Could not connect to the Display Unit. | The remote node may be busy. Please execute it again after a brief interval. Or, if the connection with the remote node is established using the transfer tool, please exit the tool and then execute it again. | - |
| 0xC0B00280 SAAF128 -1062206848 3232760448 | The destination NODE does not respond. | Network connection between your port and the destination port has not been properly established. Please check the followings, and then execute Transfer or Delete again. <ul style="list-style-type: none"> • The network cable is properly connected • The destination node is ON, and • The IP address in the Node Setting of 'Pro-Studio EX' is correct. | "31.5 Setting Guide" |
| 0xC0B00281 SAAF129 -1062206847 3232760449 | Cannot judge the specified node model. Not supported Display Unit. | Please disconnect the unsupported display unit node. Or, make sure the node setting is correct. If it does not solve the problem, please install 'Pro-Server EX' again. | "Supported Models" |
| 0xC0B00282 SAAF130 -1062206846 3232760450 | Cannot execute because the 2WayDriver version is earlier than 4.50. | Cannot execute the specified feature because the 2 WayDriver version of the GP Series Node is old. Please upgrade the 2 WayDriver, and then execute it again. | - |
| 0xC0B00283 SAAF131 -1062206845 3232760451 | Screen Capture is not supported. | | |
| 0xC0B00284 SAAF132 -1062206844 3232760452 | New Filing Data is not supported. | | |

* - 1st line: Error code
2nd line: Integrated error code
3rd line: Error code with decimal code
4th line: Error code without decimal code

| Error Code* | Error Message | Cause and Troubleshooting | Reference |
|--|---|---|--|
| 0xC0B00285 SAAF133 -1062206843 3232760453 | The device cache was not found | Please confirm that a cache buffer has been generated under the device cache name you specified. Also, please confirm that the device cache name is correct. | "29.5 Cache Registration of Frequently Used Devices" |
| 0xC0B00286 SAAF134 -1062206842 3232760454 | The device cache already has been already registered. | Please confirm that no cache buffer with the same device cache name has been generated. Also, please confirm that the device cache name is correct. | "29.5 Cache Registration of Frequently Used Devices" |
| 0xC0B00287 SAAF135 -1062206841 3232760455 | The provided device-cache handle is invalid. | Please confirm that the handle is correct. | "29.5 Cache Registration of Frequently Used Devices" |
| 0xC0B00288 SAAF136 -1062206840 3232760456 | The no. of device caches exceeds the limit. | The max number of cache buffers is 1000. No more can be registered. If you want to register another cache buffer, please reduce the number of already registered ones. | "29.5 Cache Registration of Frequently Used Devices" |
| 0xC0B00289 SAAF137 -1062206839 3232760457 | The no. of device cache records exceeds the limit. | Please register the record in another cache buffer. Or please reduce the number of records. | "29.5 Cache Registration of Frequently Used Devices" |
| 0xC0B0028A SAAF138 -1062206838 3232760458 | The device cache size exceeds the limit. | Please register the record in another cache buffer. Or please reduce the total number of bytes. | "29.5 Cache Registration of Frequently Used Devices" |
| 0xC0B0028B SAAF139 -1062206837 3232760459 | Could not execute because the device cache was in processing. | Before you register a record in a cache buffer, please be sure that cache action is not in execution. | "29.5 Cache Registration of Frequently Used Devices" |
| 0xC0B0028E SAAF142 -1062206834 3232760462 | Invalid Transfer Password | The transfer password you entered is not the same as the one set up on the remote node. Please enter the correct password, and try Transfer again. If you forgot your transfer password, please either configure it again in 'GP-Pro EX' or delete the transfer password. | "23.1.1 Remote Access" |
| 0xC0B0028F SAAF143 -1062206833 3232760463 | Transfer failed. | Please try Transfer again. If you still cannot transfer, please forcibly transfer the project file to the remote node using 'GP-Pro EX', and then transfer the network project file using 'Pro-Studio EX'. | "26.1 Setting Guide" |

* - 1st line: Error code
 2nd line: Integrated error code
 3rd line: Error code with decimal code
 4th line: Error code without decimal code

| Error Code* | Error Message | Cause and Troubleshooting | Reference |
|--|--|--|--|
| 0xC0B00290 SAAF144 -1062206832 3232760464 | Cannot connect to the destination NODE. | <ul style="list-style-type: none"> The remote node is now in transfer mode. Please try Transfer again after a while, or after powering the remote node off and then on. Please confirm whether the destination is supported by 'Pro-Studio EX'. | "26.1 Setting Guide" "Supported Models" |
| 0xC0B00294 SAAF148 -1062206828 3232760468 | Failed to recognize the destination main unit. Please confirm whether the model is supported by Pro-Studio EX. | Please confirm whether the destination is supported by 'Pro-Studio EX'. | "Supported Models" |
| 0xC0B00298 SAAF152 -1062206824 3232760472 | File access went wrong with the destination main unit. | Please forcibly transfer the project file to the remote node using 'GP-Pro EX', and then transfer the network project file using 'Pro-Studio EX'. | "26.1 Setting Guide" |
| 0xC0B00299 SAAF153 -1062206823 3232760473 | CF-Card is not inserted or not supported. | Please check whether the CF-card is properly inserted. | - |
| 0xC0B0029B SAAF155 -1062206821 3232760475 | System Error | Please install 'Pro-Studio EX' again. | 'Pro-Server EX Installation Guide' |
| 0xC0B0029C SAAF156 -1062206820 3232760476 | Transfer stopped. | If operation is continued without any interruption by the user, this message is not displayed. | "26.1 Setting Guide" |
| 0xC0B0029D SAAF157 -1062206819 3232760477 | Cannot transfer the network project because the version of destination GP Runtime(2WayDriver) is earlier than V4.55. Please transfer it again after upgrading GP Runtime(2Way Driver). | Please transfer the new 2Way Driver from GP-Pro/PB to the GP Series Node. | - |
| 0xC0B002A1 SAAF161 -1062206815 3232760481 | The model in Node Setting is different from the actual model. | <p>The model in Node Setting of 'Pro-Studio EX' is different from the actual model. Please check the followings, and then execute Transfer or Delete again.</p> <ul style="list-style-type: none"> The Node type is the same as that of the actual model. The IP address setting is correct. The connected Display unit model is correct. | "31.5 Setting Guide" |

* - 1st line: Error code
2nd line: Integrated error code
3rd line: Error code with decimal code
4th line: Error code without decimal code

| Error Code* | Error Message | Cause and Troubleshooting | Reference |
|--|--|--|--|
| 0xC0B002A2 SAAF162 -1062206814 3232760482 | Cannot read the project file from the Display Unit because the file does not exist or is broken. | Please transfer the project file from 'GP-Pro EX' to the remote node. | 'GP-Pro EX Reference Manual' |
| 0xC0B002A3 SAAF163 -1062206813 3232760483 | Cannot transfer the network project because the Runtime version of the Display Unit is old. | Please transfer the new runtime from 'GP-Pro EX' to the remote node. | 'GP-Pro EX Reference Manual' |
| 0xC0B002A4 SAAF164 -1062206812 3232760484 | Cannot register the device in the device cache. | When the sampling cycle of the device cache is 0, the device of the PC or the GP2000 Series Node cannot be registered. Please change the sampling cycle to a value other than 0 before registration. | "29.5 Cache Registration of Frequently Used Devices" |
| 0xC0B002A5 SAAF165 -1062206811 3232760485 | Failed to save the project file. | If the hard-disk capacity of the PC is insufficient, please increase it and execute the operation again. Or please restart the PC and execute again. | - |
| 0xC0B002A6 SAAF166 -1062206810 3232760486 | Failed to process because Read SRAM Backup Data is now being used. | Please execute Read SRAM Backup Data again. | "20.2 Setting Guide" |
| 0xC0B002A7 SAAF167 -1062206809 3232760487 | Parameter Error in Read SRAM Backup Data | Please execute Read SRAM Backup Data using a correct parameter. | "27.6 SRAM Data Access APIs" |
| 0xC0B002A8 SAAF168 -1062206808 3232760488 | Failed to write to a saved file. | If the hard-disk capacity of the PC is insufficient, please increase it and execute the operation again. Or please restart the PC and execute again. | - |
| 0xC0B002A9 SAAF169 -1062206807 3232760489 | Cannot continue the operation because Pro-Server EX is not running. | Start 'Pro-Server EX'. | - |
| 0xC0B002AA SAAF170 -1062206806 3232760490 | NODE Information with the specified index does not exist. | In the case it occurred while you were using the API, please check the API parameters. In the case it occurred while you were using some feature, please check the settings of the feature. | - |

* - 1st line: Error code
2nd line: Integrated error code
3rd line: Error code with decimal code
4th line: Error code without decimal code

| Error Code* | Error Message | Cause and Troubleshooting | Reference |
|--|--|--|-----------|
| 0xC0B002AB SAAF171 -1062206805 3232760491 | Device Information with the specified index does not exist. | In the case it occurred while you were using the API, please check the API parameters. | - |
| 0xC0B002AC SAAF172 -1062206804 3232760492 | Symbol-Sheet Information with the specified index does not exist. | In the case it occurred while you were using some feature, please check the settings of the feature. | - |
| 0xC0B002AD SAAF173 -1062206803 3232760493 | Global-Constant Information with the specified index does not exist. | In the case it occurred while you were using the API, please check the API parameters. | - |
| 0xC0B002AE SAAF174 -1062206802 3232760494 | Device-Cache Information with the specified index does not exist. | In the case it occurred while you were using some feature, please check the settings of the feature. | - |
| 0xC0B002AF SAAF175 -1062206801 3232760495 | Attempted to access a device outside the address range. | Attempted to access an out-of-range device. | - |
| 0xC0B002B0 SAAF176 -1062206800 3232760496 | R_Device is not supported. | 'Pro-Server EX' does not support R_Device. Use other devices. | |

* - 1st line: Error code
2nd line: Integrated error code
3rd line: Error code with decimal code
4th line: Error code without decimal code

36.3.5 "SAAJ****" Error Info

| Error Code* | Error Message | Cause and Troubleshooting | Reference |
|--|---|--|------------------------------------|
| 0xC0B00501 SAAJ001 -1062206207 3232761089 | Failed to get the Pro-Server EX handle. | Please confirm that the handle is correct. | "27.5 System APIs" |
| 0xC0B00502 SAAJ002 -1062206206 3232761090 | Cannot open the template of the ACTION report sheet, or cannot add the sheet. | Please reboot your PC. If not solved, install it again. | 'Pro-Server EX Installation Guide' |
| 0xC0B00503 SAAJ003 -1062206205 3232761091 | Failed to start EXCEL. | Please check that Excel is installed and restart the PC. | - |
| 0xC0B00504 SAAJ004 -1062206204 3232761092 | Cannot open the template book. | Please save the file from the command of template file edit, to reload. If you start Excel with this error generated, Excel exits at the timing of closing 'Pro-Server EX'. During the error, first close 'Pro-Server EX' and then start Excel. | Chapter of corresponding Action |
| 0xC0B00505 SAAJ005 -1062206203 3232761093 | ACTION System Error | Please reboot your PC. If not solved, install it again. | 'Pro-Server EX Installation Guide' |
| 0xC0B00506 SAAJ006 -1062206202 3232761094 | Cannot save the output book. | Please exit Pro-Server EX. Please check that the attribution of output file is not "Read-only", and reload. | - |
| 0xC0B00507 SAAJ007 -1062206201 3232761095 | The specified template sheet (XX) was not found in the template book. (XX: Template sheet name) | Please check that the specified sheet exists in the template file. | - |
| 0xC0B00508 SAAJ008 -1062206200 3232761096 | Failed to add the sheet. | Please reboot your PC. If not solved, install it again. | 'Pro-Server EX Installation Guide' |
| 0xC0B00509 SAAJ009 -1062206199 3232761097 | Cannot execute due to the command (XX) impossible to interpret. (XX: Command name) | Please save the file from the template file edit. Or, create new template file. | Chapter of corresponding Action |
| 0xC0B0050A SAAJ010 -1062206198 3232761098 | Failed to print. | Please check the printer status normally used. | - |

- * - 1st line: Error code
 2nd line: Integrated error code
 3rd line: Error code with decimal code
 4th line: Error code without decimal code

| Error Code* | Error Message | Cause and Troubleshooting | Reference |
|--|--|--|------------------------------------|
| 0xC0B0050B SAAJ011 -1062206197 3232761099 | The specified data type is not supported. | Settings for the specified action are not supported. | - |
| 0xC0B0050C SAAJ012 -1062206196 3232761100 | Cannot execute.The Pro-Server EX version is old. | Please reinstall. | 'Pro-Server EX Installation Guide' |
| 0xC0B0050D SAAJ013 -1062206195 3232761101 | The ACTION report sheet is damaged. | | |
| 0xC0B0050E SAAJ014 -1062206194 3232761102 | Cannot paste image. | Possible cause is that the image file does not exist. Please create an image data again with the Display Unit. | 'GP-Pro EX Reference Manual' |
| 0xC0B0050F SAAJ015 -1062206193 3232761103 | Cannot read the file. The header of the CSV file acquired is damaged. | The CSV file may be damaged. Create a new CSV file for the log data on the Display Unit. | - |
| 0xC0B00510 SAAJ016 -1062206192 3232761104 | Cannot open the specified CSV file (XX). (XX: File name) | CSV file is possibly broken. Please make CSV file of log data again with an Display Unit. | 'GP-Pro EX Reference Manual' |
| 0xC0B00511 SAAJ017 -1062206191 3232761105 | The ACTION area size is too small. | The Action output range is too small. Please expand the Action area in editing the template file. | Chapter of corresponding Action |
| 0xC0B00512 SAAJ018 -1062206190 3232761106 | The specified data type is not supported. | Please save the file from the template file edit. | Chapter of corresponding Action |
| 0xC0B00513 SAAJ019 -1062206189 3232761107 | The file name is too long to create an output book. | Please shorten the file name. | Chapter of corresponding Action |
| 0xC0B00514 SAAJ020 -1062206188 3232761108 | An error occurred executing the macro. Please refer to the log viewer for details. | Please check the macro to be executed. | - |
| 0xC0B00515 SAAJ021 -1062206187 3232761109 | Failed in scrolling. | Please reboot your PC. If not solved, install it again. | 'Pro-Server EX Installation Guide' |

* - 1st line: Error code
2nd line: Integrated error code
3rd line: Error code with decimal code
4th line: Error code without decimal code

| Error Code* | Error Message | Cause and Troubleshooting | Reference |
|--|---|--|--|
| 0xC0B00516 SAAJ022 -1062206186 3232761110 | The setting to save in a file is invalid. | Please check again the specification of export to be implemented. | - |
| 0xC0B00520 SAAJ032 -1062206176 3232761120 | Could not identify the record no. because the recipe record no. has not been set. Please configure the specification method of the record no. in the Recipe Settings dialog.. | Please configure the specification method of the record no. in the Recipe Settings dialog. | Chapter of corresponding Action |
| 0xC0B00521 SAAJ033 -1062206175 3232761121 | A runtime error occurred. The target output sheet is unknown or the cell range is invalid. | Please check the output folder and file. In addition, please check the cell range of action area is correct. | Chapter of corresponding Action |
| 0xC0B00522 SAAJ034 -1062206174 3232761122 | Failed to read the alias file. | Confirm the text substitution table settings in editing the template file. | "12.3 Setting Guide" |
| 0xC0B00523 SAAJ035 -1062206173 3232761123 | No recipe with the specified record no. exists. | Confirm the No. of recipe record settings in editing the template file. | "12.3 Setting Guide" |
| 0xC0B00524 SAAJ036 -1062206172 3232761124 | Cannot export the output file. | Please check the specification of export to be implemented. | - |
| 0xC0B00525 SAAJ037 -1062206171 3232761125 | The specified ACTION area does not exist. | Please open the template file and save again. | Chapter of corresponding Action |
| 0xC0B00526 SAAJ038 -1062206170 3232761126 | The cell arrow settings are invalid. Scale or Arrow Start/End Value is wrong. | Confirm the cell arrow settings in editing the template file. | "5.3.2 Setting Guide" |
| 0xC0B00527 SAAJ039 -1062206169 3232761127 | Cannot write device values converted to strings. If you want to write them, please cancel the Replace specification. | Cannot write device values converted to strings. If you want to write them, please cancel the Replace specification. | "12.3 Setting Guide" |
| 0xC0B00528 SAAJ040 -1062206168 3232761128 | When the cell is in the edit mode, no ACTION can be executed. Please close Edit Cell before execute the ACTION again. | Finish editing the cell, and execute the Action again. | Setting guide in the corresponding chapter |
| 0xC0B00529 SAAJ041 -1062206167 3232761129 | The Action Area was too small, so cannot write in. | The Action output range is too small. Please expand the Action area in editing the template file. | Setting guide in the corresponding chapter |

* - 1st line: Error code
2nd line: Integrated error code
3rd line: Error code with decimal code
4th line: Error code without decimal code

| Error Code* | Error Message | Cause and Troubleshooting | Reference |
|--|---|--|--|
| 0xC0B0052A SAAJ042 -1062206166 3232761130 | Cannot execute Replace. The alias file is the same as the template file. Please specify an alias file that is different from the template file. | Specify the alias file so as to be different from the template file. | Setting guide in the corresponding chapter |
| 0xC0B0052B SAAJ043 -1062206165 3232761131 | Cannot open the output book. | Specify the output book so as to be different from the template file, or text substitution file. | Setting guide in the corresponding chapter |

* - 1st line: Error code
 2nd line: Integrated error code
 3rd line: Error code with decimal code
 4th line: Error code without decimal code

36.4 Error Message

| Error Code | | Message |
|-------------------|---------------------|---|
| Decimal | Hexadecimal | |
| 9300 | 2454h | Cannot find network project file. |
| 9301 : 9329 | 2455h : 2471h | Reserved. |
| 9330 | 2472h | Cannot execute the command because resources are insufficient. Terminated program. |
| 9331 | 2473h | The system resource was dead-locked. Terminated program. |
| 9332 | 2474h | System Error |
| 9333 | 2475h | Cannot execute the command because program versions do not match. Terminated program. |
| 9334 : 9339 | 2476h : 247Bh | Reserved. |
| 9340 | 247Ch | An error occurred when accessing the <%s> file. |
| 9341 | 247Dh | Pro-Server is being used by too many applications. |
| 9342 | 247Eh | OS resources are insufficient (insufficient memory). |
| 9343 | 247Fh | The set connector is used by another application. |
| 9344 | 2480h | Pro-Server has not been started. Could not reference data. |
| 9345 | 2481h | Pro-Server has been terminated. Could not reference data. |
| 9346 | 2482h | Cannot continue - Pro-Server has been terminated. |
| 9347 | 2483h | Cannot continue - Pro-Server has been terminated. |
| 9348 | 2484h | Could not start Pro-Server. |
| 9349 | 2485h | Could not start Pro-Studio. |
| 9350 | 2486h | Unsupported command. Cannot continue. |
| 9351 | 2487h | Failed in loading the network project file. |
| 9352 | 2488h | The entered node name has already been registered. |
| 9353 | 2489h | The entered node name has not been registered. |
| 9354 | 248Ah | Backup data type specified is not supported. |
| 9355 | 248Bh | Failed to writing to the file. |
| 9356 | 248Ch | Could not create a file to store the SRAM backup data. |
| 9357 | 248Dh | The node name entered has not been registered. |
| 9358 | 248Eh | Pro-Server is already operating. Cannot start two copies. |
| 9359 | 248Fh | Reserved. |
| 9360 | 2490h | '%s' has not been entered. |
| 9361 | 2491h | 0 cannot be entered in '%s'. |
| 9362 | 2492h | '%s' should be: "xxx.xxx.xxx. xxx" format; where xxx is a value between 0 and 255. |

| Error Code | | Message |
|-------------------|---------------------|--|
| Decimal | Hexadecimal | |
| 9363 | 2493h | An invalid value has been entered in '%s'. |
| 9364 | 2494h | A character unavailable for '%s' is involved. |
| 9365 | 2495h | '%s' has not been entered yet. |
| 9366 | 2496h | Cannot start a new process until the process result is returned from the server. |
| 9367 | 2497h | Cannot terminate the application while waiting for the process result. |
| 9368 | 2498h | Read permission required to execute this command. Log on to the network again. |
| 9369 | 2499h | Write permission required to execute this command. Log on to the network again. |
| 9370 | 249Ah | Administrator permission required to execute this command. Log on to the network again. |
| 9371 | 249Bh | The specified number is not registered. |
| 9372 : 9375 | 249Ch : 249Fh | Reserved. |
| 9376 | 24A0h | Cannot read the file (Core.ID) |
| 9377 : 9389 | 24A1h : 24ADh | Reserved. |
| 9390 | 24AEh | Mode of Appointed handle is EASY_TB_STATUS_NOW or EASY_TB_STATUS_LAST_READ. Please execute after changing its mode to EASY_TB_STATUS_PAST or EASY_TB_STATUS_INDEX. |
| 9391 | 24AFh | Unable to open the designated LS Area |
| 9392 | 24B0h | Designated LS Area is not open |
| 9393 | 24B1h | Failed to acquire CF Card's File List |
| 9394 | 24B2h | Failed to read CF Card's file(s) |
| 9395 | 24B3h | Failed to write CF Card's file(s) |
| 9396 | 24B4h | CF Card is not inserted |
| 9397 | 24B5h | CF Card is not initialized |
| 9398 | 24B6h | CF Card is damaged |
| 9399 | 24B7h | Unable to access the designated file |
| 9400 | 24B8h | The function of Pro-Easy.DLL was doubly called up. The function of PfnApiEasy.DLL is already running. |
| 9401 | 24B9h | The specified access handle for Pro-Server EX is not effective. |
| 9402 | 24BAh | Pro-Server has stopped and can not perform processing. |
| 9403 | 24BBh | The error occurred in the function of OLE. Data cannot be converted. |
| 9404 | 24BCh | The effective data for the specified data-type variant does not exist in the original data, or is not enough. |
| 9405 | 24BDh | Original data and destination data types cannot be converted by data-type variant. |
| 9406 | 24BEh | The specified argument is not enabled. |

| Error Code | | Message |
|-------------------|---------------------|---|
| Decimal | Hexadecimal | |
| 9407 | 24BFh | Can not create the time bar. |
| 9408 | 24C0h | The symbol name is not registered. |
| 9409 | 24C1h | Cannot open the distribution sheet. |
| 9410 | 24C2h | The specified time bar has already been locked. |
| 9411 | 24C3h | The specified time bar has already been linked. |
| 9412 | 24C4h | The specified handle is not linked. |
| 9413 | 24C5h | The specified handle is not linked to the database. |
| 9414 | 24C6h | Specified handle is locked or played, Please execute after clearing to its status. |
| 9415 | 24C7h | The argument is wrong. |
| 9416 | 24C8h | Designate the internal format of the argument's Variant as either "Date" type, or compatible with "Date". |
| 9417 | 24C9h | The specified time is out of the valid range. |
| 9418 | 24CAh | The invalid argument has been set. |
| 9419 | 24CBh | Database of appointed handle is closed. |
| 9420 | 24CCh | Database access error. |
| 9421 | 24CDh | INI file ('%s') in the action contents cannot be opened. |
| 9422 | 24CEh | '%s' of INI file ('%s') in the action contents cannot be analyzed. |
| 9423 | 24CFh | Action '%s' uses action contents not yet installed in the network project. |
| 9424 | 24D0h | There are too many actions to register. |
| 9425 | 24D1h | The specified action has already been registered. |
| 9426 | 24D2h | The action contents which action '%s' uses cannot be started. The designated action is not registered. |
| 9427 | 24D3h | An error occurred on the Active-X IF. |
| 9428 | 24D4h | The designated action has been registered in the registry. |
| 9429 : 9449 | 24D5h : 24E9h | Reserved. |
| 9450 | 24EAh | The node name or symbol name is not specified. |
| 9451 | 24EBh | The node name is not specified. |
| 9452 | 24ECh | The data type setting is not valid. |
| 9453 | 24EDh | The node name and symbol is not delimited with '!'. The symbol name has not been registered or it is not a valid device address. |
| 9454 | 24EEh | |
| 9455 | 24EFh | Cannot continue the process - no valid device is specified. |
| 9456 | 24F0h | Cannot make word-access to 32-bit devices. |
| 9457 | 24F1h | The address is out of the valid range. |

| Error Code | | Message |
|-------------------|---------------------|--|
| Decimal | Hexadecimal | |
| 9458 | 24F2h | The No. of points setting is invalid. |
| 9459 | 24F3h | The No. of points setting is 0 or exceeds the setting range. |
| 9460 | 24F4h | Cannot convert the set symbol into a device address. |
| 9461 | 24F5h | A value input error occurred. Enter a correct value. |
| 9462 | 24F6h | The specified lifetime is invalid. |
| 9463 | 24F7h | The designated bit location is incorrect. |
| 9464 : 9469 | 24F8h : 24FDh | Reserved. |
| 9470 | 24FEh | Unable to connect to designated Node |
| 9471 | 24FFh | Node is a Windows PC. Unable to perform processing. |
| 9472 | 2500h | Failed to save captured screen data as JPEG file |
| 9473 | 2501h | Screen Capture is not supported. |
| 9474 | 2502h | Capture Approval Flag is not ON |
| 9475 | 2503h | Failed to acquire CF Card free space data |
| 9476 | 2504h | Data Transfer is not supported |
| 9477 | 2505h | ProNet.dll has not been installed properly |
| 9478 | 2506h | Unable to perform due to the 2-Way Driver's version not being 4.50 or higher |
| 9479 | 2507h | Reserved. |
| 9480 | 2508h | Failed to delete CF Card's file |
| 9481 | 2509h | Failed to change CF Card's internal file |
| 9482 | 250Ah | File exceeds 256 characters - reduce number of characters |
| 9483 : 9499 | 250Bh : 251Bh | Reserved. |
| 9500 | 251Ch | Pro-Server schedule management thread initialization error |
| 9501 | 251Dh | Pro-Server LAN management thread initialization error |
| 9502 | 251Eh | Pro-Server timer management thread initialization error |
| 9503 | 251Fh | Pro-Server DDE control thread initialization error |
| 9504 | 2520h | Pro-Server API control thread initialization error |
| 9505 | 2521h | Pro-Server API parameter error |
| 9506 | 2522h | Response time out |
| 9507 | 2523h | Pro-Server failed in initializing the LAN. |
| 9508 | 2524h | No data |
| 9509 | 2525h | Invalid device |
| 9510 | 2526h | Invalid address |

| Error Code | | Message |
|-------------------|---------------------|--|
| Decimal | Hexadecimal | |
| 9511 | 2527h | The address is out of the valid range. |
| 9512 | 2528h | Data type error |
| 9513 | 2529h | Transmission message error |
| 9514 | 252Ah | Cannot initialize Pro-Server cache function. |
| 9515 | 252Bh | Cannot load the network project because the database is used. |
| 9516 : 9559 | 252Ch : 2557h | Reserved. |
| 9560 | 2558h | System Error (DLL load error) |
| 9561 | 2559h | System Error (DLL version may be old.) |
| 9562 | 255Ah | System Error |
| 9563 | 255Bh | The designated property ID is not defined. (version may be old) |
| 9564 | 255Ch | Value conversion error. Incorrect characters as numbers are designated. |
| 9565 | 255Dh | Too many characters. |
| 9566 | 255Eh | The number is too large. |
| 9567 | 255Fh | System Error (Cannot start COMM.) |
| 9568 | 2560h | System Error (Cannot start GP-Viewer runtime.) |
| 9569 | 2561h | Cannot open the %s file. |
| 9570 | 2562h | File read error. |
| 9571 | 2563h | File write error. |
| 9572 | 2564h | No tags exist. (No parameter class declarations exist.) |
| 9573 | 2565h | No end tags exist. (No parameter class declarations exist.) |
| 9574 | 2566h | Found the unexpected end tag (No parameter class declarations exist.) |
| 9575 | 2567h | Signatures do not match. |
| 9576 | 2568h | Unsupported parameter. |
| 9577 | 2569h | Reached the file end. |
| 9578 | 256Ah | The incorrect structure. |
| 9579 | 256Bh | Cannot continue the process due to a memory lack. |
| 9580 | 256Ch | Cannot analyze the device name. |
| 9581 | 256Dh | DB name is not designated. |
| 9582 | 256Eh | Cannot access to DB. |
| 9583 | 256Fh | Cannot edit DB because it is locked (edited) by another program (e.g. Data View). |
| 9584 | 2570h | Either the node name or the device name is not designated. |
| 9585 | 2571h | Cannot use DB because it has been closed. (DB in use is automatically closed once when NPJ is saved/loaded.) |
| 9586 | 2572h | The database may be broken. |

| Error Code | | Message |
|-------------------|---------------------|---|
| Decimal | Hexadecimal | |
| 9587 | 2573h | Data not saved. |
| 9588 | 2574h | Cannot find data at the designated time. |
| 9589 | 2575h | No polling setups exist. |
| 9590 | 2576h | The database has not been opened. (Or it has already been closed.) |
| 9591 | 2577h | Already polling start. |
| 9592 | 2578h | Old data will be overwritten, instead of newest data. |
| 9593 | 2579h | Delete record |
| 9594 | 257Ah | Exceeds designated file size. |
| 9595 | 257Bh | Designated file number does not exist |
| 9596 : 9599 | 257Ch : 257Fh | Reserved. |
| 9600 | 2580h | Cannot continue the process due to a resource lack in GP. |
| 9601 : 9619 | 2581h : 2593h | Reserved. |
| 9620 | 2594h | The network project item has been registered redundantly. (The network project file has been broken.) |
| 9621 : 9639 | 2595h : 25A7h | Reserved. |
| 9640 | 25A8h | The Provider information data that is not registered in the network project file were sent from other node. (Network projects differ between theProvider and the Receiver nodes.) |
| 9641 | 25A9h | Either that the device write failed at the Receiver node or that no partner nodes exist while providing data. |
| 9642 : 9659 | 25AAh : 25BBh | Reserved. |
| 9660 | 25BCh | Data Read failed. |
| 9661 | 25BDh | Invalid access range of the read device. |
| 9662 : 9669 | 25BEh : 25C5h | Reserved. |
| 9670 | 25C6h | It is an access range wrong point by the write of device. |
| 9671 : 9699 | 25C7h : 25E3h | Reserved. |
| 9700 | 25E4h | Received the first trigger establish command for non-existing provider information. |
| 9701 : 9709 | 25E5h : 25EDh | Reserved. |

| Error Code | | Message |
|-------------------|---------------------|--|
| Decimal | Hexadecimal | |
| 9710 | 25EEh | Received the second trigger establish command for non-existing provider information. |
| 9711 : 9729 | 25EFh : 2601h | Reserved. |
| 9730 | 2602h | The GP is busy sending screen data or saving SRAM backup data to another PC. |
| 9731 | 2603h | An error occurred in reading the SRAM backup data. (The item ID differs from the previous ID.) |
| 9732 | 2604h | An error occurred in reading the SRAM backup data. (The data type differs from the previous type.) |
| 9733 | 2605h | An error occurred in reading the SRAM backup data. (The block No. differs from the previous No.) |
| 9734 | 2606h | SRAM backup data read error. (The requested data amount is 0 or differs from the previous amount.) |
| 9735 : 9739 | 2607h : 260Bh | Reserved. |
| 9740 | 260Ch | The GP is busy sending screen data or saving SRAM backup data to another PC. |
| 9741 | 260Dh | An error occurred in reading the SRAM backup data. (The item ID differs from the previous ID.) |
| 9742 | 260Eh | An error occurred in reading the SRAM backup data. (The data type differs from the previous type.) |
| 9743 | 260Fh | An error occurred in reading the SRAM backup data. (The block No. differs from the previous No.) |
| 9744 | 2610h | SRAM backup data read error. (The requested data amount is 0 or differs from the previous amount.) |
| 9745 : 9749 | 2611h : 2615h | Reserved. |
| 9750 | 2616h | CF command error. |
| 9751 | 2617h | CF Access error |
| 9752 | 2618h | No CF card unit. |
| 9753 : 9779 | 2619h : 2633h | Reserved. |
| 9780 | 2634h | Transmission error occurred with PLC during data write. (Code:%02x:%04x) |
| 9781 | 2635h | The designated SRAM backup data is not in the GP. |
| 9782 | 2636h | The GP's SRAM backup data is incorrect. (Code:%04x) |
| 9783 | 2637h | New alarm block is not supported. |
| 9784 : 9789 | 2638h : 263Dh | Reserved. |

| Error Code | | Message |
|-------------------|---------------------|---|
| Decimal | Hexadecimal | |
| 9790 | 263Eh | No remote access right (not connected remotely) |
| 9800 | 2648h | Parameter error. |
| 9801 | 2649h | Data count is over. |
| 9802 | 264Ah | File create error. |
| 9803 | 264Bh | EXCEL sheet create error. |
| 9804 | 264Ch | Write file error. |
| 9805 | 264Dh | File open error. |
| 9806 | 264Eh | Read only file. |
| 9807 | 264Fh | Print out error. |
| 9808 | 2650h | Save folder access error. |
| 9809 | 2651h | Reserved. |
| 9810 | 2652h | Unable to find message table file. |
| 9811 | 2653h | Unable to open message table file. |
| 9812 | 2654h | Unable to find designated sheet in message table file. |
| 9813 | 2655h | Message table is incorrect. |
| 9814 | 2656h | No equivalent enabled code. |
| 9815 | 2657h | Error occurred during POP confirmation. For details see the Log Viewer. |
| 9816 | 2658h | Unable to send mail. For details see the Log Viewer. |
| 9817 | 2659h | Unable to send portion of mail. For details see the Log Viewer. |
| 9818 9819 | 265Ah 265Bh | Reserved. |
| 9820 | 265Ch | Unable to find designated database |
| 9821 | 265Dh | Unable to find designated Table. Or, there are no records in the designated Table |
| 9822 | 265Eh | Unable to find the designated field name |
| 9823 | 265Fh | Unable to find the designated data |
| 9824 | 2660h | Field data is incorrect |
| 9825 | 2661h | Validation failed |
| 9826 | 2662h | Error occurred while accessing the database |
| 9827 | 2663h | Unable to create the Pro-Server handle |
| 9828 | 2664h | There are no character data |
| 9829 : 9839 | 2665h : 266Fh | Reserved. |
| 9840 | 2670h | Unable to open Action Report Sheet Template, or unable to append sheet |
| 9841 | 2671h | Failed to start EXCEL |

| Error Code | | Message |
|------------|-------------|---|
| Decimal | Hexadecimal | |
| 9842 | 2672h | Unable to open Template Book |
| 9843 | 2673h | Action System Error |
| 9844 | 2674h | Unable to save Output Book |
| 9845 | 2675h | Designated Template Sheet(%s) does not exist in Template Book |
| 9846 | 2676h | Failed to append sheet |
| 9847 | 2677h | Unable to interpret command (%s) and cannot execute |
| 9848 | 2678h | Failed to print |
| 9849 | 2679h | Designated data type is not supported |
| 9850 | 267Ah | Pro-Server version is old and cannot be started |
| 9851 | 267Bh | Action Report sheet is corrupted |
| 9852 | 267Ch | Designated group does not exist |
| 9853 | 267Dh | Unable to paste image |
| 9854 | 267Eh | File header is corrupted - unable to read |
| 9855 | 267Fh | Unable to open designated CSV file (%s) |
| 9856 | 2680h | Action Area Size is too small |
| 9857 | 2681h | Unable to create or read temporary file |
| 9858 | 2682h | No usable files exist in GP/GLC |
| 9859 | 2683h | Designated data type is not supported |
| 9860 | 2684h | A file name is too long, and Output Book cannot be make |
| 9861 | 2685h | An error occurred while macro run. Refer to Log Viewer for the details |
| 9862 | 2686h | Unable to save GP Screen Capture data. |
| 9863 | 2687h | Check if the Permission Flag has turned ON. |
| 9864 | 2688h | The file name is error. |
| 9865 | 2689h | The specified file does not exist in the CF card. |
| 9866 | 268Ah | Not the browser application's designated folder. Browser cannot be displayed. |
| 9870 | 268Eh | Error downloading Binary file |
| 9871 | 268Fh | Binary file Read failed |
| 9872 | 2690h | Binary file Open error |
| 9873 | 2691h | Binary file Analysis failed |
| 9874 | 2692h | Error writing to Excel file |
| 9875 | 2693h | Error writing to CSV file |
| 9876 | 2694h | Error creating Binary file |
| 9877 | 2695h | Designated file does not exist |
| 9878 | 2696h | Conversion from Excel file to Binary file failed |
| 9879 | 2697h | Conversion from CSV file to Binary file failed |

| Error Code | | Message |
|------------|-------------|--|
| Decimal | Hexadecimal | |
| 9880 | 2698h | Provided data is outside range |
| 9881 | 2699h | Failed in GP log data upload. |
| 9882 | 269Ah | There is no data to support. |
| 9883 | 269Bh | This data requires more than one sheet. |
| 9884 | 269Ch | Microsoft Excel is not installed on this machine. |
| 9885 | 269Dh | Wrong parameter is designated. |
| 9886 | 269Eh | Failed to write data. |
| 9887 | 269Fh | Failed to read CSV file. |
| 9888 | 26A0h | An error occurred in deleting an unnecessary file. |
| 9889 | 26A1h | Action Failed. |
| 9891 | 26A3h | No corresponding data in ACCESS file. |
| 9892 | 26A4h | Command error. |
| 9893 | 26A5h | Failed in automatic upload of ACCESS data. |
| 9894 | 26A6h | Cannot open the specified table. |

For information about 2580h, 25A8h, 25A9h, refer to "36.2 2-Way Driver Error Messages and Syslog Features".

