

Index

Numerics

16 levels	8-36
16 State	13-13
16384 Colors	8-36
256 Colors	8-36
3-speed blink	8-36
4096 Colors	8-36
5 State	13-8
65536 Colors	8-36

A

About Backup SRAM	19-79, 24-116, 25-106
About GP-Pro EX	1-2
Add Data	10-13
Add/Delete Font	6-5
Address Action	25-92
Address Block Conversion	5-47, 5-116
Address Format	29-17
Address Monitor	29-95
Address Refresh	29-125
Address Settings Window	5-128
Adjusting the Time	35-4
Adjusting Time	35-1
Alarm Feature List	19-163
Alarm History	19-21, 19-31
Alarm History Backup	19-75
Alarm History Data	25-29
Alarm List View	19-15
Alarm parts	19-102
Alarm Settings	19-69
Alarms	19-1
Align	17-74, 17-76, 17-77
Aligning	8-33
Allow Input	14-58, 14-62, 14-93, 14-97
Animation	8-86, 20-1, 22-23
API	38-35
API Communication	38-170
Application Trigger	21-145
Automatic Numbering	25-103
AUX Output	10-56
Auxiliary Line	18-135

B

Backing Up a Project File	5-23
Backup	5-188
Backup SRAM Capacity	5-107
Banner	19-78
Bar Code Reader	16-2, 16-4
Base Layer	20-51
Batch Print	19-72
Bit Logic System Variables	A-90
Bit Monitoring	19-22
Bit Switch	10-51, 10-90
Block Display	18-43
Blue-mode monochrome LCD	8-36

BMP/JPEG, Pasting	8-70
Branch	29-34
Bulletin Message	5-155, 17-44
Buzzer	10-56, 26-1, 26-7, 26-10

C

Calculation Examples ..	21-176, 21-177, 21-178, 21-179
Call and Display Pictures	9-4, 9-10, 9-17
Calling a Function	21-60
CAN Specification	30-152
Cancel Printing	34-37
CANopen	30-151
Caution When Saving to a CF Card	19-60, 24-155
Center	17-75, 17-77
CF Card	5-213, 33-30
CF Card Cautions for Use ..	5-212, 11-27, 19-60, 24-156, 25-115
CF Card Connection	33-29
CF Card Folder	5-53, 5-108
CF card to USB memory	A-83
CF Card, initialize	33-38, 33-44
CF File Operation	21-110
Change Attribute	5-75, 8-30
Change Backlight Color	5-200
Change Base Screen	19-36
Change File Name	21-125
Change Screen Color	5-74
Change Screen Switch	10-69, 10-99
Change View	5-206
Changing a Device/PLC	7-18
Changing Alarm Language	17-96
Changing and Displaying Messages (Text)	17-4
Changing Coordinates	8-35
Changing Device/PLC	7-41
Changing Screens	11-4, 11-10, 11-13, 11-21
Changing the Displayed Text	17-8
Changing Values	14-37
Character Code Table	8-81
Character Codes	6-6
Checking Memory Usage	29-112
Choosing the Screen to Display when the GP Turns on ..	11-7
Clear Area	15-37, 15-50
Collectively Editing Symbol Variables	29-152
Color Animation	20-26
Color Code Table	A-69
Color Code	9-52
Color Combinations	9-50
Color Palette	8-39
Color Setup	8-36
Color-Changing Switch	10-31
Command and Status	19-58
Commands/Conditional Expressions	21-68
Comment	29-63
Comment List	29-161

Common Settings	5-199	Display Address List	5-39
Common Settings Window	5-130	Display Alarm Message (Banner) Position	19-10
Communicating with Multiple Devices/PLCs	7-1	Display Historical Data	18-87
Communication	A-2	Display Position Point	9-9, 9-16, 9-53
Communication Cycle Time	A-26	Display Scan Time	A-26, A-41
Communication Error Code	A-26	Display Settings	5-145, 5-102
Compare Memory	21-81	Display Unit	5-147
Compare projects	33-25	Displaying Alarms	21-17
Comparison	10-16, 21-153	Displaying Characters Not Available In Character Code Table	8-85
Compatibility	2-2	Displaying CSV Data	25-35
Condition Action	25-89	Displaying/Clearing a Data Block Display Graph ..	18-46
Condition Name Search Feature	25-97	Documenting	34-4
Conditional Expressions	21-49, 21-148	Double Touch	10-28
Confirm Address List	5-38	download from external storage	33-37
Confirming the Communication State	7-15	DRAM	24-117
Convert	2-2	Draw	8-1
Convert Resolution	5-146	Drawing Arcs/Pies	8-15
Converting Movie Files	27-43	Drawing Circles/Ovals	8-13
Copy A Screen	5-77	Drawing Dots	8-8
Copy Memory	21-83, 21-87	Drawing in Other Languages	A-75
Copy Tool	38-182	Drawing Line/Polyline	8-9
Copying Data in Blocks	21-12	Drawing Polygons	8-17
Copying From Other Projects	5-120	Drawing Rectangles	8-11
Create Backup Data	33-38	Drawing Scales	8-19
Creating Project Files	5-9	D-Script	21-2
Creating Scripts	21-42	Duplicate	8-28
Cross Reference	5-39, 5-119		
CSV Data	25-4, 25-10, 25-18, 25-25, 25-29	E	
CSV Data Transfer	25-3, 25-54, 25-59, 25-87	Edit	8-25
CSV format	24-20, 25-10, 25-29	Editing CSV Data	25-39
Cursor Shape	19-135	Editing Parts	8-44
		Enable System Data Area ..	11-12, 11-17, 12-21, 26-9, 26-12
D		Enlarging and Reducing	8-27
Data Block Display Graph	18-94	Error Check	5-124, 5-192
Data Block Display Graph Structure	18-99	Ethernet Multilink	5-178, 7-31
Data Buffer To Internal Device	21-166	Event Recorder	27-23, 27-87
Data Capacity Per Screen	5-209	Expert Mode	5-104, 20-48
Data Display	14-1, 14-42	Extended Script	21-2
Data Input	14-1	External Operation on Multiple GPs	19-160
Data read/write	38-39		
Data Sampling	24-1	F	
Data Storage Mode	21-118	File Manager	25-83
Date/Time Display	14-104	File Name	19-59
Debug Function	21-143	Filing Data	25-5, 25-41, 25-44, 25-50
Debugging	34-4	Filing Data Capacity	25-107
Delay Feature	10-115	Filing Data Transfer	25-3, 25-61, 25-65, 25-105
Delete File	21-135	Fill	8-12, 8-14, 8-16, 8-18, 8-22
Device Access API	38-99, 38-181	Fixed Pin	5-135, 8-35
Device Conversion	7-23	Fixed Position	17-74
Device Monitor	A-47	Flip	8-34
Device/PLC	5-182	Font	6-18
Device/PLC Series Settings	5-103	Font Types	6-2, 6-4
Device/PLC System Data Area Allocation	A-27	Free Space on Storage Device	11-26
Devices Before and After Conversion	2-7	Freeze Mode	19-134
Direct Access and Memory Link, Using Together ..	A-43	Front Layer	20-51
Direct Access Method	7-8, 7-10, 11-25, A-4, A-9	FTP Server	5-213, 34-15
Direct Access Method + Memory Link Method ..	7-9, 7-11		
Direct Selection	19-118		

Function Key 38-79, 39-1
Function Name21-65

G

Global D-Script21-2
Global Function Key39-9
Global Interlock 22-11, 22-48
Global Window 12-5, 12-15
GP Remote Printer Server34-9
GP-PRO/PBIII for Windows2-2
GP-Viewer7-35
Graph Part Settings18-51
Graphic8-7
Grid Setup8-63
Group Number Function14-122
Grouping8-31
Groups 10-116, 19-77
Guard Time30-233

H

Hand-held GP39-1
Handling API 38-57, 38-89, 38-181
Header/Footer5-68
Hierarchical Screen Change11-21
Historical Data Display18-32
Historical Trend Graph18-67
HMI system variables (#H system variables)A-108
Horizontal Animation20-33
HTB30-152
Hue20-32

I

If data cannot be sampled24-137
IIS FTP Service34-16
IL 5-194, 5-198, 5-207, 29-37
Image Font6-14
Image Registration9-23
Import Data Link29-168
Index File25-98
Initialize Memory 21-95, 21-96
Input Code Table8-85
Input Display 14-115, 15-22
Input Equipment Settings16-22
Input in Sequence14-33
Input Order Function14-121
Install Transfer Tool33-72
Instructions 29-41, 29-105
Integer Logic System VariablesA-95
Interlock 10-19, 14-25
Interlock Settings22-47
Internal Device AddressA-5, A-7
Internal Device To Data Buffer21-164
IPC Settings Display Settings38-164

J

Japanese FEP15-51
JPEG file, screen capture11-18

K

Kanji Conversion15-39, 15-51
Key code, Remote PC Access36-4, 38-2
Keypad15-3, 15-7
Keypad Registration15-34
Keys15-38

L

Label10-61, 29-53
Ladder 5-194, 5-198, 5-207
Ladder Instruction Insertion29-41
Ladder Instructions Icon List29-147
Ladder MonitorA-49
Lamp13-31
Language5-188
Language Change Settings17-64
Layer Separator20-51
Lifetime factor30-233
Line Chart24-14
Line Type Setup8-43
List of Script Error Code21-67
Load Screen8-56, 8-57
Local Function Key39-6
Local Window12-4, 12-8
Lock Password5-34
Logic Memory29-112
Logic monitor29-92
Logic Program Error Correction29-77
Logic Program Restriction29-115
Logic System Variables (#L system variables)A-90
Logic View32-26
Loop11-26
Loop Function25-104
LS AreaA-8

M

Main Functions21-27
Main Window5-97
Manual Symbols and Terminology1-5
Mark8-75, 8-105
Mark Registration8-102, 8-103
Master GP7-27
Memory Link Method11-25, A-6
Memory Loader33-37, 33-67
Memory Operation21-78
Memory Restriction29-115
Memory Ring21-88
Message Display17-47, 19-149
Meter Graph18-63
Model Environment1-5
Model Names Before and After Conversion2-2
Monitor Step5-197
Monochrome 16 Levels8-36
Monochrome LCD8-36
Move8-27
Move Range and Move Direction9-22
Movie Converter27-43
Movie, Selecting at Run Time27-27, 27-35

Moving Display	9-17
Moving The File Manager	25-38, 27-42
Multifunction	10-37, 10-116
Multilanguage	17-15, 17-24

N

Name Of Each Part Of The Screen	5-97
Normal Graph	18-52
Normalized Data	18-122
Number Of Features That Can Be Placed On A Screen 5-209	
Number of Scripts	21-60
Number Of Windows	12-31
Numeric Display	14-44

O

One Shot	10-56
Online Editing	29-86
Online Monitor	29-79
Online Updates	2-23, 5-188
Operand	5-193, 29-7, 29-57
Operand Settings	29-57
Operating Environment	3-3, 3-4
Operation	21-6
Operation Example	21-176
Operation Lock	5-178, 7-35, 10-76, 37-13
Operation Results	21-66
Operation Switch	39-6
Operator	21-155
Other Languages	17-15, 17-24
Output File List	21-133
Overlapping Pictures	9-8, 9-12

P

Package Content	3-2
Package Registration	8-61, 8-105
Parameter for read/write	38-102
Part Name	29-7
Parts Palette	8-46
Parts Toolbox	5-100
Password	5-27, 5-109, 5-112, 29-128, 33-32
Passwords For Edit Project	5-28
Passwords Remove/Change	33-35
Pattern Setup	8-43
Pen Recorder	18-69
Peripheral List	5-179
Picture Display	9-25, 19-148
PID Monitor	29-162
Placing Graphics Registered in a Package	8-59
Play List	27-27
Popup Keypad	15-3, 15-48
Position Animation	20-33
Precautions	1-7
Precautions When Saving to a CF Card	5-212
Preferences	5-188
Prevent Entering Data Outside Allowed Range	14-29
Preview	5-17
Print Feature	34-12

Print Format	19-73
Print Layout	34-8
Printer Configuration	34-14, 34-25
Printer Operation	21-137
Printer Output	21-21
Printer	34-12
Printer Types	34-11
Printing Alarm History	19-157
Printing CSV Data	25-40
Procedure for Creating Scripts	21-23
Processing	14-84
Program	21-2
Prohibit Double Calling API	38-131
Project Converter	2-12
Project File	5-9
Project Information	5-51
Print	34-4, 34-47
Properties	5-104
Properties Window	5-135
Pro-Server EX	38-13
Protecting Objects	8-35
Pulse	29-62

R

Radio Switch	10-39
Read Area	18-99
Read CSV File	21-127
Read File	21-130
Reading Text in VB	38-132
Real-time Print	19-72
Real-Time Video	27-8
Receive	33-9, 33-18, 33-71
Recipe Data	25-29
Recipes	25-2
Recipes Settings	25-54
Recording Video Before and After a Malfunction	27-21
Reflect in Device/PLC	11-16
Register Date and Time	23-1
Registering Addresses	29-8
Remote PC Access	36-2
Remote PC Access (RPA) input	36-27
Remote PC Access (RPA) Window Display	36-21
Replace	5-81
Retentive Transfer	29-75
Rich Text File	34-4
Rotate	8-34
Rotation	20-39
Rung and Branch Insertion	29-27
Running the Application from WinGP	38-73, 38-79

S

Sampled Data	24-14
Sampling	24-2
Sampling Data	25-29
Sampling Data Display	24-108, 24-132
Sampling Data Display Format	24-30
Sampling Data Storage Methods	24-128
Sampling Data Timing	24-120

Sampling Group List	18-13, 18-28, 24-37	SRAM Auto Backup	5-214
Sampling Structure	24-115	Standard Font	6-3
Save as CSV	19-54	Standard Line	18-79
Save Location	19-59	Starting and Ending the Logic Monitor	29-90
Save to a CF Card Control Word Address	19-58	Startup	5-1
Save to CF card	11-18, 19-54, 24-20, 25-10	State List	10-59
Saving a Movie File to the CF Card	27-14	Statistical Data Display	14-107
Saving a Movie File to the FTP Server	27-17	Statistical Graph	18-61
Saving the Displayed Screen	11-18	Steps	29-7
Saving to a CF card	19-57	STN Color LCD	8-36
Scan Time	29-117, 29-120, 29-170	Stop Communications	7-13
Screen Capture	5-214, 11-18, 11-26	Stroke Font	6-3
Screen Data List Window	5-137	Structure of Extended Scripts	21-22
Screen Display, Turning Off	35-8, 35-10	Sub Display	19-35
Screen Hard Copy	34-27	Sub Display Using a Global Window	19-151
Screen Information	5-205	Sub Display Using a Local Window	19-151
Screen List Window	5-133	Subroutines	5-203, 29-49
Screen Saver	35-1, 35-8	Subtract Data	10-13
Script	5-195, 21-2, 21-54	Summary	19-78, 19-137
Script I/O Settings	5-186	Supported Colors	8-36
Script Operation Overview	21-27	Supported Functions, List By Device	1-5
Scrolling Alarm Messages	19-8	Supported Model List	3-8
Search	5-81, 5-139	Switch Lamp	10-48
Search Memory	21-91	Switches	10-1
Search/Replace	5-81	Symbol	5-59, 29-8
Security	29-128	Symbol Variable	29-8, 29-115
security level list	22-46	Symbol Variable Settings	5-202
Security Settings	22-40	System Keypad	15-31
Selector List Parts	10-88	System Area	A-30
Selector Switch	10-86	System Data Area	7-10, A-11, A-31
Send	33-6, 33-13, 33-70	System Settings Window	5-126, 5-145
Send Web Site	33-60	System Variable	29-9, 29-26, A-89
Setting Up Blink	8-43		
Setting Up User-Defined Functions	21-45	T	
Shift Memory	21-97	Text Table	17-62
Show Address	8-101	Template Registration	5-207
Show CSV	25-78	Template, Save As	8-68
Show Fixed Pin	8-100	Templates, Selecting a Screen	8-66
Show Grid	8-99	Text	8-91
Show History	19-103	Text Alarm	19-141, 19-162
Show Limit Value	14-113, 15-22	Text Data Mode	5-183
Show Parts ID	8-101	Text Display	14-87
Show Ruler	8-100	Text Display Area	17-74, 17-75, 17-76
Show Scale	18-102	Text Operation	21-159
Show Text Window	19-43	Text Operation Error Status	21-168
Show Touch Area	8-100	Text Registration	17-61
Simulation	32-1	Text Table	17-15, 17-24, 17-31, 17-36
SIO Port Operation	21-62, 21-100	TFT Color LCD	8-36
Site Transfer	33-64	Thin Out	18-75
Slave GP	7-27	Time Schedule	23-10
Snap to Grid	8-98	Time zone	37-83
Sound	26-1	Time-Base	14-74
Sound Settings	26-13	Time-Base Function	14-74
Space Requirements for Alarm History Data	19-79	Toolbar Customization	29-145
Speaker	26-3	Transfer over USB Transfer Cable	33-5
Special Data Display	25-69	Transfer Project Files	33-6
Special Relay	A-24, A-39	Transfer Projects Using CF Card	33-37
Special Switch	10-70, 10-100	Transfer Settings	33-61

Transfer Tool	33-58
Transfer Tool Installation Requirements	3-6
Transferring Project Files via Ethernet (LAN)	33-12
Transparent Parts	10-49, 14-43, 18-51
Trend Graph	18-13, 18-32
Trigger Action	A-60
Trigger	21-47
Two-dimensional Code Reader	16-4, 16-11

U

Ungrouping	8-31
Upload to External Storage	33-37, 33-44
Usable Addresses	A-4, A-6
Usage Capacity of Sampled Data	24-117
USB Memory to CF Card	A-83
USB Storage	5-213
USB Storage Device Handling Instructions	5-213
USB Storage Handling Instructions	24-156
User Keypad	15-22, 15-33
User-created Keypad	15-10
User-Defined Functions	21-59
Using File Manager to Play Movies	27-39
Using Logic	29-3
Using Modem to Transfer Screen Data to a Remote GP 33-50	
Using the Web Server to Transfer Files to the CF Card or USB Storage	37-60
Utility	5-116

V

Variable	29-8
Variable format	29-10
VB.NET 2003 Program	38-58
VB.NET 2003 Program Example	38-40
VB6 Program Example	38-67
Vertical Animation	20-36
Video Control Area, Example Use Of	27-137
Video	27-1
Video Recording	27-1
View Addresses In Address Map	5-42
Visibility	20-23
VNC Server	36-2
VNC server, RPA	36-7

W

Watch List	29-166
Web Server	37-1
Window Frame	38-171
Window Part	12-22
Window Screen	19-151
Window, Changing Displayed	12-12, 12-18
Windows XP Embedded	38-13
Windows, Creating	12-4
Windows, Displaying	12-8
WinGP	38-2, 38-28
WinGP SDK	38-15
WinGP, exiting	21-147, 38-28
Word Monitoring	19-26

Word Switch	10-65, 10-95
Work Space	5-126
Write Data	10-10
Write File	21-121
Writing Text	8-23

X

XOR display	9-29, 9-49
XY Block Display Scatter Graph	18-125
XY Historical Scatter Graph	18-111

Z

Zoom Box	5-101
----------------	-------