



How to set FTP Server (IIS)

Summary

You can use FTP Server, in case of using the video play/record functions of GP-Pro EX V1.10. In this case, please prepare a PC into which FTP Server is installed separately. We will introduce you here how to set the FTP Server functions (Internet Information Service, hereafter IIS) which has been standard-loaded with Windows®. Please refer to the following pages for the settings of Windows® XP and Windows® 2000.

Windows XP (IIS 5.1 Server)

■ Summary Procedure

1. Creating User

2. Setting IP Address of PC


3. Setting IIS

4. Confirming FTP Server


■ Procedure

1. Creating User


- Log in as an authorized user.
- Open [User Accounts] from Control Panel.

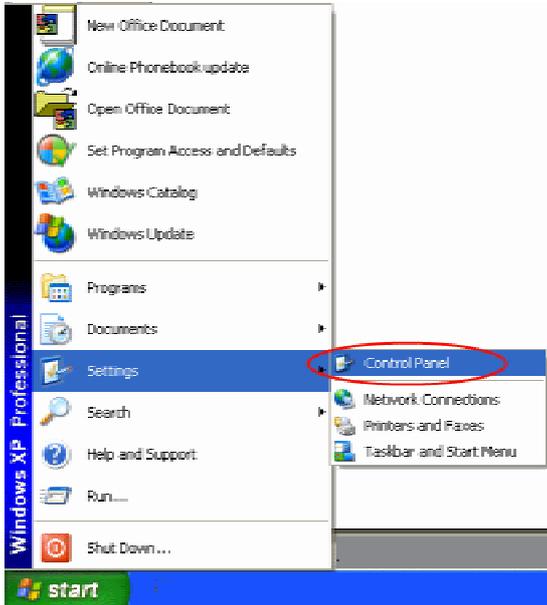

- Click [Create a new account] to register a new user account.

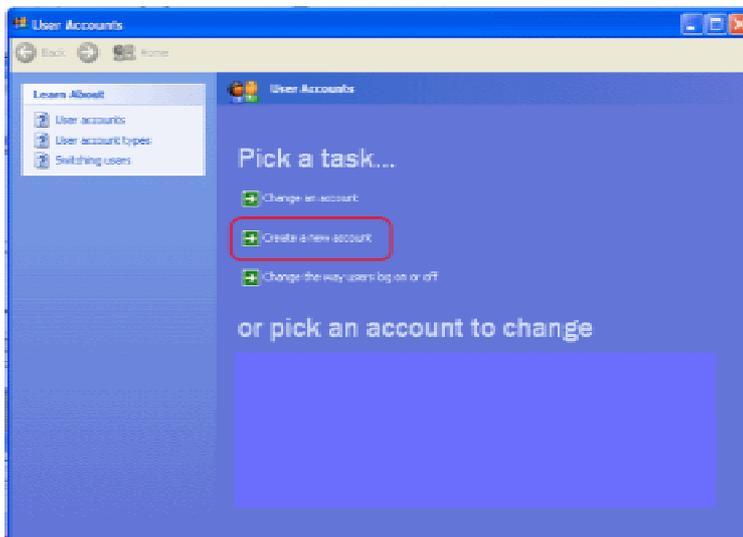


- Click [Create a password] and register a password to log in FTP Server.

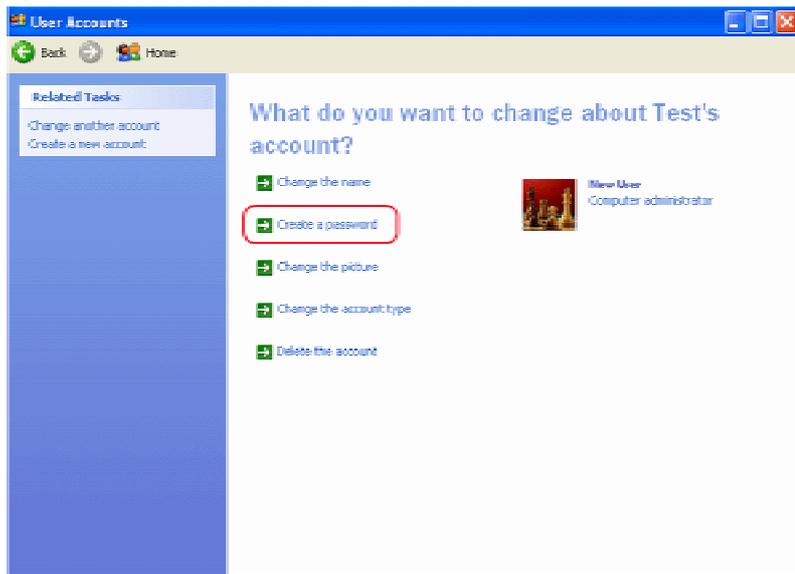


2. Setting IP Addresses

- Open [Network Connections] from Control Panel.
- Select the connection which will be used for FTP Server. Right-click the connection to open Properties.
- Select [Internet Protocol (TCP/IP)] and open [Properties].

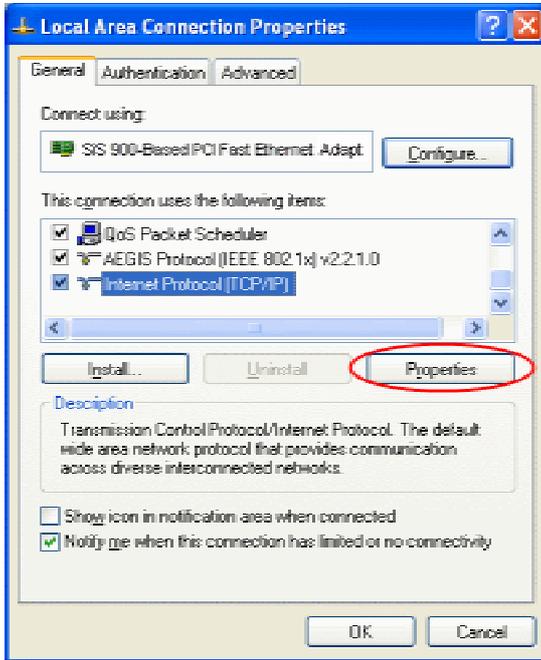


- Set IP address and Subnet mask. (Please confirm the IP address with your network administrator.)

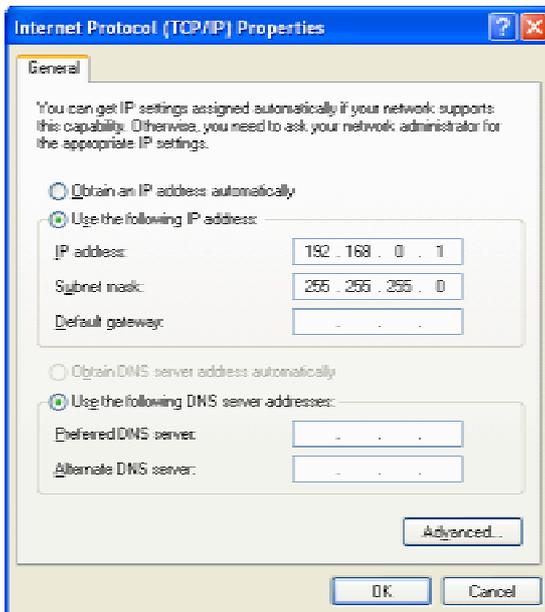


3. Setting IIS

- Open [Administrative Tools] from Control Panel.
Open [Internet Information Service].

※ In case that Internet Information Service (IIS) is not installed, please refer to the appendix, [How to install Internet Information Service \(IIS\)](#).

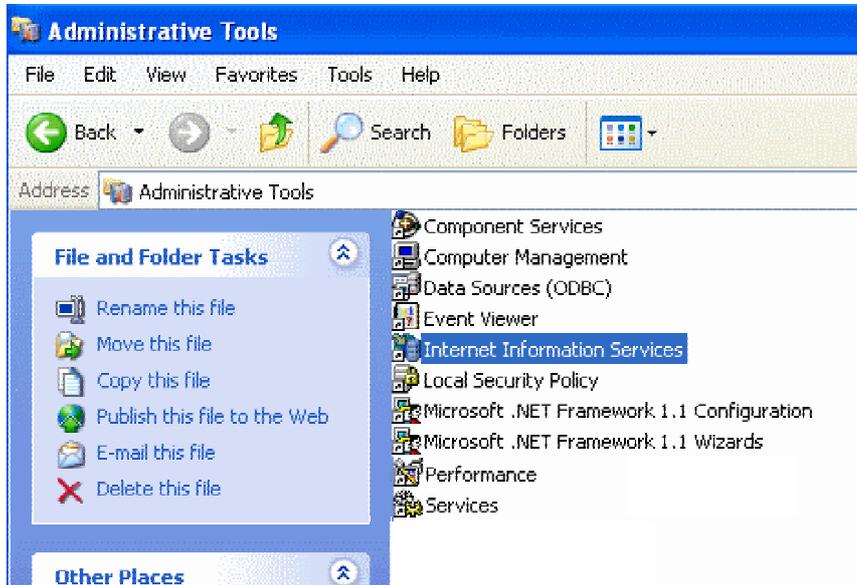

- Open Properties of [Default FTP Site] under the tree view of FTP Site.

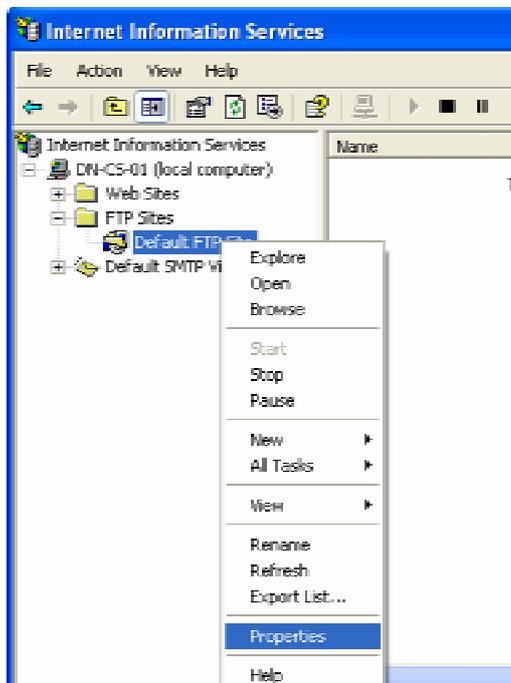


- Set FTP Site

[FTP Site] Tab

Input a comment in [Description] for FTP identification.

* IP Address : Select an IP address which will be connected to FTP Server (the IP address set in Procedure 2).

* TCP Port : Specify the port which will be in use. (21)

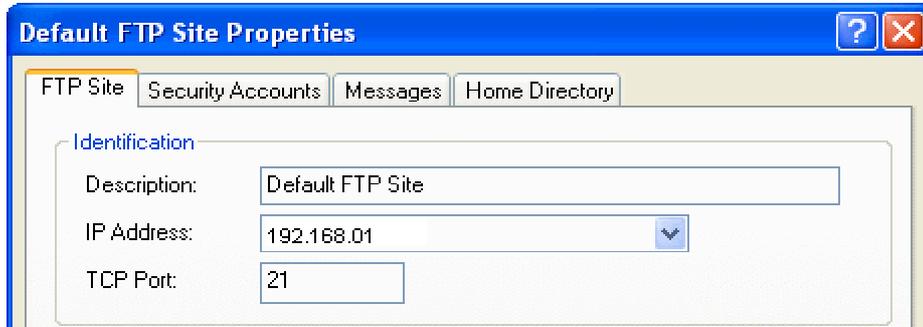


[Home Directory] Tab

Set [FTP Site Directory].

* Local Path : Specify the route path to log in.

* Access Authorization : Check on both Read and Write.

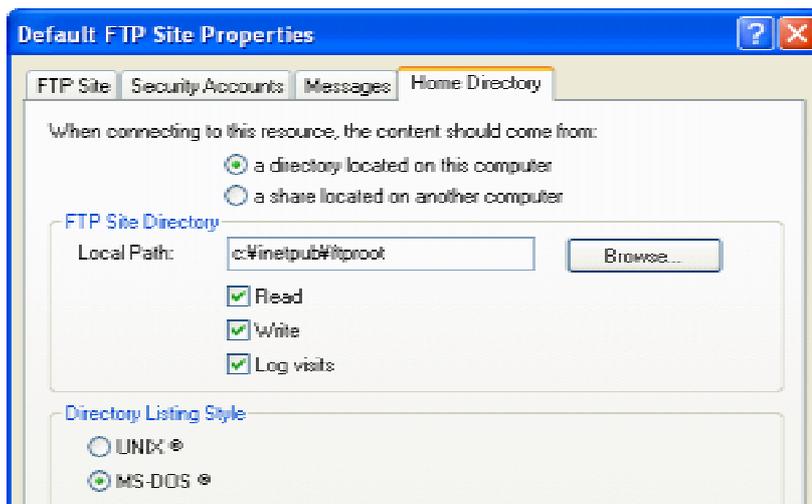

4. Confirming FTP Server

- Enter the ftp [IP Address] command at the command prompt.
E.g. : In case that IP Address of FTP Server is 192.168.0.1
ftp 192.168.0.1
- Enter User Name (the User created Procedure 1).
- Enter Password.
- Returning the response code 230 and displaying “logged in” , you have logged in to FTP Server. At this time, if the code 530 returns and displays “ cannot log in” , you have failed to log in. Please disconnect FTP Server by the bye command and confirm the settings.
- In case that you have succeeded to log in to FTP Server, if you input the dir command, the list of the FTP Server route will be displayed.
- In case that you log out from FTP Server, input the bye command. In case of fail, please disconnect form FTP Server by the bye command.

■ **Summary Procedure**

1. Creating User


2. Setting IP Address of PC

3. Setting IIS


4. Confirming FTP Server

1. Creating User


- Log in as an authorized user.
- Open [Users and Passwords] from Control Panel.

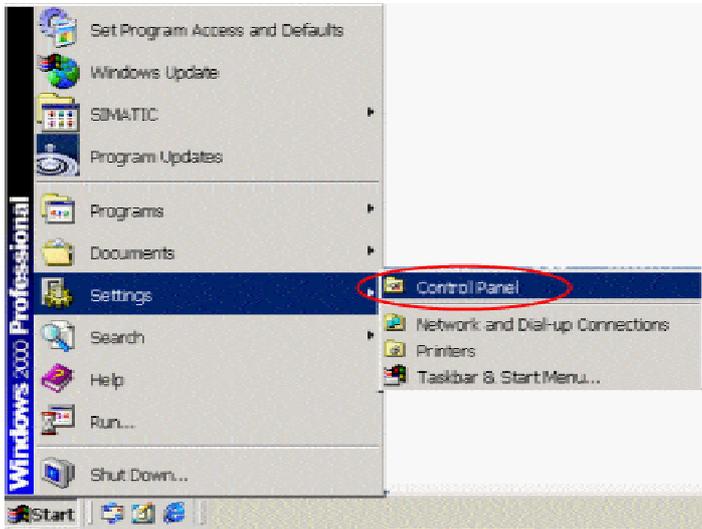

- Open the [Advanced] tab.
Click [Advanced] on [Advanced User management].

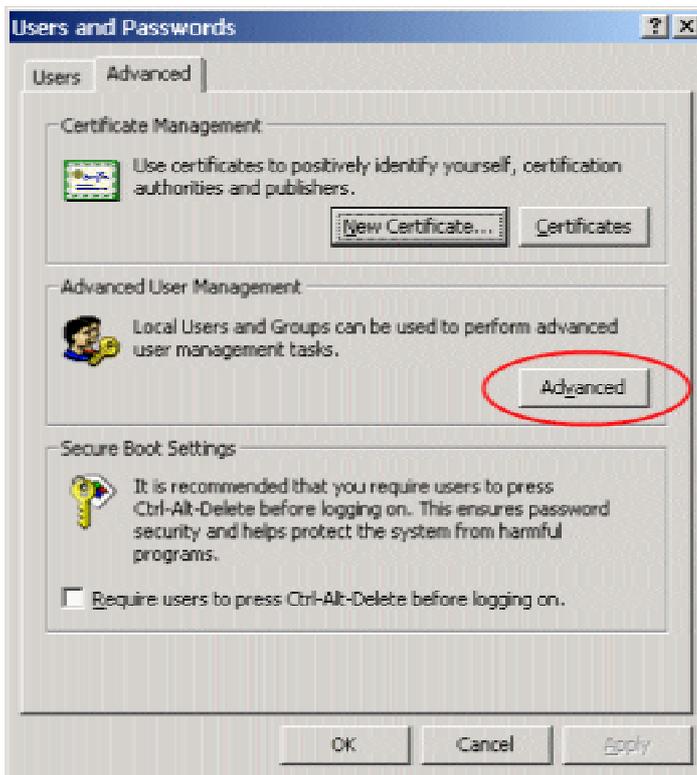


- Right-click [Users] to register New User.

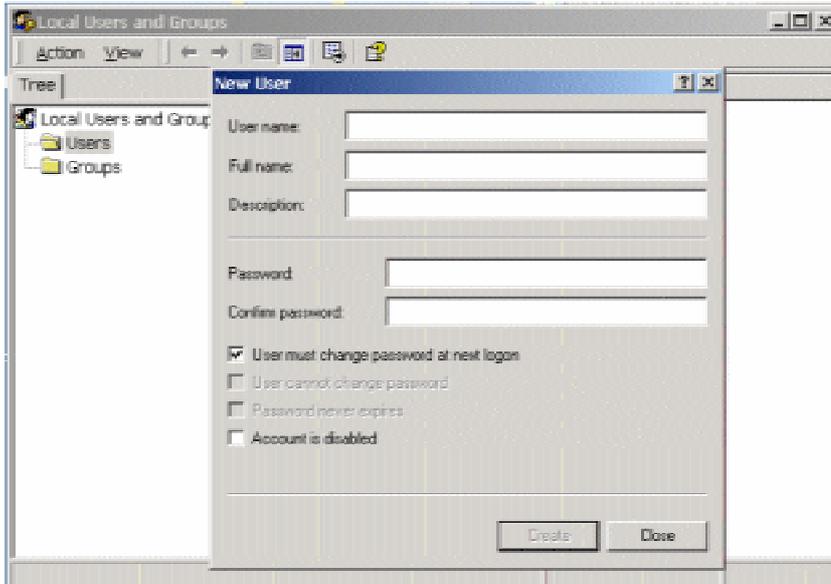


2. Setting IP Address

- Open [Network and Dial-up connection] from Control Panel.
- Select the connection that will be used for FTP Server.
Right-click the connection to open Properties.
- Select [Internet Protocol (TCP/IP)] and open [Properties].

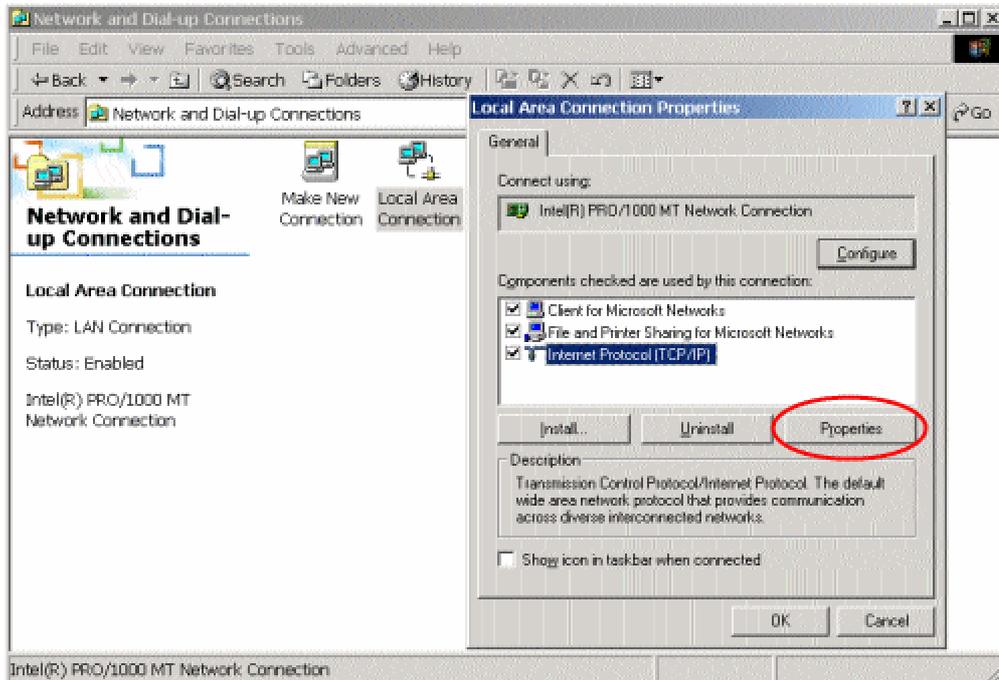

- Set IP address and Subnet mask. (Please confirm the IP address with your network administrator.)

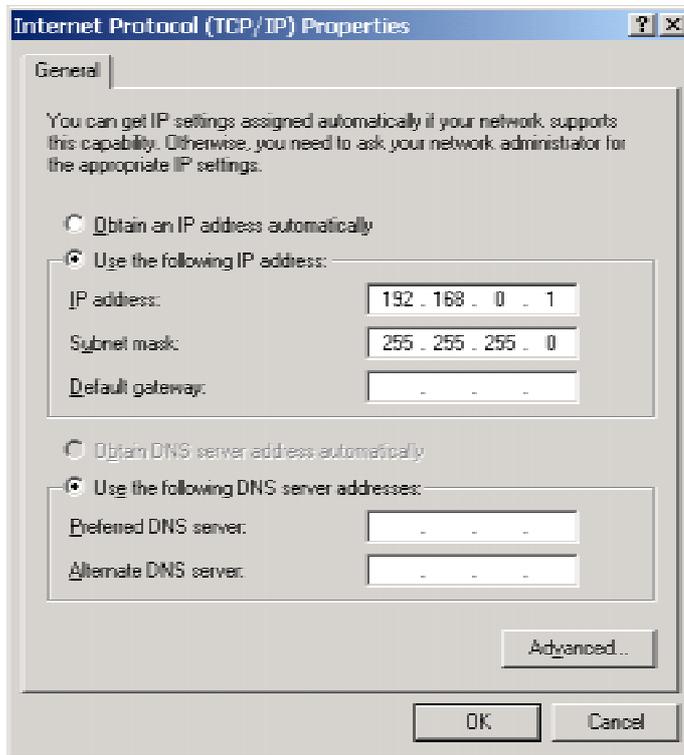


3. Setting IIS

- Open [Administrative Tools] from Control Panel.

Open [Internet Service Manager].

※ In case that Internet Service manger is not installed, please refer to the appendix, [How to install Internet Information Service \(IIS\)](#).

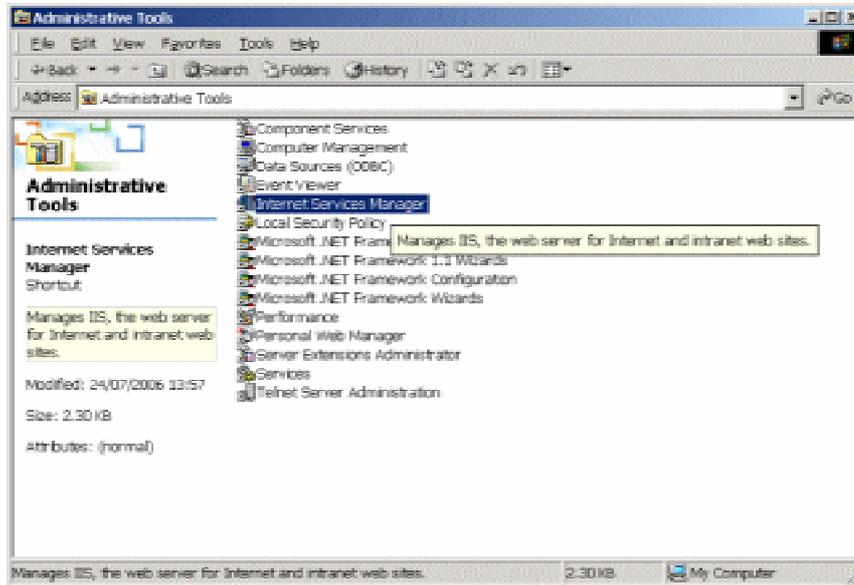

- Right -click the computer name.

Select [FTP Site] from [New].


Setting FTP Site

[FTP Site]Tab

Input a comment in [Description] for FTP identification.

IP Address : Select an IP address which will be connected to FTP Server (the IP address set in Procedure 2).

TCP Port : Specify the port which will be in use. (21)

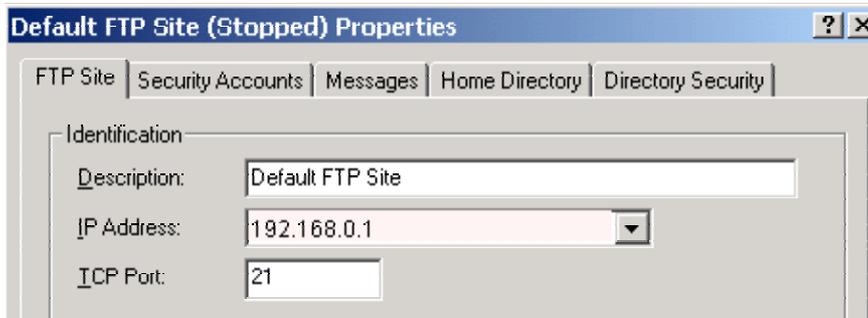


[Home Directory] Tab

Set [FTP Site Directory].

Local Path : Specify the route path to log in.

Access Authorization : Check on both Read and Write.

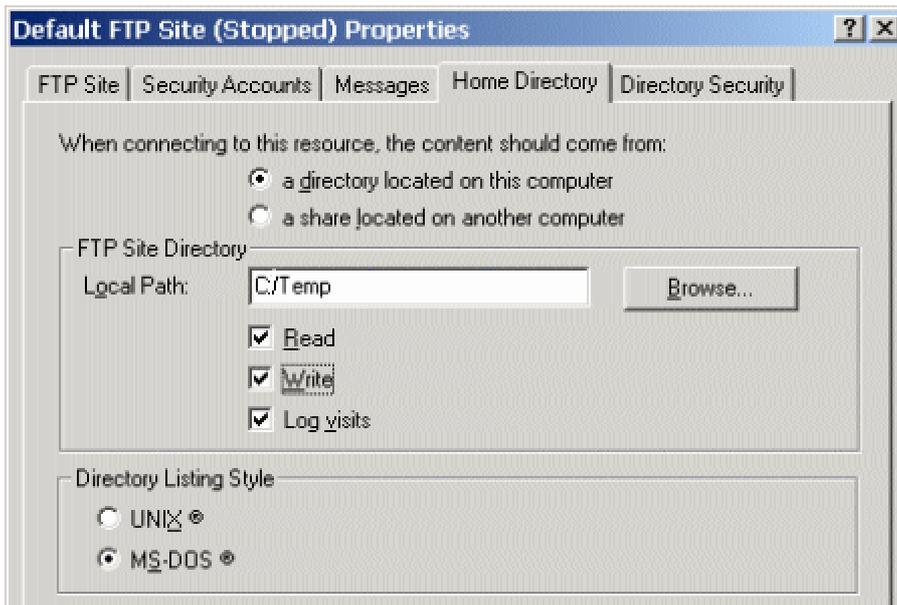

4. Confirming FTP Server


- Enter the ftp [IP Address] command at the command prompt.
e.g. : In case that IP Address of FTP Server is 192.168.0.1
ftp 192.168.0.1
- Enter User Name (the User created Procedure 1).
- Enter Password.
- Returning the response code 230 and displaying “logged in” , you have logged in to FTP Server. At this time, if the code 530 returns and displays “ cannot log in” , you have failed to log in. Please disconnect FTP Server by the bye command and confirm the settings.
- In case that you have succeeded to log in to FTP Server, if you input the dir command, the list of the FTP Server route will be displayed.
- In case that you log out from FTP Server, input the bye command. In case of fail, please disconnect form FTP Server by the bye command.

Appendix: How to install Internet Information Service (IIS)

First of all, please prepare and set the install disc of Windows XP or Windows 2000 into CD Drive.



1. Select [Add/Remove Programs] from Control Panel.
 2. Select [Add/Remove Windows Components].
 3. Display the details of [Internet Information Service (IIS)].
 4. Check on [File Transfer Protocol (FTP) Server].
- Click [Next] on Windows Components Wizard to start to install.

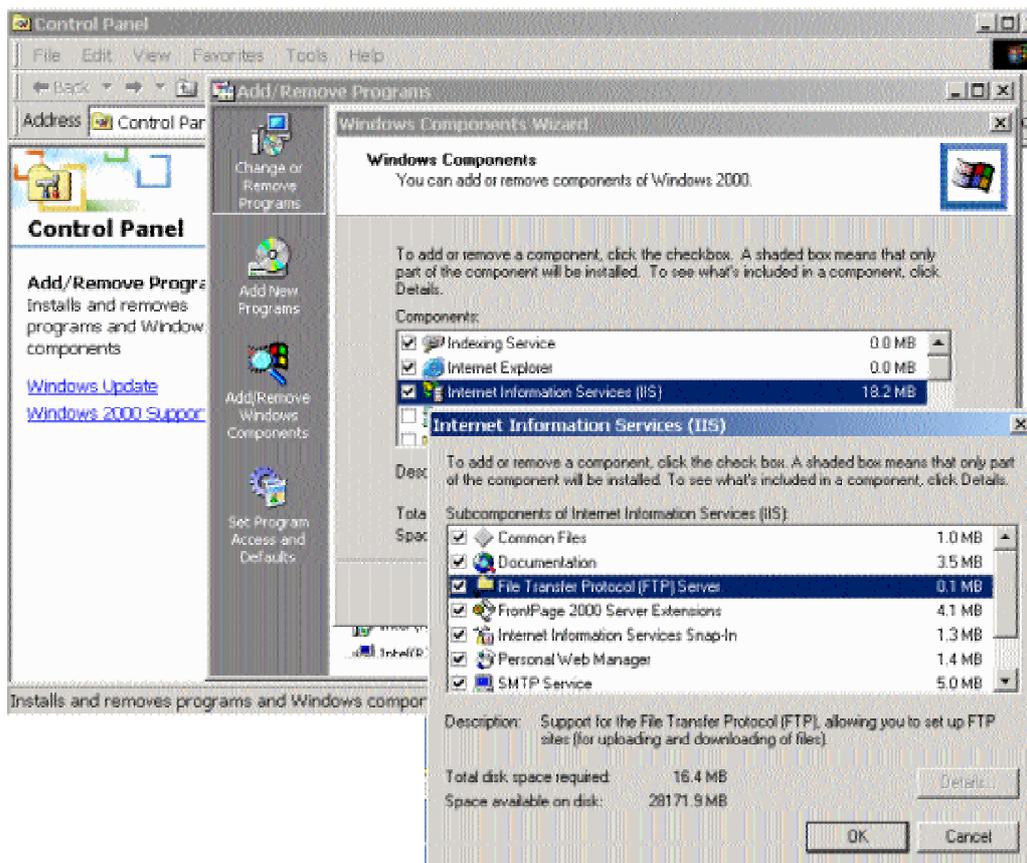

5. Follow the instruction on the screen to go on installation.
6. Select [Finish] to finish installation.