


ROBO CYLINDER MODBUS SIO Driver

1	System Configuration.....	3
2	Selection of External Device	8
3	Example of Communication Setting	9
4	Setup Items	23
5	Cable Diagram	28
6	Supported Device.....	207
7	Device Code and Address Code.....	208
8	Error Messages	209

Introduction

This manual describes how to connect the Display and the External Device (target PLC).

In this manual, the connection procedure will be described by following the below sections:

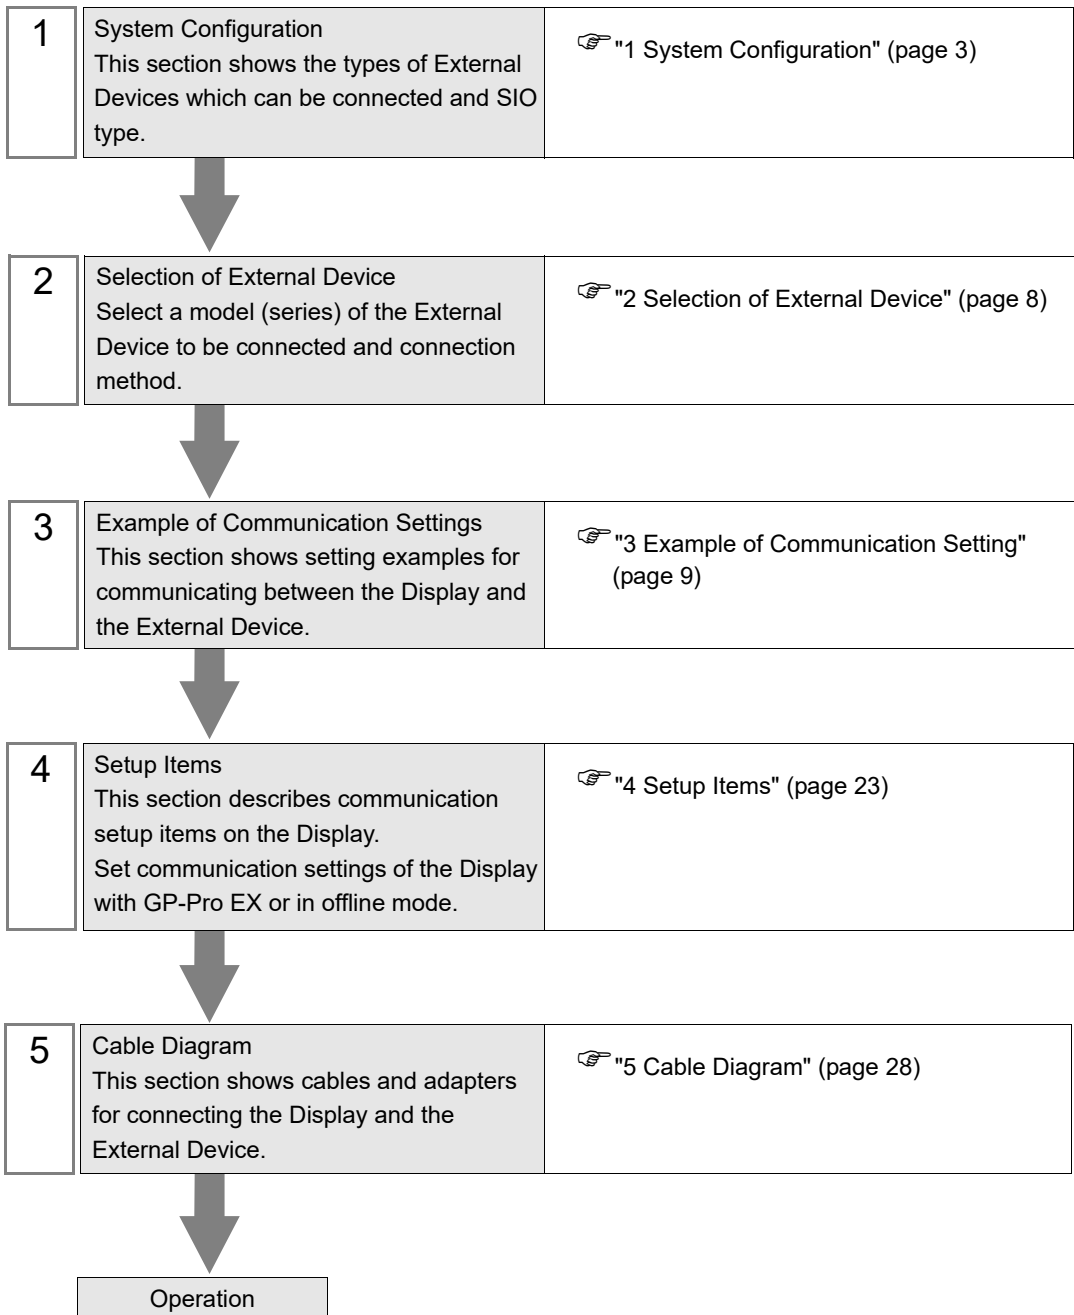

1 System Configuration

The system configuration in the case when the External Device and the Display are connected is shown.


Series	CPU	Link I/F	SIO Type	Setting Example	Cable Diagram
PCON ACON SCON	PCON-□-□-□-□-□-□ ACON-□-□-□-□-□-□ SCON-□-□-□-□-□-□	SIO port	RS-232C	Setting Example 1 (page 9)	Cable Diagram 1 (page 28)
			RS-422/485 (2 wire)	Setting Example 2 (page 11)	Cable Diagram 2 (page 30)
		D-sub 9 pin connector on SIO converter (RC□-TU-SIO-□)	RS-232C	Setting Example 1 (page 9)	Cable Diagram 3 (page 50)
		Mini-DIN 8 pin connector on SIO converter (RC□-TU-SIO-□)	RS-232C	Setting Example 1 (page 9)	Cable Diagram 4 (page 62)
ERC2	ERC2-□-□-□-□-□-NP-□-□ ERC2-□-□-□-□-□-PN-□-□	Teach port	RS-232C	Setting Example 3 (page 13)	Cable Diagram 1 (page 28)
			RS-422/485 (2 wire)	Setting Example 4 (page 15)	Cable Diagram 2 (page 30)
		Cable on CPU	RS-422/485 (2 wire)	Setting Example 4 (page 15)	Cable Diagram 5 (page 71)
		D-sub 9 pin connector on SIO converter (RC□-TU-SIO-□)	RS-232C	Setting Example 3 (page 13)	Cable Diagram 6 (page 86)
		Mini-DIN 8 pin connector on SIO converter (RC□-TU-SIO-□)	RS-232C	Setting Example 3 (page 13)	Cable Diagram 7 (page 113)
	ERC2-□-□-□-□-□-SE-□-□	Cable on CPU	RS-232C	Setting Example 3 (page 13)	Cable Diagram 8 (page 130)
			RS-422/485 (2 wire)	Setting Example 4 (page 15)	Cable Diagram 9 (page 132)
		D-sub 9 pin connector on SIO converter (RC□-TU-SIO-□)	RS-232C	Setting Example 3 (page 13)	Cable Diagram 10 (page 158)
		Mini-DIN 8 pin connector on SIO converter (RC□-TU-SIO-□)	RS-232C	Setting Example 3 (page 13)	Cable Diagram 11 (page 170)

Series	CPU	Link I/F	SIO Type	Setting Example	Cable Diagram
ROBO NET*1	GateWayR RGW-SIO	Connector for network	RS-422/485 (2 wire)	Setting Example 5 (page 17)	Cable Diagram 12 (page 181)
		D-sub 9 pin connector on SIO converter (RC□-TU-SIO-□)	RS-232C	Setting Example 6 (page 19)	Cable Diagram 13 (page 189)
		Mini-DIN 8 pin connector on SIO converter (RC□-TU-SIO-□)	RS-232C	Setting Example 6 (page 19)	Cable Diagram 14 (page 199)
RCON	RCON-PC-□-□ RCON-PCF-□-□ RCON-AC-□-□ RCON-DC-□-□ RCON-SC-□-□	SIO port on Gateway Unit RCON-GW/GWG-□	RS-232C	Setting Example 7 (page 21)	Cable Diagram 1 (page 28)


*1 Support only the Gateway mode.

■ Connection Configuration


- 1:1 connection

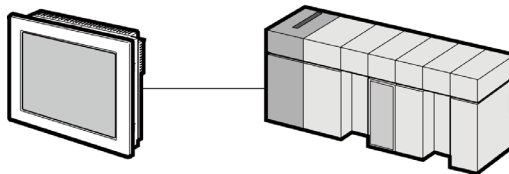

- 1:n connection (For use COM1 or COM2)

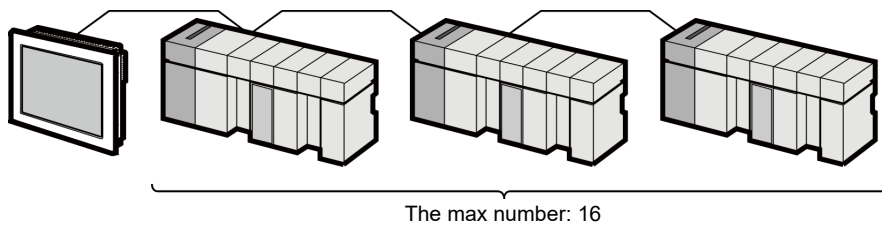

- 1:n connection (For use SIO converter)

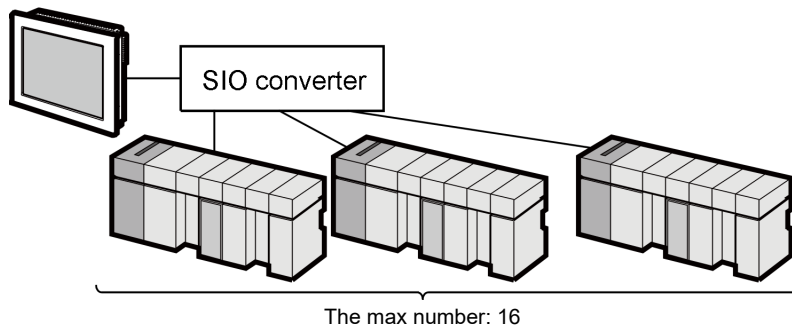

■ IPC COM Port

When connecting IPC with an External Device, the COM port used depends on the series and SIO type. Please refer to the IPC manual for details.

Usable port

Series	Usable Port		
	RS-232C	RS-422/485(4 wire)	RS-422/485(2 wire)
PS-2000B	COM1 ^{*1} , COM2, COM3 ^{*1} , COM4	-	-
PS-3450A, PS-3451A, PS3000-BA, PS3001-BD	COM1, COM2 ^{*1*2}	COM2 ^{*1*2}	COM2 ^{*1*2}
PS-3650A (T41 model), PS-3651A (T41 model)	COM1 ^{*1}	-	-
PS-3650A (T42 model), PS-3651A (T42 model)	COM1 ^{*1*2} , COM2	COM1 ^{*1*2}	COM1 ^{*1*2}
PS-3700A (Pentium®4-M), PS-3710A	COM1 ^{*1} , COM2 ^{*1} , COM3 ^{*2} , COM4	COM3 ^{*2}	COM3 ^{*2}
PS-3711A	COM1 ^{*1} , COM2 ^{*2}	COM2 ^{*2}	COM2 ^{*2}
PS4000 ^{*3}	COM1, COM2	-	-
PL3000	COM1 ^{*1*2} , COM2 ^{*1} , COM3, COM4	COM1 ^{*1*2}	COM1 ^{*1*2}
PE-4000B Atom N270	COM1, COM2	-	-
PE-4000B Atom N2600	COM1, COM2	COM3 ^{*4} , COM4 ^{*4} , COM5 ^{*4} , COM6 ^{*4}	COM3 ^{*4} , COM4 ^{*4} , COM5 ^{*4} , COM6 ^{*4}
PS5000 (Slim Panel Type Core i3 Model) ^{*5 *6}	COM1, COM2 ^{*4}	COM2 ^{*4}	COM2 ^{*4}
PS5000 (Slim Panel Type Atom Model) ^{*5 *6}	COM1, COM2 ^{*7}	COM2 ^{*7}	COM2 ^{*7}
PS5000 (Enclosed Panel Type) ^{*8}	COM1	-	-
PS5000 (Modular Type PFXPU/PFXPP) ^{*5 *6} PS5000 (Modular Type PFXPL2B5-6)	COM1 ^{*7}	COM1 ^{*7}	COM1 ^{*7}
PS5000 (Modular Type PFXPL2B1-4)	COM1, COM2 ^{*7}	COM2 ^{*7}	COM2 ^{*7}
PS6000 (Advanced Box) PS6000 (Standard Box)	COM1 ^{*9}	*10	*10
PS6000 (Basic Box)	COM1 ^{*9}	COM1 ^{*9}	COM1 ^{*9}

*1 The RI/5V can be switched. Use the IPC's switch to change if necessary.

*2 Set up the SIO type with the DIP Switch. Please set up as follows according to SIO type to be used.

- *3 When making communication between an External Device and COM port on the Expansion slot, only RS-232C is supported. However, ER (DTR/CTS) control cannot be executed because of the specification of COM port.
For connection with External Device, use user-created cables and disable Pin Nos. 1, 4, 6 and 9. Please refer to the IPC manual for details of pin layout.
- *4 Set up the SIO type with the BIOS. Please refer to the IPC manual for details of BIOS.
- *5 When setting up communication between an External Device and the RS-232C/422/485 interface module, use the IPC (RS-232C) or PS5000 (RS-422/485) cable diagrams. However, when using PFXZPBMPR42P2 in a RS-422/485 (4-wire) configuration with no flow control, connect 7.RTS+ and 8.CTS+, and connect 6.RTS- and 9.CTS-.
When using RS-422/485 communication with External Devices, you may need to reduce the transmission speed and increase the TX Wait time.
- *6 To use RS-422/485 communication on the RS-232C/422/485 interface module, the DIP Switch setting is required. Please refer to "Knowledge Base" (FAQs) on the support site. (<http://www.pro-face.com/trans/en/manual/1001.html>)

Settings	FAQ ID
PFXZPBMPR42P2, RS422/485 change method	FA263858
PFXZPBMPR42P2 termination resistor setting	FA263974
PFXZPBMPR44P2, RS422/485 change method	FA264087
PFXZPBMPR44P2 termination resistor setting	FA264088

- *7 Set up the SIO type with the DIP Switch. Please refer to the IPC manual for details of DIP Switch. The BOX Atom has not a switch to set the RS-232C, RS-422/485 mode. Use the BIOS for the setting.
- *8 For the connection with the External Device, on the user-created cable read as if the connector on the Display-side is a M12 A-coding 8 pin socket. The pin assignment is the same as described in the cable diagram. For the M12 A-coding connector, use PFXZPSCNM122.
- *9 In addition to COM1, you can also use the COM port on the optional interface.
- *10 Install the optional interface in the expansion slot.

DIP Switch settings (PL3000 / PS3000 Series)

RS-232C

DIP Switch	Setting	Description
1	OFF*1	Reserved (always OFF)
2	OFF	SIO type: RS-232C
3	OFF	
4	OFF	Output mode of SD (TXD) data: Always output
5	OFF	Terminal resistance (220Ω) insertion to SD (TXD): None
6	OFF	Terminal resistance (220Ω) insertion to RD (RXD): None
7	OFF	Short-circuit of SDA (TXA) and RDA (RXA): Not available
8	OFF	Short-circuit of SDB (TXB) and RDB (RXB): Not available
9	OFF	RS (RTS) Auto control mode: Disabled
10	OFF	

*1 When using PS-3450A, PS-3451A, PS3000-BA and PS3001-BD, turn ON the set value.

RS-422/485 (4 wire)


DIP Switch	Setting	Description
1	OFF	Reserved (always OFF)
2	ON	SIO type: RS-422/485
3	ON	
4	OFF	Output mode of SD (TXD) data: Always output
5	OFF	Terminal resistance (220Ω) insertion to SD (TXD): None
6	OFF	Terminal resistance (220Ω) insertion to RD (RXD): None
7	OFF	Short-circuit of SDA (TXA) and RDA (RXA): Not available
8	OFF	Short-circuit of SDB (TXB) and RDB (RXB): Not available
9	OFF	RS (RTS) Auto control mode: Disabled
10	OFF	

RS-422/485 (2 wire)

DIP Switch	Setting	Description
1	OFF	Reserved (always OFF)
2	ON	SIO type: RS-422/485
3	ON	
4	OFF	Output mode of SD (TXD) data: Always output
5	OFF	Terminal resistance (220Ω) insertion to SD (TXD): None
6	OFF	Terminal resistance (220Ω) insertion to RD (RXD): None
7	ON	Short-circuit of SDA (TXA) and RDA (RXA): Available
8	ON	Short-circuit of SDB (TXB) and RDB (RXB): Available
9	ON	RS (RTS) Auto control mode: Enabled
10	ON	

2 Selection of External Device

Select the External Device to be connected to the Display.

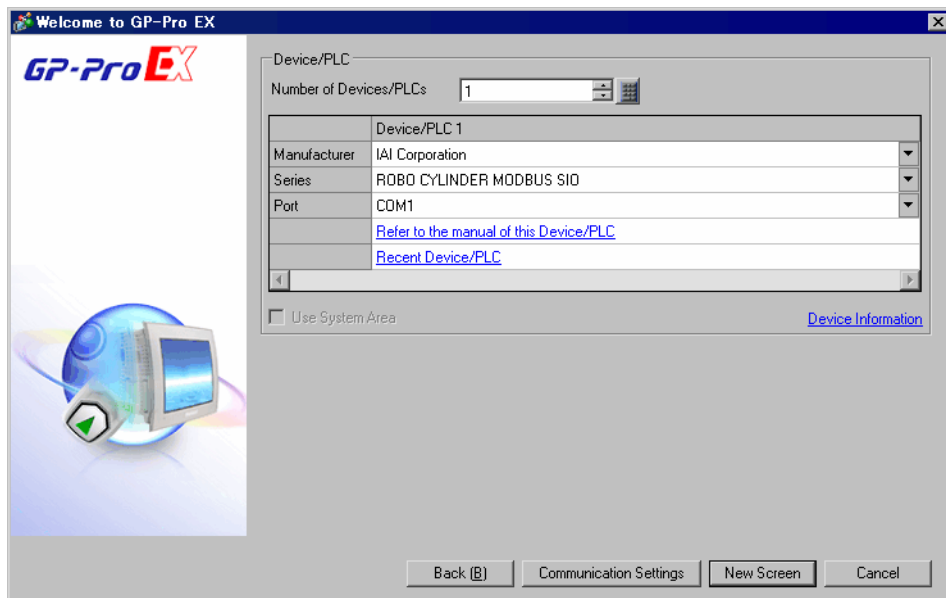

Setup Items	Setup Description
Number of Devices/PLCs	Enter an integer from 1 to 4 to define the number of Devices/PLCs to connect to the display.
Manufacturer	Select the manufacturer of the External Device to connect. Select "IAI Corporation".
Series	Select the External Device model (series) and the connection method. Select "ROBO CYLINDER MODBUS SIO". In System configuration, make sure the External Device you are connecting is supported by "ROBO CYLINDER MODBUS SIO". ☞ "1 System Configuration" (page 3)
Port	Select the Display port to be connected to the External Device.
Use System Area	Check this option to synchronize the system data area of the Display and the device (memory) of the External Device. When synchronized, you can use the External Device's ladder program to switch the display or display the window on the Display. Cf. GP-Pro EX Reference Manual "LS Area (Direct Access Method Area)" This feature can also be set in GP-Pro EX or in the Display's offline mode. Cf. GP-Pro EX Reference Manual "System Settings [Display Unit] - [System Area] Settings Guide" Cf. Maintenance/Troubleshooting Guide "Main Unit - System Area Settings"

3 Example of Communication Setting

Examples of communication settings of the Display and the External Device, recommended by Pro-face, are shown.

3.1 Setting Example 1

■ Setting of GP-Pro EX

◆ Communication Settings

To display the setup screen, from the [Project] menu, point to [System Settings] and select [Device/PLC].

Device/PLC 1

Summary [Change Device/PLC](#)

Manufacturer Series Port

Text Data Mode [Change](#)

Communication Settings

SIO Type ☒ RS232C ☐ RS422/485(2wire) ☐ RS422/485(4wire)

Speed

Data Length ☐ 7 ☒ 8

Parity ☒ NONE ☐ EVEN ☐ ODD

Stop Bit ☒ 1 ☐ 2

Flow Control ☒ NONE ☐ ER(DTR/CTS) ☐ XON/XOFF

Timeout (sec)

Retry

Wait To Send (ms)

RI / VCC ☒ RI ☐ VCC

In the case of RS232C, you can select the 9th pin to RI (Input) or VCC (5V Power Supply). If you use the Digital's RS232C Isolation Unit, please select it to VCC.

[Default](#)

Device-Specific Settings

Allowable Number of Devices/PLCs [Add Device](#)

No.	Device Name	Settings
1	PLC1	Axis No.=0

[Add Indirect Device](#)

◆ Device Setting

To display the [Individual Device Settings] dialog box, from [Device-Specific Settings] in the [Device/PLC] window, select the external device and click [Settings] .

To connect multiple External Devices, from [Device-Specific Settings] in the [Device/PLC] window, click [Add Device] to add another External Device.

Individual Device Settings

PLC1

Axis No.

Please input 62 for Axis No. when the node is Modbus Gateway mode of ROBONET. (This process sets "adrs" to "63".)

[Default](#)

[OK \(O\)](#) [Cancel](#)

■ Setting of External Device

Communication setting of External Device using MODE selector switch, Address switch and setting tool (PC Interface Software for RC) of External Device.

Please refer to the manual of the External Device for more details.

◆ Procedure

- 1 Set the MODE selector switch of External Device as follows.

MODE selector switch	Setting Value
Selector switch	MANU

- 2 Set the Address switch of External Device as follows.

Address switch	Setting Value
ADRS	0

- 3 Start up the setting tool.
- 4 Select [Teach mode1 (Safety speed effective/PIO start prohibition)] of a window to select manual operation mode.
- 5 Expand the axis number to be set from the tree view and click [Parameter].
- 6 Set [SIO Baudrate[bps]] of External Device as follows.

Setup Item	Setting Value
SIO Baudrate[bps]	38400

- 7 Select [Send to Controller] from the [Parameter] menu and send the set contents to the controller.

3.2 Setting Example 2

■ Setting of GP-Pro EX

◆ Communication Settings

To display the setup screen, from the [Project] menu, point to [System Settings] and select [Device/PLC].

The screenshot shows the 'Device/PLC 1' configuration window. The 'Summary' tab is active, displaying the following information:

- Manufacturer:** IAI Corporation
- Series:** ROBO CYLINDER MODBUS SIO
- Port:** COM1
- Text Data Mode:** 1

The 'Communication Settings' section includes the following options:

- SIO Type:** ☒ RS232C, ☒ RS422/485(2wire), ☐ RS422/485(4wire)
- Speed:** 38400
- Data Length:** ☐ 7, ☒ 8
- Parity:** ☒ NONE, ☐ EVEN, ☐ ODD
- Stop Bit:** ☒ 1, ☐ 2
- Flow Control:** ☒ NONE, ☐ ER(DTR/CTS), ☐ XON/XOFF
- Timeout:** 3 (sec)
- Retry:** 2
- Wait To Send:** 2 (ms)

Below these settings, there is a section for 'RI / VCC' with radio buttons for ☒ RI and ☐ VCC. A note states: 'In the case of RS232C, you can select the 9th pin to RI (Input) or VCC (5V Power Supply). If you use the Digital's RS232C Isolation Unit, please select it to VCC.'

The 'Device-Specific Settings' section shows 'Allowable Number of Devices/PLCs' as 16. Below this is a table with one entry:

No.	Device Name	Settings
1	PLC1	Axis No.=0

Buttons for 'Change Device/PLC', 'Default', 'Add Device', and 'Add Indirect Device' are also visible.

◆ Device Setting

To display the [Individual Device Settings] dialog box, from [Device-Specific Settings] in the [Device/PLC] window, select the external device and click [Settings] .

To connect multiple External Devices, from [Device-Specific Settings] in the [Device/PLC] window, click [Add Device] to add another External Device.

The 'Individual Device Settings' dialog box is shown for 'PLC1'. It contains the following elements:

- Axis No.:** A text box with the value '0'.
- Instructions:** 'Please input 62 for Axis No. when the node is Modbus Gateway mode of ROBONET. (This process sets "adrs" to "63".)'
- Buttons:** 'Default', 'OK (O)', and 'Cancel'.

■ Setting of External Device

Communication setting of External Device using MODE selector switch, Address switch and setting tool (PC Interface Software for RC) of External Device.

Please refer to the manual of the External Device for more details.

◆ Procedure

- 1 Set the MODE selector switch of External Device as follows.

MODE selector switch	Setting Value
Selector switch	MANU

- 2 Set the Address switch of External Device as follows.

Address switch	Setting Value
ADRS	0

- 3 Start up the setting tool.
- 4 Select [Teach mode1 (Safety speed effective/PIO start prohibition)] of a window to select manual operation mode.
- 5 Expand the axis number to be set from the tree view and click [Parameter].
- 6 Set [SIO Baudrate[bps]] of External Device as follows.

Setup Item	Setting Value
SIO Baudrate[bps]	38400

- 7 Select [Send to Controller] from the [Parameter] menu and send the set contents to the controller.

3.3 Setting Example 3

■ Setting of GP-Pro EX

◆ Communication Settings

To display the setup screen, from the [Project] menu, point to [System Settings] and select [Device/PLC].

Device/PLC 1

Summary [Change Device/PLC](#)

Manufacturer Series Port

Text Data Mode [Change](#)

Communication Settings

SIO Type ☒ RS232C ☐ RS422/485(2wire) ☐ RS422/485(4wire)

Speed

Data Length ☐ 7 ☒ 8

Parity ☒ NONE ☐ EVEN ☐ ODD

Stop Bit ☒ 1 ☐ 2

Flow Control ☒ NONE ☐ ER(DTR/CTS) ☐ XON/XOFF

Timeout (sec)

Retry

Wait To Send (ms)

RI / VCC ☒ RI ☐ VCC

In the case of RS232C, you can select the 9th pin to RI (Input) or VCC (5V Power Supply). If you use the Digital's RS232C Isolation Unit, please select it to VCC.

[Default](#)

Device-Specific Settings

Allowable Number of Devices/PLCs [Add Device](#)

No.	Device Name	Settings
1	PLC1	Axis No.=0

[Add Indirect Device](#)

◆ Device Setting

To display the [Individual Device Settings] dialog box, from [Device-Specific Settings] in the [Device/PLC] window, select the external device and click [Settings] .

To connect multiple External Devices, from [Device-Specific Settings] in the [Device/PLC] window, click [Add Device] to add another External Device.

Individual Device Settings

PLC1

Axis No.

Please input 62 for Axis No. when the node is Modbus Gateway mode of ROBONET. (This process sets "adrs" to "63".)

[Default](#)

[OK \(O\)](#) [Cancel](#)

■ Setting of External Device

Communication setting of External Device using setting tool (PC Interface Software for RC) of External Device.
Please refer to the manual of the External Device for more details.

◆ Procedure

- 1 Start up the setting tool.
- 2 Select [Teach mode1 (Safety speed effective/PIO start prohibition)] of a window to select manual operation mode.
- 3 Select [Controller Setup]-[Assign Axis Number] from [Setting] menu.
- 4 Set axis number of [Assign Axis Number] dialog box as follows, and click [OK].

Setup Item	Setting Value
New Assign Axis Number	0

- 5 Expand the axis number to be set from the tree view and click [Parameter].
- 6 Set [SIO Baudrate[bps]] of External Device as follows.

Setup Item	Setting Value
SIO Baudrate[bps]	38400

- 7 Select [Send to Controller] from the [Parameter] menu and send the set contents to the controller.

3.4 Setting Example 4

■ Setting of GP-Pro EX

◆ Communication Settings

To display the setup screen, from the [Project] menu, point to [System Settings] and select [Device/PLC].

The screenshot shows the 'Device/PLC 1' configuration window. It has a 'Summary' tab with fields for Manufacturer (IAI Corporation), Series (ROBO CYLINDER MODBUS SIO), Port (COM1), and Text Data Mode (1). A 'Change Device/PLC' link is in the top right. The 'Communication Settings' section includes: SIO Type (radio buttons for RS232C, RS422/485(2wire), RS422/485(4wire); RS422/485(2wire) is selected), Speed (38400), Data Length (radio buttons for 7, 8; 8 is selected), Parity (radio buttons for NONE, EVEN, ODD; NONE is selected), Stop Bit (radio buttons for 1, 2; 1 is selected), Flow Control (radio buttons for NONE, ER(DTR/CTS), XON/XOFF; NONE is selected), Timeout (3 sec), Retry (2), and Wait To Send (2 ms). Below this is a section for RI/VCC selection with a note: 'In the case of RS232C, you can select the 9th pin to RI (Input) or VCC (5V Power Supply). If you use the Digital's RS232C Isolation Unit, please select it to VCC.' There is a 'Default' button. The 'Device-Specific Settings' section shows 'Allowable Number of Devices/PLCs' as 16, with an 'Add Device' link. At the bottom, there is a table with columns 'No.', 'Device Name', and 'Settings'. The first row shows '1', 'PLC1', and 'Axis No.=0'. An 'Add Indirect Device' button with a plus icon is on the right.

◆ Device Setting

To display the [Individual Device Settings] dialog box, from [Device-Specific Settings] in the [Device/PLC] window, select the external device and click [Settings] .

To connect multiple External Devices, from [Device-Specific Settings] in the [Device/PLC] window, click [Add Device] to add another External Device.

The screenshot shows the 'Individual Device Settings' dialog box for 'PLC1'. It contains a field for 'Axis No.' with the value '0'. Below the field is a note: 'Please input 62 for Axis No. when the node is Modbus Gateway mode of ROBONET. (This process sets "adrs" to "63".)'. There are 'Default', 'OK (O)', and 'Cancel' buttons at the bottom.

■ Setting of External Device

Communication setting of External Device using setting tool (PC Interface Software for RC) of External Device.
Please refer to the manual of the External Device for more details.

◆ Procedure

- 1 Start up the setting tool.
- 2 Select [Teach mode1 (Safety speed effective/PIO start prohibition)] of a window to select manual operation mode.
- 3 Select [Controller Setup]-[Assign Axis Number] from [Setting] menu.
- 4 Set axis number of [Assign Axis Number] dialog box as follows, and click [OK].

Setup Item	Setting Value
New Assign Axis Number	0

- 5 Expand the axis number to be set from the tree view and click [Parameter].
- 6 Set [SIO Baudrate[bps]] of External Device as follows.

Setup Item	Setting Value
SIO Baudrate[bps]	38400

- 7 Select [Send to Controller] from the [Parameter] menu and send the set contents to the controller.

3.5 Setting Example 5

■ Setting of GP-Pro EX

◆ Communication Settings

To display the setup screen, from the [Project] menu, point to [System Settings] and select [Device/PLC].

Device/PLC 1

Summary [Change Device/PLC](#)

Manufacturer Series Port

Text Data Mode [Change](#)

Communication Settings

SIO Type ☐ RS232C ☒ RS422/485(2wire) ☐ RS422/485(4wire)

Speed

Data Length ☐ 7 ☒ 8

Parity ☒ NONE ☐ EVEN ☐ ODD

Stop Bit ☒ 1 ☐ 2

Flow Control ☒ NONE ☐ ER(DTR/CTS) ☐ XON/XOFF

Timeout (sec)

Retry

Wait To Send (ms)

RI / VCC ☒ RI ☐ VCC

In the case of RS232C, you can select the 9th pin to RI (Input) or VCC (5V Power Supply). If you use the Digital's RS232C Isolation Unit, please select it to VCC.

[Default](#)

Device-Specific Settings

Allowable Number of Devices/PLCs [Add Device](#)

No.	Device Name	Settings
1	PLC1	Axis No.=62

[Add Indirect Device](#)

◆ Device Setting

To display the [Individual Device Settings] dialog box, from [Device-Specific Settings] in the [Device/PLC] window, select the external device and click [Settings] .

To connect multiple External Devices, from [Device-Specific Settings] in the [Device/PLC] window, click [Add Device] to add another External Device.

Individual Device Settings

PLC1

Axis No.

Please input 62 for Axis No. when the node is Modbus Gateway mode of ROBONET. (This process sets "adrs" to "63".)

[Default](#)

[OK \(O\)](#) [Cancel](#)

■ Setting of External Device

Communication setting of External Device using MODE switch, Axis address setting switch, User setting switches and setting tool (gateway parameter selection tool) of External Device.

Please refer to the manual of the External Device for more details.

◆ Procedure

- 1 Set the MODE switch of GateWayR unit as follows.

MODE switch	Setting Value
MODE	MANU

- 2 Set the Axis address setting switch of controller unit as follows.

Axis address setting switch	Setting Value
ADRS	0

- 3 Set the User setting switches of GateWayR unit as follows.

User setting switches	Setting Value
SW1	OFF
SW2	OFF
SW3	Always OFF
SW4	Always OFF

- 4 Start up the setting tool.
- 5 Click [Read].
- 6 Click [Yes] of [Confirmation] dialog box.
- 7 Click [OK] of [Information] dialog box.
- 8 Set the setup items as follows, and click [Write].

Setup Items	Setting Value
Baud Rate	38400
Axis Type	1

- 9 Click [Yes] of [Confirmation] dialog box, and restart.
- 10 Set the MODE switch of GateWayR unit as follows.

MODE Switch	Setting Value
MODE	AUTO

3.6 Setting Example 6

■ Setting of GP-Pro EX

◆ Communication Settings

To display the setup screen, from the [Project] menu, point to [System Settings] and select [Device/PLC].

Device/PLC 1

Summary [Change Device/PLC](#)

Manufacturer Series Port

Text Data Mode [Change](#)

Communication Settings

SIO Type ☒ RS232C ☐ RS422/485(2wire) ☐ RS422/485(4wire)

Speed

Data Length ☐ 7 ☒ 8

Parity ☒ NONE ☐ EVEN ☐ ODD

Stop Bit ☒ 1 ☐ 2

Flow Control ☒ NONE ☐ ER(DTR/CTS) ☐ XON/XOFF

Timeout (sec)

Retry

Wait To Send (ms)

RI / VCC ☒ RI ☐ VCC

In the case of RS232C, you can select the 9th pin to RI (Input) or VCC (5V Power Supply). If you use the Digital's RS232C Isolation Unit, please select it to VCC.

[Default](#)

Device-Specific Settings

Allowable Number of Devices/PLCs [Add Device](#)

No.	Device Name	Settings
1	PLC1	Axis No.=62

[Add Indirect Device](#)

◆ Device Setting

To display the [Individual Device Settings] dialog box, from [Device-Specific Settings] in the [Device/PLC] window, select the external device and click [Settings] .

To connect multiple External Devices, from [Device-Specific Settings] in the [Device/PLC] window, click [Add Device] to add another External Device.

Individual Device Settings

PLC1

Axis No.

Please input 62 for Axis No. when the node is Modbus Gateway mode of ROBONET. (This process sets "adis" to "63".)

[Default](#)

[OK](#) [Cancel](#)

■ Setting of External Device

Communication setting of External Device using MODE switch, Axis address setting switch, User setting switches and setting tool (gateway parameter selection tool) of External Device.

Please refer to the manual of the External Device for more details.

◆ Procedure

- 1 Set the MODE switch of GateWayR unit as follows.

MODE switch	Setting Value
MODE	MANU

- 2 Set the Axis address setting switch of controller unit as follows.

Axis address setting switch	Setting Value
ADRS	0

- 3 Set the User setting switches of GateWayR unit as follows.

User setting switches	Setting Value
SW1	OFF
SW2	OFF
SW3	Always OFF
SW4	Always OFF

- 4 Start up the setting tool.
- 5 Click [Read].
- 6 Click [Yes] of [Confirmation] dialog box.
- 7 Click [OK] of [Information] dialog box.
- 8 Set the setup items as follows, and click [Write].

Setup Items	Setting Value
Baud Rate	38400
Axis Type	1

- 9 Click [Yes] of [Confirmation] dialog box, and restart.
- 10 Set the MODE switch of GateWayR unit as follows.

MODE Switch	Setting Value
MODE	AUTO

3.7 Setting Example 7

■ Setting of GP-Pro EX

◆ Communication Settings

To display the setup screen, from the [Project] menu, point to [System Settings] and select [Device/PLC].

The screenshot shows the 'Device/PLC 1' configuration window. It has a 'Summary' tab and a 'Communication Settings' section. In the 'Summary' section, 'Manufacturer' is 'IAI Corporation', 'Series' is 'ROBO CYLINDER MODBUS SIO', and 'Port' is 'COM1'. The 'Text Data Mode' is set to '1'. The 'Communication Settings' section includes: 'SIO Type' with radio buttons for RS232C (selected), RS422/485(2wire), and RS422/485(4wire); 'Speed' set to 38400; 'Data Length' with radio buttons for 7 and 8 (8 is selected); 'Parity' with radio buttons for NONE (selected), EVEN, and ODD; 'Stop Bit' with radio buttons for 1 (selected) and 2; 'Flow Control' with radio buttons for NONE (selected), ER(DTR/CTS), and XON/XOFF; 'Timeout' set to 3 seconds; 'Retry' set to 2; and 'Wait To Send' set to 2 ms. Below these are radio buttons for 'RI / VCC' with 'RI' selected. A note states: 'In the case of RS232C, you can select the 9th pin to RI (Input) or VCC (5V Power Supply). If you use the Digital's RS232C Isolation Unit, please select it to VCC.' There is a 'Default' button. The 'Device-Specific Settings' section shows 'Allowable Number of Devices/PLCs' as 16, with an 'Add Device' button. A table lists the device: No. 1, Device Name 'PLC1', and Settings 'Axis No.=0'. An 'Add Indirect Device' button is also present.

◆ Device Setting

To display the [Individual Device Settings] dialog box, from [Device-Specific Settings] in the [Device/PLC] window, select the external device and click [Settings] .

To connect multiple External Devices, from [Device-Specific Settings] in the [Device/PLC] window, click [Add Device] to add another External Device.

The screenshot shows the 'Individual Device Settings' dialog box for 'PLC1'. It contains a text box for 'Axis No.' with the value '0'. A note below states: 'Please input 62 for Axis No. when the node is Modbus Gateway mode of ROBONET. (This process sets "adrs" to "63".)' There are 'Default', 'OK (O)', and 'Cancel' buttons.

■ Setting of External Device

Use the MODE selector switch of the RCON-GW and the Parameter Configuration Tool of the IAI GateWay Unit Software for communication settings. Please refer to the manual of the External Device for more details.

◆ Procedure

- 1 Set the MODE selector switch of the RCON-GW to "MANU".
- 2 Start the Parameter Configuration Tool.
- 3 Select "RCON" in SelectGwType.
- 4 Click [Port Config] to set the COM port to be used for communication settings.
- 5 Click [OK].
- 6 Click [Read].
- 7 Click [Detail setting].
- 8 Click [Manual] of the Axis No.assgnmt / unit config setting.
To change the axis number assignment and edit the driver unit, click [Change].
- 9 Set the axis number assignment and click [OK].
- 10 Click [Write].

4 Setup Items

Set communication settings of the Display with GP-Pro EX or in offline mode of the Display.

The setting of each parameter must be identical to that of External Device.

☞ "3 Example of Communication Setting" (page 9)

4.1 Setup Items in GP-Pro EX

■ Communication Settings

To display the setup screen, from the [Project] menu, point to [System Settings] and select [Device/PLC].

Device/PLC 1

Summary

Manufacturer: IAI Corporation Series: ROBO CYLINDER MODBUS SIO Port: COM1

Text Data Mode: 1

Communication Settings

SIO Type: ☒ RS232C ☐ RS422/485(2wire) ☐ RS422/485(4wire)

Speed: 38400

Data Length: ☐ 7 ☒ 8

Parity: ☒ NONE ☐ EVEN ☐ ODD

Stop Bit: ☒ 1 ☐ 2

Flow Control: ☒ NONE ☐ ER(DTR/CTS) ☐ XON/XOFF

Timeout: 3 (sec)

Retry: 2

Wait To Send: 2 (ms)

RI / VCC: ☒ RI ☐ VCC

In the case of RS232C, you can select the 9th pin to RI (Input) or VCC (5V Power Supply). If you use the Digital's RS232C Isolation Unit, please select it to VCC.

Default

Device-Specific Settings

Allowable Number of Devices/PLCs: 16

No. Device Name Settings

1 PLC1 Axis No. 0

Add Indirect Device

Setup Items	Setup Description
SIO Type	Select the SIO type to communicate with the External Device.
Speed	Select speed between the External Device and the Display.
Data Length	Display data length.
Parity	Select how to check parity.
Stop Bit	Select stop bit length.
Flow Control	Select the communication control method to prevent overflow of transmission and reception data.
Timeout	Use an integer from 1 to 127 to enter the time (s) for which the Display waits for the response from the External Device.
Retry	In case of no response from the External Device, use an integer from 0 to 255 to enter how many times the Display retransmits the command.
Wait To Send	Use an integer from 0 to 255 to enter standby time (ms) for the Display from receiving packets to transmitting next commands.

Continues to the next page.

Setup Items	Setup Description
RI/VCC	You can switch RI/VCC of the 9th pin when you select RS232C for SIO type. It is necessary to change RI/5V by changeover switch of IPC when connect with IPC. Please refer to the manual of the IPC for more detail.

NOTE


- Refer to the GP-Pro EX Reference Manual for Indirect Device.

Cf. GP-Pro EX Reference Manual "Changing the Device/PLC at Runtime (Indirect Device)"

■ Device Setting

To display the [Individual Device Settings] dialog box, from [Device-Specific Settings] in the [Device/PLC] window, select the external device and click [Settings] .

To connect multiple External Devices, from [Device-Specific Settings] in the [Device/PLC] window, click [Add Device] to add another External Device.

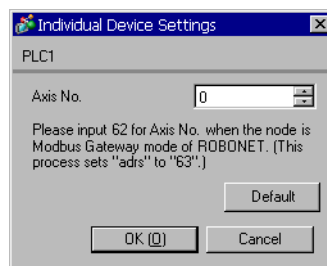

Setup Items	Setup Description
Axis No.	When the External Device is other than the ROBONET Modbus gateway mode, input any number from 0 to 15 in the axis number. When the External Device is the ROBONET Modbus gateway, input 62 in the axis number.

4.2 Setup Items in Offline Mode

NOTE

- Refer to the Maintenance/Troubleshooting guide for information on how to enter offline mode or about the operation.

Cf. Maintenance/Troubleshooting Guide "Offline Mode"

- The number of the setup items to be displayed for 1 page in the offline mode depends on the Display in use. Please refer to the Reference manual for details.

■ Communication Settings

To display the setting screen, touch [Device/PLC Settings] from [Peripheral Settings] in offline mode. Touch the External Device you want to set from the displayed list.

Comm.	Device	Option		
ROBO CYLINDER MODBUS SIO [COM1] Page 1/1				
SIO Type	RS232C			
Speed	38400			
Data Length	8			
Parity	☒ NONE ☐ EVEN ☐ ODD			
Stop Bit	☒ 1 ☐ 2			
Flow Control	NONE			
Timeout(s)	3			
Retry	2			
Wait To Send(ms)	2			
Exit		Back		2007/12/19 21:46:22

Setup Items	Setup Description
SIO Type	Select the SIO type to communicate with the External Device. IMPORTANT To make the communication settings correctly, confirm the serial interface specifications of Display unit for [SIO Type]. We cannot guarantee the operation if a communication type that the serial interface does not support is specified. For details concerning the serial interface specifications, refer to the manual for Display unit.
Speed	Select speed between the External Device and the Display.
Data Length	Display data length.
Parity	Select how to check parity.
Stop Bit	Select stop bit length.
Flow Control	Select the communication control method to prevent overflow of transmission and reception data.

Continues to the next page.

Setup Items	Setup Description
Timeout (s)	Use an integer from 1 to 127 to enter the time (s) for which the Display waits for the response from the External Device.
Retry	In case of no response from the External Device, use an integer from 0 to 255 to enter how many times the Display retransmits the command.
Wait To Send (ms)	Use an integer from 0 to 255 to enter standby time (ms) for the Display from receiving packets to transmitting next commands.

■ Device Setting

To display the setting screen, touch [Device/PLC Settings] from [Peripheral Equipment Settings]. Touch the External Device you want to set from the displayed list, and touch [Device Settings].

Comm.	Device	Option		
ROBO CYLINDER MODBUS SIO		[COM1]	Page 1/1	
Device/PLC Name PLC1				
Axis No. 0				
Please input 62 for Axis No. when the node is Modbus Gateway mode of ROBONET. (This process sets Adrs to 63.)				
Exit		Back		2007/12/19 21:46:26

Setup Items	Setup Description
Device/PLC name	Select the External Device to set. Device name is a title of the External Device set with GP-Pro EX. (Initial value [PLC1])
Axis No.	When the External Device is other than the ROBONET Modbus gateway mode, input any number from 0 to 15 in the axis number. When the External Device is the ROBONET Modbus gateway, input 62 in the axis number.

■ Option

To display the setting screen, touch [Device/PLC Settings] from [Peripheral Equipment Settings]. Touch the External Device you want to set from the displayed list, and touch [Option].

Comm.	Device	Option		
ROBO CYLINDER MODBUS SIO		[COM1]	Page 1/1	
RI / VCC ☒ RI ☐ VCC In the case of RS232C, you can select the 9th pin to RI(Input) or VCC(5V Power Supply). If you use the Digital's RS232C Isolation Unit, please select it to VCC.				
	Exit		Back	2007/12/19 21:46:33

Setup Items	Setup Description
RI/VCC	Switches RI/VCC of the 9th pin. It is necessary to change RI/5V by changeover switch of IPC when connect with IPC. Please refer to the manual of the IPC for more detail.

NOTE

- GP-4100 series, GP-4*01TM, GP-Rear Module, LT-4*01TM and LT-Rear Module do not have the [Option] setting in the offline mode.

5 Cable Diagram

The following cable diagrams may be different from cable diagrams recommended by External Device Manufacturer.

Please be assured there is no operational problem in applying the cable diagram shown in this manual.

- The FG pin of the External Device body must be grounded according to your country's applicable standard. Refer to your External Device manual for details.
- SG and FG are connected inside the Display. When connecting the External Device to SG, design your system to avoid short-circuit loops.
- Connect an isolation unit if the communication is not stable due to noise or other factors.
- Make the External Device and 0V of SIO converter common.

5.1 Cable Diagram 1

Display (Connection Port)	Cable		Notes
GP3000 (COM1) GP4000 ^{*1} (COM1) SP5000 ^{*2} (COM1/2) SP-5B00 (COM1) ST3000 (COM1) ST6000 (COM1) STM6000 (COM1) STC6000 (COM1) ET6000 (COM1) LT3000 (COM1) IPC ^{*3} PC/AT	1A	RS232C conversion unit by IAI Corporation RCB-CV-MW + Communication cable by IAI Corporation CB-RCA-SIO050	
GP-4105 (COM1) GP-4115T (COM1) GP-4115T3 (COM1)	1B	User-created cable + RS232C conversion unit by IAI Corporation RCB-CV-MW + Communication cable by IAI Corporation CB-RCA-SIO050	

*1 All GP4000 models except GP-4100 series and GP-4203T

*2 Except SP-5B00


*3 Only the COM port which can communicate by RS-232C can be used.

■ IPC COM Port (page 5)


NOTE

- RS232C conversion unit (RCB-CV-MW) and communication cable (CB-RCA-SIO050) are accessories of PC Interface Software (RCM-101-MW) by IAI Corporation.

1A)

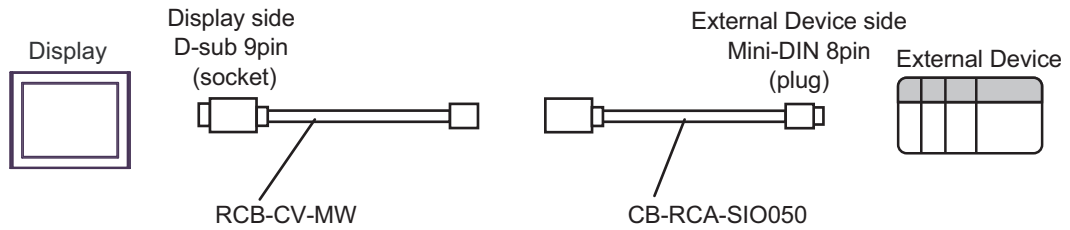

1B)

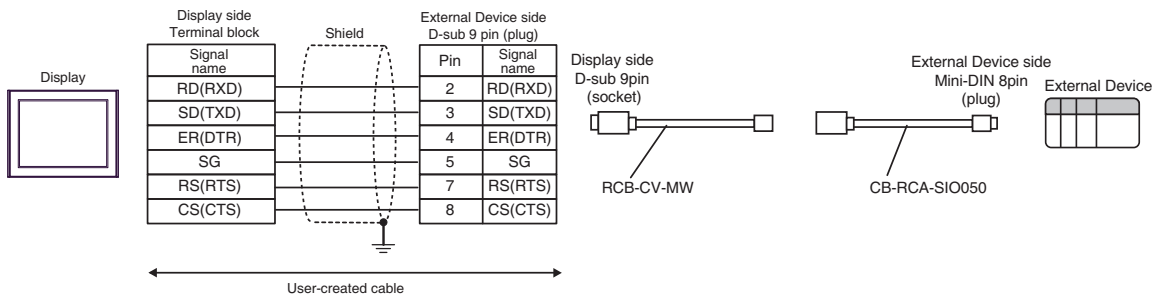

5.2 Cable Diagram 2

Display (Connection Port)	Cable		Notes
GP3000 ^{*1} (COM1) AGP-3302B (COM2) GP-4*01TM (COM1) GP-Rear Module (COM1) ST3000 ^{*2} (COM2) LT3000 (COM1)	2A	COM port conversion adapter by Pro-face CA3-ADPCOM-01 + Terminal block conversion adapter by Pro-face CA3-ADPTRM-01 + User-created cable 1 + Junction by AMP ^{*3} 5-1473574-4 + Controller link cable by IAI Corporation CB-RCB-CTL002	Cable length: 100m or less
	2B	User-created cable 1 + Junction by AMP ^{*3} 5-1473574-4 + Controller link cable by IAI Corporation CB-RCB-CTL002	
GP3000 ^{*4} (COM2)	2C	Online adapter by Pro-face CA4-ADPONL-01 + Terminal block conversion adapter by Pro-face CA3-ADPTRM-01 + User-created cable 1 + Junction by AMP ^{*3} 5-1473574-4 + Controller link cable by IAI Corporation CB-RCB-CTL002	Cable length: 100m or less
	2D	Online adapter by Pro-face CA4-ADPONL-01 + User-created cable 1 + Junction by AMP ^{*3} 5-1473574-4 + Controller link cable by IAI Corporation CB-RCB-CTL002	

Display (Connection Port)	Cable		Notes
IPC*5	2E	COM port conversion adapter by Pro-face CA3-ADPCOM-01 + Terminal block conversion adapter by Pro-face CA3-ADPTRM-01 + User-created cable 1 + Junction by AMP*3 5-1473574-4 + Controller link cable by IAI Corporation CB-RCB-CTL002	Cable length: 100m or less
	2F	User-created cable 1 + Junction by AMP*3 5-1473574-4 + Controller link cable by IAI Corporation CB-RCB-CTL002	
GP-4106 (COM1) GP-4116T (COM1)	2G	User-created cable 1 + Junction by AMP*3 5-1473574-4 + Controller link cable by IAI Corporation CB-RCB-CTL002	Cable length: 100m or less
GP-4107 (COM1) GP-4*03T*6 (COM2) GP-4203T (COM1)	2H	User-created cable 1 + Junction by AMP*3 5-1473574-4 + Controller link cable by IAI Corporation CB-RCB-CTL002	Cable length: 100m or less
GP4000*7 (COM2) GP-4201T (COM1) SP5000*8 (COM1/2) SP-5B00 (COM2) ST6000*9 (COM2) ST-6200 (COM1) STM6000 (COM1) STC6000 (COM1) ET6000*10 (COM2) PS6000 (Basic Box) (COM1/2)	2I	RS-422 Terminal Block Conversion Adapter by Pro-face PFXZCBADTM1*11 + User-created cable 1 + Junction by AMP*3 5-1473574-4 + Controller link cable by IAI Corporation CB-RCB-CTL002	Cable length: 100m or less
	2B	User-created cable 1 + Junction by AMP*3 5-1473574-4 + Controller link cable by IAI Corporation CB-RCB-CTL002	

Display (Connection Port)	Cable		Notes
LT-4*01TM (COM1) LT-Rear Module (COM1)	2J	RJ45 RS-485 Cable (5m) by Pro-face PFXZLMCBJR81 + Junction by AMP*3 5-1473574-4 + Controller link cable by IAI Corporation CB-RCB-CTL002	Cable length: 100m or less
PE-4000B*12 PS5000*12 PS6000 (Optional Interface)*12	2K	User-created cable 1 + Junction by AMP*3 5-1473574-4 + Controller link cable by IAI Corporation CB-RCB-CTL002	Cable length: 100m or less

*1 All GP3000 models except AGP-3302B

*2 Except AST-3211A and AST-3302B

*3 When using more than one junction by AMP, user-created cable 2 is required.

*4 All GP3000 models except GP-3200 series and AGP-3302B

*5 Only the COM port which can communicate by RS-422/485 (2 wire) can be used. (Except PE-4000B, PS5000, and PS6000)

■ IPC COM Port (page 5)

*6 Except GP-4203T

*7 All GP4000 models except GP-4100 series, GP-4*01TM, GP-Rear Module, GP-4201T and GP-4*03T

*8 Except SP-5B00

*9 Except ST-6200

*10 Due to the COM port specifications, flow control is not possible. Omit wiring the control pins on the Display side of the cable diagram.


*11 When using a Terminal Block Conversion Adapter (CA3-ADPTRM-01) instead of the RS-422 Terminal Block Conversion Adapter, refer to Cable Diagram 2A.

*12 Only the COM port which can communicate by RS-422/485 (2 wire) can be used.


■ IPC COM Port (page 5)

2A)

- 1:1 connection

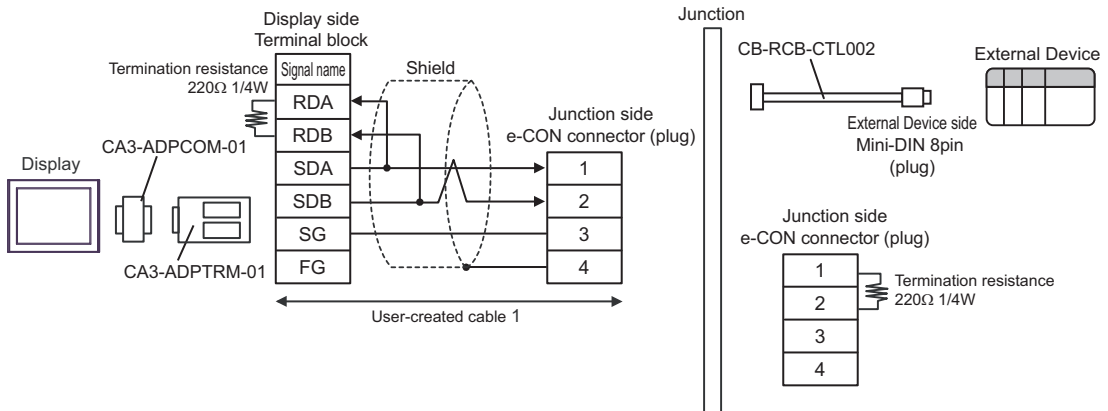


- 1:n connection

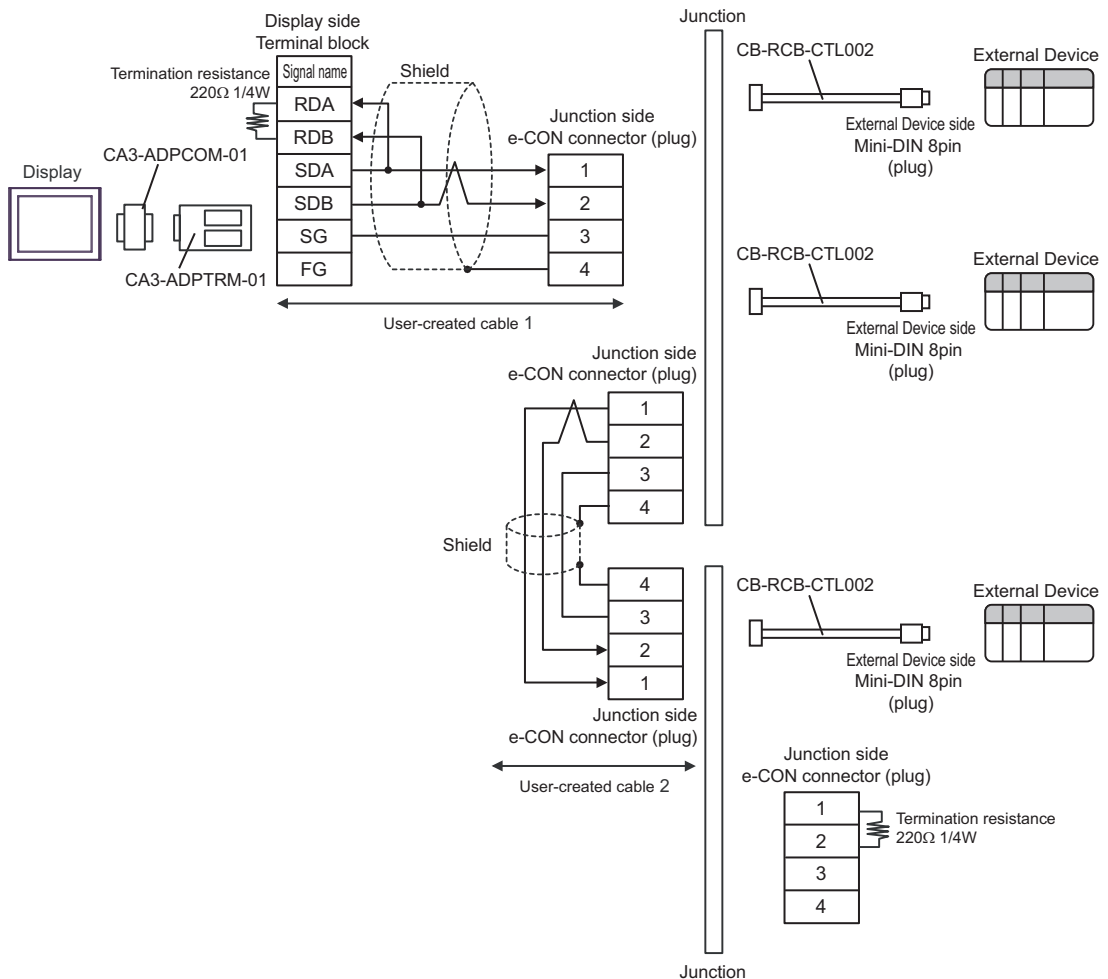**NOTE**


- Cable length: 100m or less

2B)

- 1:1 connection

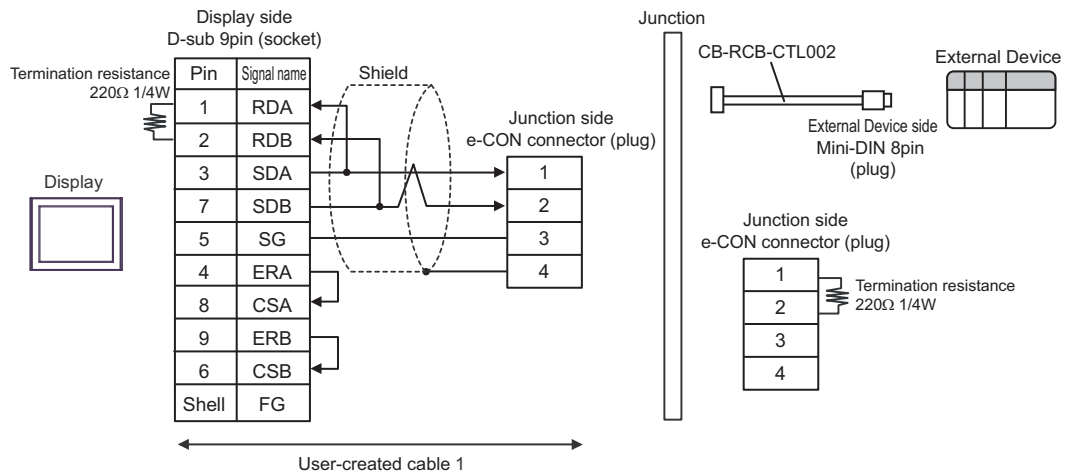


- 1:n connection

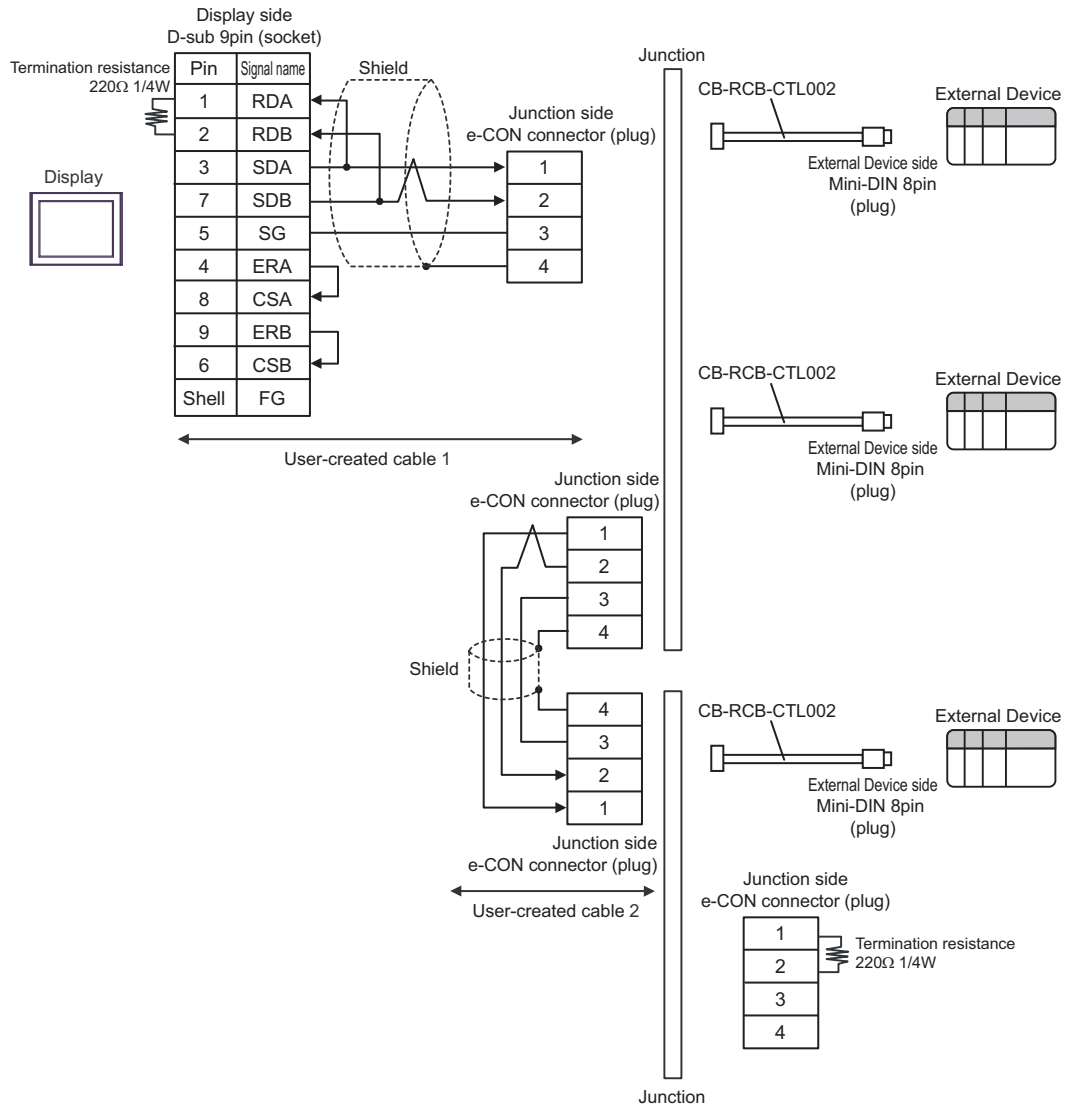**NOTE**


- Cable length: 100m or less

2C)

- 1:1 connection

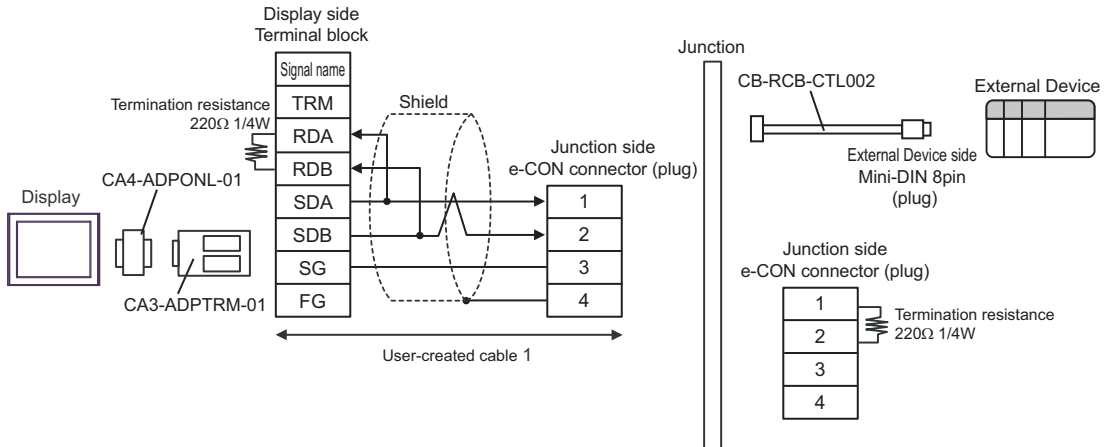

- 1:n connection

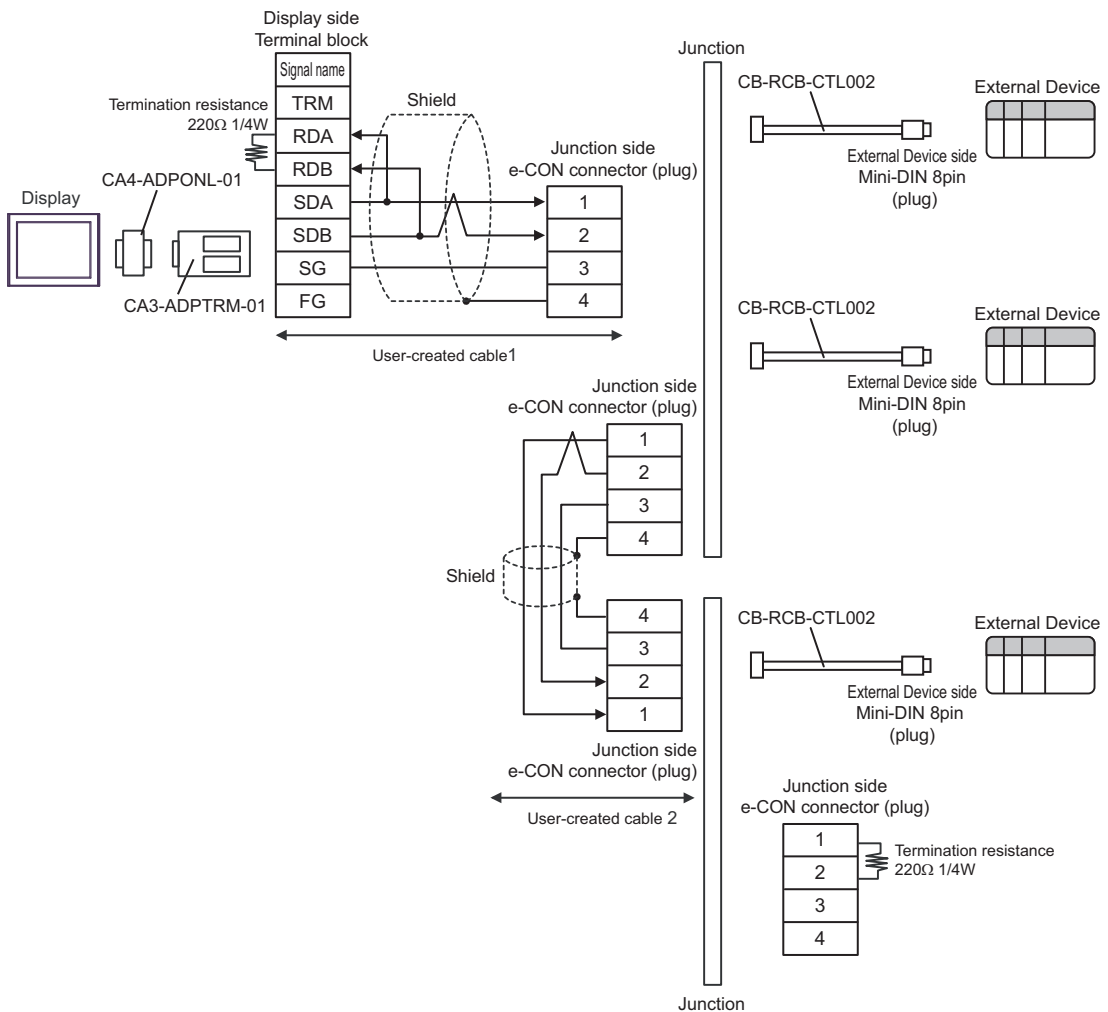


NOTE


- Cable length: 100m or less

2D)

- 1:1 connection

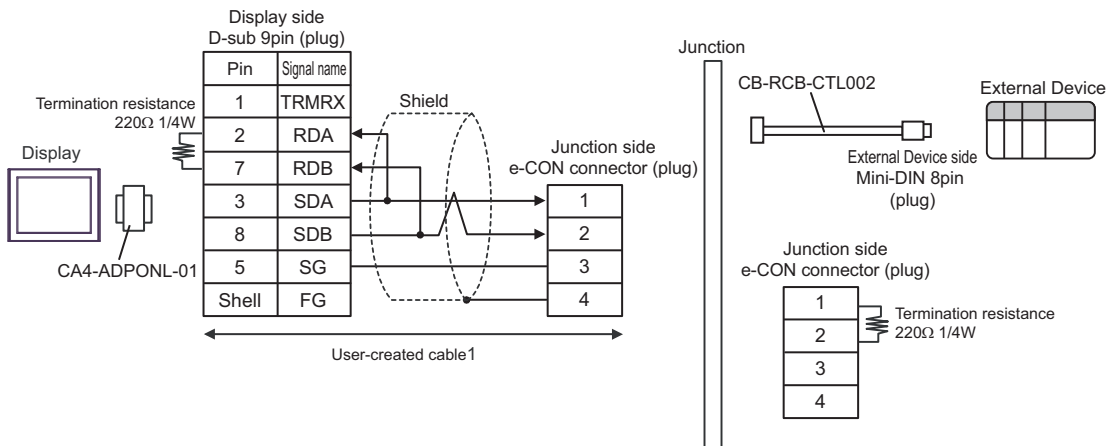


- 1:n connection

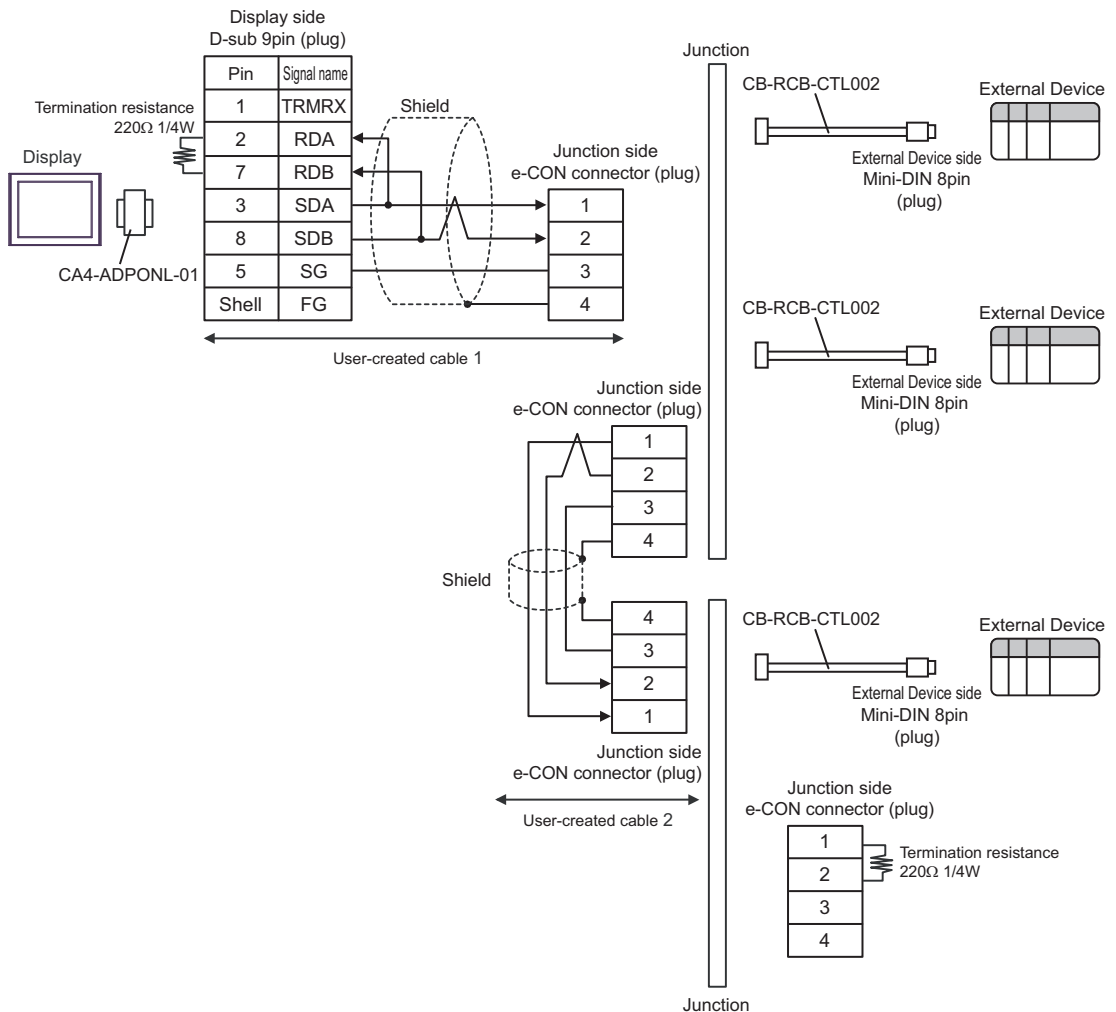**NOTE**


- Cable length: 100m or less

2E)

- 1:1 connection

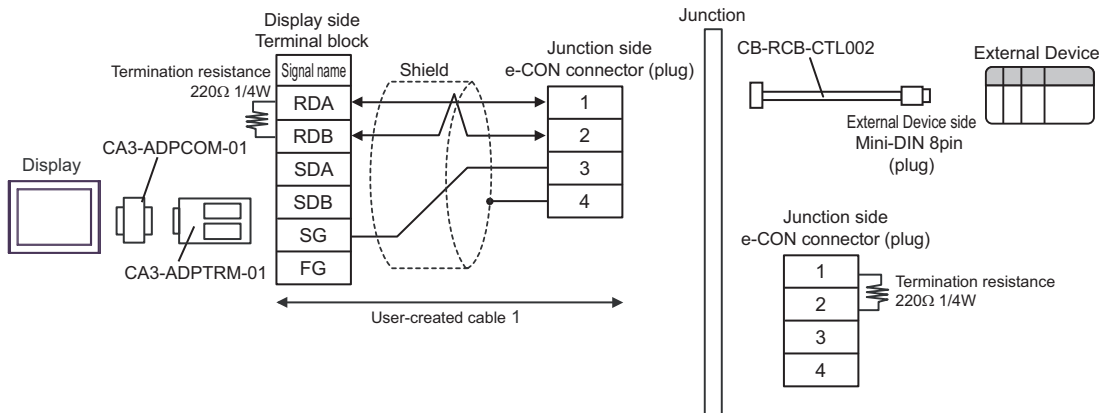


- 1:n connection

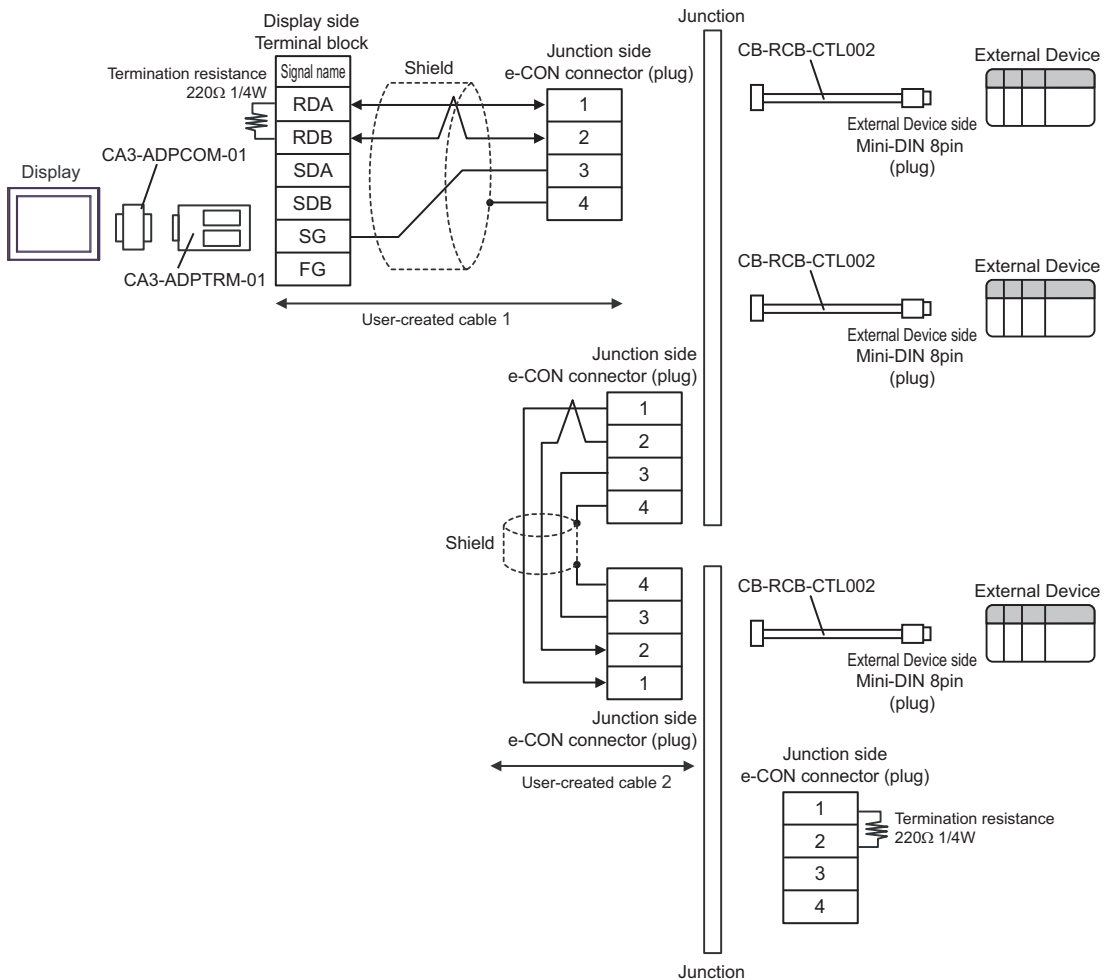**NOTE**


- Cable length: 100m or less

2F)

- 1:1 connection

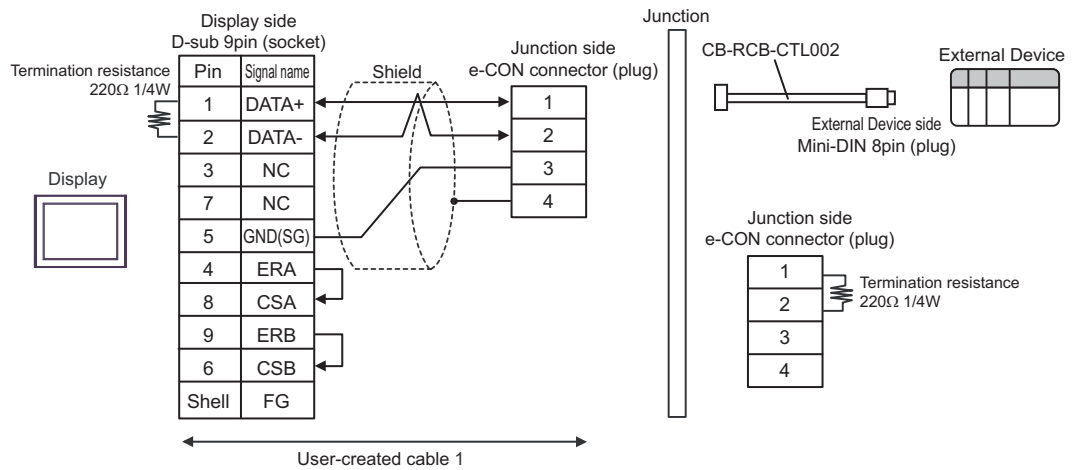


- 1:n connection

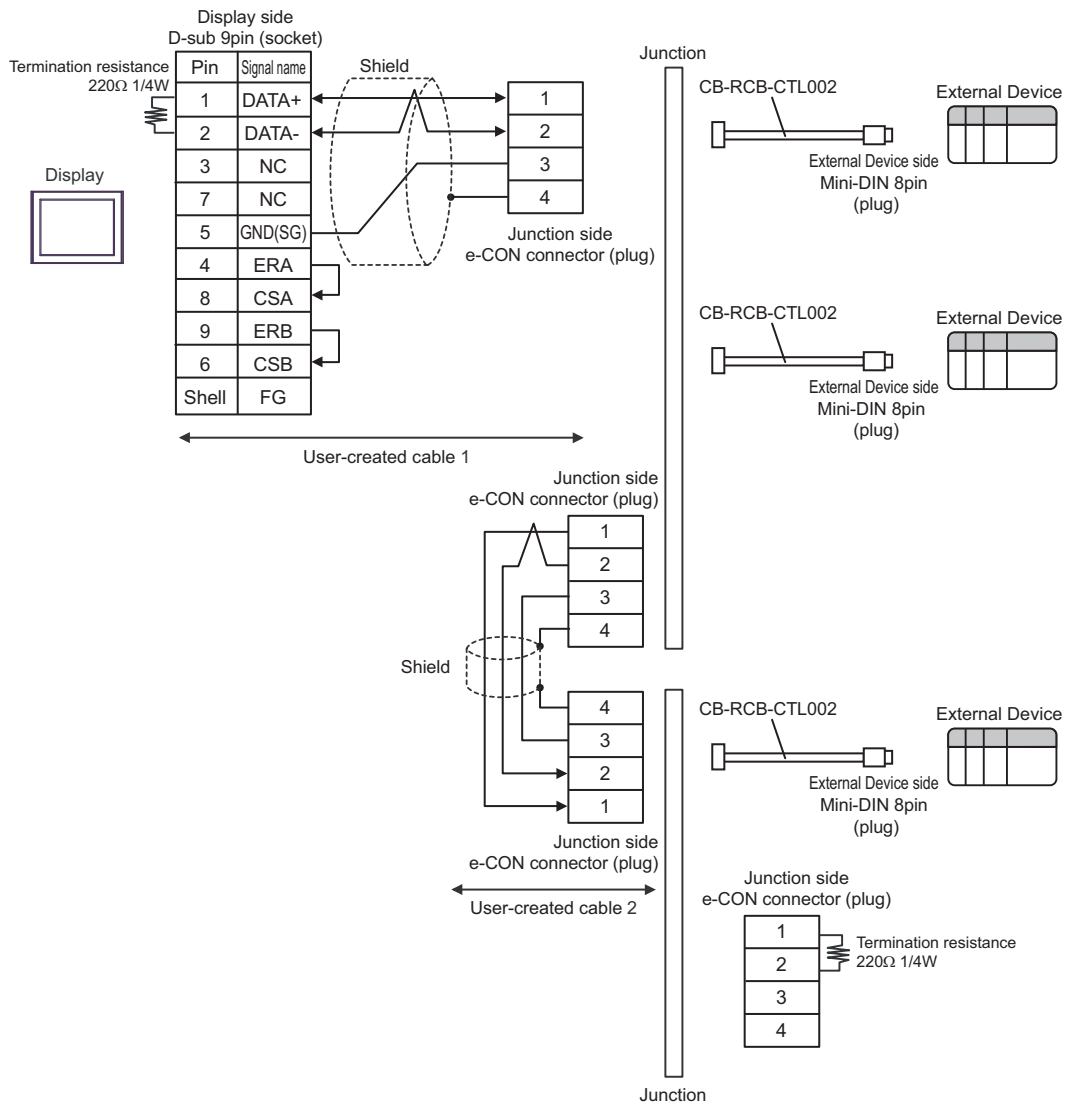**NOTE**


- Cable length: 100m or less

2G)

- 1:1 connection

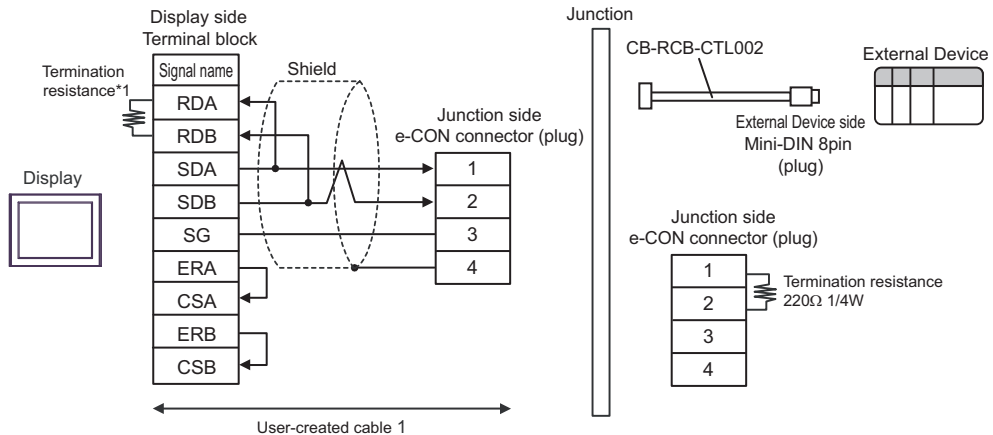

- 1:n connection

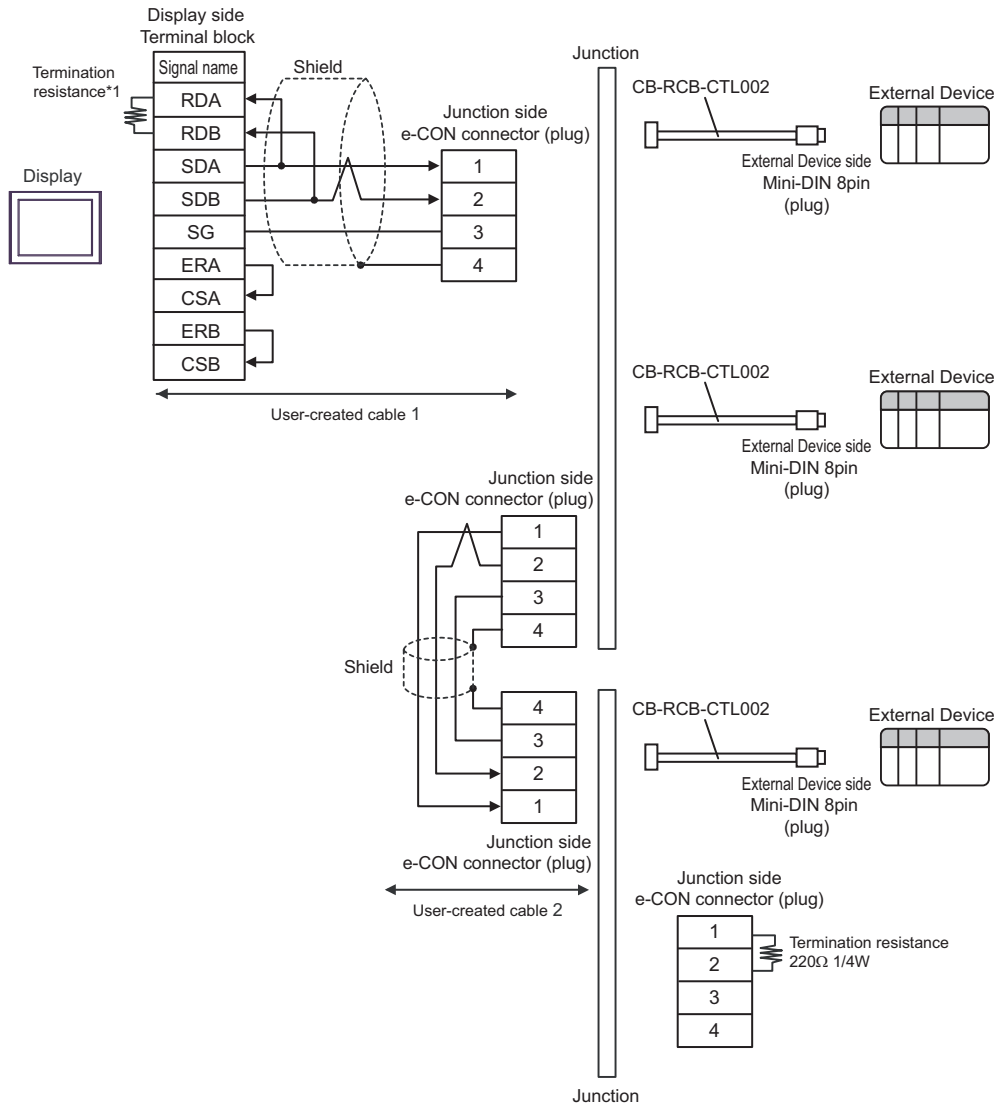

*1 The resistance in the Display is used as the termination resistance. Set the value of the DIP Switch on the rear of the Display as shown in the table below.


DIP Switch No.	Set Value
1	OFF
2	OFF
3	OFF
4	ON

NOTE


- Cable length: 100m or less

2H)

- 1:1 connection

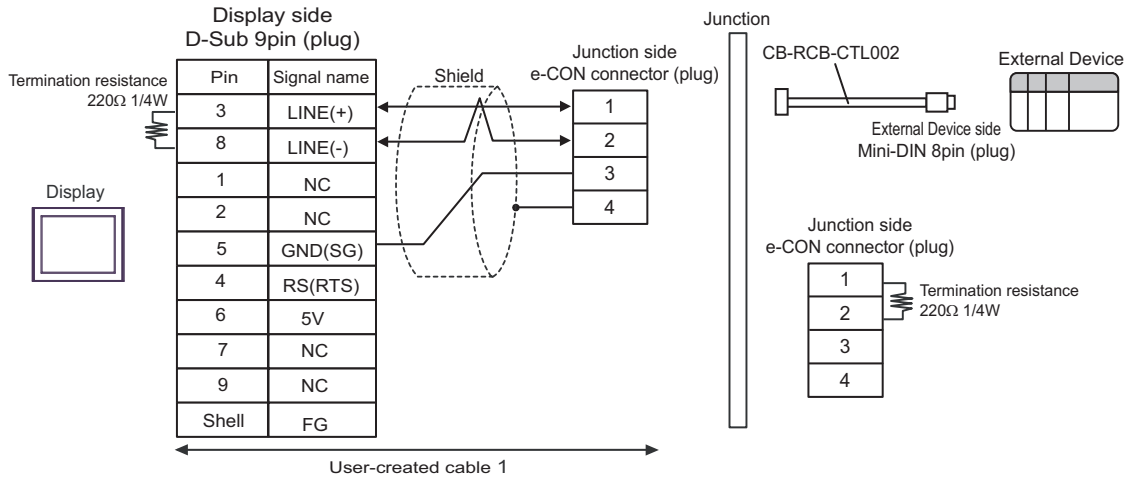

- 1:n connection

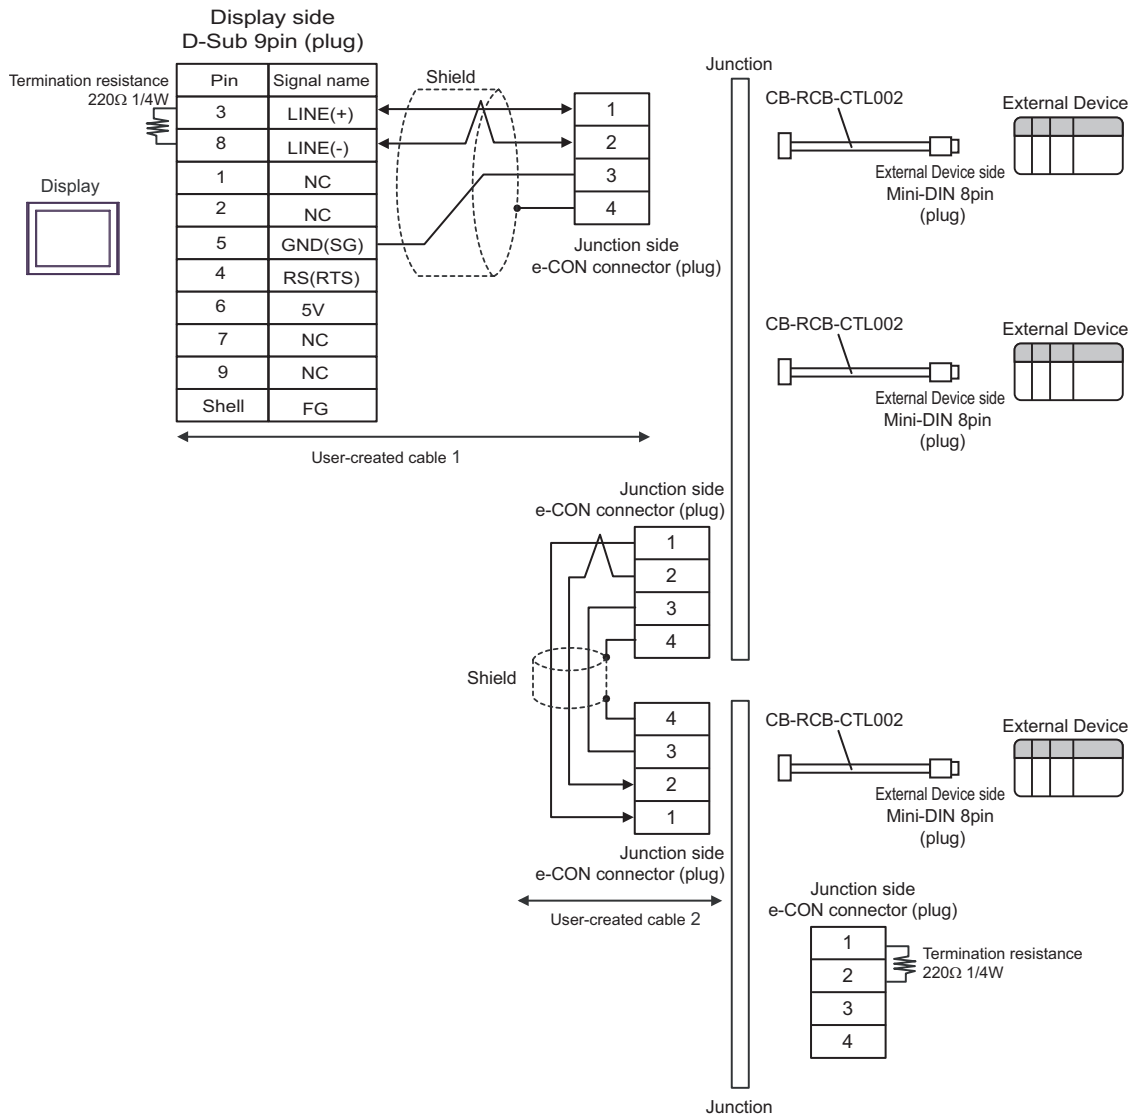**IMPORTANT**


- The 5V output (Pin #6) on the Display is the power for the Siemens AG's PROFIBUS connector. Do not use it for other devices.

NOTE


- In COM on the GP-4107, the SG and FG terminals are isolated.
- Cable length: 100m or less

21)

- 1:1 connection

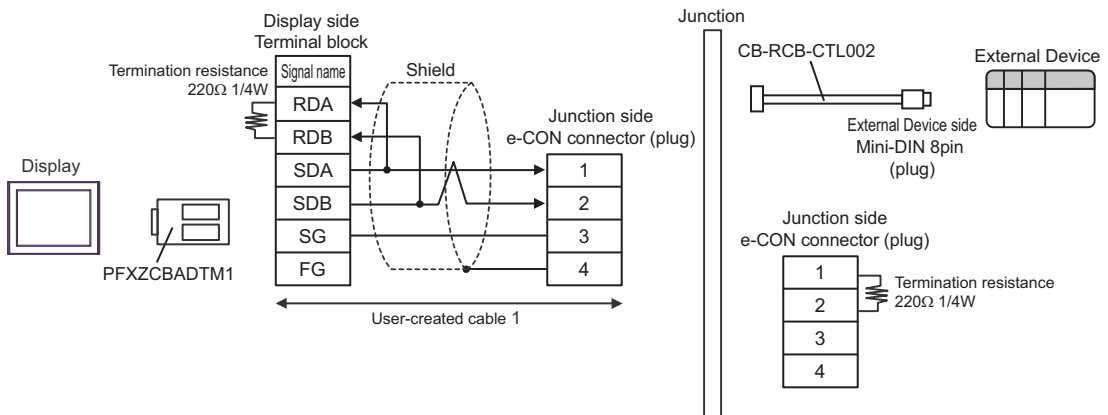


- 1:n connection

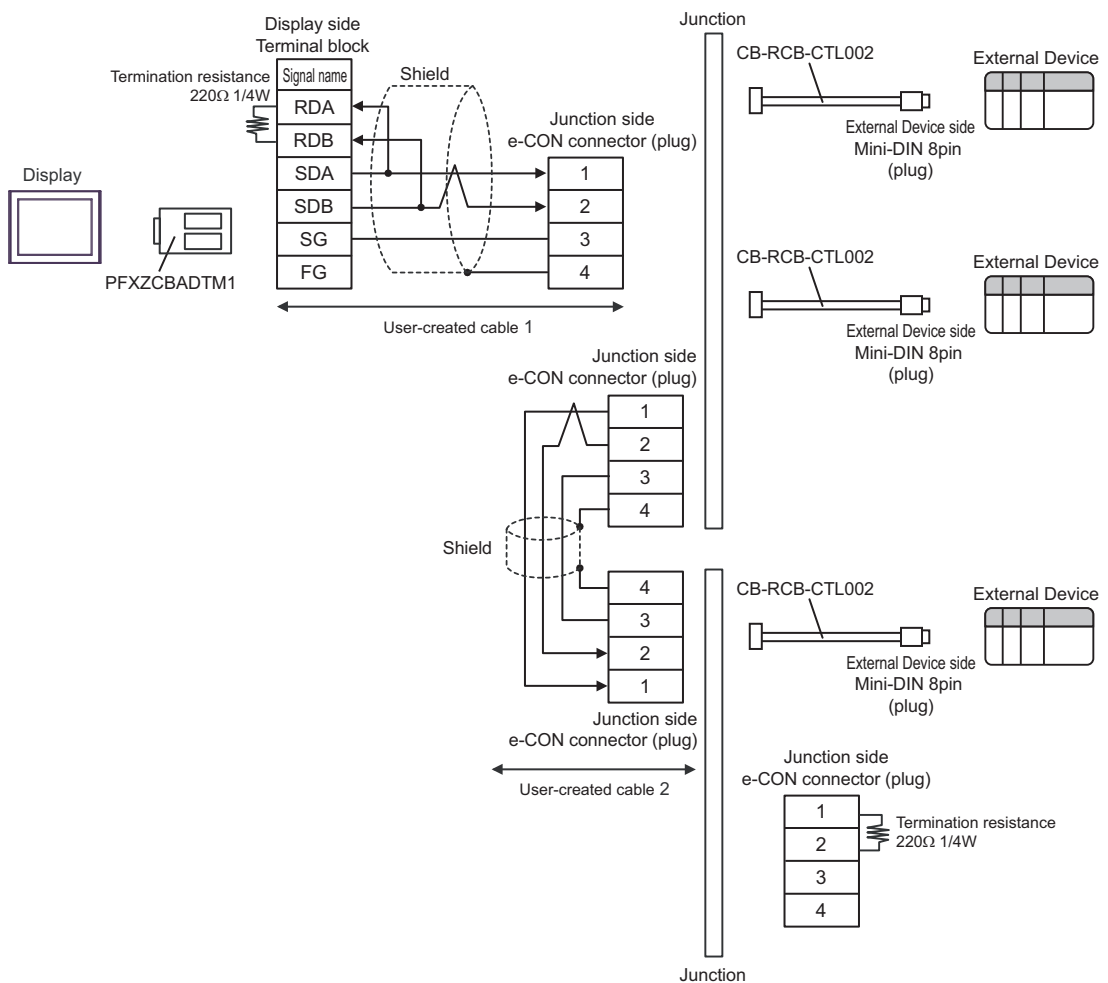**NOTE**


- Cable length: 100m or less

2J)

- 1:1 connection

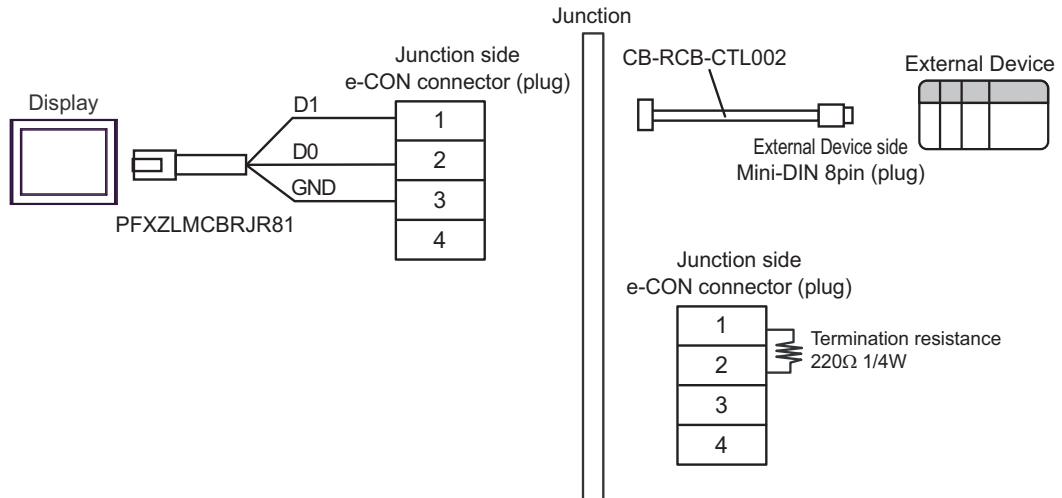


- 1:n connection

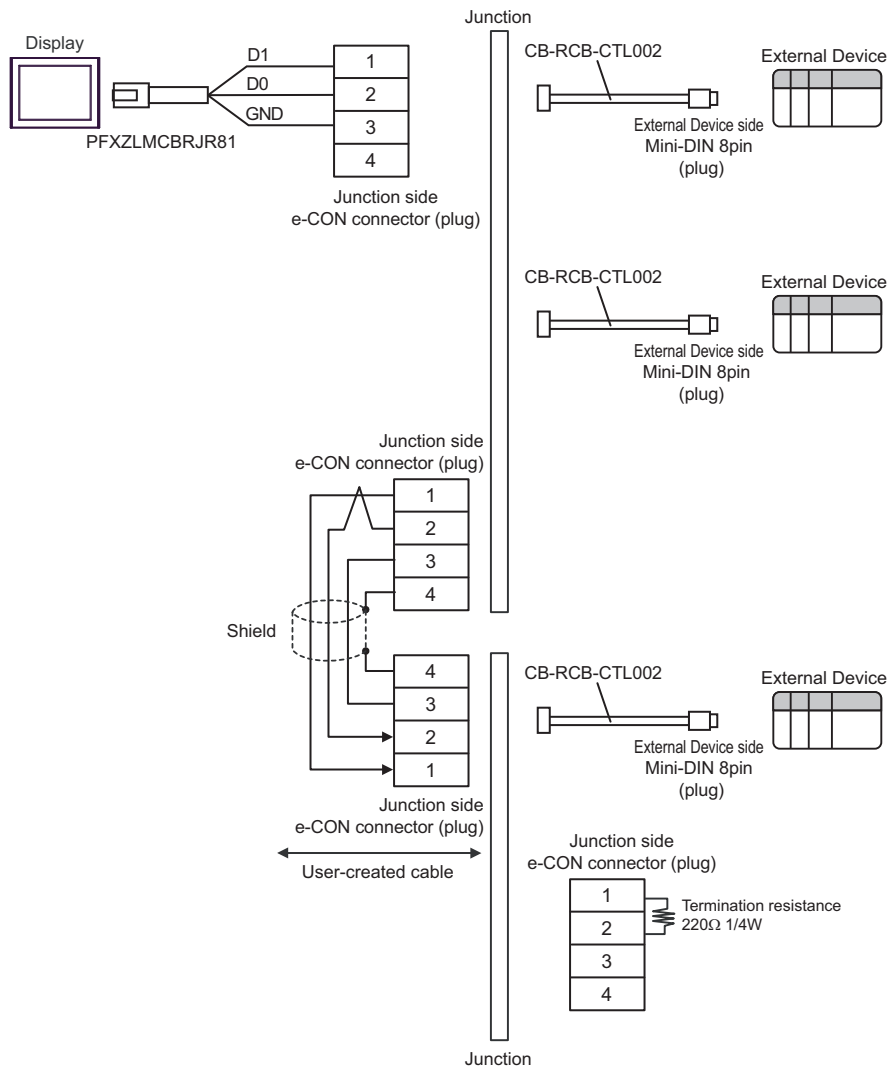


2K)

- 1:1 connection

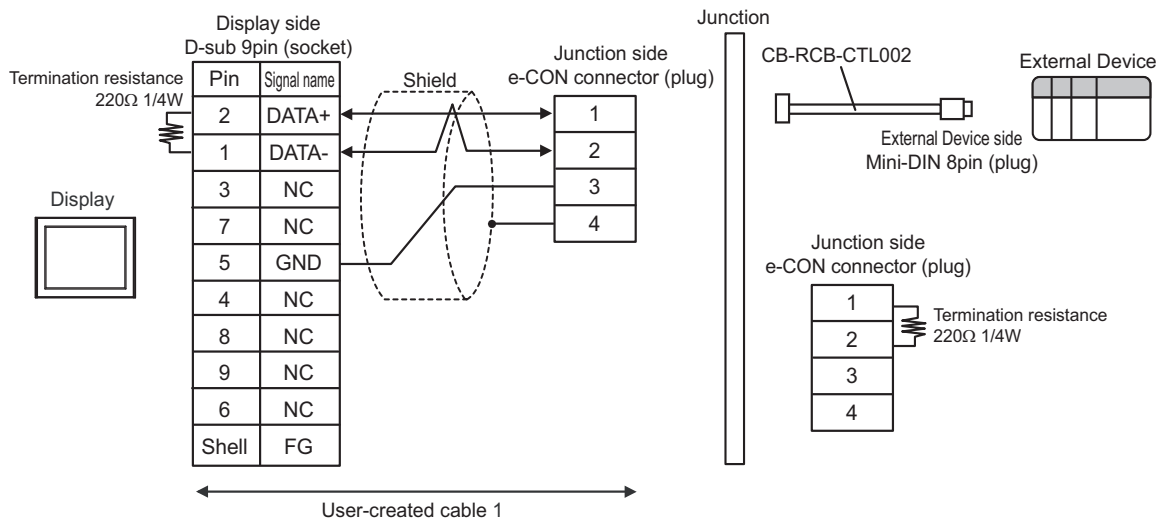

- 1:n connection

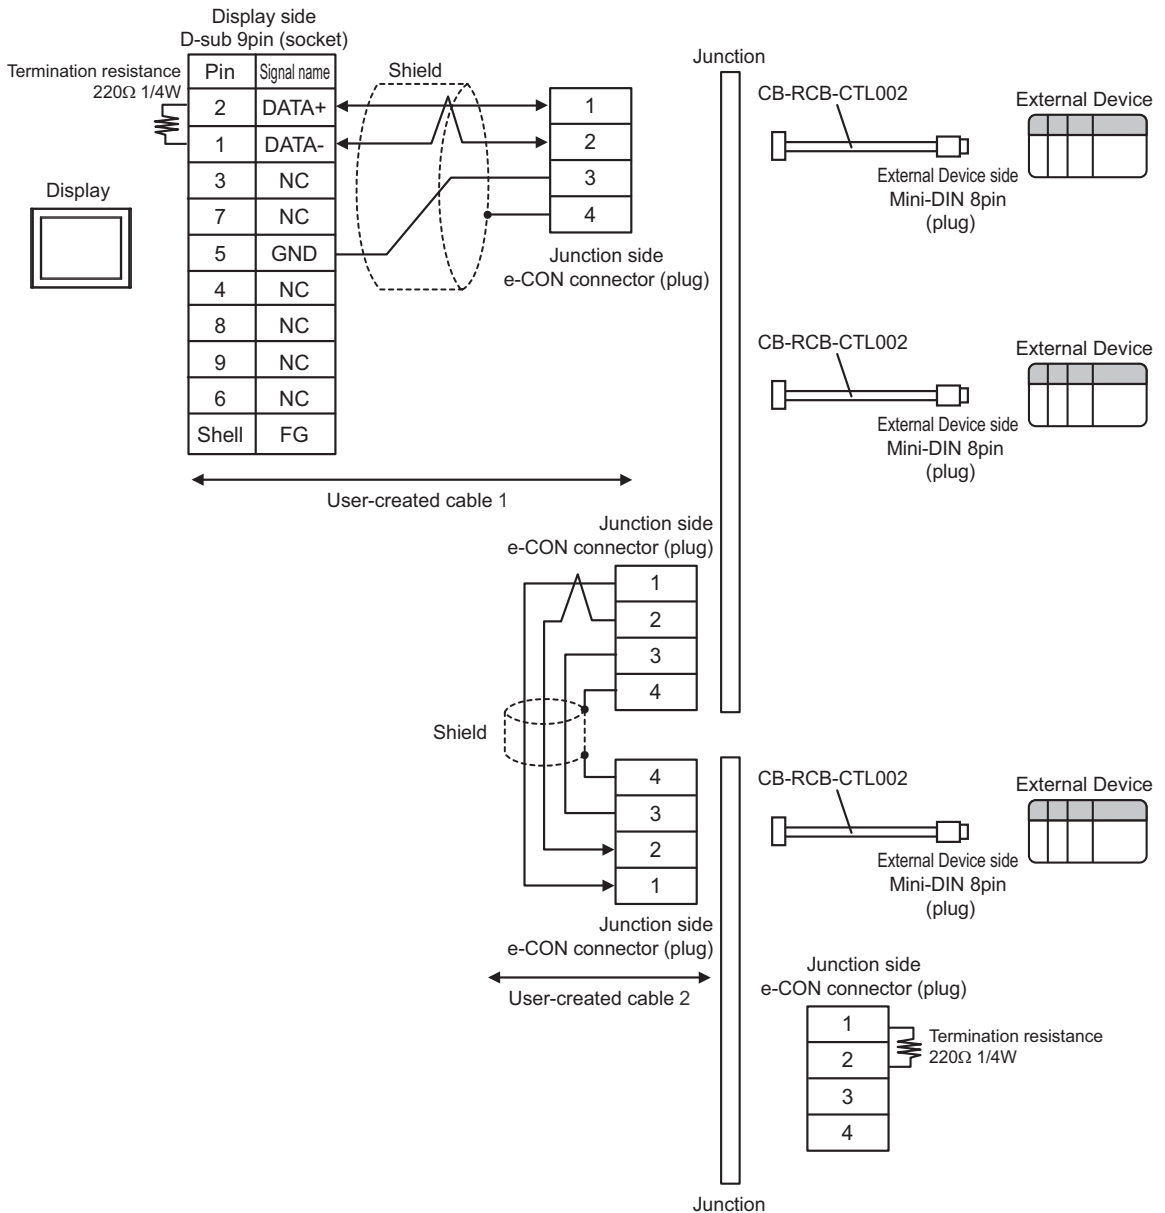**NOTE**

- Cable length: 100m or less

5.3 Cable Diagram 3

Display (Connection Port)	Cable		Notes
GP3000 (COM1) GP4000 ^{*1} (COM1) SP5000 ^{*2} (COM1/2) SP-5B00 (COM1) ST3000 (COM1) ST6000 (COM1) STM6000 (COM1) STC6000 (COM1) ET6000 (COM1) LT3000 (COM1) IPC ^{*3} PC/AT	3A	User-created cable + SIO converter by IAI Corporation RC□-TU-SIO-□ + Controller link cable by IAI Corporation CB-RCB-CTL002	Cable length from Display to SIO converter: 15m or less Cable length from SIO converter to External Device: 100m or less
	3B	User-created cable 1 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable 2 + Junction by AMP ^{*4} 5-1473574-4 + Controller link cable by IAI Corporation CB-RCB-CTL002	
	3C	User-created cable 1 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable 2 + Junction by AMP ^{*3} 5-1473574-4 + Controller link cable by IAI Corporation CB-RCB-CTL002	

Display (Connection Port)	Cable		Notes
GP-4105 (COM1) GP-4115T (COM1) GP-4115T3 (COM1)	3D	User-created cable + SIO converter by IAI Corporation RC□-TU-SIO-□ + Controller link cable by IAI Corporation CB-RCB-CTL002	Cable length from Display to SIO converter: 15m or less Cable length from SIO converter to External Device: 100m or less
	3E	User-created cable 1 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable 2 + Junction by AMP*3 5-1473574-4 + Controller link cable by IAI Corporation CB-RCB-CTL002	
	3F	User-created cable 1 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable 2 + Junction by AMP*3 5-1473574-4 + Controller link cable by IAI Corporation CB-RCB-CTL002	

Display (Connection Port)	Cable		Notes
LT-4*01TM (COM1) LT-Rear Module (COM1)	3G	RJ45 RS-232C Cable (5m) by Pro-face PFXZLMCBJR21 + SIO converter by IAI Corporation RC□-TU-SIO-□ + Controller link cable by IAI Corporation CB-RCB-CTL002	
	3H	RJ45 RS-232C Cable (5m) by Pro-face PFXZLMCBJR21 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable 1 + Junction by AMP*3 5-1473574-4 + Controller link cable by IAI Corporation CB-RCB-CTL002	
	3I	RJ45 RS-232C Cable (5m) by Pro-face PFXZLMCBJR21 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable 1 + Junction by AMP*3 5-1473574-4 + Controller link cable by IAI Corporation CB-RCB-CTL002	

*1 All GP4000 models except GP-4100 series and GP-4203T


*2 Except SP-5B00

*3 Only the COM port which can communicate by RS-232C can be used.
 ■ IPC COM Port (page 5)


*4 When using more than one junction by AMP, user-created cable 3 is required.

3A)

- 1:1 connection

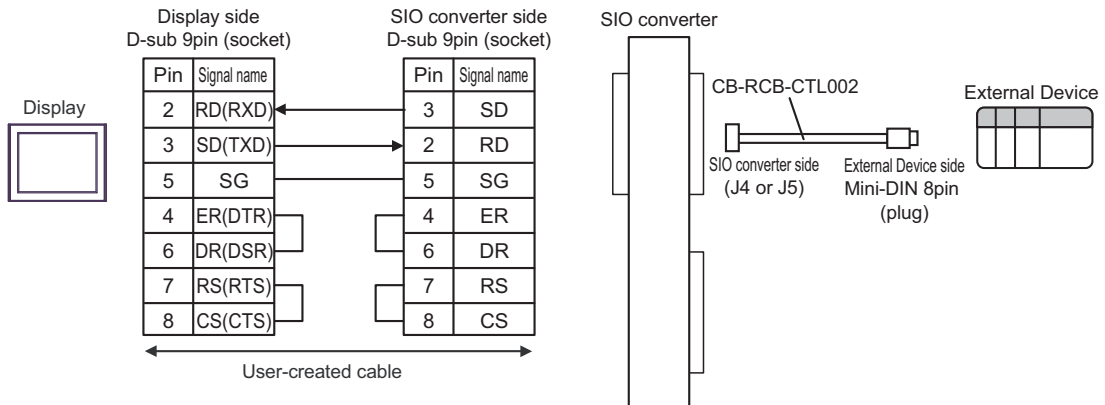


- 1:n connection

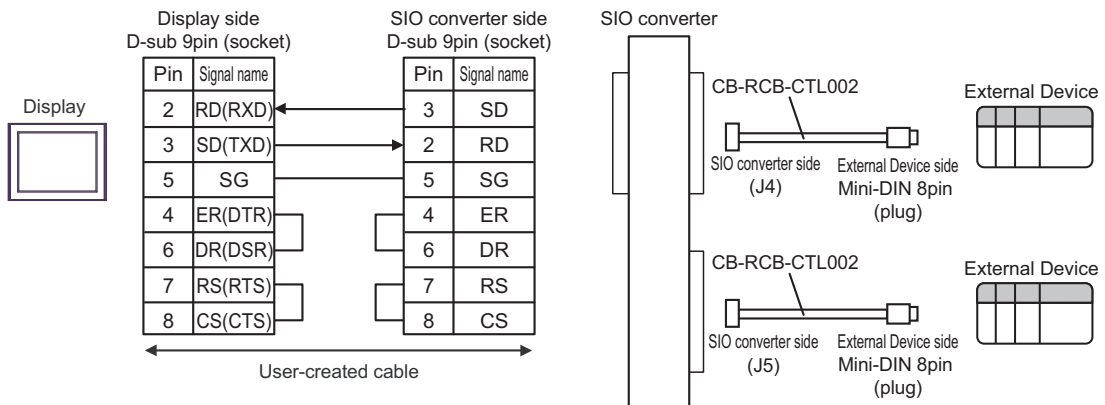**NOTE**


- Cable length from Display to SIO converter: 15m or less
- Cable length from SIO converter to External Device: 100m or less

3B)

- 1:1 connection

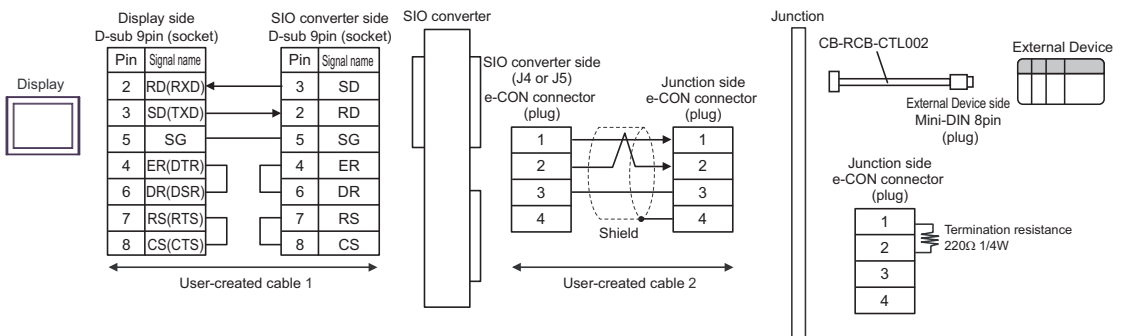


- 1:n connection

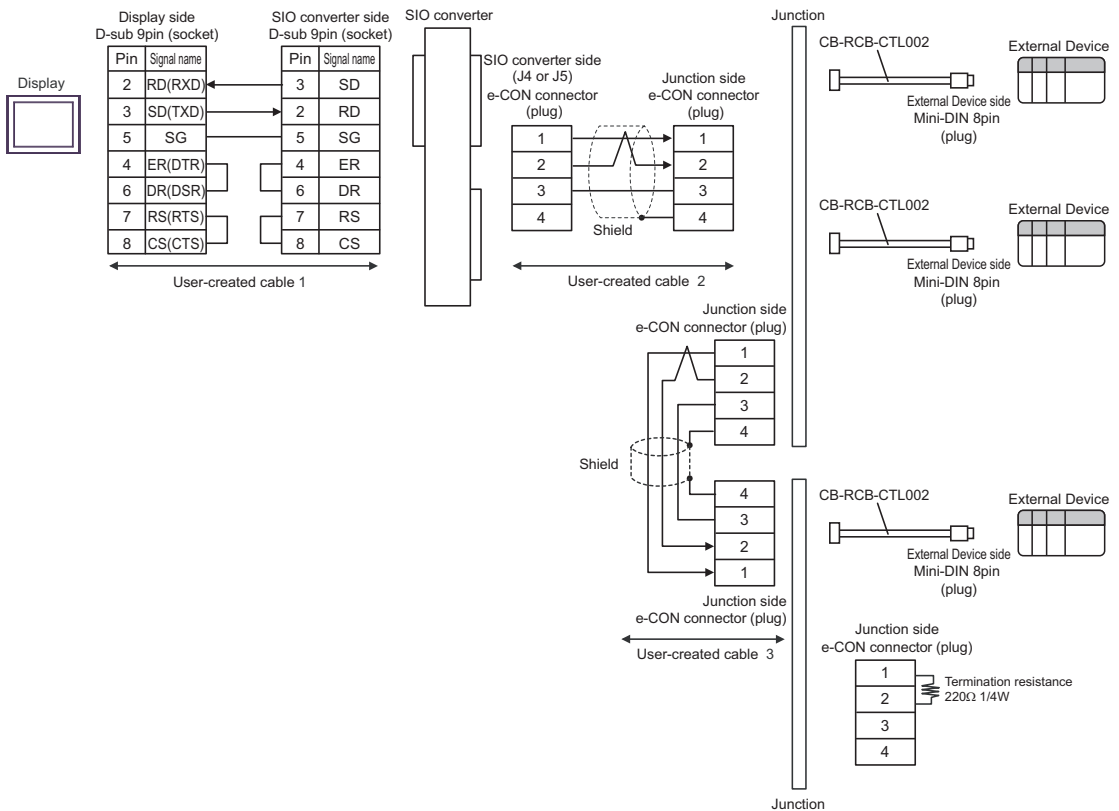**NOTE**


- Cable length from Display to SIO converter: 15m or less
- Cable length from SIO converter to External Device: 100m or less

3C)

- 1:1 connection

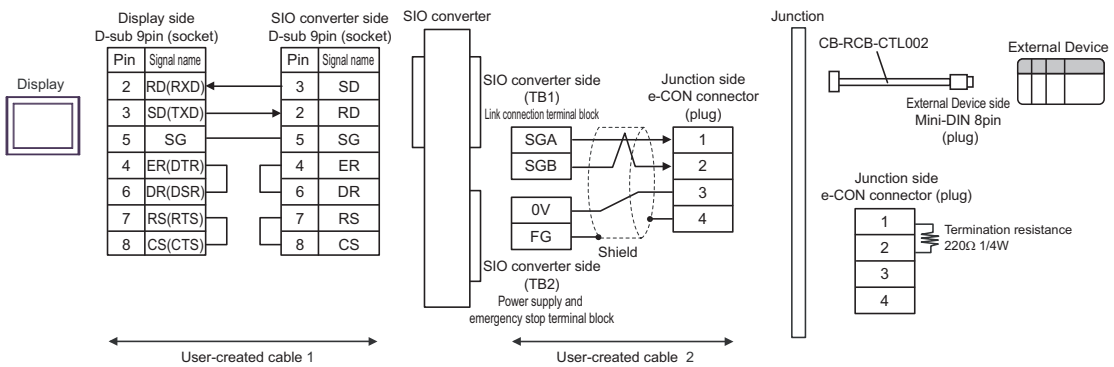


- 1:n connection

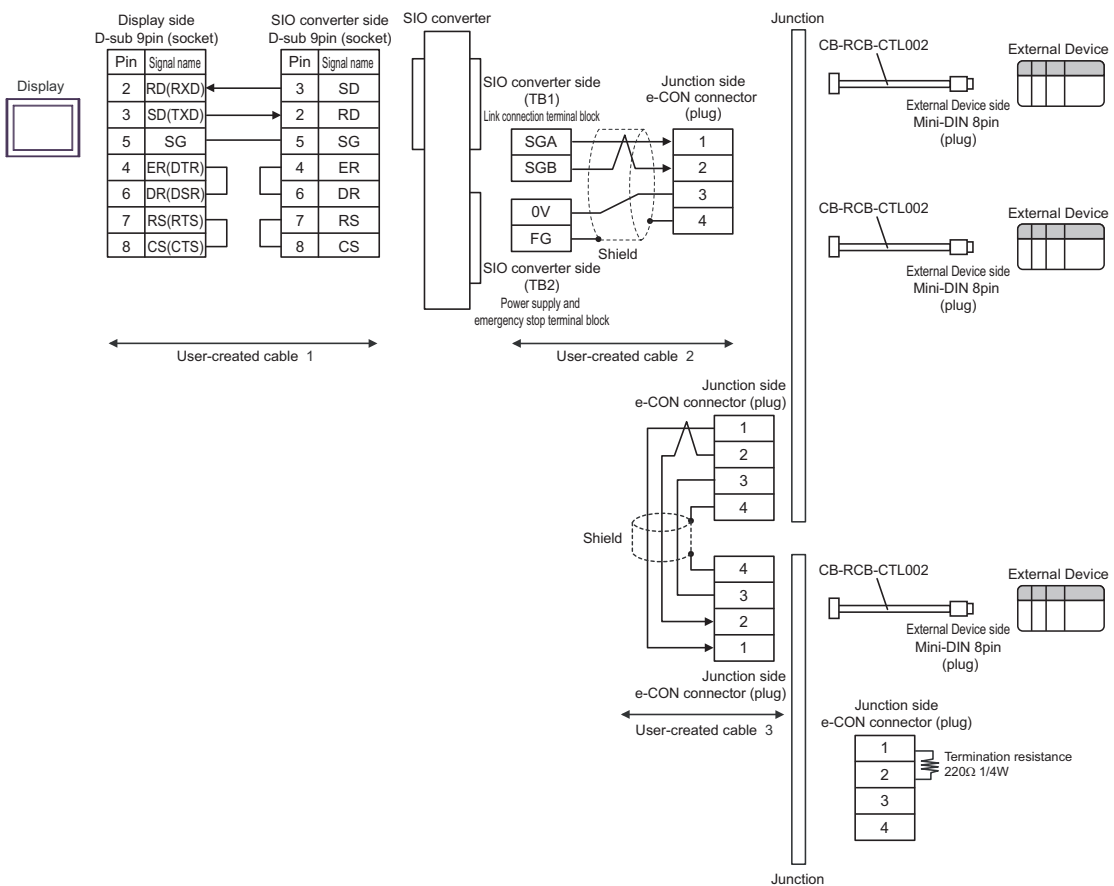**NOTE**


- Cable length from Display to SIO converter: 15m or less
- Cable length from SIO converter to External Device: 100m or less

3D)

- 1:1 connection

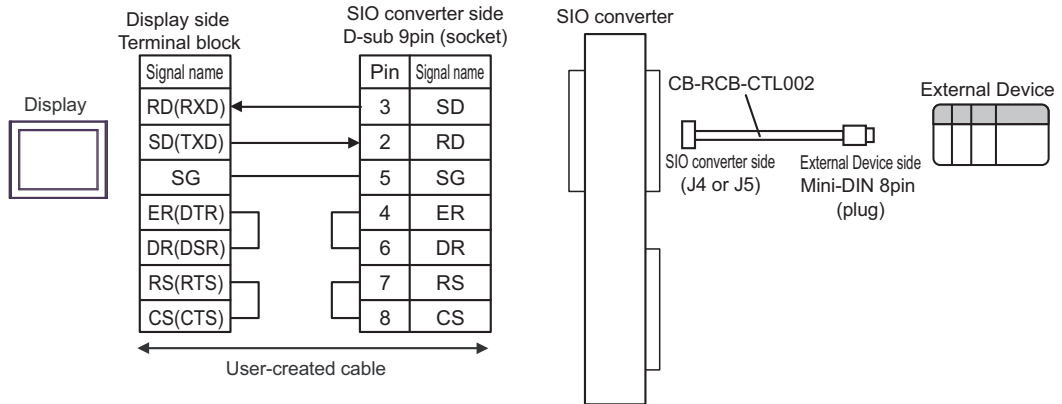


- 1:n connection

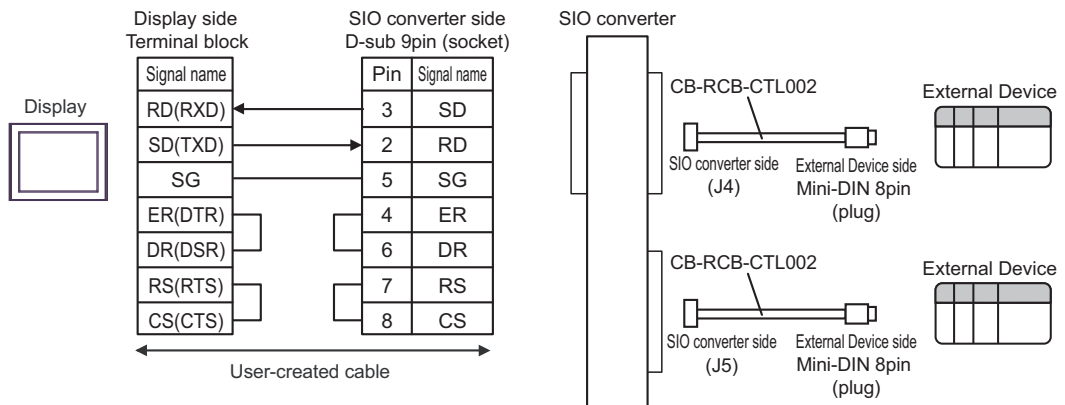**NOTE**


- Cable length from Display to SIO converter: 15m or less
- Cable length from SIO converter to External Device: 100m or less

3E)

- 1:1 connection

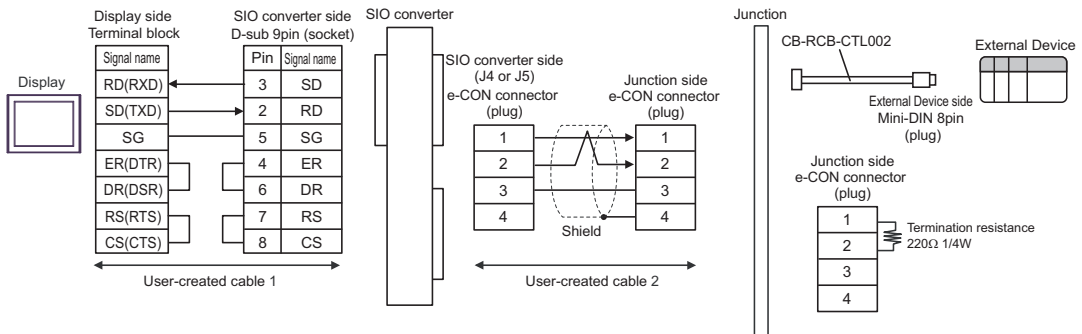


- 1:n connection

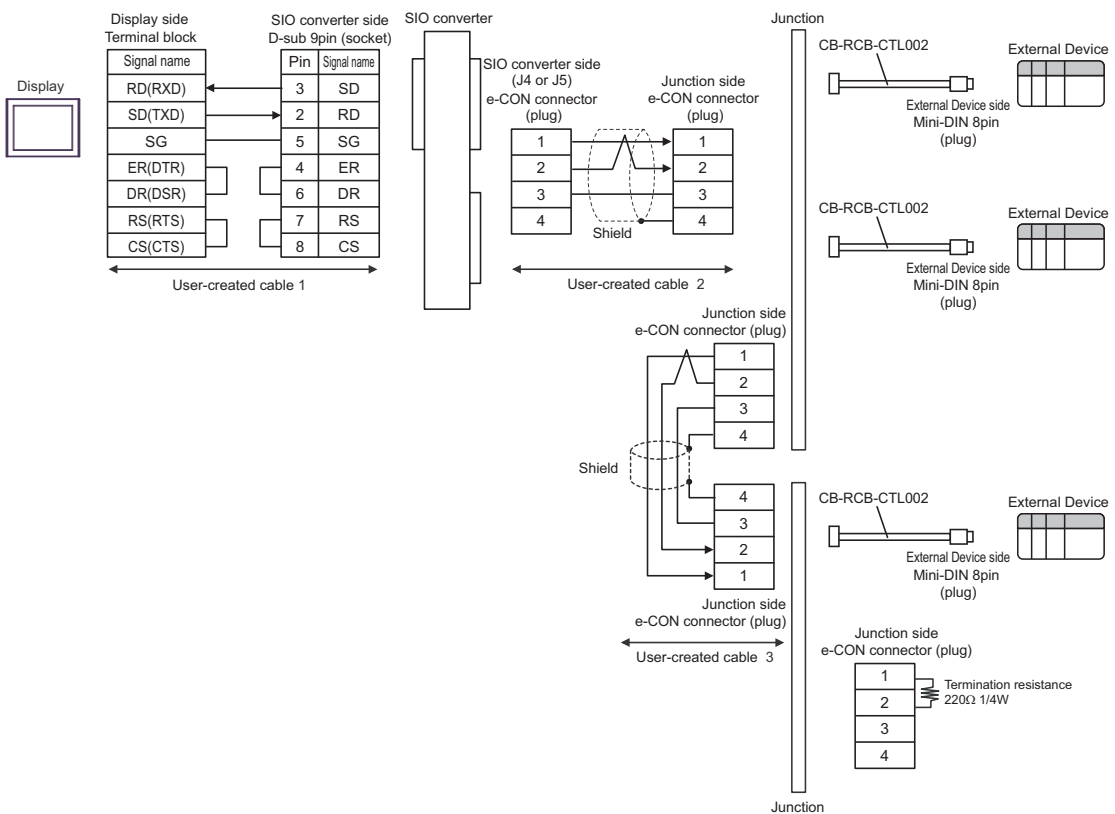**NOTE**


- Cable length from Display to SIO converter: 15m or less
- Cable length from SIO converter to External Device: 100m or less

3F)

- 1:1 connection

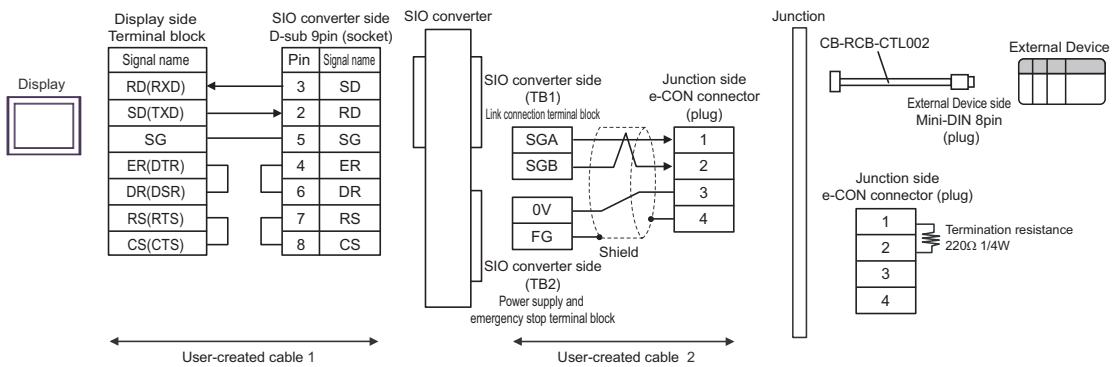


- 1:n connection

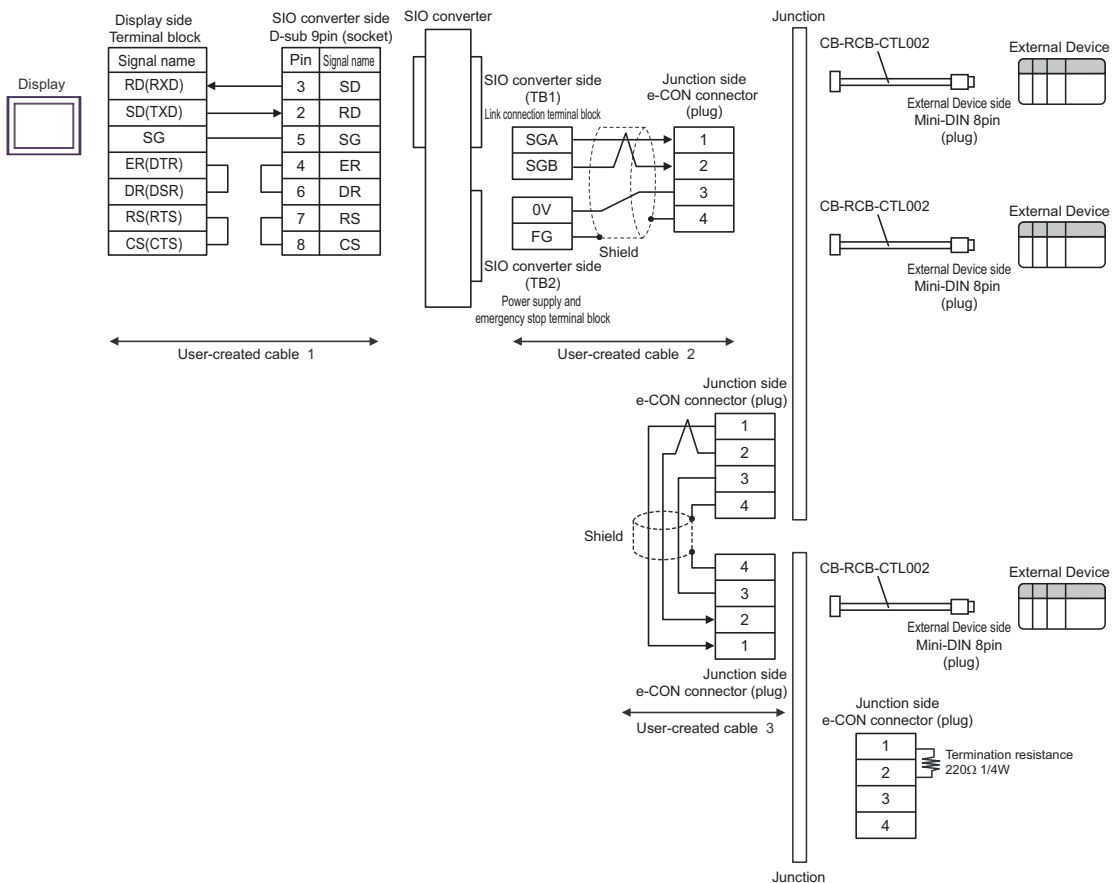**NOTE**


- Cable length from Display to SIO converter: 15m or less
- Cable length from SIO converter to External Device: 100m or less

3G)

- 1:1 connection

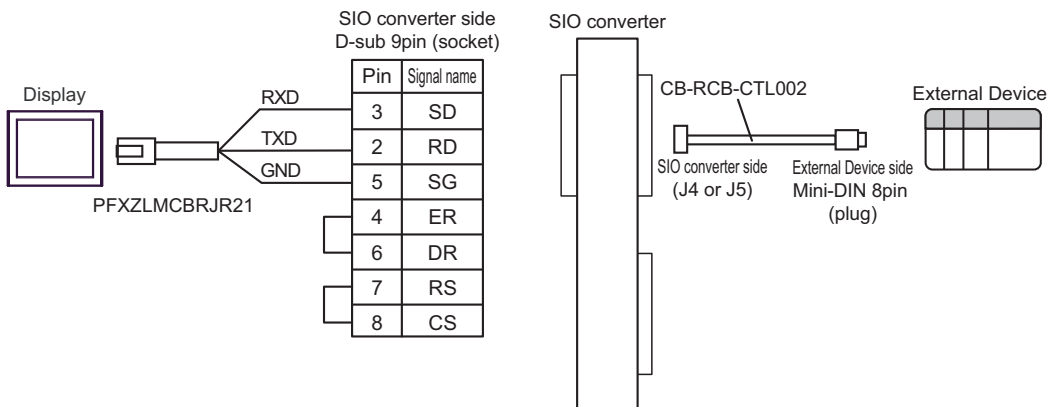


- 1:n connection

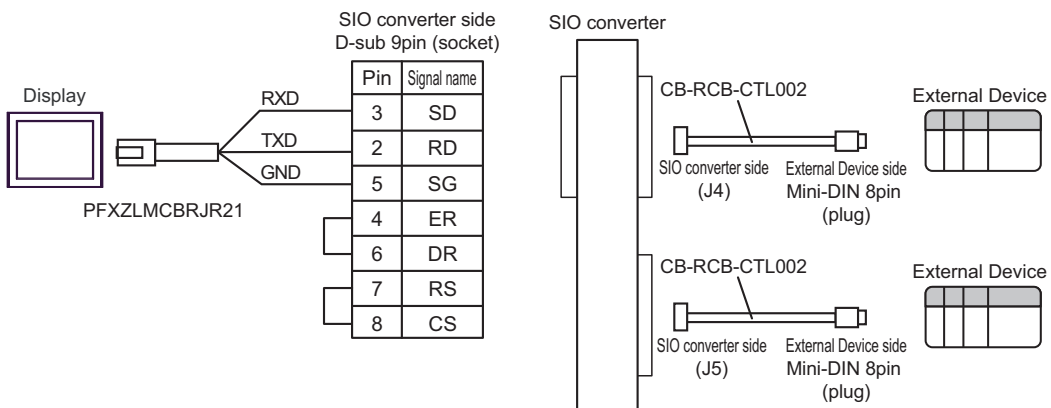


3H)

- 1:1 connection

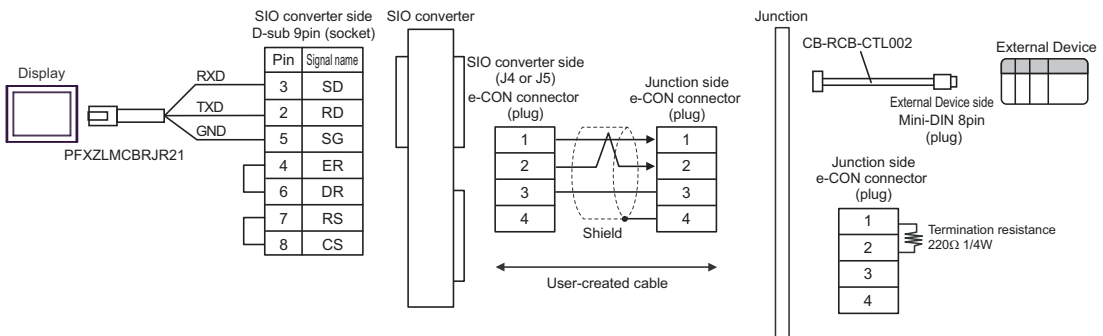


- 1:n connection

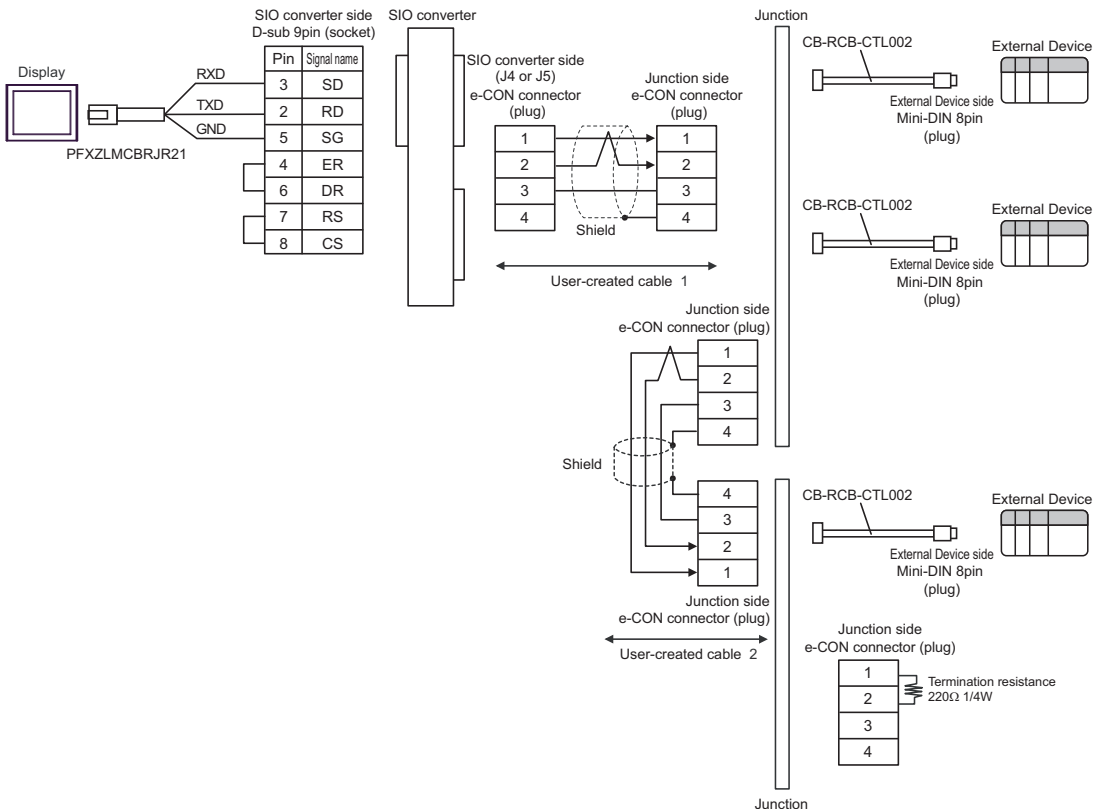


3l)

- 1:1 connection

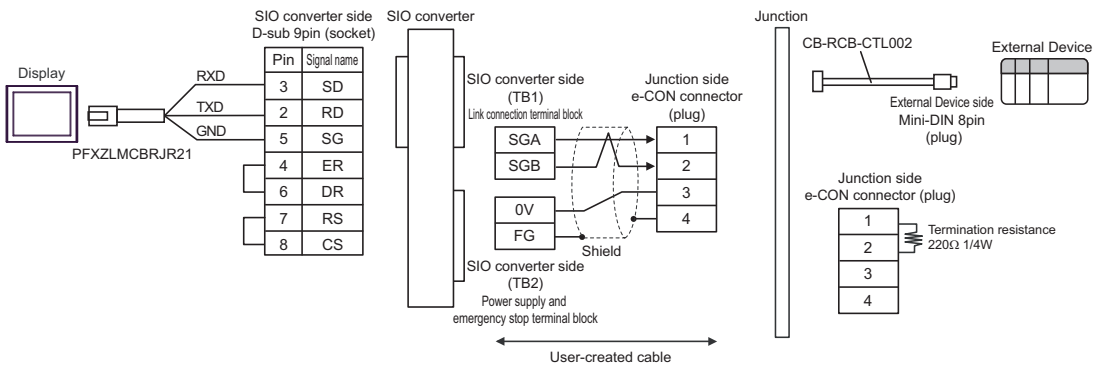

- 1:n connection

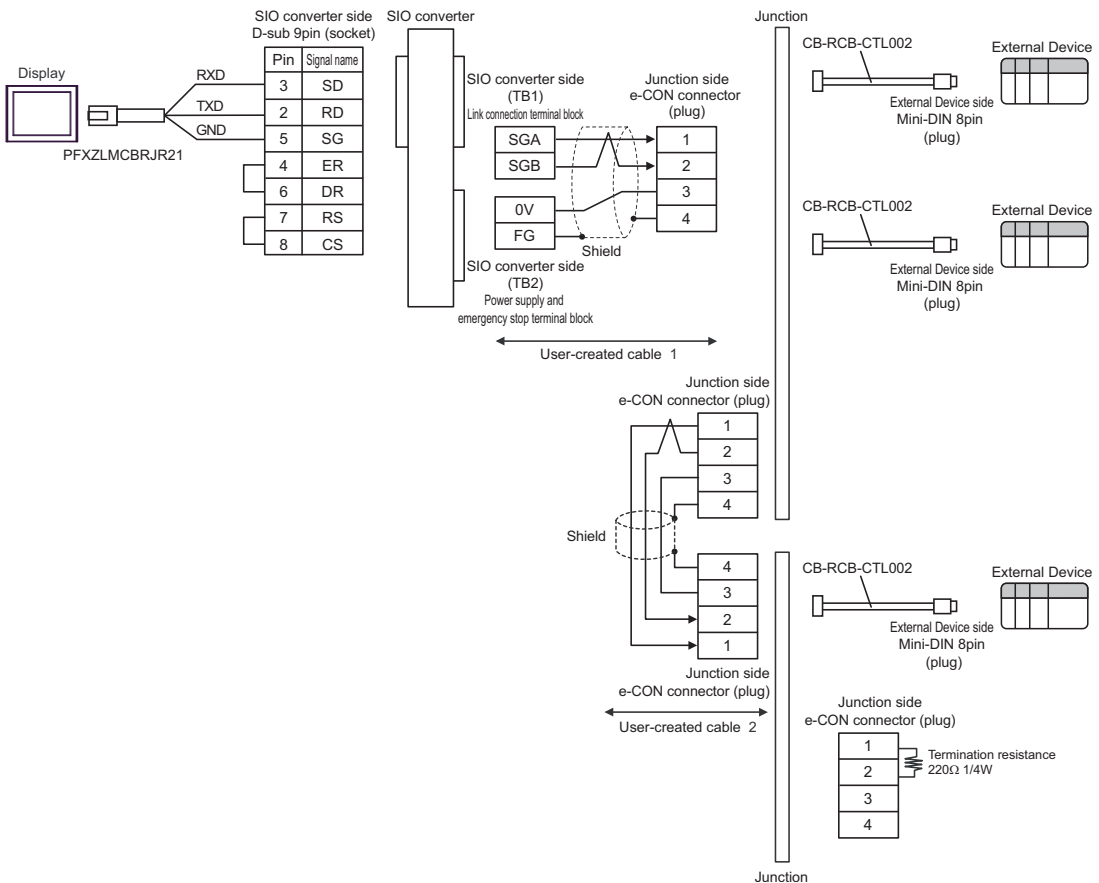

5.4 Cable Diagram 4

Display (Connection Port)	Cable		Notes
GP3000 (COM1) GP4000 ^{*1} (COM1) SP5000 ^{*2} (COM1/2) SP-5B00 (COM1) ST3000 (COM1) ST6000 (COM1) STM6000 (COM1) STC6000 (COM1) ET6000 (COM1) LT3000 (COM1) IPC ^{*3} PC/AT	4A	RS232C conversion unit by IAI Corporation RCB-CV-MW + Communication cable by IAI Corporation CB-RCA-SIO050 + SIO converter by IAI Corporation RC□-TU-SIO-□ + Controller link cable by IAI Corporation CB-RCB-CTL002	Cable length from SIO converter to External Device: 100m or less
	4B	RS232C conversion unit by IAI Corporation RCB-CV-MW + Communication cable by IAI Corporation CB-RCA-SIO050 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable 1 + Junction by AMP ^{*4} 5-1473574-4 + Controller link cable by IAI Corporation CB-RCB-CTL002	
	4C	RS232C conversion unit by IAI Corporation RCB-CV-MW + Communication cable by IAI Corporation CB-RCA-SIO050 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable 1 + Junction by AMP ^{*3} 5-1473574-4 + Controller link cable by IAI Corporation CB-RCB-CTL002	

Display (Connection Port)	Cable		Notes
GP-4105 (COM1) GP-4115T (COM1) GP-4115T3 (COM1)	4D	User-created cable + RS232C conversion unit by IAI Corporation RCB-CV-MW + Communication cable by IAI Corporation CB-RCA-SIO050 + SIO converter by IAI Corporation RC□-TU-SIO-□ + Controller link cable by IAI Corporation CB-RCB-CTL002	Cable length from SIO converter to External Device: 100m or less
	4E	User-created cable + RS232C conversion unit by IAI Corporation RCB-CV-MW + Communication cable by IAI Corporation CB-RCA-SIO050 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable 1 + Junction by AMP*3 5-1473574-4 + Controller link cable by IAI Corporation CB-RCB-CTL002	
	4F	User-created cable + RS232C conversion unit by IAI Corporation RCB-CV-MW + Communication cable by IAI Corporation CB-RCA-SIO050 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable 1 + Junction by AMP*4 5-1473574-4 + Controller link cable by IAI Corporation CB-RCB-CTL002	

*1 All GP4000 models except GP-4100 series and GP-4203T

*2 Except SP-5B00

*3 Only the COM port which can communicate by RS-232C can be used.

■ IPC COM Port (page 5)


- *4 When using more than one junction by AMP, user-created cable 2 is required.

NOTE


- RS232C conversion unit (RCB-CV-MW) and communication cable (CB-RCA-SIO050) are accessories of PC Interface Software (RCM-101-MW) by IAI Corporation.
 - When connecting to 3 or more External Devices, use a junction by AMP.
-

4A)

- 1:1 connection

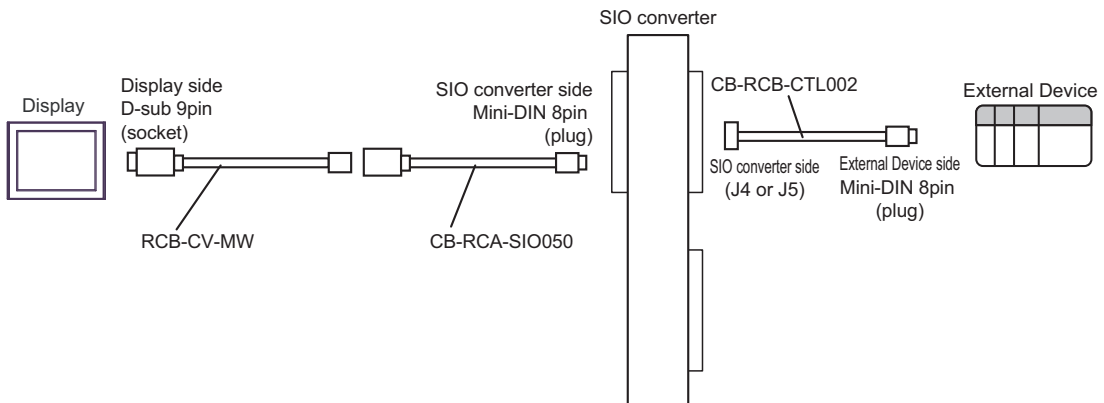


- 1:n connection

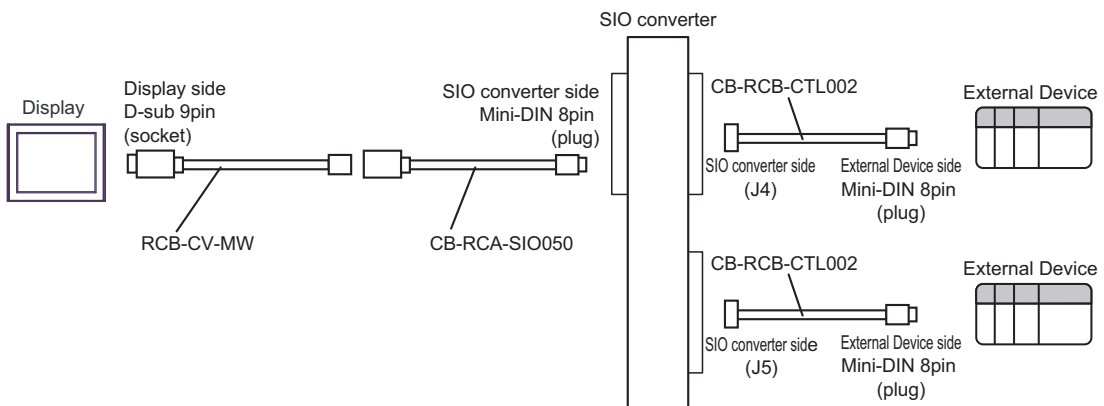**NOTE**


- Cable length from SIO converter to External Device: 100m or less

4B)

- 1:1 connection

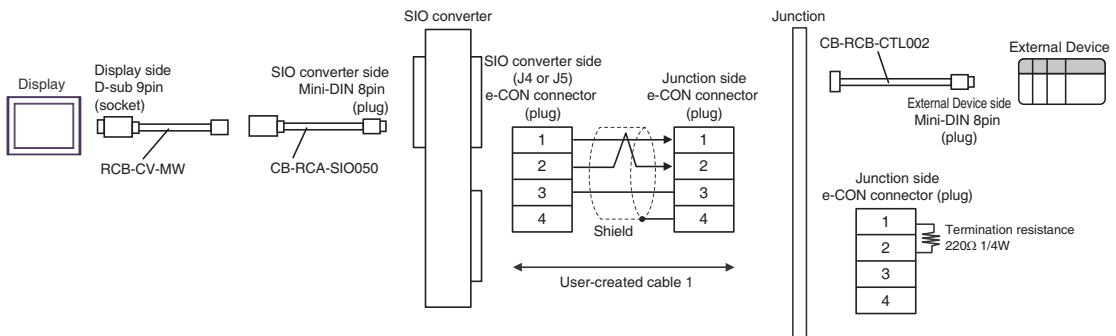


- 1:n connection

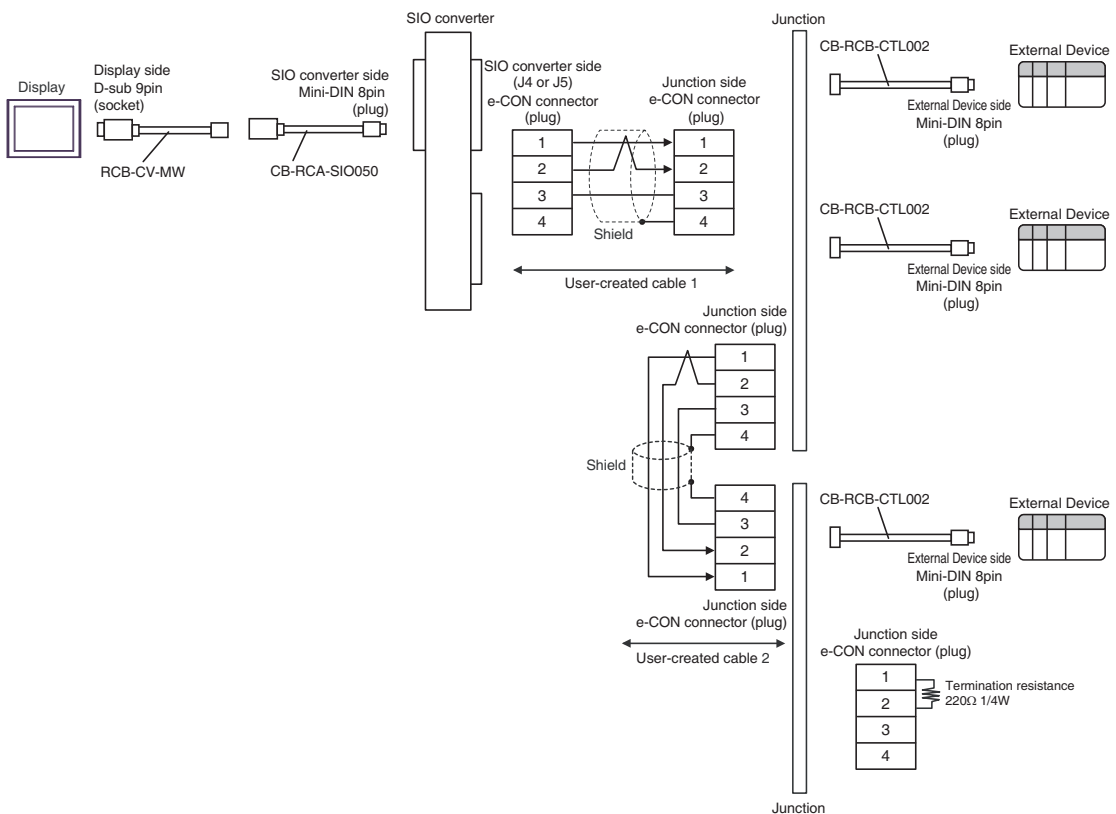**NOTE**


- Cable length from SIO converter to External Device: 100m or less

4C)

- 1:1 connection

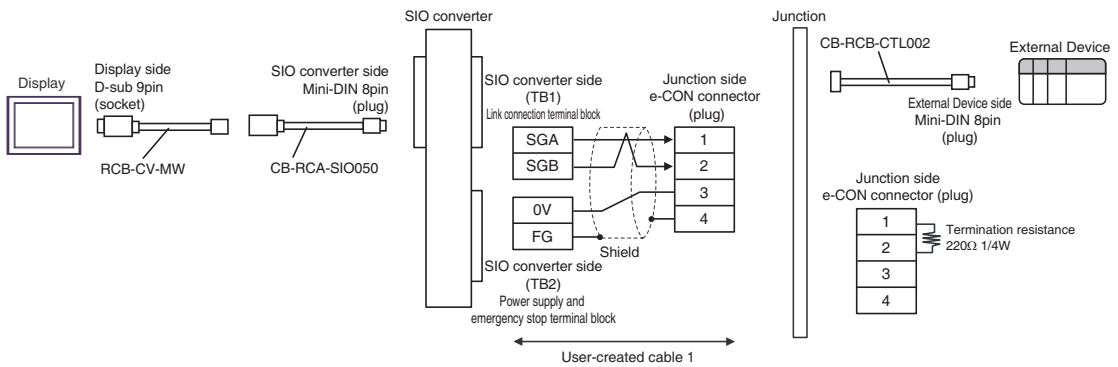


- 1:n connection

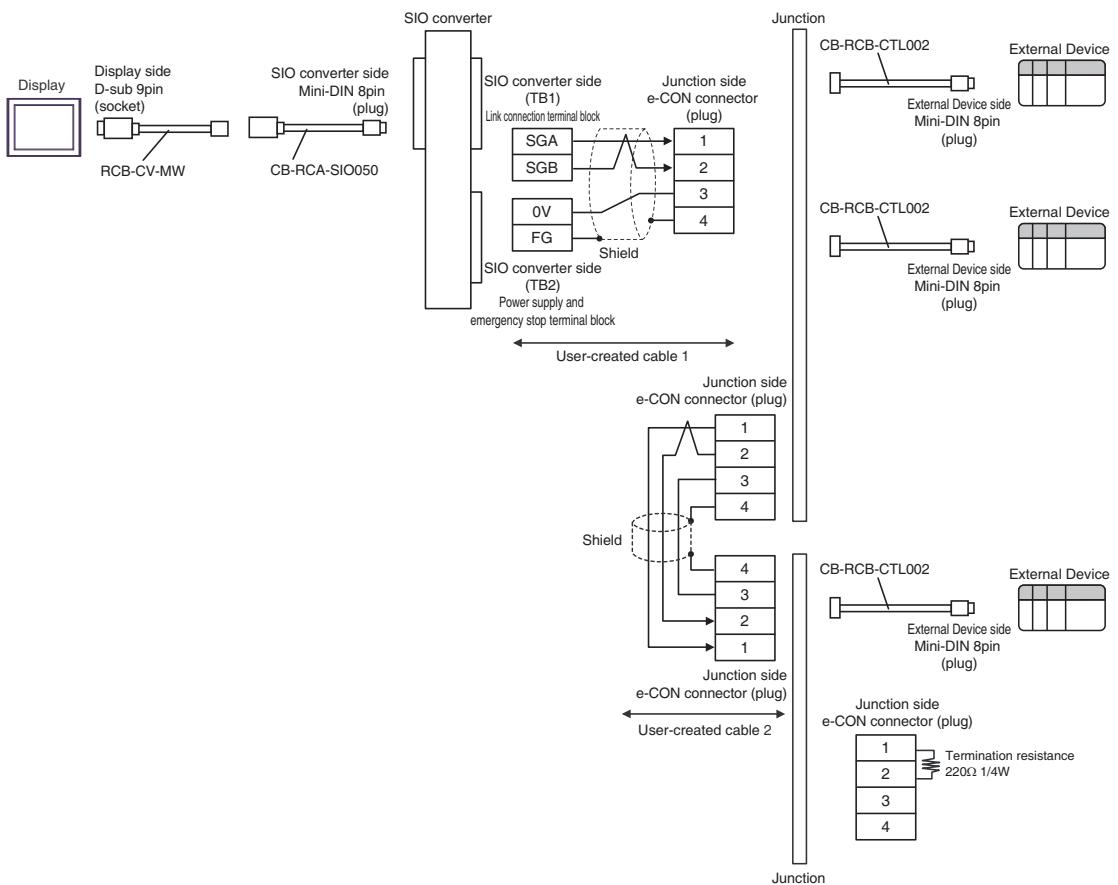**NOTE**


- Cable length from SIO converter to External Device: 100m or less

4D)

- 1:1 connection

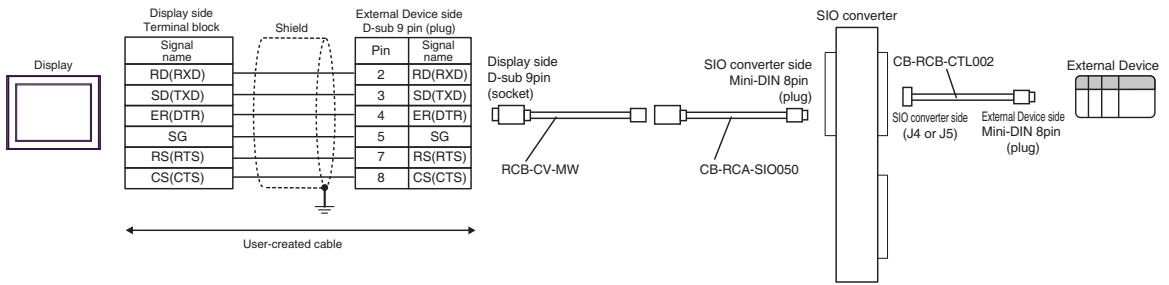


- 1:n connection

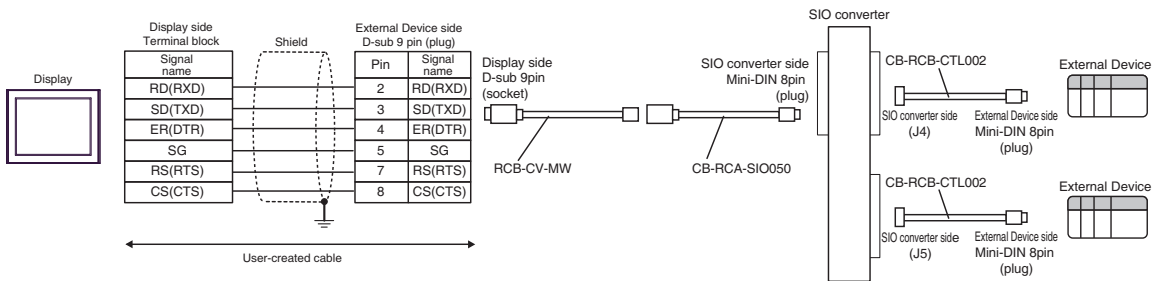**NOTE**


- Cable length from SIO converter to External Device: 100m or less

4F)

- 1:1 connection

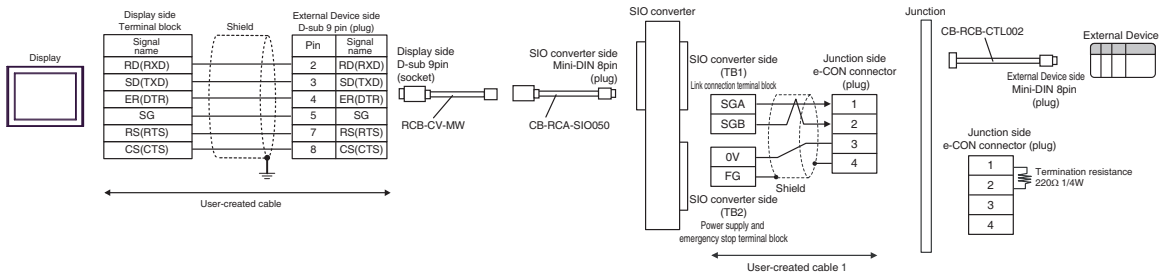

- 1:n connection

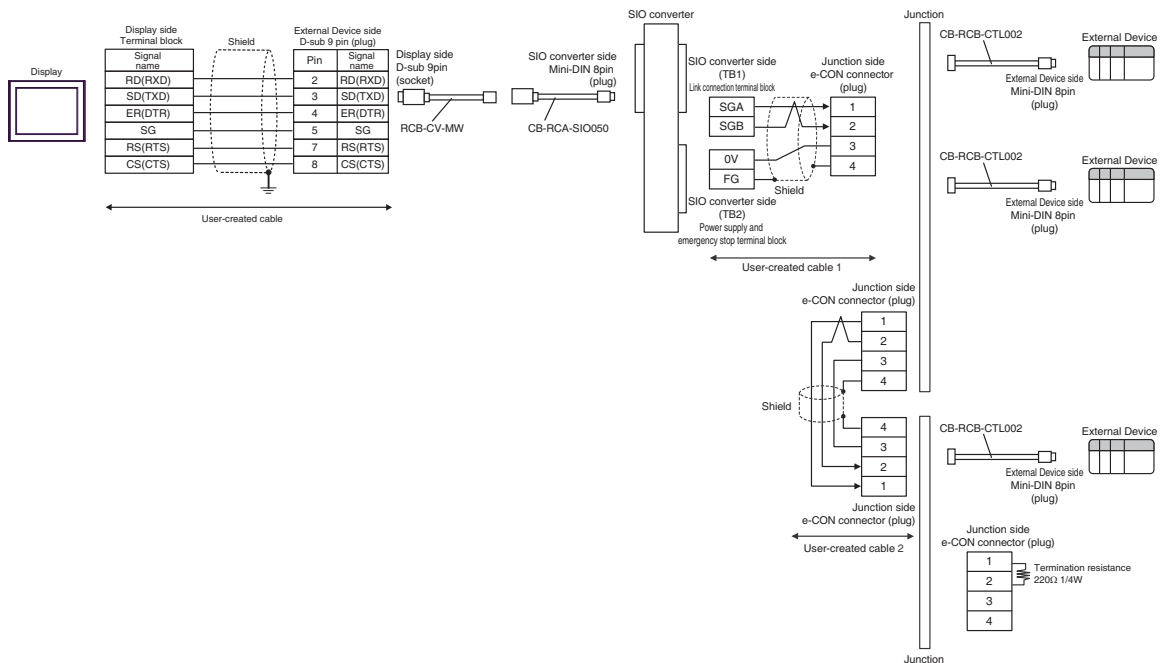**NOTE**

- Cable length from SIO converter to External Device: 100m or less

5.5 Cable Diagram 5

Display (Connection Port)	Cable		Notes
GP3000* ¹ (COM1) AGP-3302B (COM2) GP-4*01TM (COM1) GP-Rear Module (COM1) ST3000* ² (COM2) LT3000 (COM1)	5A	COM port conversion adapter by Pro-face CA3-ADPCOM-01 + Terminal block conversion adapter by Pro-face CA3-ADPTRM-01 + User-created cable + Terminal block + Power & I/O Cable by IAI Corporation CB-ERC-PWBIO□□□ or CB-ERC-PWBIO□□□-RB	Cable length: 100m or less
	5B	User-created cable + Terminal block + Power & I/O Cable by IAI Corporation CB-ERC-PWBIO□□□ or CB-ERC-PWBIO□□□-RB	
GP3000* ³ (COM2)	5C	Online adapter by Pro-face CA4-ADPONL-01 + Terminal block conversion adapter by Pro-face CA3-ADPTRM-01 + User-created cable + Terminal block + Power & I/O Cable by IAI Corporation CB-ERC-PWBIO□□□ or CB-ERC-PWBIO□□□-RB	Cable length: 100m or less
	5D	Online adapter by Pro-face CA4-ADPONL-01 + User-created cable + Terminal block + Power & I/O Cable by IAI Corporation CB-ERC-PWBIO□□□ or CB-ERC-PWBIO□□□-RB	

Display (Connection Port)	Cable		Notes
IPC*4	5E	COM port conversion adapter by Pro-face CA3-ADPCOM-01 + Terminal block conversion adapter by Pro-face CA3-ADPTRM-01 + User-created cable + Terminal block + Power & I/O Cable by IAI Corporation CB-ERC-PWBIO□□□ or CB-ERC-PWBIO□□□-RB	Cable length: 100m or less
	5F	User-created cable + Terminal block + Power & I/O Cable by IAI Corporation CB-ERC-PWBIO□□□ or CB-ERC-PWBIO□□□-RB	
GP-4106 (COM1) GP-4116T (COM1)	5G	User-created cable + Terminal block + Power & I/O Cable by IAI Corporation CB-ERC-PWBIO□□□ or CB-ERC-PWBIO□□□-RB	Cable length: 100m or less
GP-4107 (COM1) GP-4*03T*5 (COM2) GP-4203T (COM1)	5H	User-created cable + Terminal block + Power & I/O Cable by IAI Corporation CB-ERC-PWBIO□□□ or CB-ERC-PWBIO□□□-RB	Cable length: 100m or less
GP4000*6 (COM2) GP-4201T (COM1) SP5000*7 (COM1/2) SP-5B00 (COM2) ST6000*8 (COM2) ST-6200 (COM1) STM6000 (COM1) STC6000 (COM1) ET6000*9 (COM2) PS6000 (Basic Box) (COM1/2)	5I	RS-422 Terminal Block Conversion Adapter by Pro-face PFXZCBADTM1*10 + User-created cable + Terminal block + Power & I/O Cable by IAI Corporation CB-ERC-PWBIO□□□ or CB-ERC-PWBIO□□□-RB	Cable length: 100m or less
	5B	User-created cable + Terminal block + Power & I/O Cable by IAI Corporation CB-ERC-PWBIO□□□ or CB-ERC-PWBIO□□□-RB	

Display (Connection Port)	Cable		Notes
LT-4*01TM (COM1) LT-Rear Module (COM1)	5J	RJ45 RS-485 Cable (5m) by Pro-face PFXZLMCBJR81 + Terminal block + Power & I/O Cable by IAI Corporation CB-ERC-PWBIO□□□ or CB-ERC-PWBIO□□□-RB	Cable length: 100m or less
PE-4000B ^{*11} PS5000 ^{*11} PS6000 (Optional Interface) ^{*11}	5K	User-created cable + Terminal block + Power & I/O Cable by IAI Corporation CB-ERC-PWBIO□□□ or CB-ERC-PWBIO□□□-RB	Cable length: 100m or less

*1 All GP3000 models except AGP-3302B

*2 Except AST-3211A and AST-3302B

*3 All GP3000 models except GP-3200 series and AGP-3302B

*4 Only the COM port which can communicate by RS-422/485 (2 wire) can be used. (Except PE-4000B, PS5000, and PS6000)

■ IPC COM Port (page 5)

*5 Except GP-4203T

*6 All GP4000 models except GP-4100 series, GP-4*01TM, GP-Rear Module, GP-4201T and GP-4*03T

*7 Except SP-5B00

*8 Except ST-6200

*9 Due to the COM port specifications, flow control is not possible. Omit wiring the control pins on the Display side of the cable diagram.


*10 When using a Terminal Block Conversion Adapter (CA3-ADPTRM-01) instead of the RS-422 Terminal Block Conversion Adapter, refer to Cable Diagram 5A.

*11 Only the COM port which can communicate by RS-422/485 (2 wire) can be used.

■ IPC COM Port (page 5)


5A)

- 1:1 connection

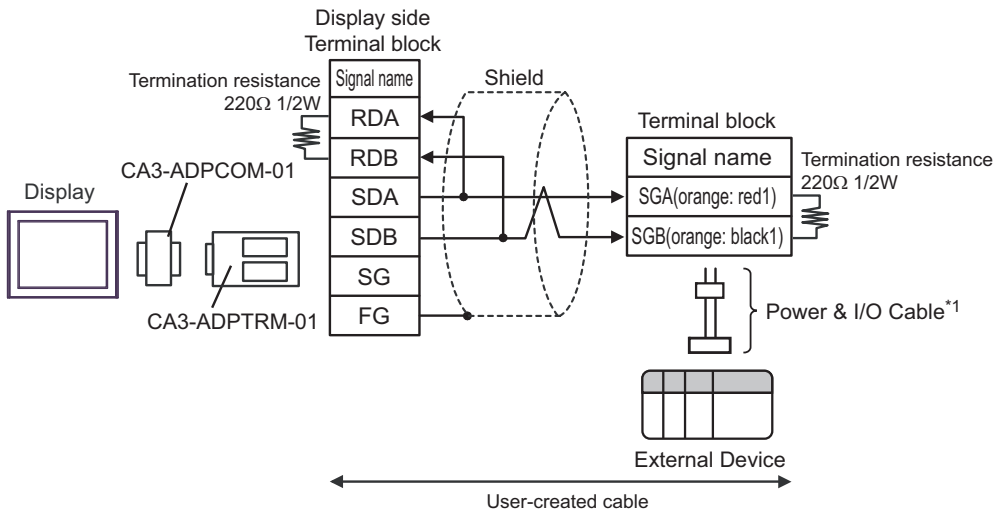

- *1 We recommend the IAI Corporation CB-ERC-PWBIO□□□□ or CB-ERC-PWBIO□□□□-RB as the Power & I/O Cable.

- 1:n connection

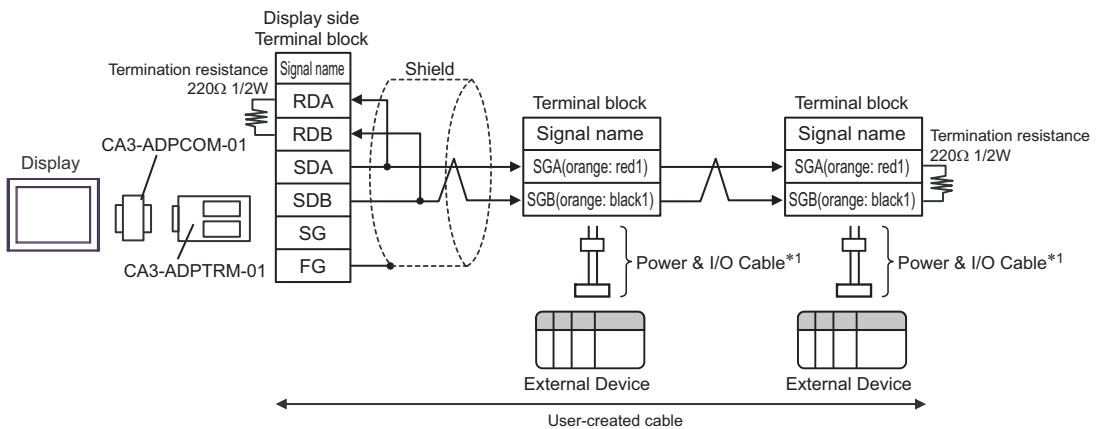


- *1 We recommend the IAI Corporation CB-ERC-PWBIO□□□□ or CB-ERC-PWBIO□□□□-RB as the Power & I/O Cable.

NOTE

- Cable length: 100m or less


5B)

- 1:1 connection

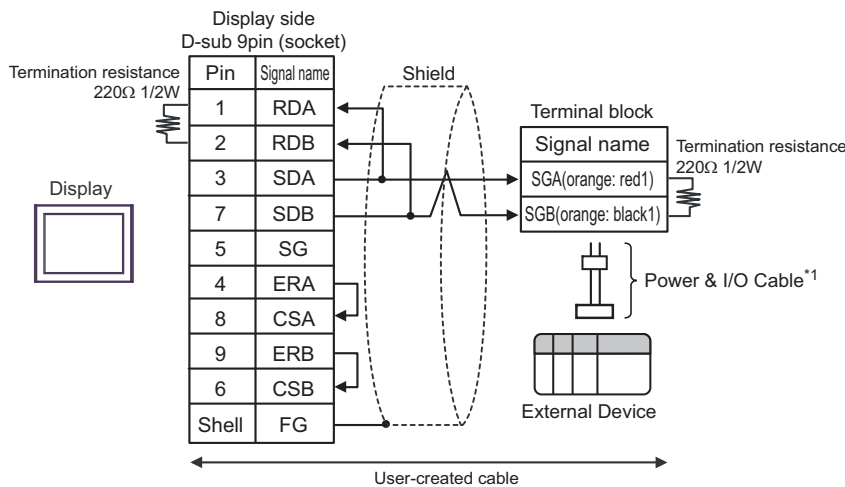

*1 We recommend the IAI Corporation CB-ERC-PWBIO□□□□ or CB-ERC-PWBIO□□□□-RB as the Power & I/O Cable.

- 1:n connection

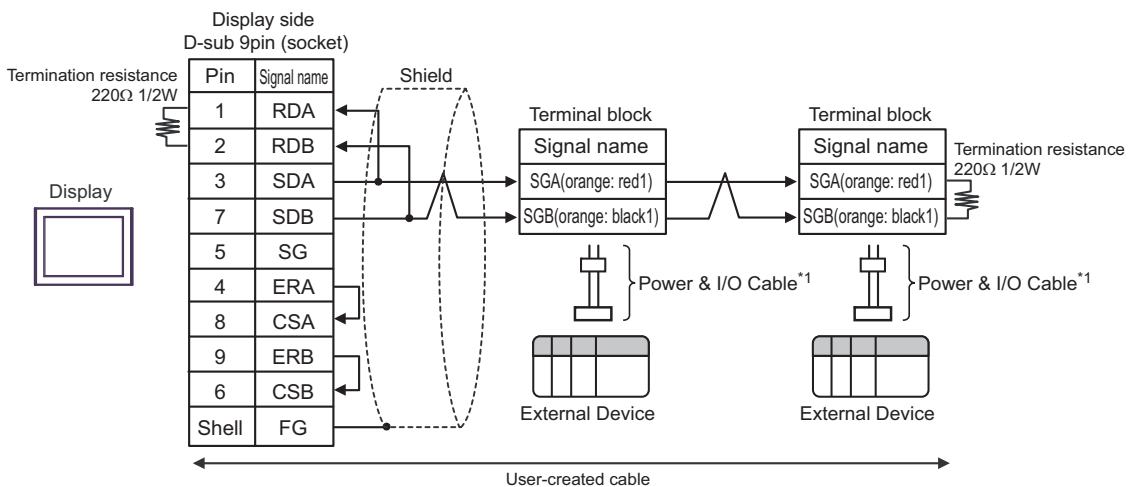


*1 We recommend the IAI Corporation CB-ERC-PWBIO□□□□ or CB-ERC-PWBIO□□□□-RB as the Power & I/O Cable.

NOTE

- Cable length: 100m or less


5C)

- 1:1 connection

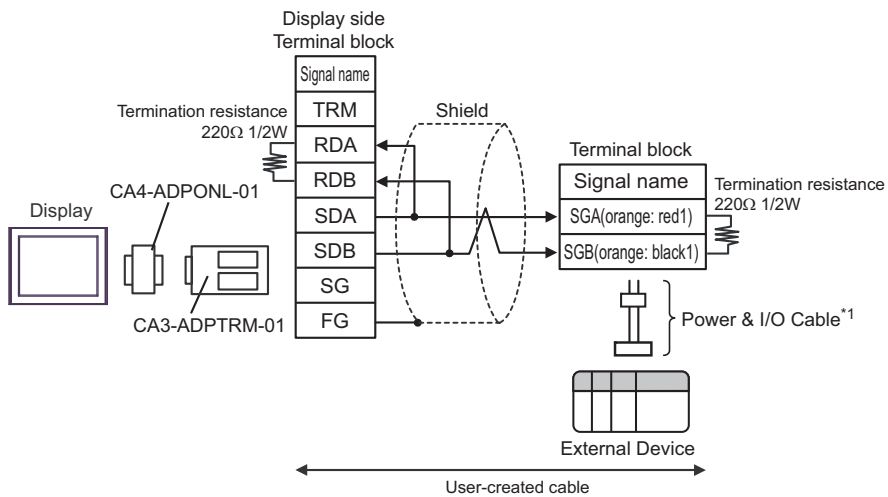

- *1 We recommend the IAI Corporation CB-ERC-PWBIO□□□□ or CB-ERC-PWBIO□□□□-RB as the Power & I/O Cable.

- 1:n connection

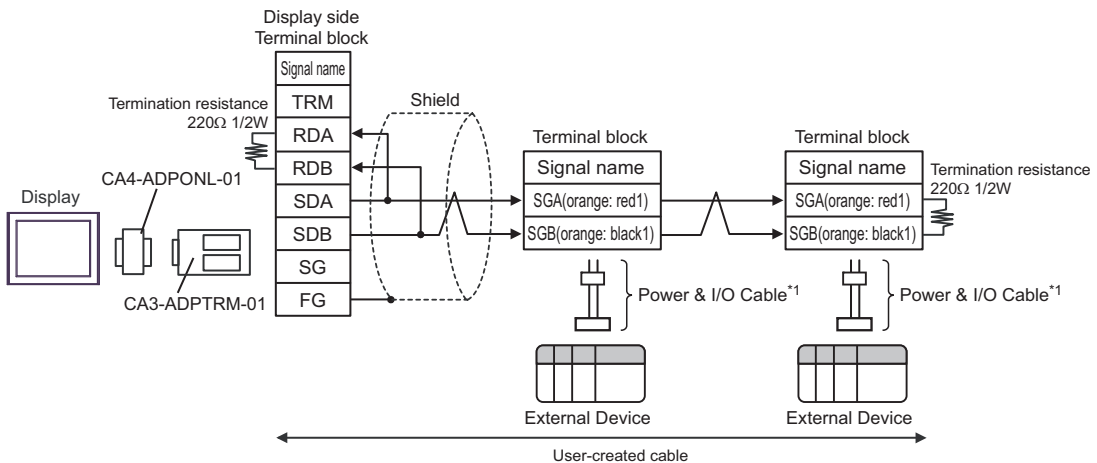


- *1 We recommend the IAI Corporation CB-ERC-PWBIO□□□□ or CB-ERC-PWBIO□□□□-RB as the Power & I/O Cable.

NOTE

- Cable length: 100m or less


5D)

- 1:1 connection

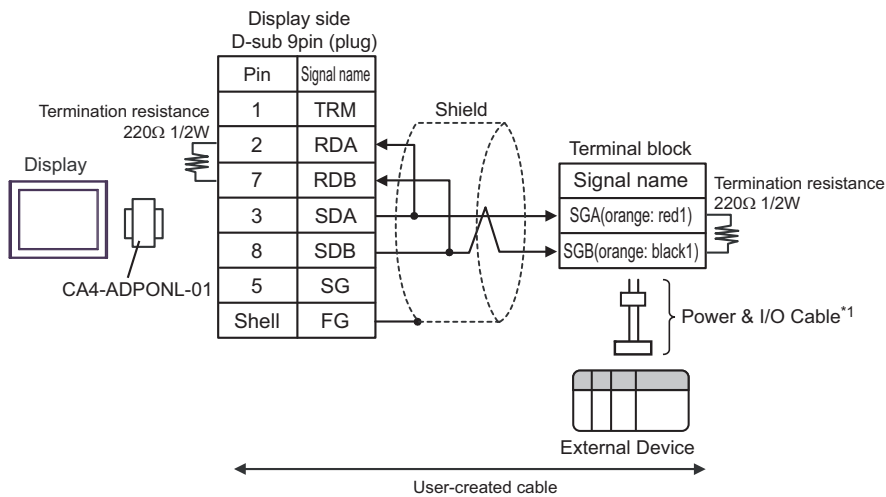

- *1 We recommend the IAI Corporation CB-ERC-PWBIO□□□□ or CB-ERC-PWBIO□□□□-RB as the Power & I/O Cable.

- 1:n connection

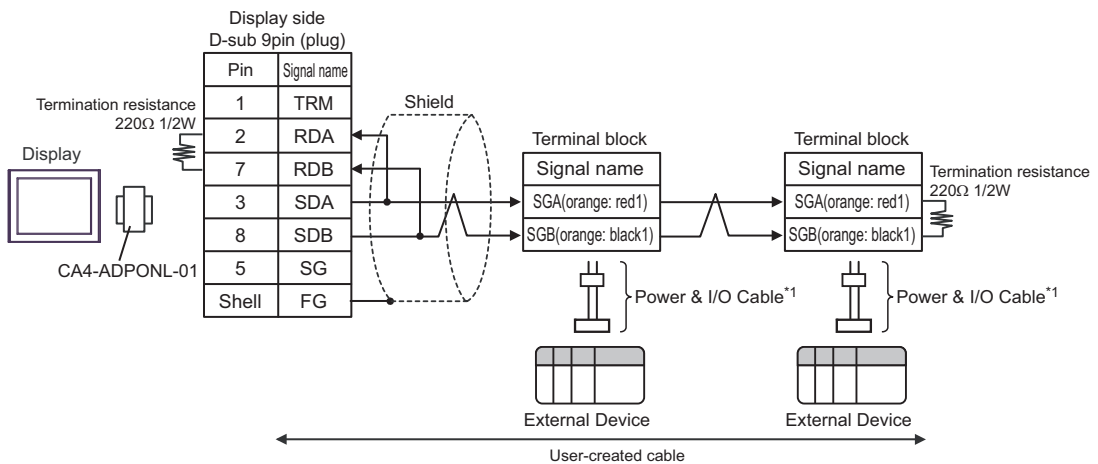


- *1 We recommend the IAI Corporation CB-ERC-PWBIO□□□□ or CB-ERC-PWBIO□□□□-RB as the Power & I/O Cable.

NOTE

- Cable length: 100m or less


5E)

- 1:1 connection

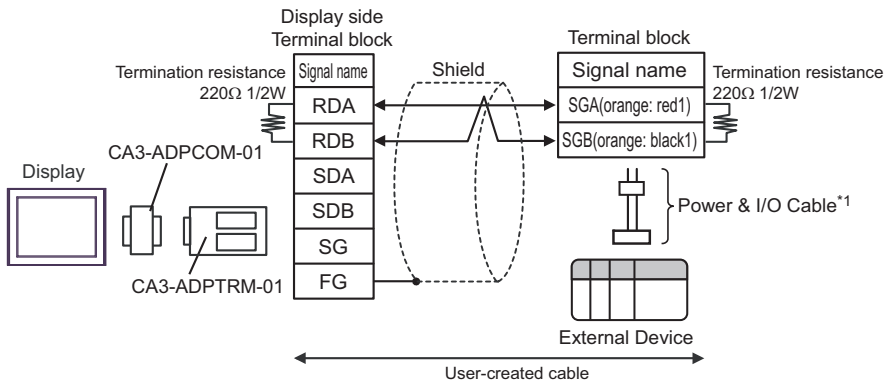

*1 We recommend the IAI Corporation CB-ERC-PWBIO□□□□ or CB-ERC-PWBIO□□□□-RB as the Power & I/O Cable.

- 1:n connection

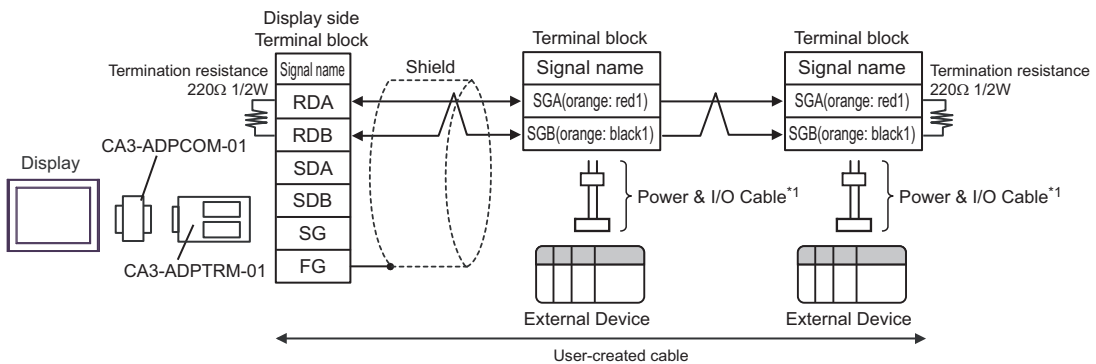


*1 We recommend the IAI Corporation CB-ERC-PWBIO□□□□ or CB-ERC-PWBIO□□□□-RB as the Power & I/O Cable.

NOTE

- Cable length: 100m or less


5F)

- 1:1 connection

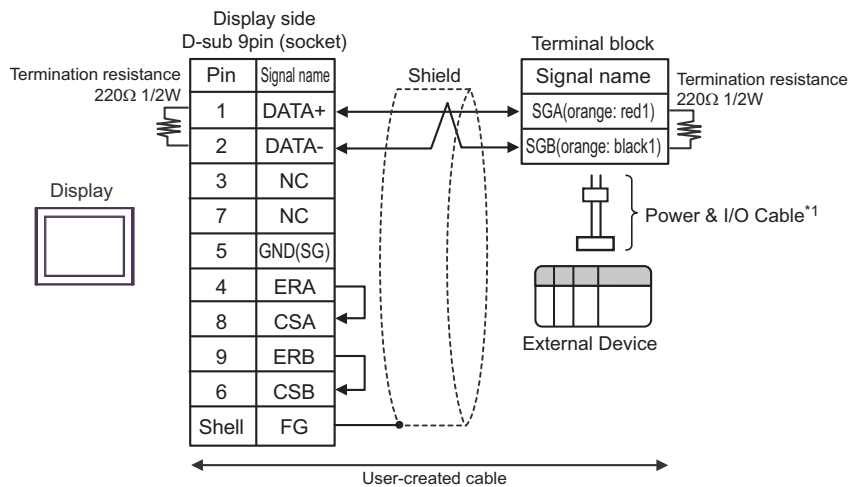

- *1 We recommend the IAI Corporation CB-ERC-PWBIO□□□□ or CB-ERC-PWBIO□□□□-RB as the Power & I/O Cable.

- 1:n connection

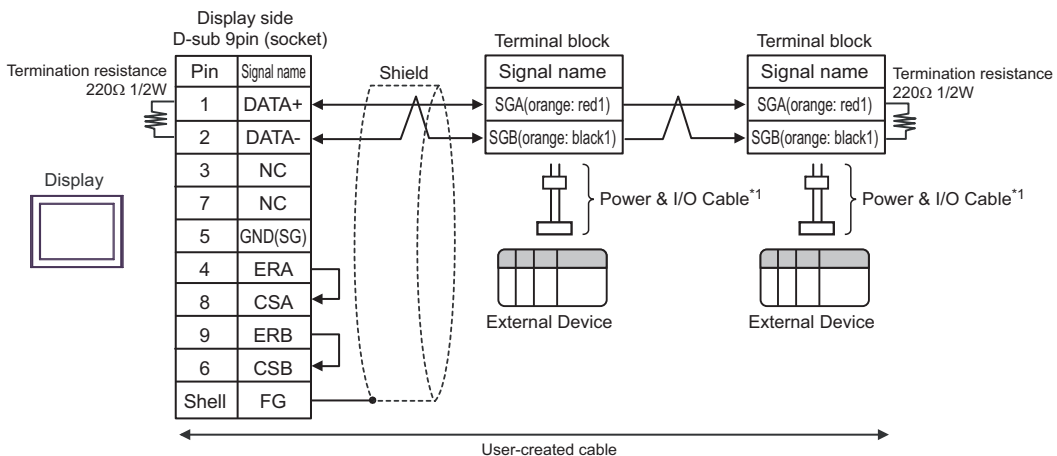


- *1 We recommend the IAI Corporation CB-ERC-PWBIO□□□□ or CB-ERC-PWBIO□□□□-RB as the Power & I/O Cable.

NOTE

- Cable length: 100m or less

5G)


- 1:1 connection

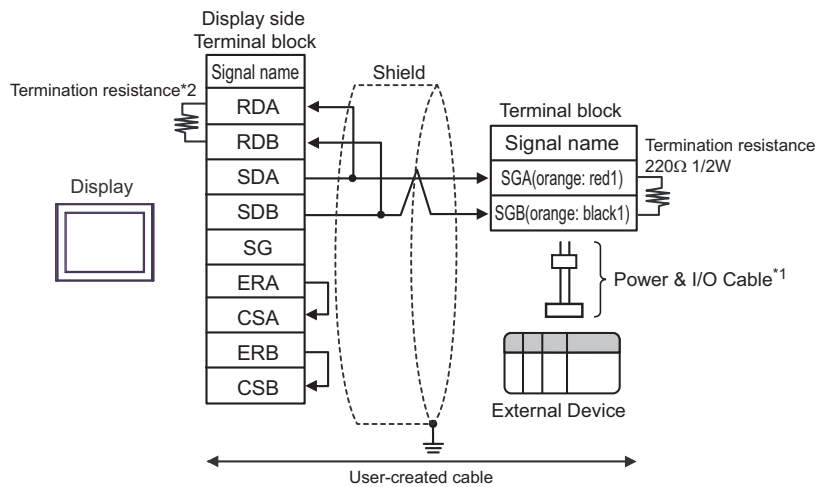

- *1 We recommend the IAI Corporation CB-ERC-PWBIO□□□ or CB-ERC-PWBIO□□□-RB as the Power & I/O Cable.
- *2 The resistance in the Display is used as the termination resistance. Set the value of the DIP Switch on the rear of the Display as shown in the table below.

DIP Switch No.	Set Value
1	OFF
2	OFF
3	OFF
4	ON

- 1:n connection

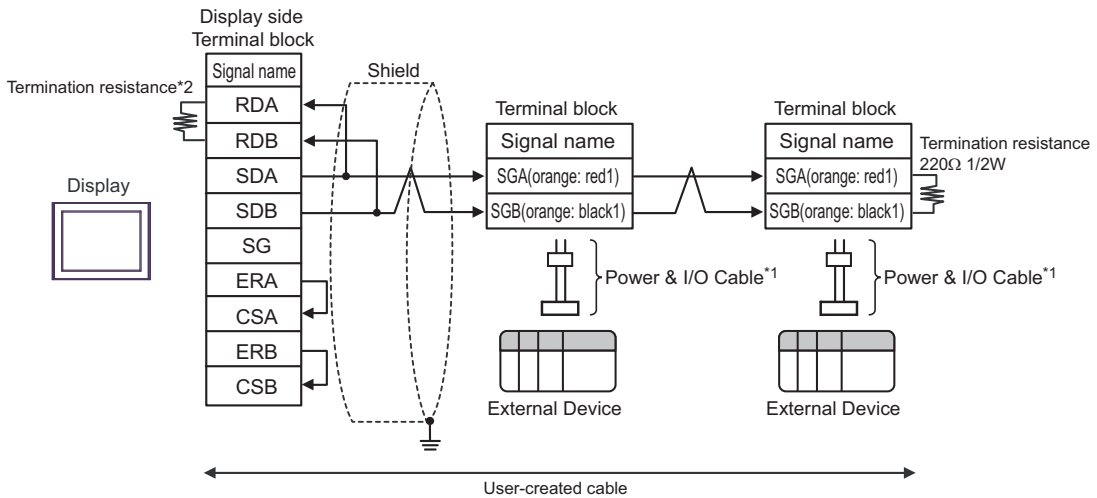

- *1 We recommend the IAI Corporation CB-ERC-PWBIO□□□□ or CB-ERC-PWBIO□□□□-RB as the Power & I/O Cable.
- *2 The resistance in the Display is used as the termination resistance. Set the value of the DIP Switch on the rear of the Display as shown in the table below.


DIP Switch No.	Set Value
1	OFF
2	OFF
3	OFF
4	ON

NOTE

- Cable length: 100m or less


5H)

- 1:1 connection

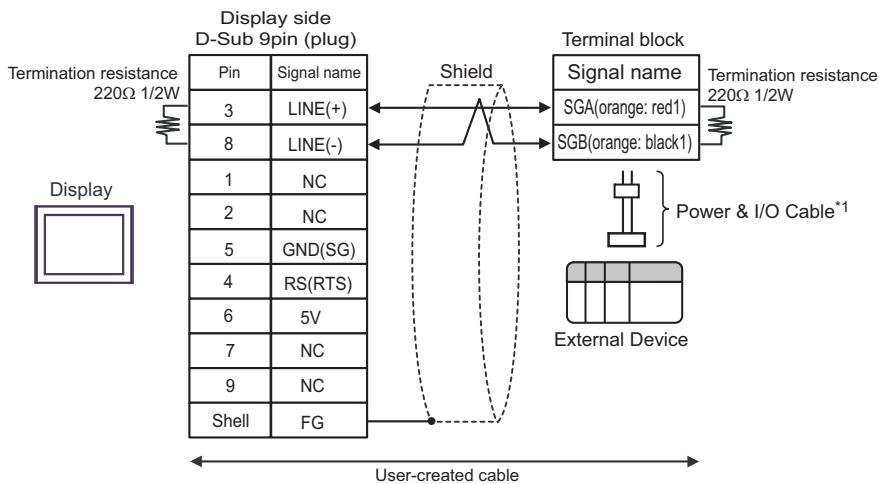

- *1 We recommend the IAI Corporation CB-ERC-PWBIO□□□□ or CB-ERC-PWBIO□□□□-RB as the Power & I/O Cable.

- 1:n connection

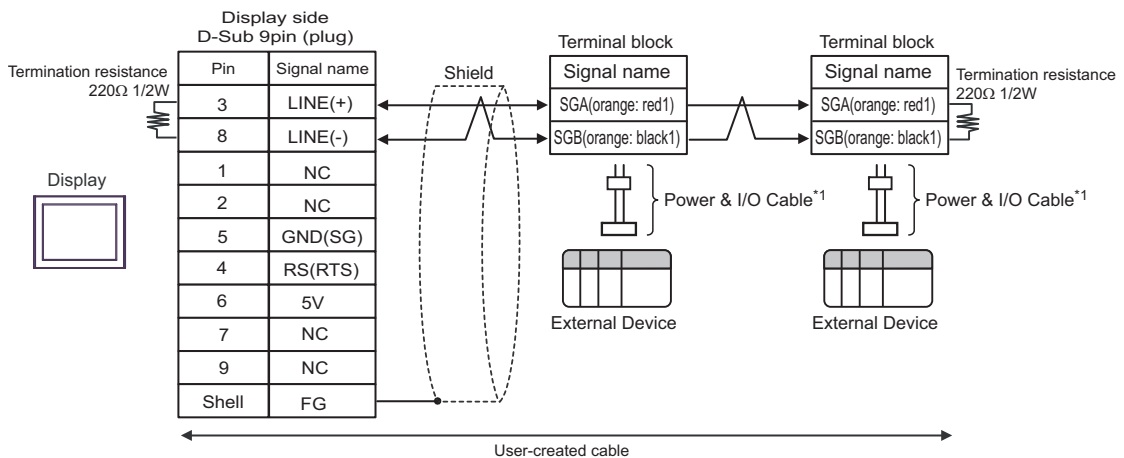

- *1 We recommend the IAI Corporation CB-ERC-PWBIO□□□□ or CB-ERC-PWBIO□□□□-RB as the Power & I/O Cable.

IMPORTANT


- The 5V output (Pin #6) on the Display is the power for the Siemens AG's PROFIBUS connector. Do not use it for other devices.

NOTE

- In COM on the GP-4107, the SG and FG terminals are isolated.
- Cable length: 100m or less


5l)

- 1:1 connection

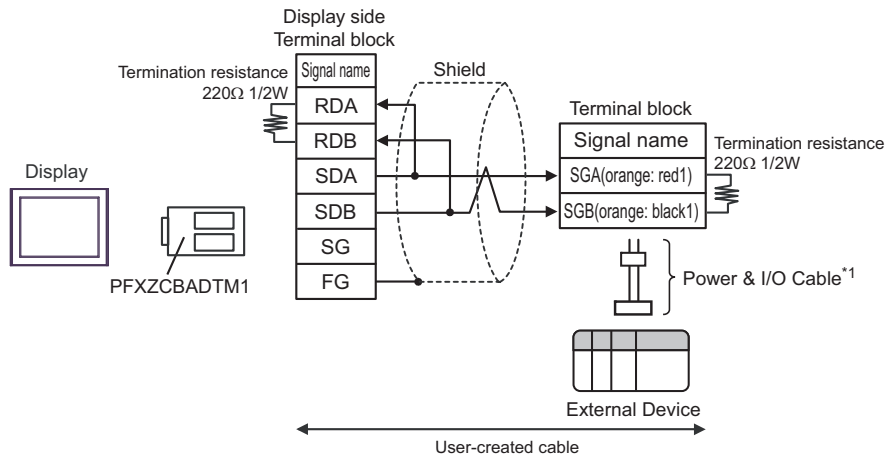

- *1 We recommend the IAI Corporation CB-ERC-PWBIO□□□□ or CB-ERC-PWBIO□□□□-RB as the Power & I/O Cable.

- 1:n connection

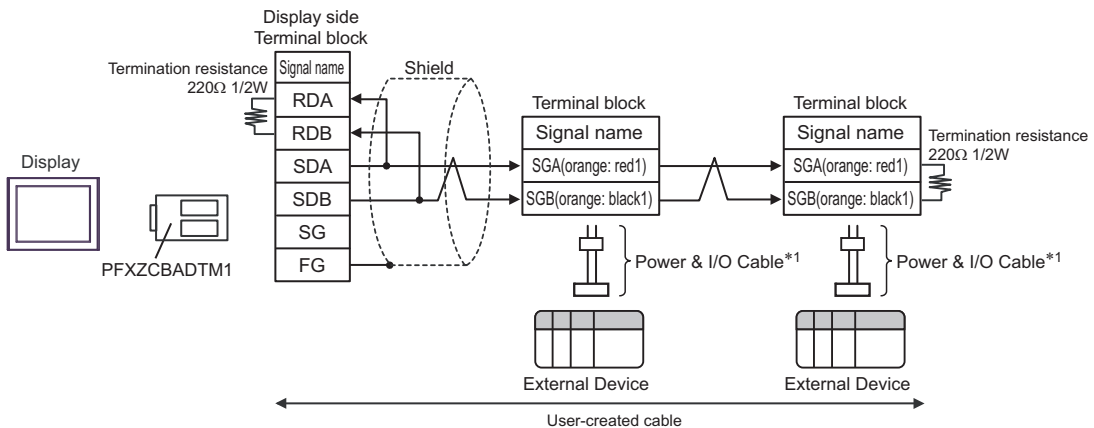


- *1 We recommend the IAI Corporation CB-ERC-PWBIO□□□□ or CB-ERC-PWBIO□□□□-RB as the Power & I/O Cable.

NOTE

- Cable length: 100m or less


5J)

- 1:1 connection

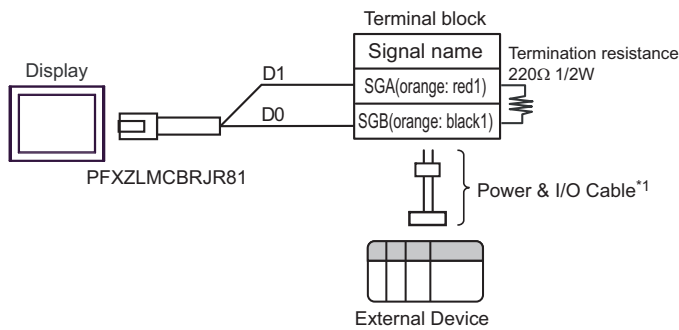

- *1 We recommend the IAI Corporation CB-ERC-PWBIO□□□□ or CB-ERC-PWBIO□□□□-RB as the Power & I/O Cable.


- 1:n connection

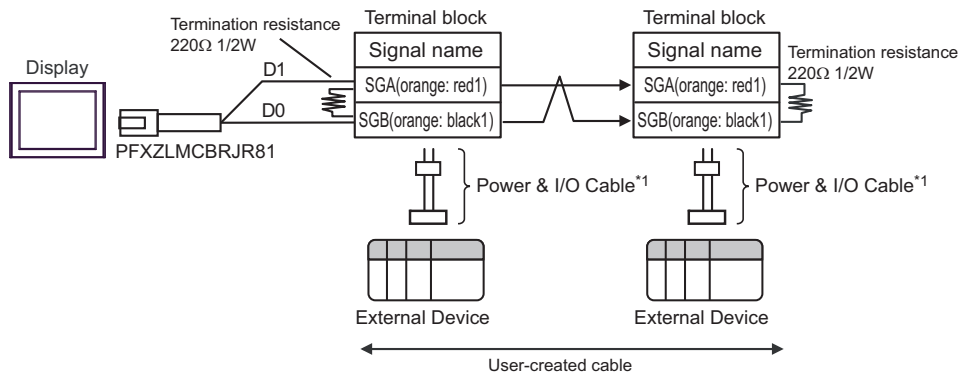

- *1 We recommend the IAI Corporation CB-ERC-PWBIO□□□□ or CB-ERC-PWBIO□□□□-RB as the Power & I/O Cable


5K)

- 1:1 connection

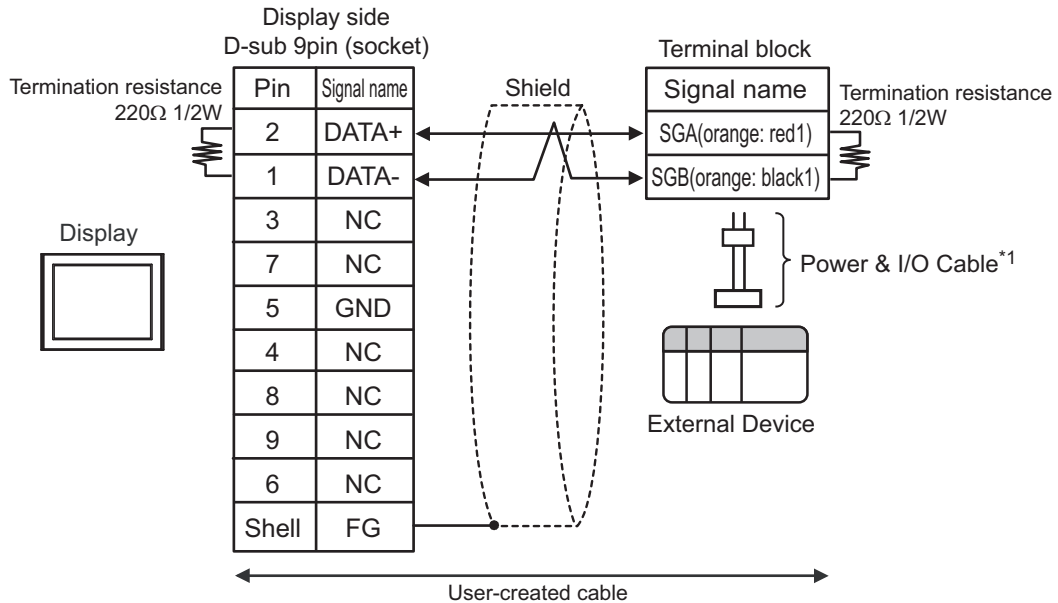

- *1 We recommend the IAI Corporation CB-ERC-PWBIO□□□□ or CB-ERC-PWBIO□□□□-RB as the Power & I/O Cable.

- 1:n connection

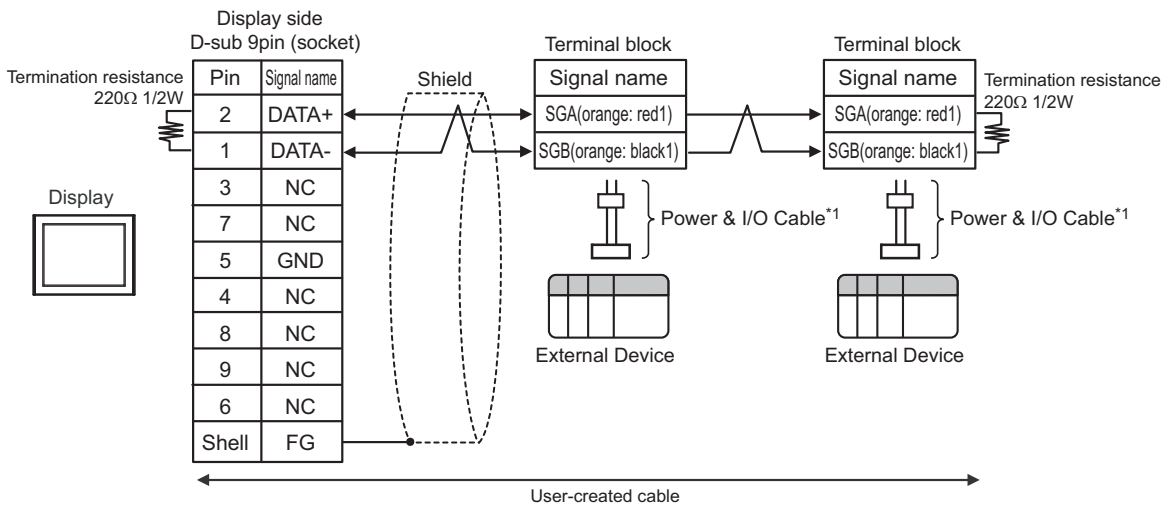

- *1 We recommend the IAI Corporation CB-ERC-PWBIO□□□□ or CB-ERC-PWBIO□□□□-RB as the Power & I/O Cable.

NOTE

- Cable length: 100m or less

5.6 Cable Diagram 6

Display (Connection Port)	Cable		Notes
GP3000 (COM1) GP4000 ^{*1} (COM1) SP5000 ^{*2} (COM1/2) SP-5B00 (COM1) ST3000 (COM1) ST6000 (COM1) STM6000 (COM1) STC6000 (COM1) ET6000 (COM1) LT3000 (COM1) IPC ^{*3} PC/AT	6A	User-created cable 1 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable 2 + Terminal block + Power & I/O Cable by IAI Corporation CB-ERC-PWBIO□□□ or CB-ERC-PWBIO□□□-RB	Cable length from Display to SIO converter: 15m or less Cable length from SIO converter to External Device: 100m or less
	6B	User-created cable 1 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable 2 + Power & I/O Cable by IAI Corporation CB-ERC-PWBIO□□□ or CB-ERC-PWBIO□□□-RB	
	6C	User-created cable 1 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable 2 + Junction by AMP ^{*4} 5-1473574-4 + User-created cable 3 + Terminal block + Power & I/O Cable by IAI Corporation CB-ERC-PWBIO□□□ or CB-ERC-PWBIO□□□-RB	

Display (Connection Port)	Cable		Notes
GP3000 (COM1) GP4000* ⁵ (COM1) SP5000* ⁶ (COM1/2) SP-5B00 (COM1) ST3000 (COM1) ST6000 (COM1) STM6000 (COM1) STC6000 (COM1) ET6000 (COM1) LT3000 (COM1) IPC* ⁷ PC/AT	6D	User-created cable 1 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable 2 + Junction by AMP* ⁴ 5-1473574-4 + User-created cable 3 + Terminal block + Power & I/O Cable by IAI Corporation CB-ERC-PWBIO□□□ or CB-ERC-PWBIO□□□-RB	Cable length from Display to SIO converter: 15m or less Cable length from SIO converter to External Device: 100m or less
	6E	User-created cable 1 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable 2 + Insulated PIO terminal block by IAI Corporation RC□-TU-PIO-□ + Power & I/O Cable by IAI Corporation CB-ERC-PWBIO□□□-H6 or CB-ERC-PWBIO□□□-RB-H6	
GP-4105 (COM1) GP-4115T (COM1) GP-4115T3 (COM1)	6F	User-created cable 1 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable 2 + Terminal block + Power & I/O Cable by IAI Corporation CB-ERC-PWBIO□□□ or CB-ERC-PWBIO□□□-RB	Cable length from Display to SIO converter: 15m or less Cable length from SIO converter to External Device: 100m or less

Display (Connection Port)	Cable		Notes
GP-4105 (COM1) GP-4115T (COM1) GP-4115T3 (COM1)	6G	User-created cable 1 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable 2 + Power & I/O Cable by IAI Corporation CB-ERC-PWBIO□□□ or CB-ERC-PWBIO□□□-RB	Cable length from Display to SIO converter: 15m or less Cable length from SIO converter to External Device: 100m or less
	6H	User-created cable 1 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable 2 + Junction by AMP*4 5-1473574-4 + User-created cable 3 + Terminal block + Power & I/O Cable by IAI Corporation CB-ERC-PWBIO□□□ or CB-ERC-PWBIO□□□-RB	
	6I	User-created cable 1 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable 2 + Junction by AMP*4 5-1473574-4 + User-created cable 3 + Terminal block + Power & I/O Cable by IAI Corporation CB-ERC-PWBIO□□□ or CB-ERC-PWBIO□□□-RB	

Display (Connection Port)	Cable		Notes
GP-4105 (COM1) GP-4115T (COM1) GP-4115T3 (COM1)	6J	User-created cable 1 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable 2 + Insulated PIO terminal block by IAI Corporation RC□-TU-PIO-□ + Power & I/O Cable by IAI Corporation CB-ERC-PWBIO□□□-H6 or CB-ERC-PWBIO□□□-RB-H6	Cable length from Display to SIO converter: 15m or less Cable length from SIO converter to External Device: 100m or less
LT-4*01TM (COM1) LT-Rear Module (COM1)	6K	RJ45 RS-232C Cable (5m) by Pro-face PFXZLMCBJR21 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable 2 + Terminal block + Power & I/O Cable by IAI Corporation CB-ERC-PWBIO□□□ or CB-ERC-PWBIO□□□-RB	Cable length from Display to SIO converter: 5m or less Cable length from SIO converter to External Device: 100m or less
	6L	RJ45 RS-232C Cable (5m) by Pro-face PFXZLMCBJR21 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable 2 + Power & I/O Cable by IAI Corporation CB-ERC-PWBIO□□□ or CB-ERC-PWBIO□□□-RB	

Display (Connection Port)	Cable		Notes
LT-4*01TM (COM1) LT-Rear Module (COM1)	6M	RJ45 RS-232C Cable (5m) by Pro-face PFXZLMCBJR21 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable 1 + Junction by AMP*4 5-1473574-4 + User-created cable 2 + Terminal block + Power & I/O Cable by IAI Corporation CB-ERC-PWBIO□□□ or CB-ERC-PWBIO□□□-RB	Cable length from Display to SIO converter: 5m or less Cable length from SIO converter to External Device: 100m or less
	6N	RJ45 RS-232C Cable (5m) by Pro-face PFXZLMCBJR21 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable 1 + Junction by AMP*4 5-1473574-4 + User-created cable 2 + Terminal block + Power & I/O Cable by IAI Corporation CB-ERC-PWBIO□□□ or CB-ERC-PWBIO□□□-RB	
	6O	RJ45 RS-232C Cable (5m) by Pro-face PFXZLMCBJR21 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable + Insulated PIO terminal block by IAI Corporation RC□-TU-PIO-□ + Power & I/O Cable by IAI Corporation CB-ERC-PWBIO□□□-H6 or CB-ERC-PWBIO□□□-RB-H6	

*1 All GP4000 models except GP-4100 series and GP-4203T

*2 Except SP-5B00


- *3 Only the COM port which can communicate by RS-232C can be used.
 - IPC COM Port (page 5)
- *4 When using more than one junction by AMP, user-created cable 4 is required.
- *5 All GP4000 models except GP-4100 series and GP-4203T
- *6 Except SP-5B00
- *7 Only the COM port which can communicate by RS-232C can be used.
 - IPC COM Port (page 5)

NOTE

- When connecting to 3 or more External Devices, use link connection terminal block or junction by AMP.
-


6A)

- 1:1 connection

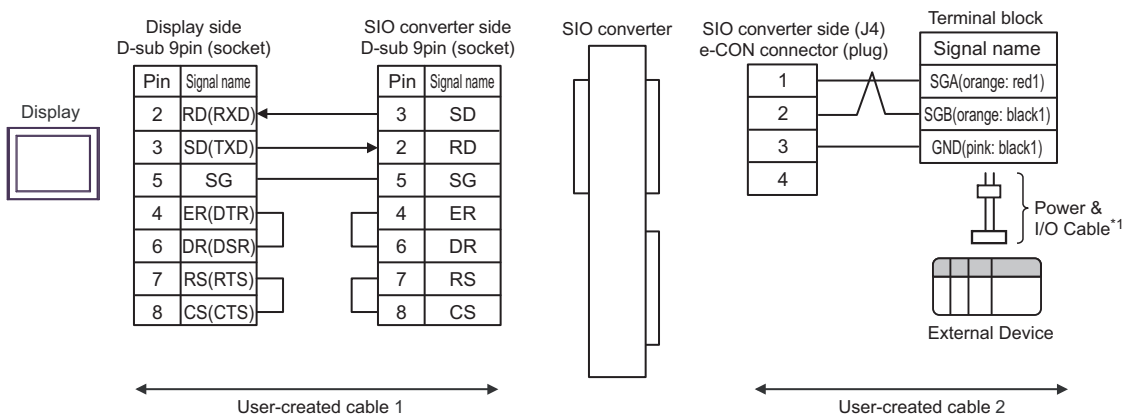

- *1 We recommend the IAI Corporation CB-ERC-PWBIO□□□□ or CB-ERC-PWBIO□□□□-RB as the Power & I/O Cable.

- 1:n connection

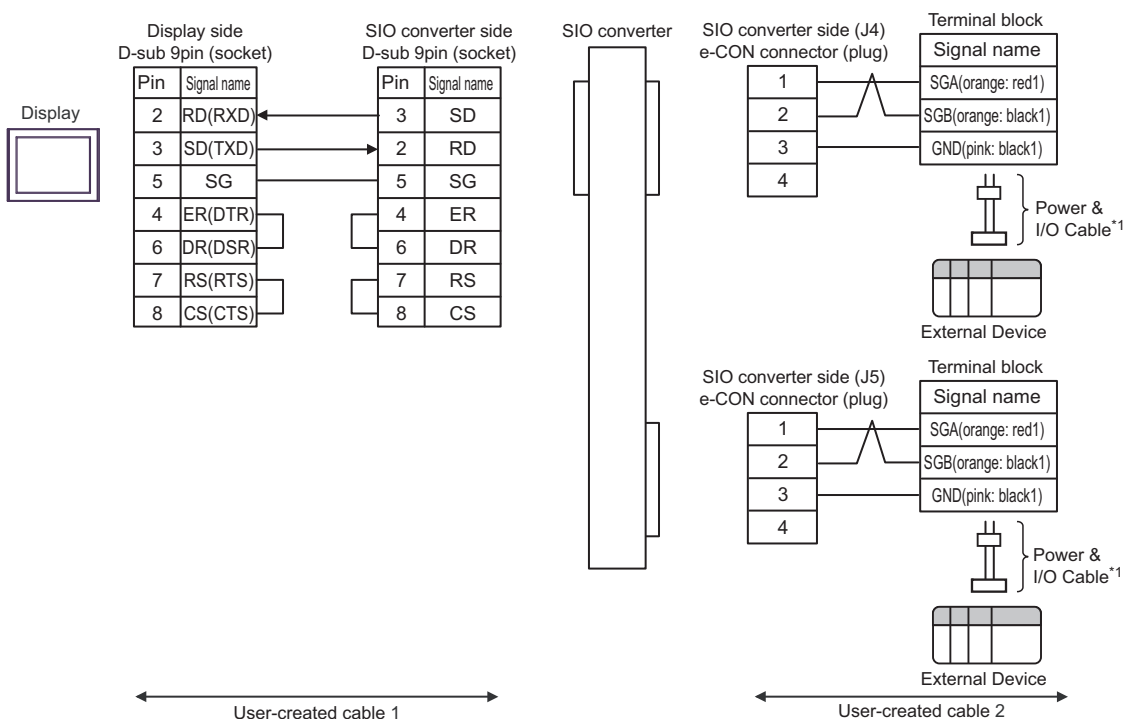


- *1 We recommend the IAI Corporation CB-ERC-PWBIO□□□□ or CB-ERC-PWBIO□□□□-RB as the Power & I/O Cable.

NOTE

- Cable length from Display to SIO converter: 15m or less
- Cable length from SIO converter to External Device: 100m or less


6B)

- 1:1 connection

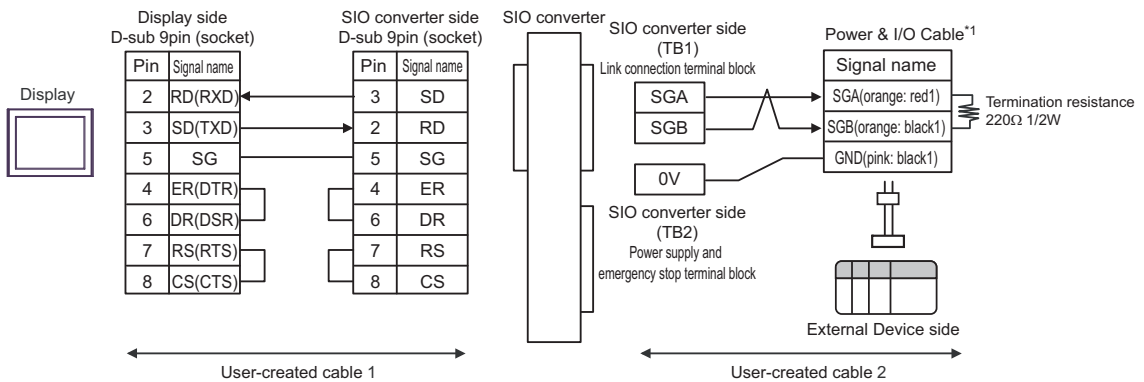

- *1 We recommend the IAI Corporation CB-ERC-PWBIO□□□□ or CB-ERC-PWBIO□□□□-RB as the Power & I/O Cable.

- 1:n connection

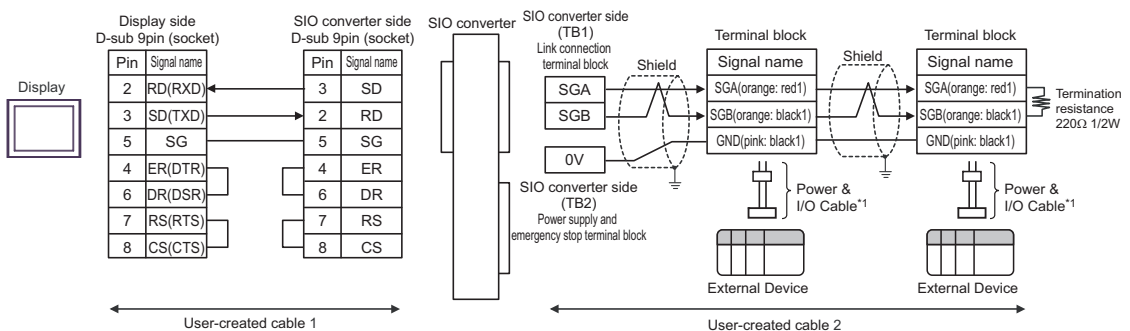


- *1 We recommend the IAI Corporation CB-ERC-PWBIO□□□□ or CB-ERC-PWBIO□□□□-RB as the Power & I/O Cable.

NOTE

- When connecting to more than one equipment, connect the terminal block.
- Cable length from Display to SIO converter: 15m or less
- Cable length from SIO converter to External Device: 100m or less


6C)

- 1:1 connection

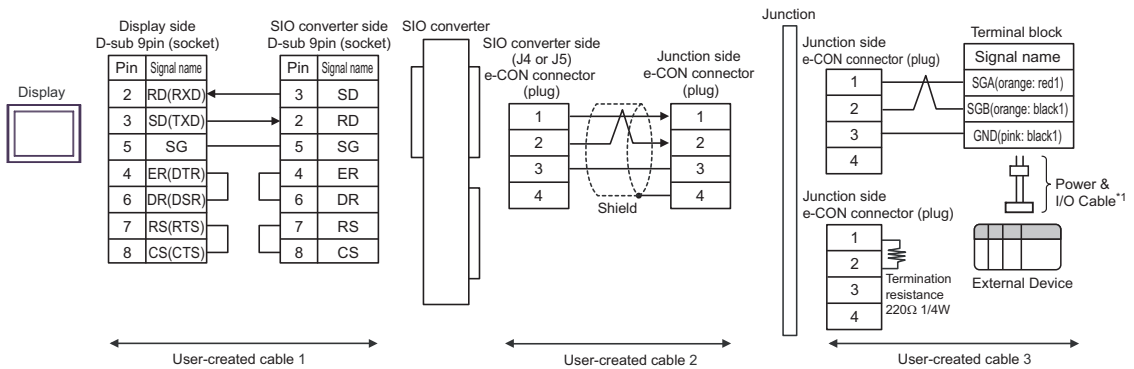

*1 We recommend the IAI Corporation CB-ERC-PWBIO□□□□ or CB-ERC-PWBIO□□□□-RB as the Power & I/O Cable.

- 1:n connection

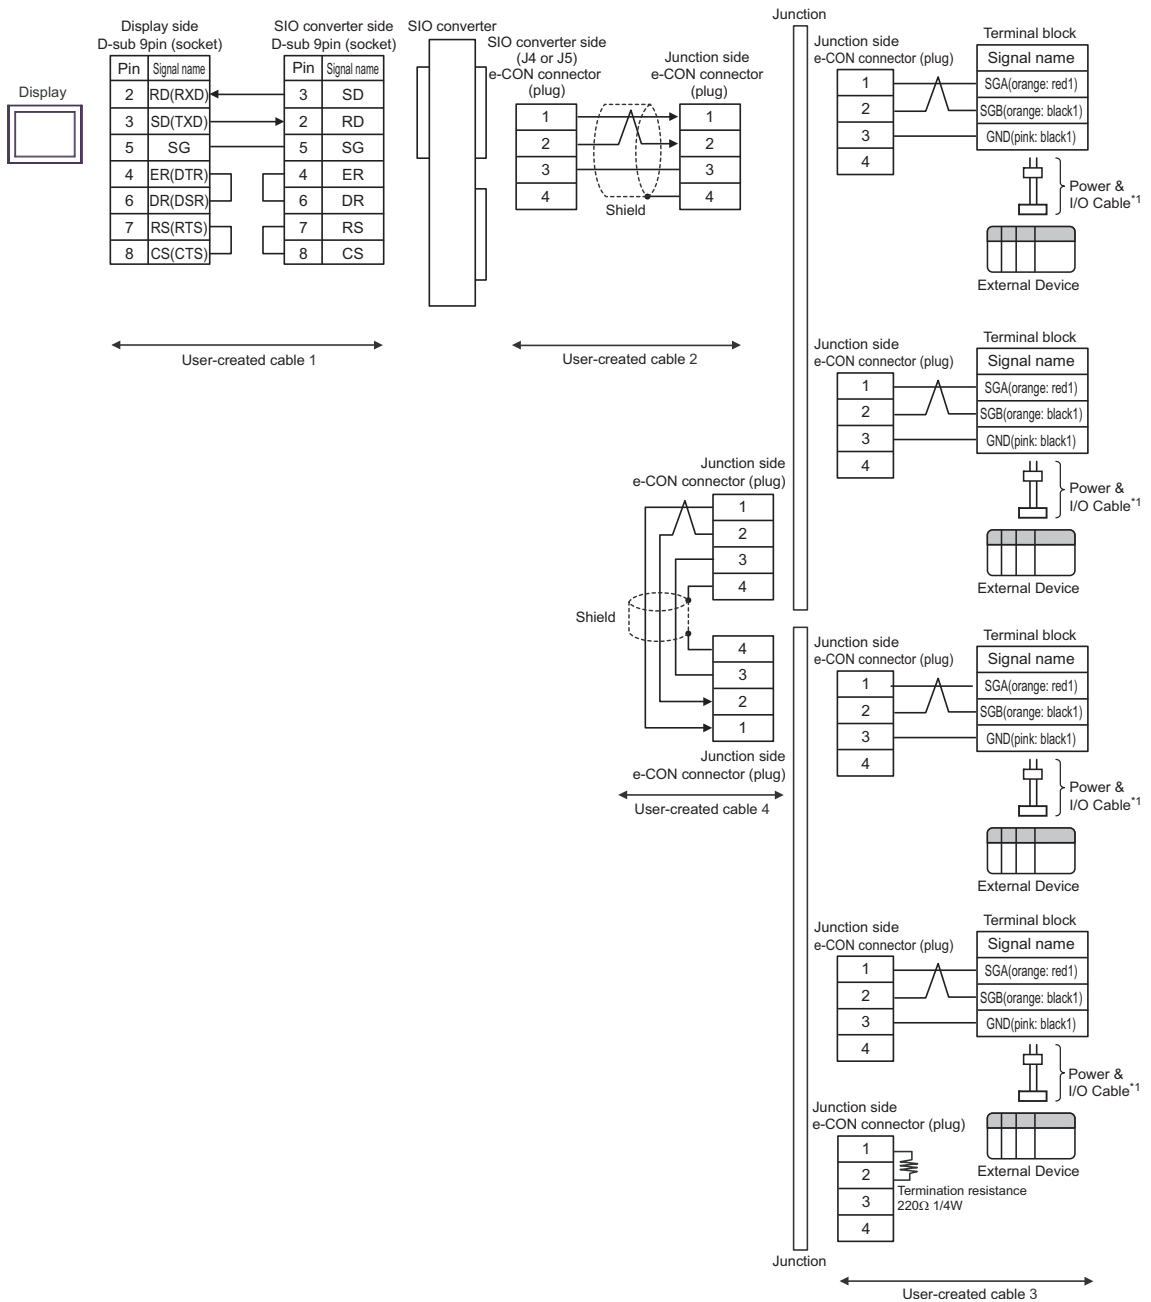


*1 We recommend the IAI Corporation CB-ERC-PWBIO□□□□ or CB-ERC-PWBIO□□□□-RB as the Power & I/O Cable.

NOTE

- Cable length from Display to SIO converter: 15m or less
- Cable length from SIO converter to External Device: 100m or less


6D)

- 1:1 connection

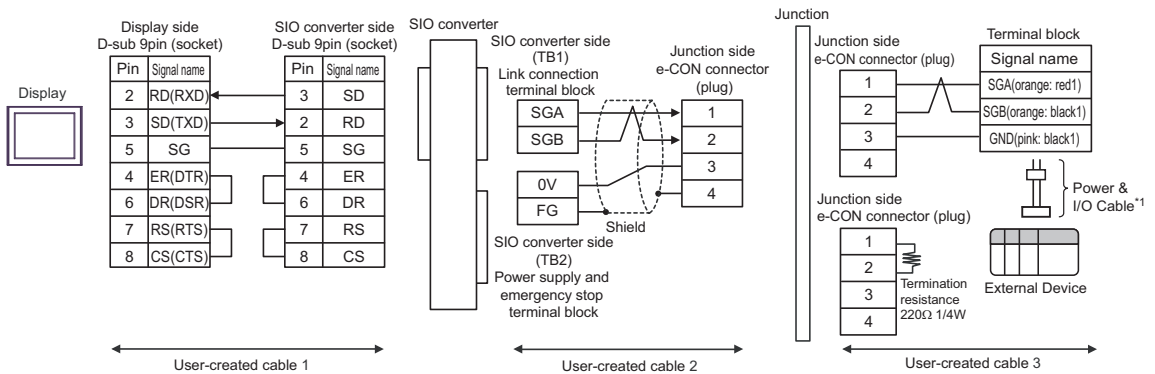

*1 We recommend the IAI Corporation CB-ERC-PWBIO□□□□ or CB-ERC-PWBIO□□□□-RB as the Power & I/O Cable.

- 1:n connection

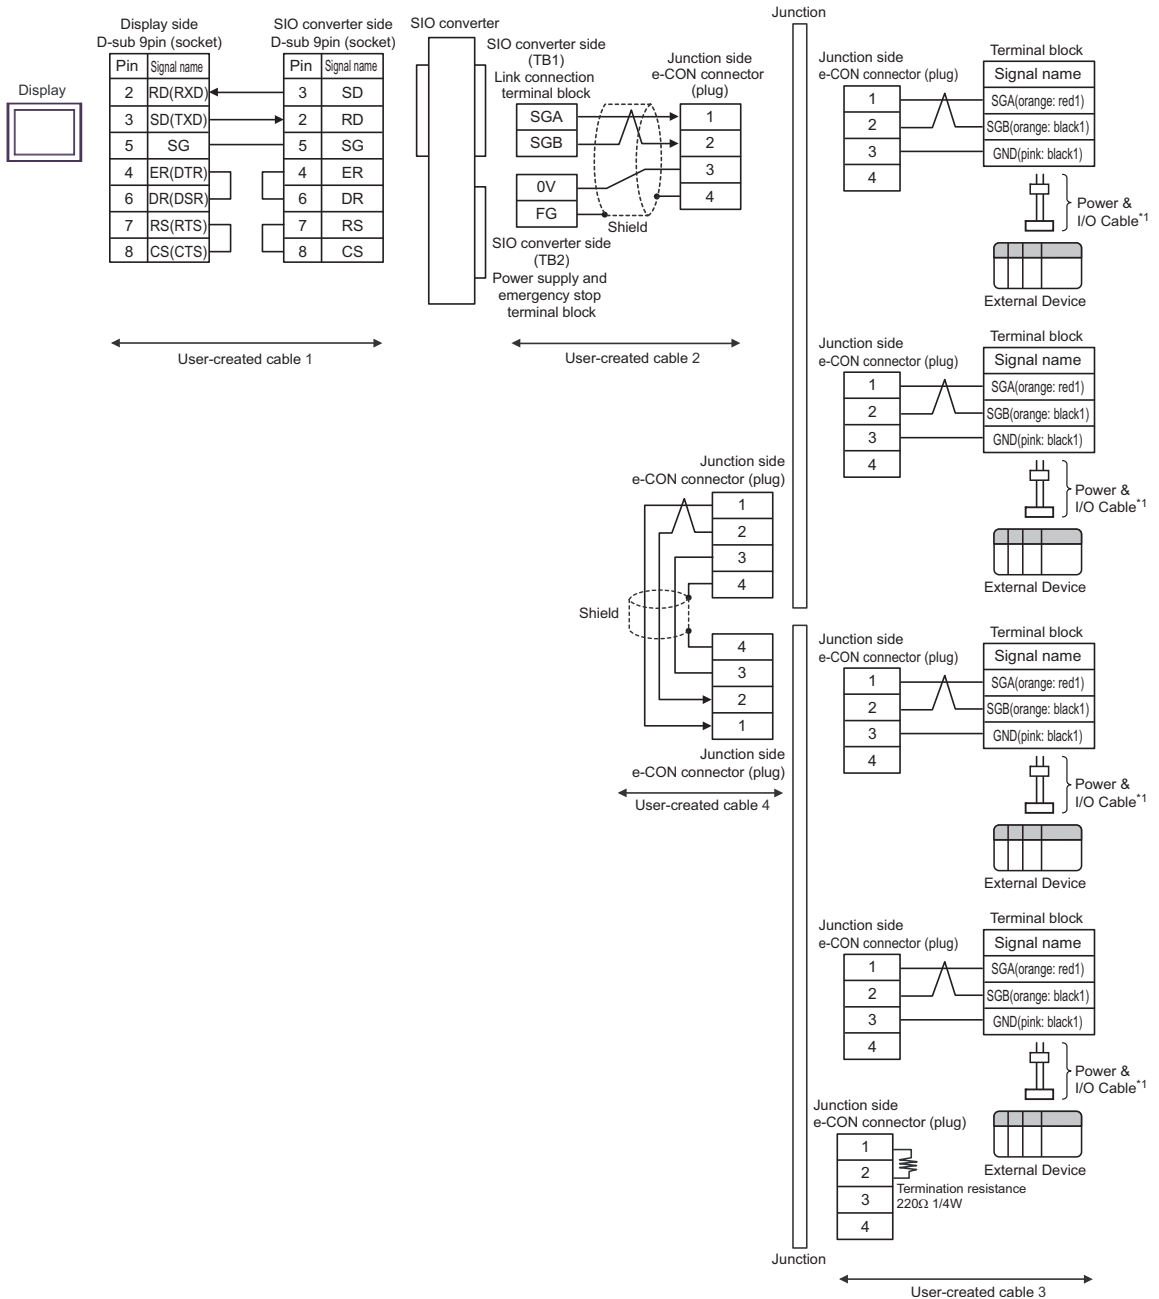


*1 We recommend the IAI Corporation CB-ERC-PWBIO□□□□ or CB-ERC-PWBIO□□□□-RB as the Power & I/O Cable.

NOTE

- Cable length from Display to SIO converter: 15m or less
- Cable length from SIO converter to External Device: 100m or less


6E)

- 1:1 connection

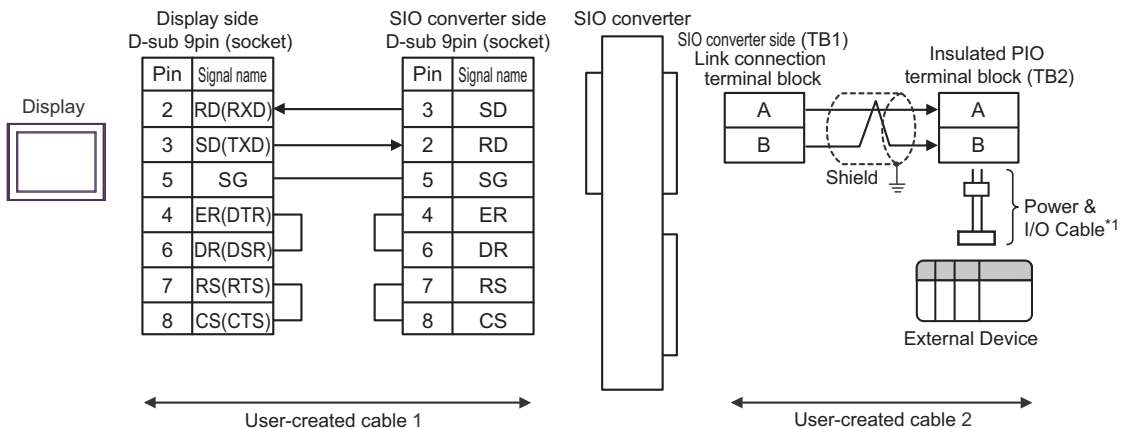

- *1 We recommend the IAI Corporation CB-ERC-PWBIO□□□-H6 or CB-ERC-PWBIO□□□-RB-H6 as the Power & I/O Cable.

- 1:n connection

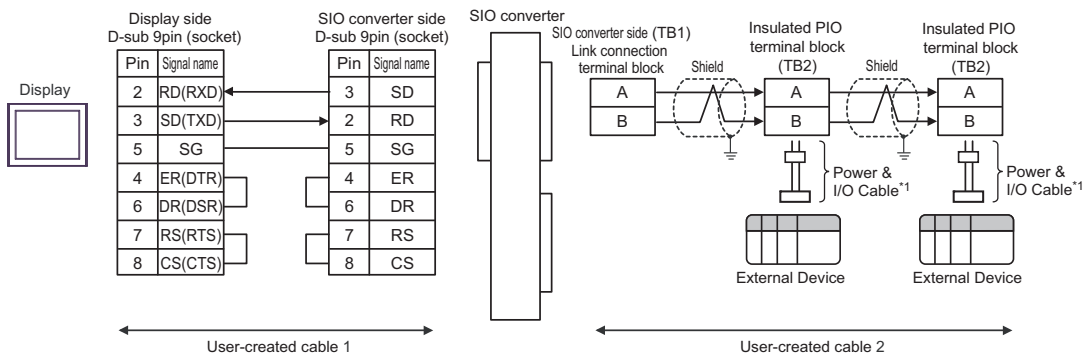


- *1 We recommend the IAI Corporation CB-ERC-PWBIO□□□-H6 or CB-ERC-PWBIO□□□-RB-H6 as the Power & I/O Cable.

NOTE

- Set the termination resistance connection switch of the PIO terminal block on the end to RTON side.
- Cable length from Display to SIO converter: 15m or less
- Cable length from SIO converter to External Device: 100m or less


6F)

- 1:1 connection

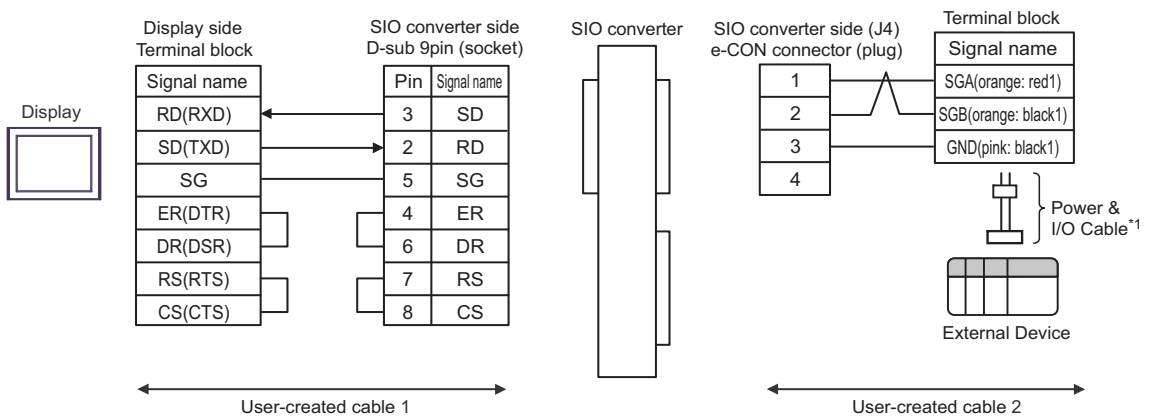

- *1 We recommend the IAI Corporation CB-ERC-PWBIO□□□□ or CB-ERC-PWBIO□□□□-RB as the Power & I/O Cable.

- 1:n connection

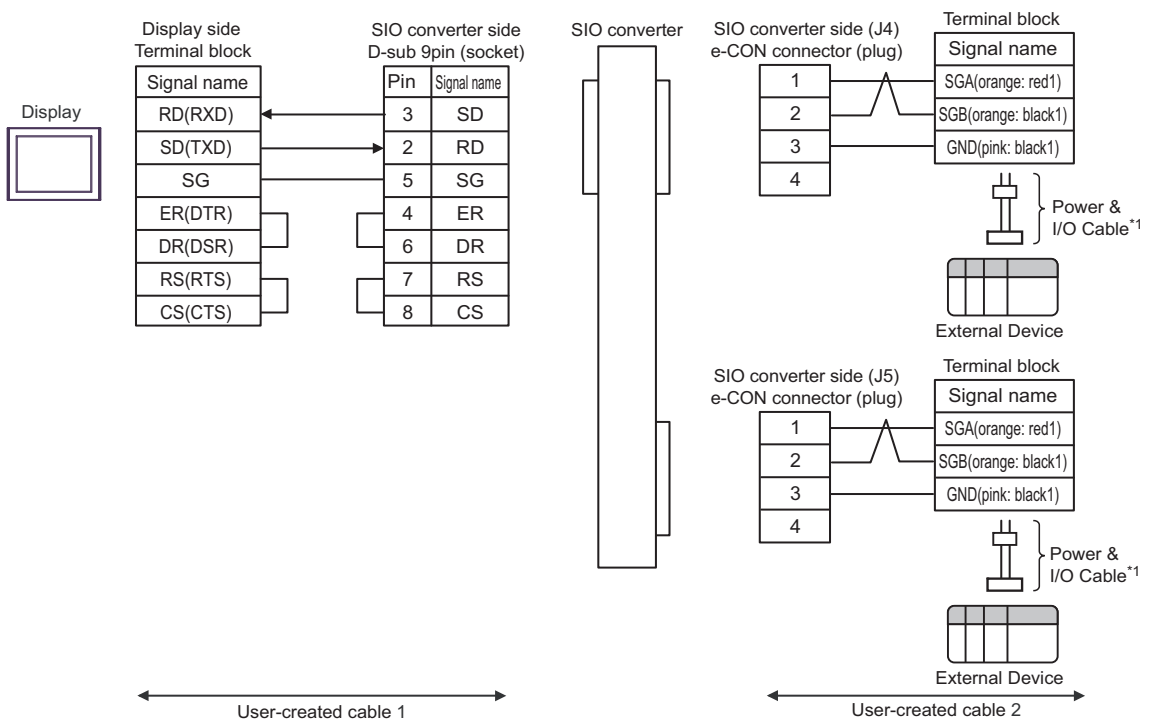


- *1 We recommend the IAI Corporation CB-ERC-PWBIO□□□□ or CB-ERC-PWBIO□□□□-RB as the Power & I/O Cable.

NOTE

- Cable length from Display to SIO converter: 15m or less
- Cable length from SIO converter to External Device: 100m or less


6G)

- 1:1 connection

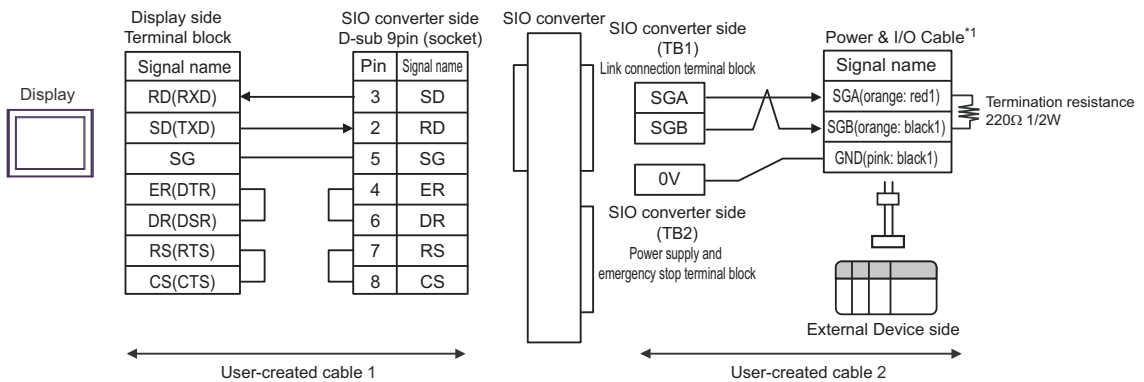

- *1 We recommend the IAI Corporation CB-ERC-PWBIO□□□□ or CB-ERC-PWBIO□□□□-RB as the Power & I/O Cable.

- 1:n connection

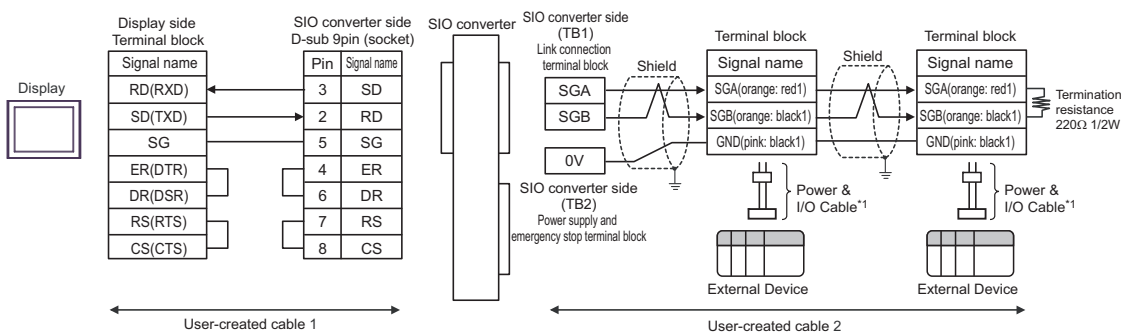


- *1 We recommend the IAI Corporation CB-ERC-PWBIO□□□□ or CB-ERC-PWBIO□□□□-RB as the Power & I/O Cable.

NOTE

- When connecting to more than one equipment, connect the terminal block.
- Cable length from Display to SIO converter: 15m or less
- Cable length from SIO converter to External Device: 100m or less


6H)

- 1:1 connection

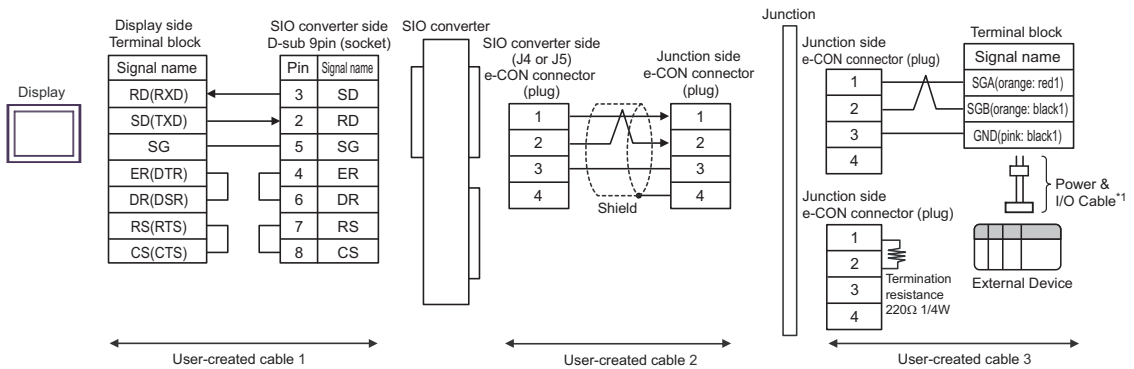

*1 We recommend the IAI Corporation CB-ERC-PWBIO□□□□ or CB-ERC-PWBIO□□□□-RB as the Power & I/O Cable.

- 1:n connection

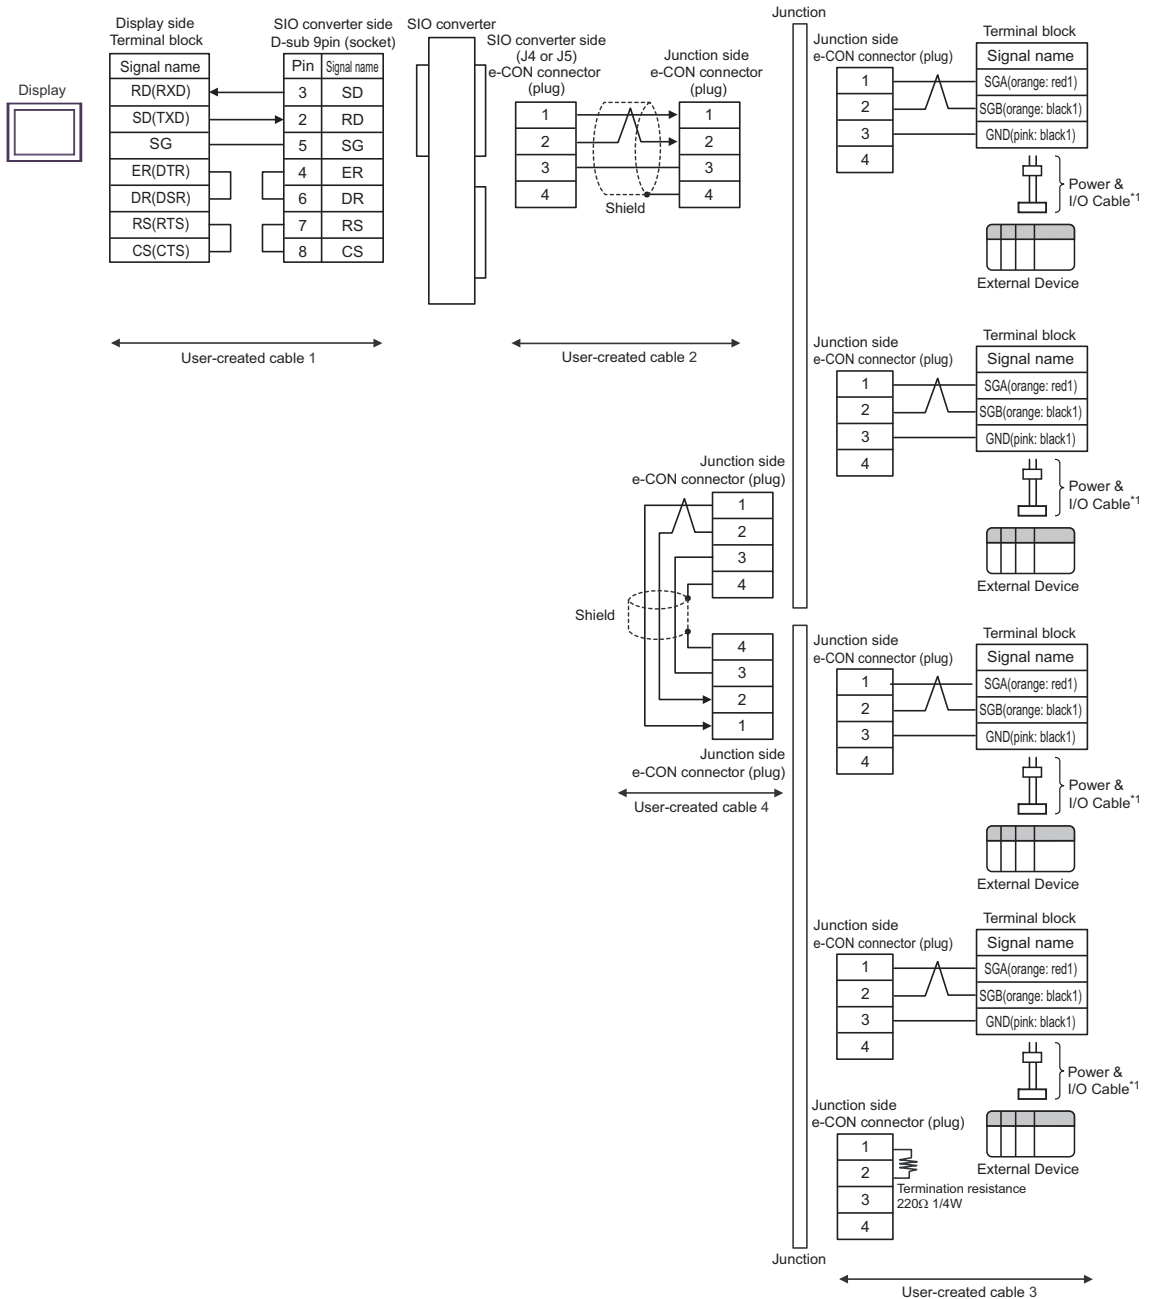


*1 We recommend the IAI Corporation CB-ERC-PWBIO□□□□ or CB-ERC-PWBIO□□□□-RB as the Power & I/O Cable.

NOTE

- Cable length from Display to SIO converter: 15m or less
- Cable length from SIO converter to External Device: 100m or less


6I)

- 1:1 connection

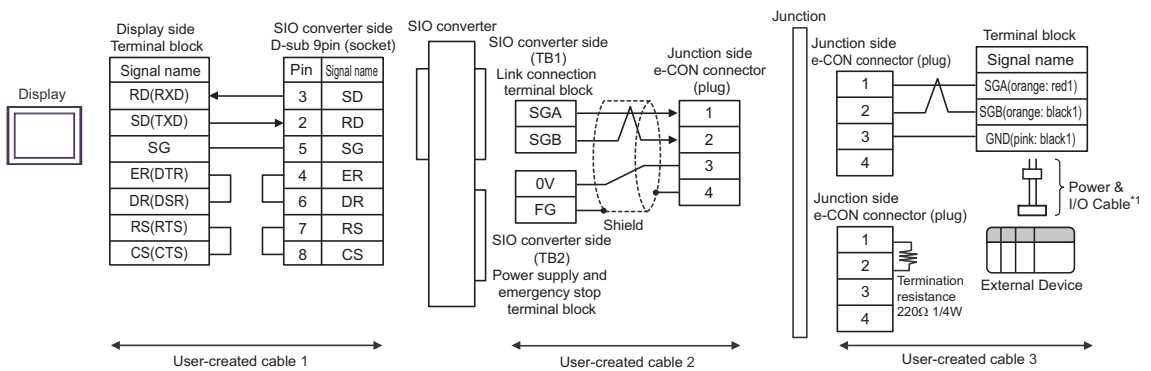

- *1 We recommend the IAI Corporation CB-ERC-PWBIO□□□□ or CB-ERC-PWBIO□□□□-RB as the Power & I/O Cable.

- 1:n connection

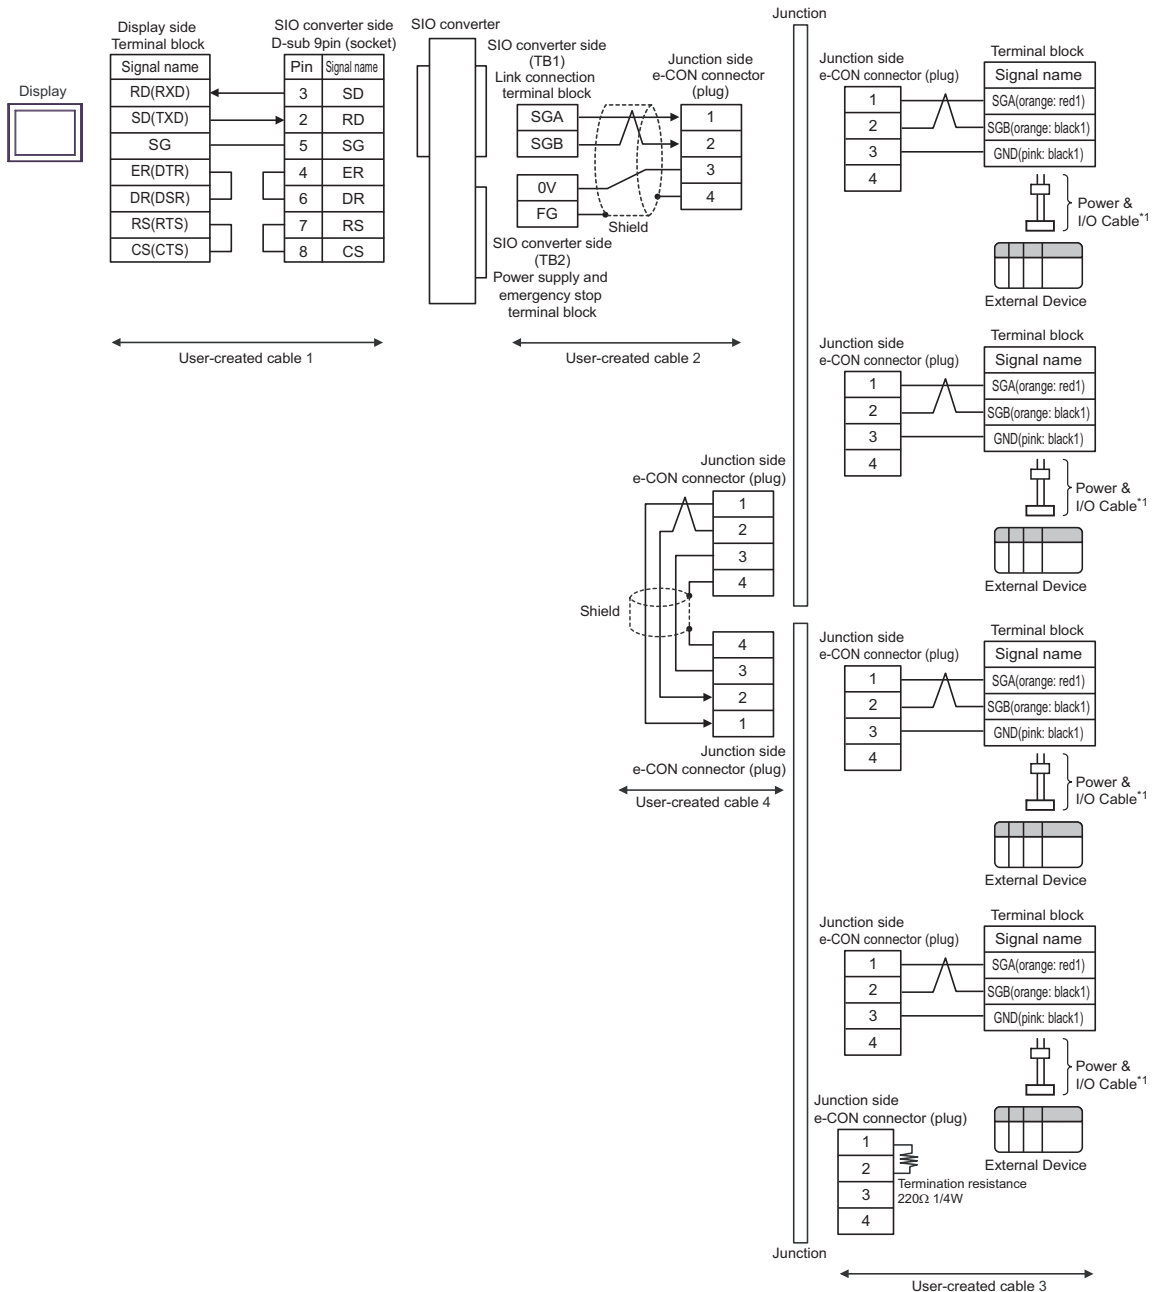


*1 We recommend the IAI Corporation CB-ERC-PWBIO□□□□ or CB-ERC-PWBIO□□□□-RB as the Power & I/O Cable.

NOTE

- Cable length from Display to SIO converter: 15m or less
- Cable length from SIO converter to External Device: 100m or less


6J)

- 1:1 connection

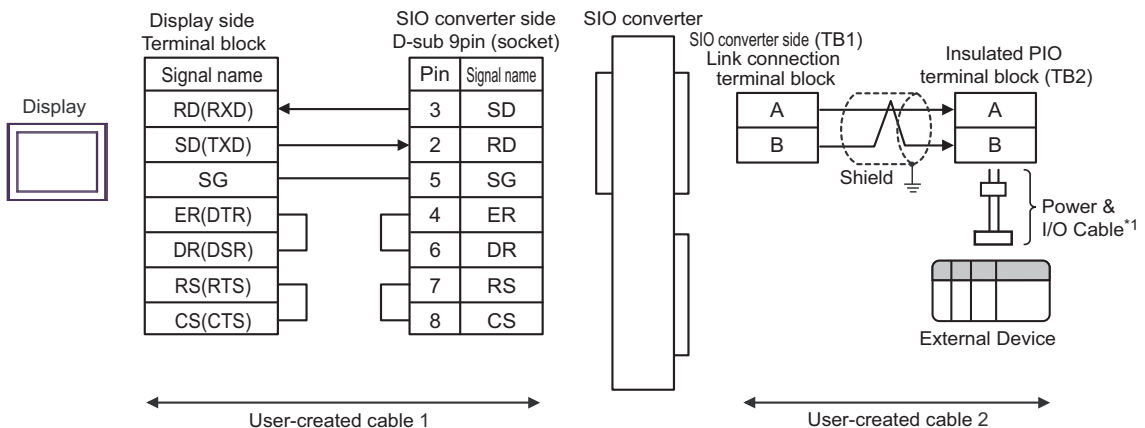

- *1 We recommend the IAI Corporation CB-ERC-PWBIO□□□-H6 or CB-ERC-PWBIO□□□-RB-H6 as the Power & I/O Cable.

- 1:n connection

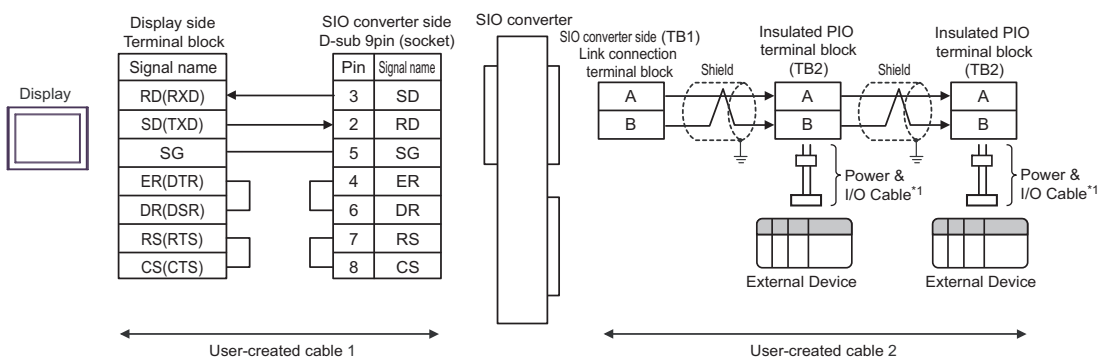


- *1 We recommend the IAI Corporation CB-ERC-PWBIO□□□-H6 or CB-ERC-PWBIO□□□-RB-H6 as the Power & I/O Cable.

NOTE

- Set the termination resistance connection switch of the PIO terminal block on the end to RTON side.
- Cable length from Display to SIO converter: 15m or less
- Cable length from SIO converter to External Device: 100m or less


6K)

- 1:1 connection

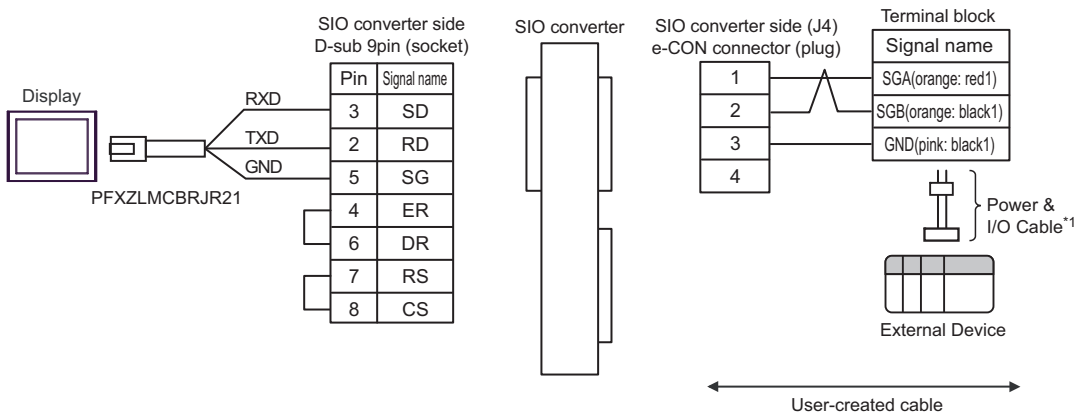

*1 We recommend the IAI Corporation CB-ERC-PWBIO□□□□ or CB-ERC-PWBIO□□□□-RB as the Power & I/O Cable.


- 1:n connection

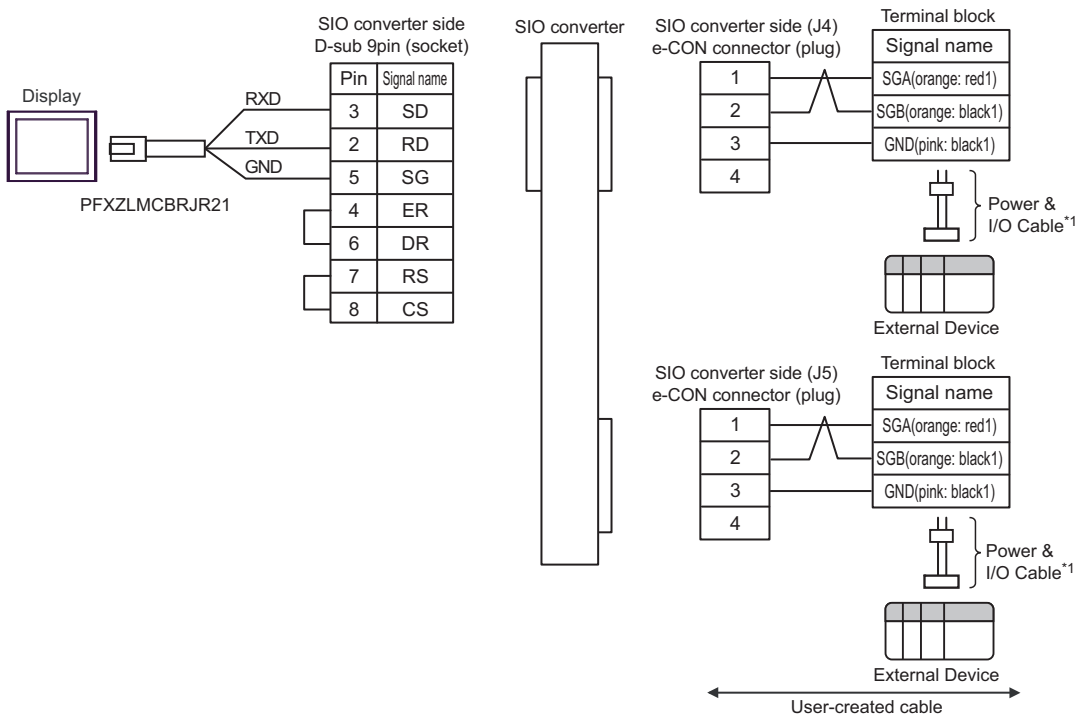

*1 We recommend the IAI Corporation CB-ERC-PWBIO□□□□ or CB-ERC-PWBIO□□□□-RB as the Power & I/O Cable.


6L)

- 1:1 connection

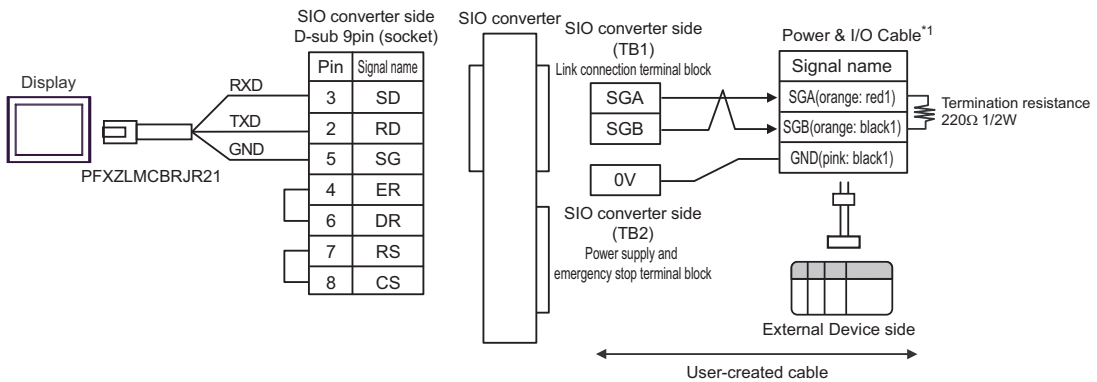

- *1 We recommend the IAI Corporation CB-ERC-PWBIO□□□□ or CB-ERC-PWBIO□□□□-RB as the Power & I/O Cable.

- 1:n connection

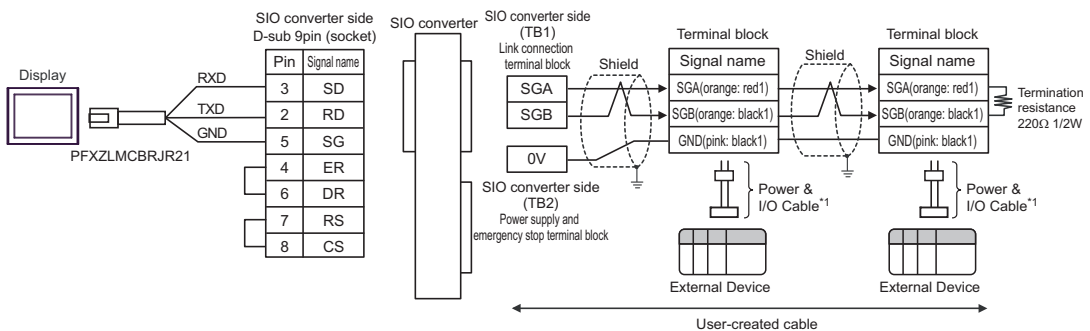


- *1 We recommend the IAI Corporation CB-ERC-PWBIO□□□□ or CB-ERC-PWBIO□□□□-RB as the Power & I/O Cable.

NOTE

- When connecting to more than one equipment, connect the terminal block.


6M)

- 1:1 connection

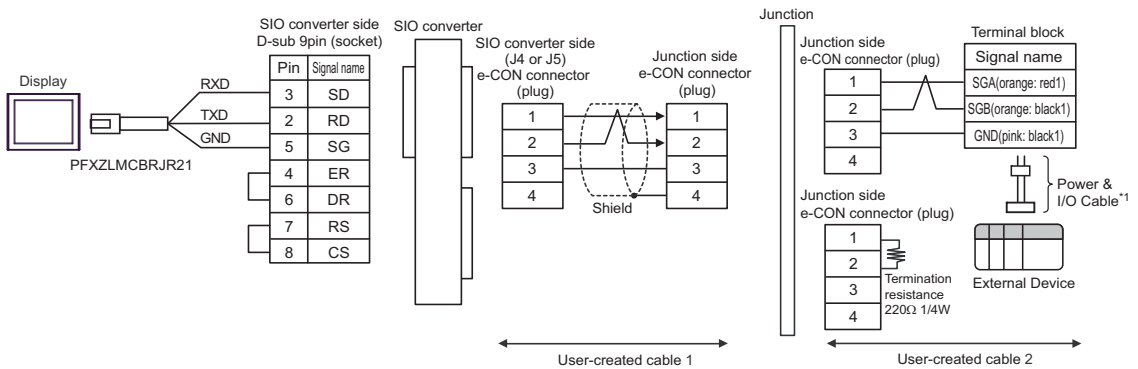

*1 We recommend the IAI Corporation CB-ERC-PWBIO□□□□ or CB-ERC-PWBIO□□□□-RB as the Power & I/O Cable.


- 1:n connection

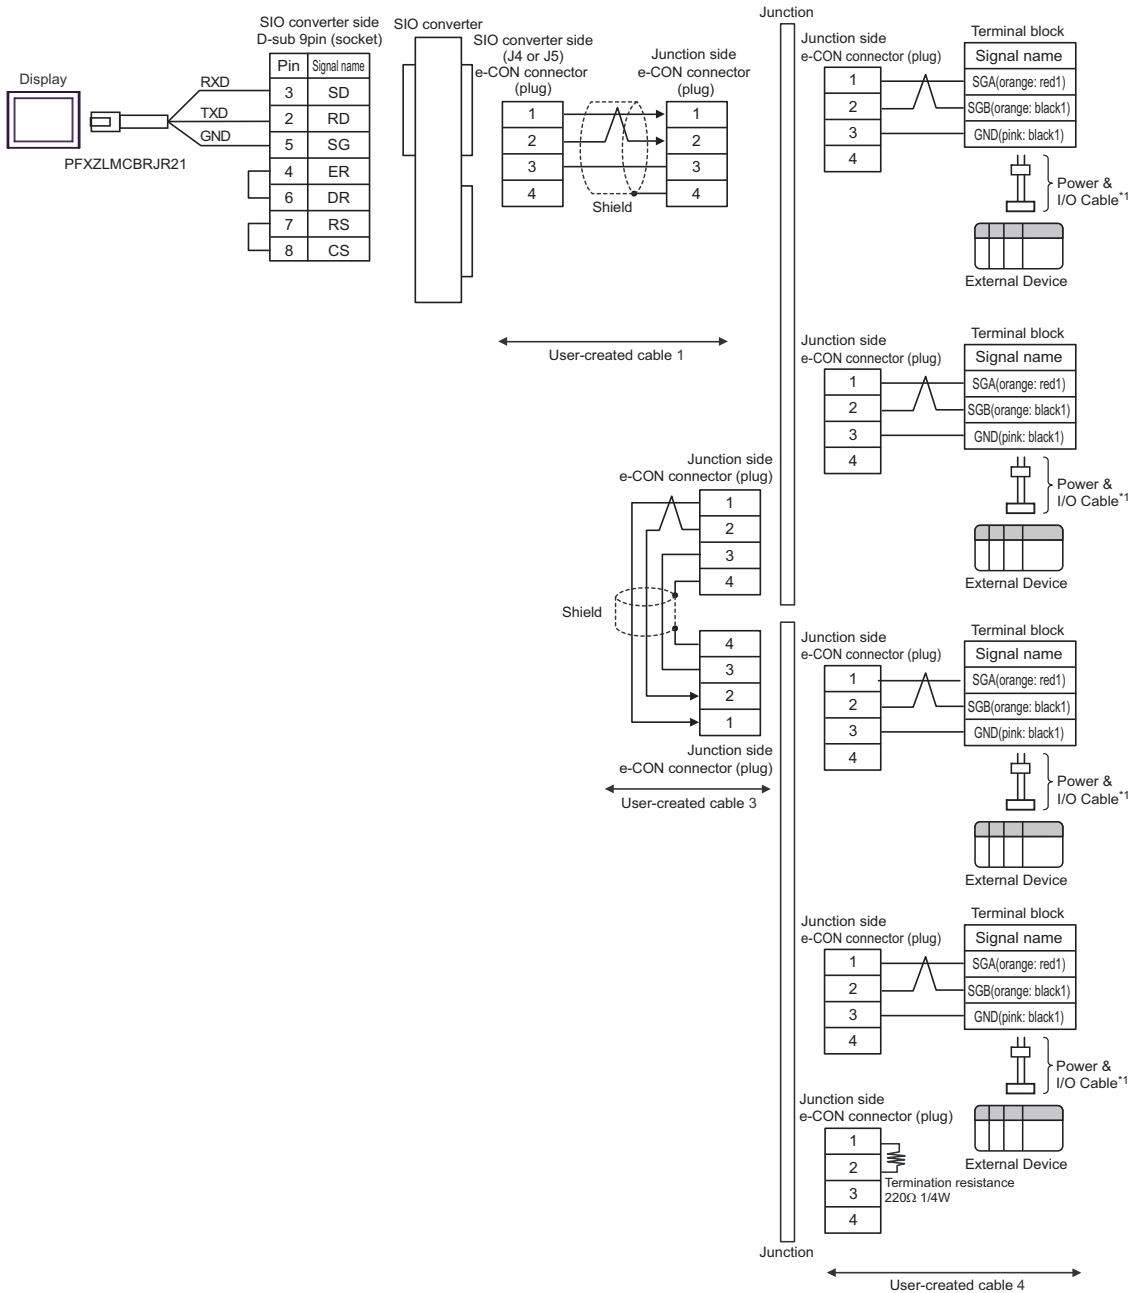

*1 We recommend the IAI Corporation CB-ERC-PWBIO□□□ or CB-ERC-PWBIO□□□-RB as the Power & I/O Cable.


6N)

- 1:1 connection

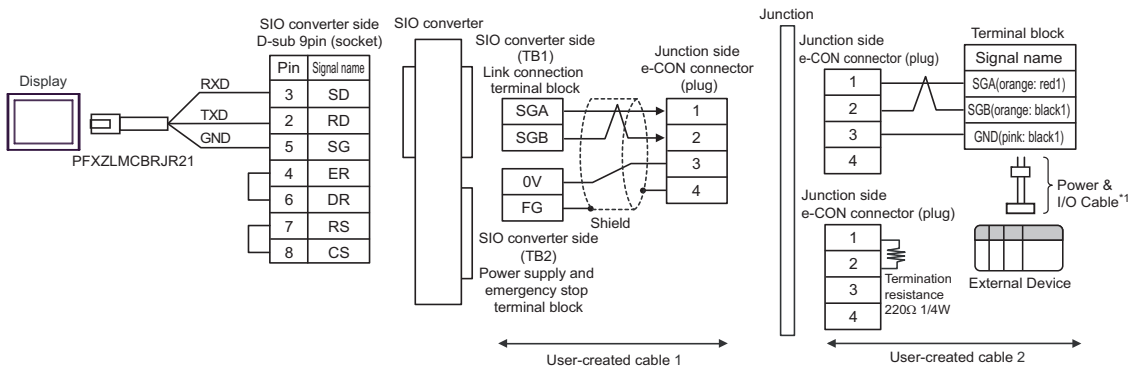

*1 We recommend the IAI Corporation CB-ERC-PWBIO□□□□ or CB-ERC-PWBIO□□□□-RB as the Power & I/O Cable.


- 1:n connection

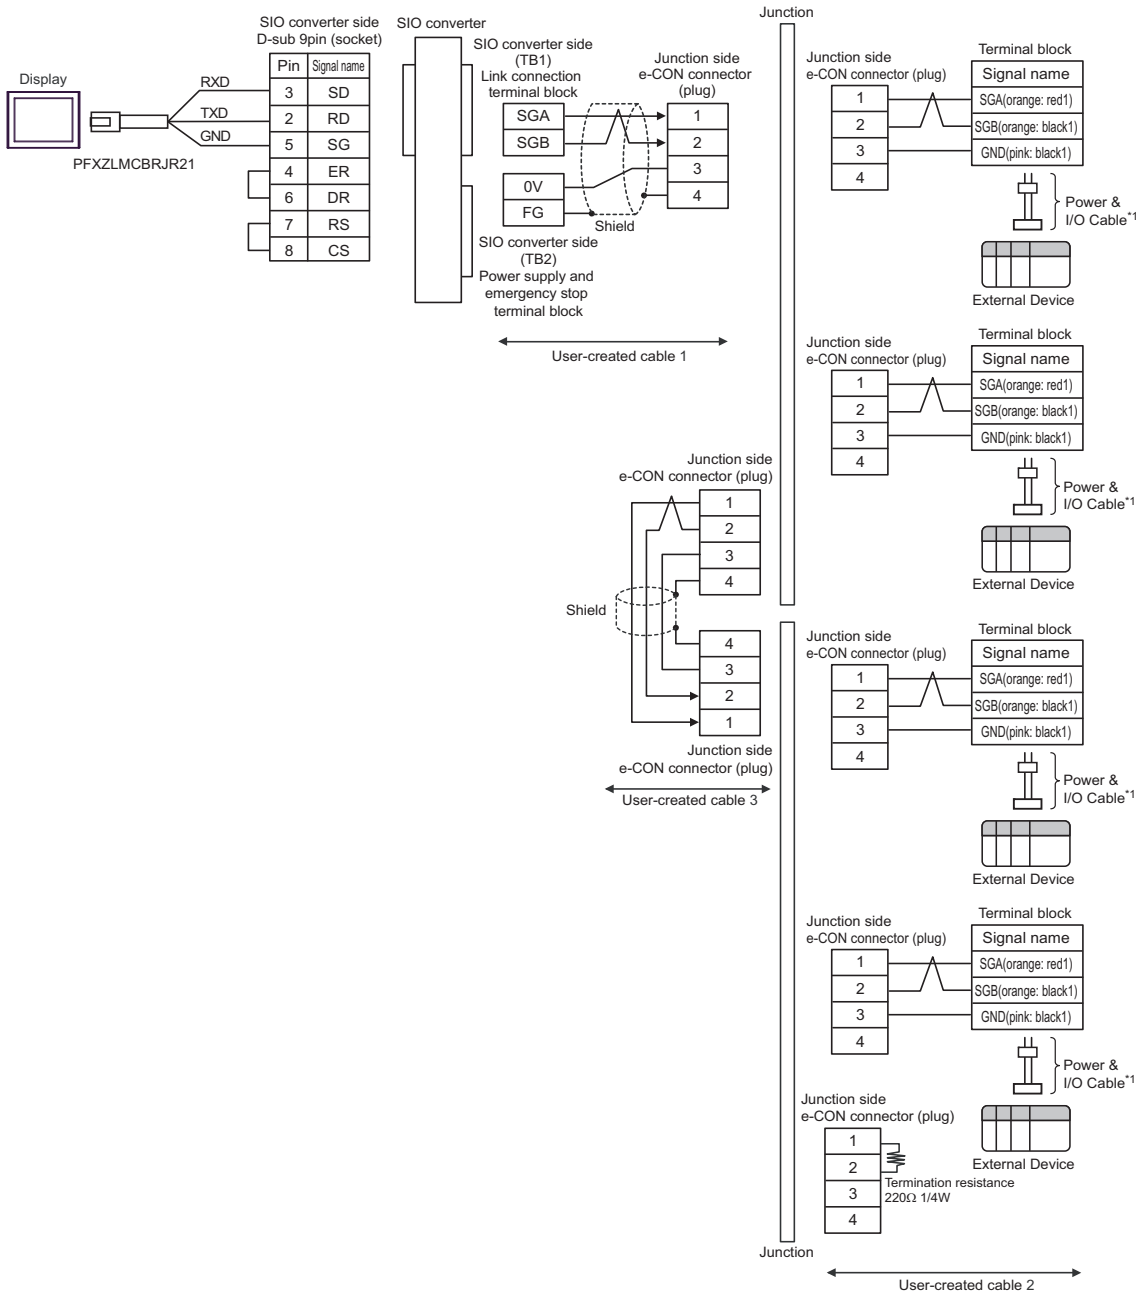

*1 We recommend the IAI Corporation CB-ERC-PWBIO□□□□ or CB-ERC-PWBIO□□□□-RB as the Power & I/O Cable.


60)

- 1:1 connection

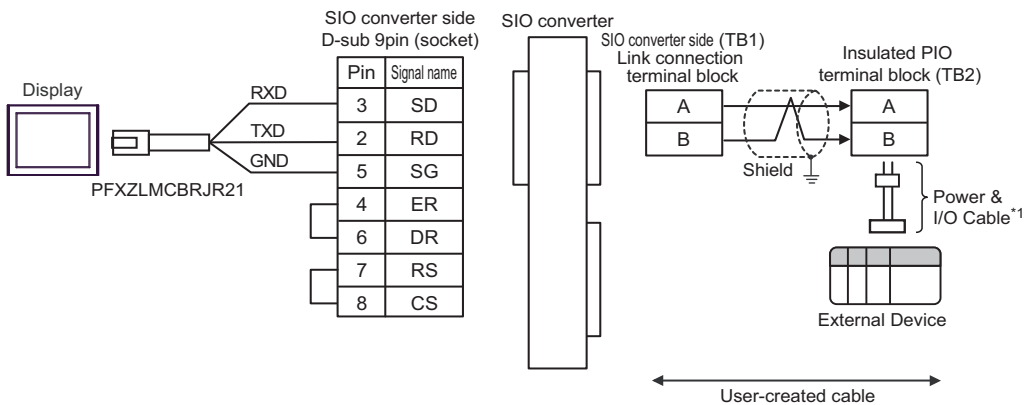

- *1 We recommend the IAI Corporation CB-ERC-PWBIO□□□-H6 or CB-ERC-PWBIO□□□-RB-H6 as the Power & I/O Cable.

- 1:n connection

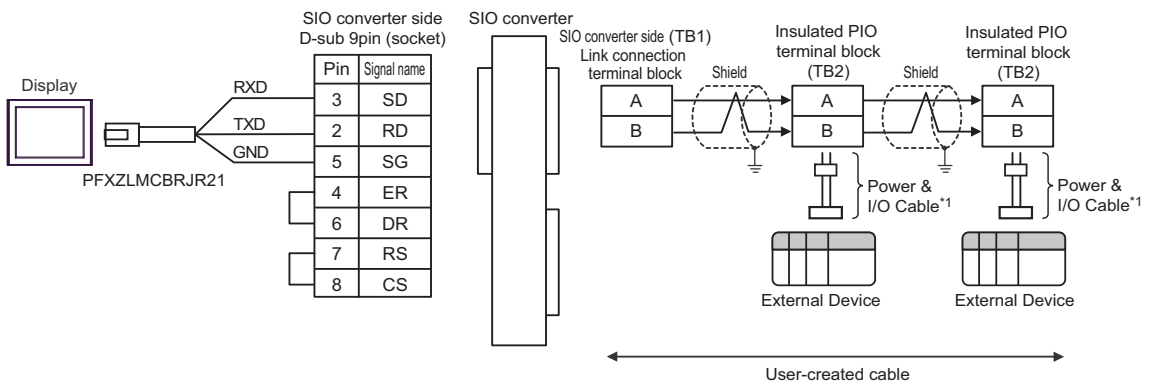

- *1 We recommend the IAI Corporation CB-ERC-PWBIO□□□-H6 or CB-ERC-PWBIO□□□-RB-H6 as the Power & I/O Cable.

NOTE

- Set the termination resistance connection switch of the PIO terminal block on the end to RTON side.

5.7 Cable Diagram 7

Display (Connection Port)	Cable		Notes
GP3000 (COM1) GP4000* ¹ (COM1) SP5000* ² (COM1/2) SP-5B00 (COM1) ST3000 (COM1) ST6000 (COM1) STM6000 (COM1) STC6000 (COM1) ET6000 (COM1) LT3000 (COM1) IPC* ³ PC/AT	7A	RS232C conversion unit by IAI Corporation RCB-CV-MW + Communication cable by IAI Corporation CB-RCA-SIO050 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable + Terminal block + Power & I/O Cable by IAI Corporation CB-ERC-PWBIO□□□ or CB-ERC-PWBIO□□□-RB	Cable length from SIO converter to External Device: 100m or less
	7B	RS232C conversion unit by IAI Corporation RCB-CV-MW + Communication cable by IAI Corporation CB-RCA-SIO050 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable + Power & I/O Cable by IAI Corporation CB-ERC-PWBIO□□□ or CB-ERC-PWBIO□□□-RB	
	7C	RS232C conversion unit by IAI Corporation RCB-CV-MW + Communication cable by IAI Corporation CB-RCA-SIO050 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable 1 + Junction by AMP* ⁴ 5-1473574-4 + User-created cable 2 + Terminal block + Power & I/O Cable by IAI Corporation CB-ERC-PWBIO□□□ or CB-ERC-PWBIO□□□-RB	

Display (Connection Port)	Cable		Notes
GP3000 (COM1) GP4000 ^{*5} (COM1) SP5000 ^{*6} (COM1/2) SP-5B00 (COM1) ST3000 (COM1) ST6000 (COM1) STM6000 (COM1) STC6000 (COM1) ET6000 (COM1) LT3000 (COM1) IPC ^{*7} PC/AT	7D	RS232C conversion unit by IAI Corporation RCB-CV-MW + Communication cable by IAI Corporation CB-RCA-SIO050 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable 1 + Junction by AMP ^{*4} 5-1473574-4 + User-created cable 2 + Terminal block + Power & I/O Cable by IAI Corporation CB-ERC-PWBIO□□□ or CB-ERC-PWBIO□□□-RB	Cable length from SIO converter to External Device: 100m or less
	7E	RS232C conversion unit by IAI Corporation RCB-CV-MW + Communication cable by IAI Corporation CB-RCA-SIO050 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable + Insulated PIO terminal block by IAI Corporation RC□-TU-PIO-□ + Power & I/O Cable by IAI Corporation CB-ERC-PWBIO□□□-H6 or CB-ERC-PWBIO□□□-RB-H6	

Display (Connection Port)	Cable		Notes
GP-4105 (COM1) GP-4115T (COM1) GP-4115T3 (COM1)	7F	User-created cable + RS232C conversion unit by IAI Corporation RCB-CV-MW + Communication cable by IAI Corporation CB-RCA-SIO050 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable + Terminal block + Power & I/O Cable by IAI Corporation CB-ERC-PWBIO□□□ or CB-ERC-PWBIO□□□-RB	Cable length from SIO converter to External Device: 100m or less
	7G	User-created cable + RS232C conversion unit by IAI Corporation RCB-CV-MW + Communication cable by IAI Corporation CB-RCA-SIO050 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable + Power & I/O Cable by IAI Corporation CB-ERC-PWBIO□□□ or CB-ERC-PWBIO□□□-RB	

Display (Connection Port)	Cable		Notes
GP-4105 (COM1) GP-4115T (COM1) GP-4115T3 (COM1)	7H	User-created cable + RS232C conversion unit by IAI Corporation RCB-CV-MW + Communication cable by IAI Corporation CB-RCA-SIO050 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable 1 + Junction by AMP*4 5-1473574-4 + User-created cable 2 + Terminal block + Power & I/O Cable by IAI Corporation CB-ERC-PWBIO□□□ or CB-ERC-PWBIO□□□-RB	Cable length from SIO converter to External Device: 100m or less
	7I	User-created cable + RS232C conversion unit by IAI Corporation RCB-CV-MW + Communication cable by IAI Corporation CB-RCA-SIO050 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable 1 + Junction by AMP*4 5-1473574-4 + User-created cable 2 + Terminal block + Power & I/O Cable by IAI Corporation CB-ERC-PWBIO□□□ or CB-ERC-PWBIO□□□-RB	

Display (Connection Port)	Cable		Notes
GP-4105 (COM1) GP-4115T (COM1) GP-4115T3 (COM1)	7J	User-created cable + RS232C conversion unit by IAI Corporation RCB-CV-MW + Communication cable by IAI Corporation CB-RCA-SIO050 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable + Insulated PIO terminal block by IAI Corporation RC□-TU-PIO-□ + Power & I/O Cable by IAI Corporation CB-ERC-PWBIO□□□-H6 or CB-ERC-PWBIO□□□-RB-H6	Cable length from SIO converter to External Device: 100m or less


- *1 All GP4000 models except GP-4100 series and GP-4203T
- *2 Except SP-5B00
- *3 Only the COM port which can communicate by RS-232C can be used.
 ■ IPC COM Port (page 5)
- *4 When using more than one junction by AMP, user-created cable 3 is required.
- *5 All GP4000 models except GP-4100 series and GP-4203T
- *6 Except SP-5B00
- *7 Only the COM port which can communicate by RS-232C can be used.
 ■ IPC COM Port (page 5)

NOTE

- RS232C conversion unit (RCB-CV-MW) and communication cable (CB-RCA-SIO050) are accessories of PC Interface Software (RCM-101-MW) by IAI Corporation.
- When connecting to 3 or more External Devices, use link connection terminal block or junction by AMP.


7A)

- 1:1 connection

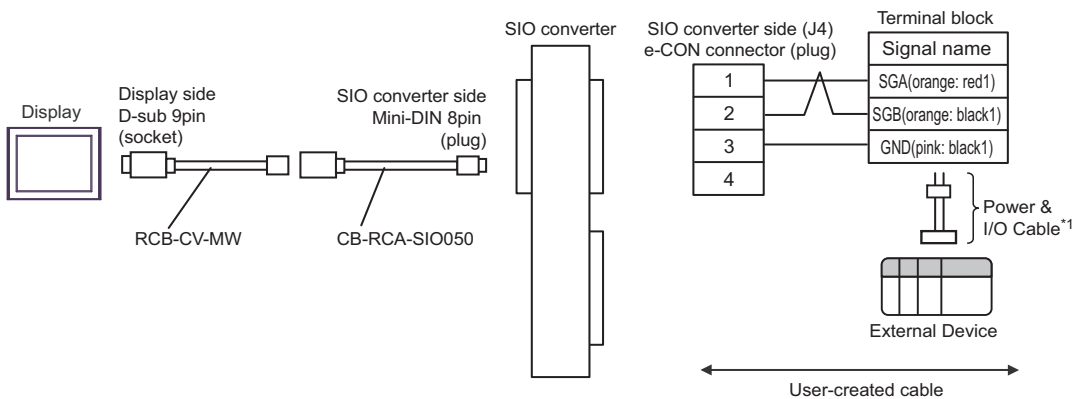

- *1 We recommend the IAI Corporation CB-ERC-PWBIO□□□□ or CB-ERC-PWBIO□□□□-RB as the Power & I/O Cable.

- 1:n connection

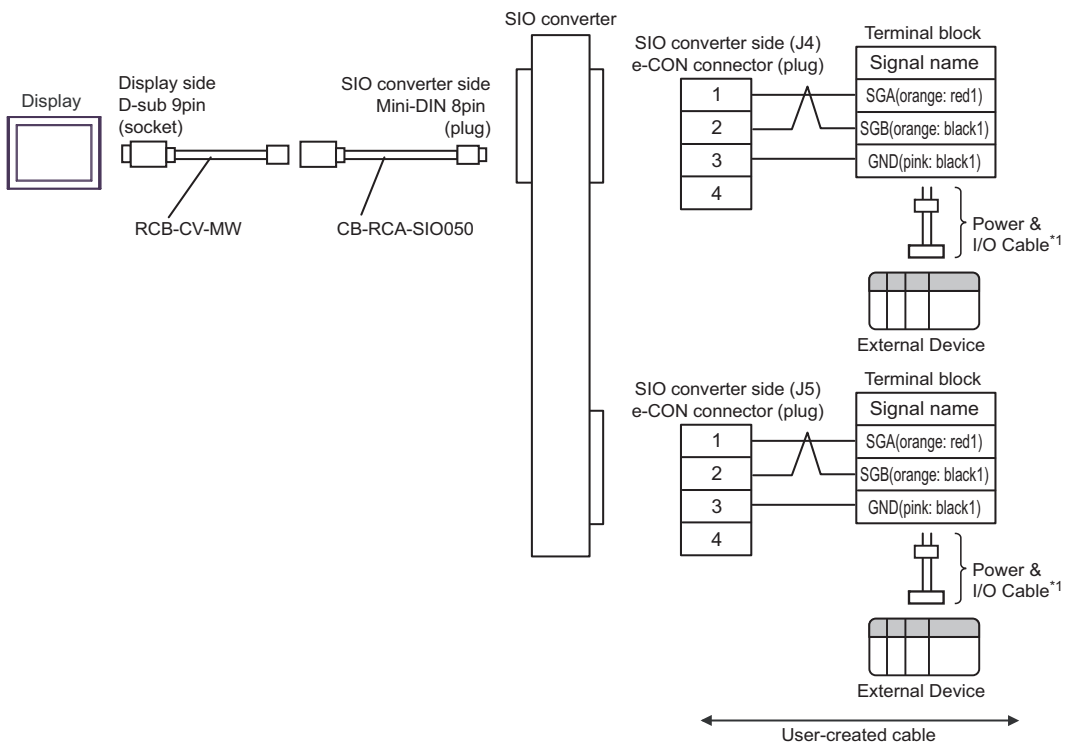


- *1 We recommend the IAI Corporation CB-ERC-PWBIO□□□□ or CB-ERC-PWBIO□□□□-RB as the Power & I/O Cable.

NOTE

- Cable length from SIO converter to External Device: 100m or less


7B)

- 1:1 connection

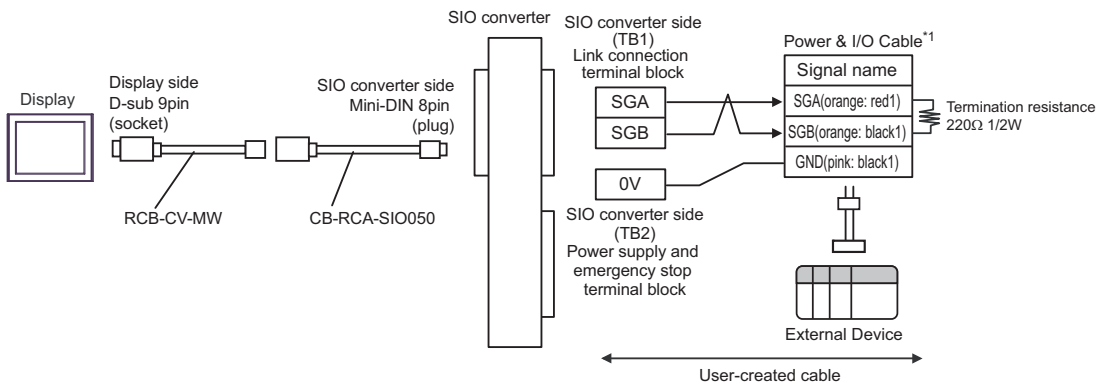

- *1 We recommend the IAI Corporation CB-ERC-PWBIO□□□□ or CB-ERC-PWBIO□□□□-RB as the Power & I/O Cable.

- 1:n connection

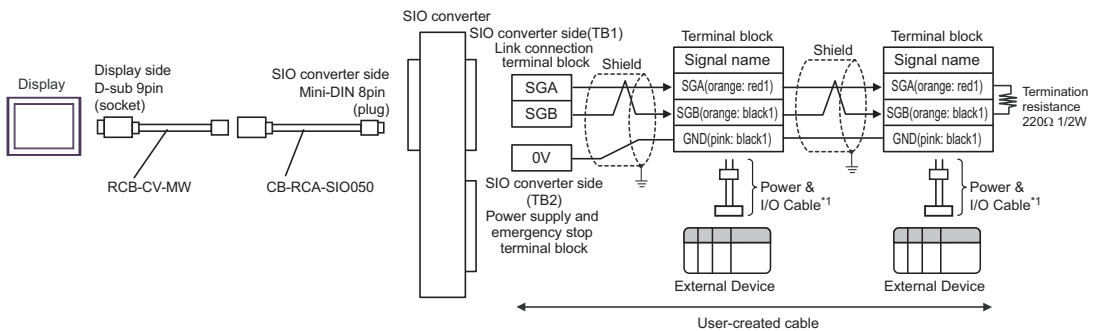


- *1 We recommend the IAI Corporation CB-ERC-PWBIO□□□□ or CB-ERC-PWBIO□□□□-RB as the Power & I/O Cable.

NOTE

- When connecting to more than one equipment, connect the terminal block.
- Cable length from SIO converter to External Device: 100m or less


7C)

- 1:1 connection

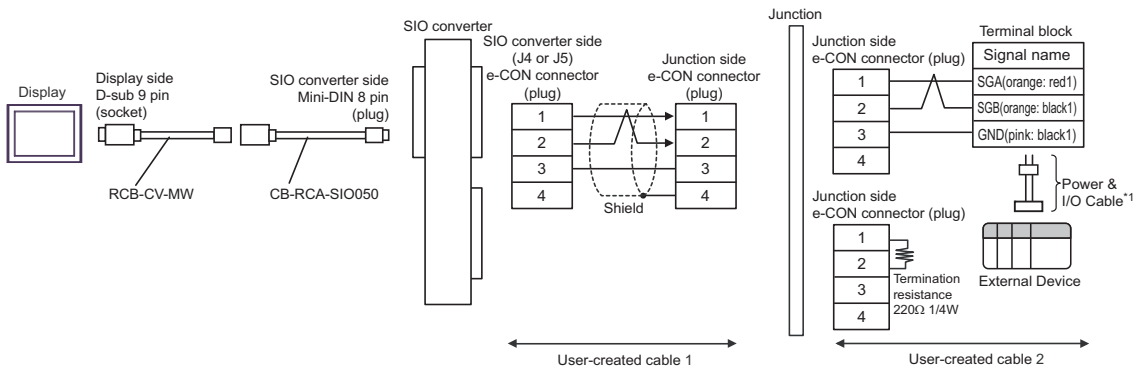

*1 We recommend the IAI Corporation CB-ERC-PWBIO□□□□ or CB-ERC-PWBIO□□□□-RB as the Power & I/O Cable.

- 1:n connection

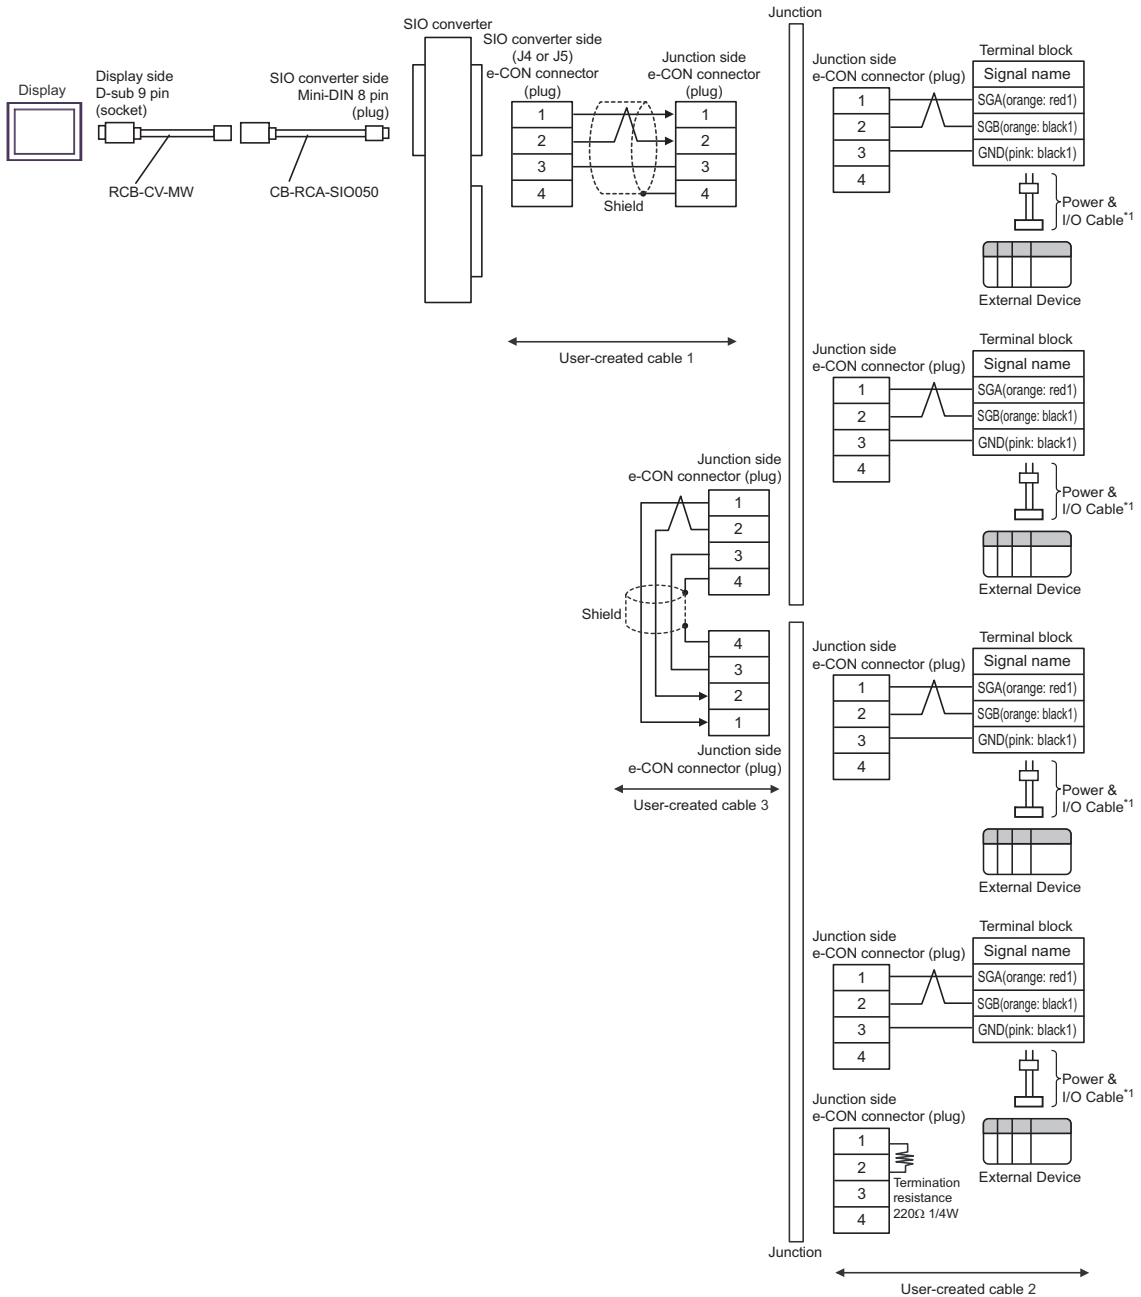


- *1 We recommend the IAI Corporation CB-ERC-PWBIO□□□□ or CB-ERC-PWBIO□□□□-RB as the Power & I/O Cable.

NOTE

- Cable length from SIO converter to External Device: 100m or less


7D)

- 1:1 connection

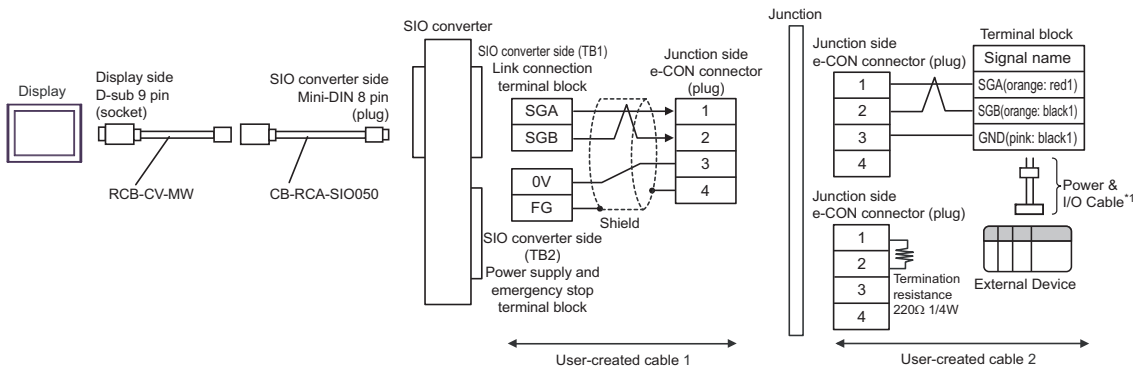

*1 We recommend the IAI Corporation CB-ERC-PWBIO□□□□ or CB-ERC-PWBIO□□□□-RB as the Power & I/O Cable.

- 1:n connection

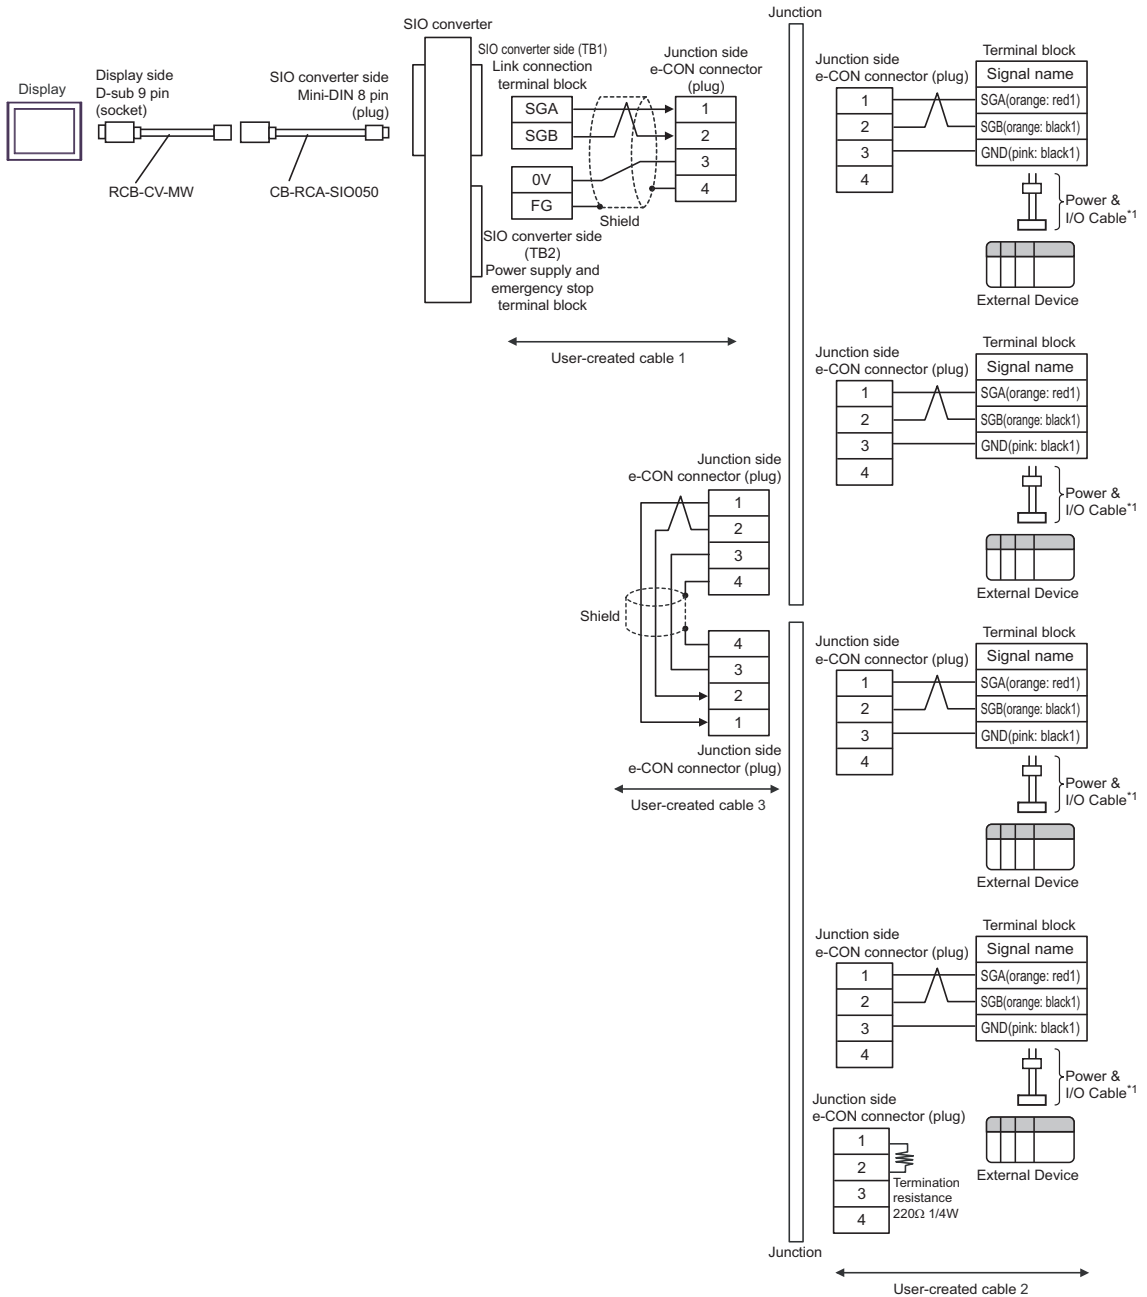


*1 We recommend the IAI Corporation CB-ERC-PWBIO□□□ or CB-ERC-PWBIO□□□-RB as the Power & I/O Cable.

NOTE

- Cable length from SIO converter to External Device: 100m or less


7E)

- 1:1 connection

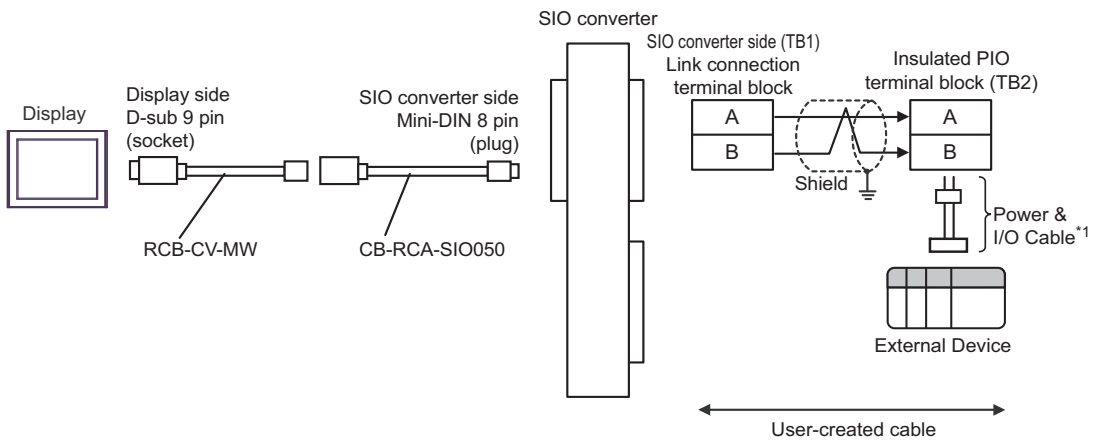

- *1 We recommend the IAI Corporation CB-ERC-PWBIO□□□-H6 or CB-ERC-PWBIO□□□-RB-H6 as the Power & I/O Cable.

- 1:n connection

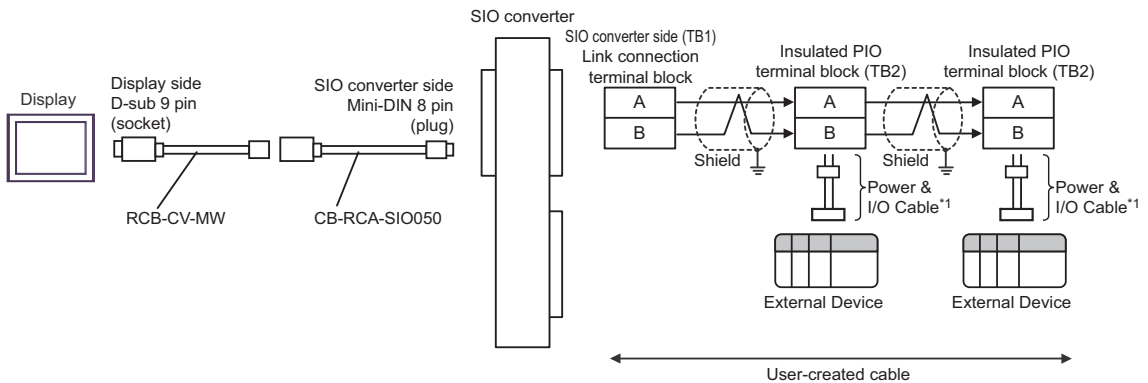


- *1 We recommend the IAI Corporation CB-ERC-PWBIO□□□-H6 or CB-ERC-PWBIO□□□-RB-H6 as the Power & I/O Cable.

NOTE

- Set the termination resistance connection switch of the PIO terminal block on the end to RTON side.
- Cable length from SIO converter to External Device: 100m or less


7F)

- 1:1 connection

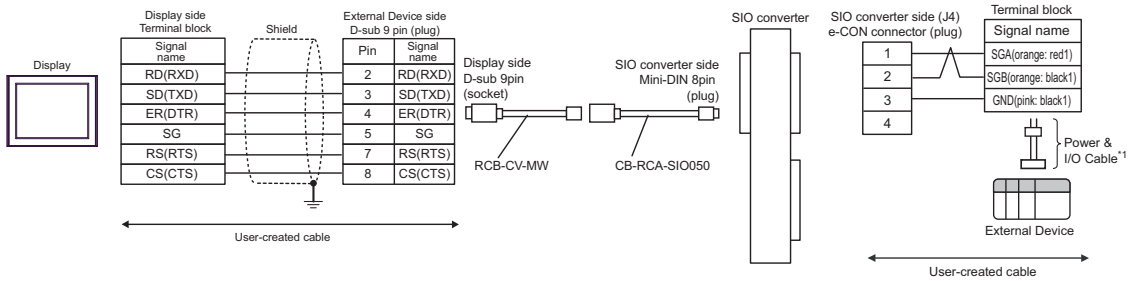

- *1 We recommend the IAI Corporation CB-ERC-PWBIO□□□□ or CB-ERC-PWBIO□□□□-RB as the Power & I/O Cable.

- 1:n connection

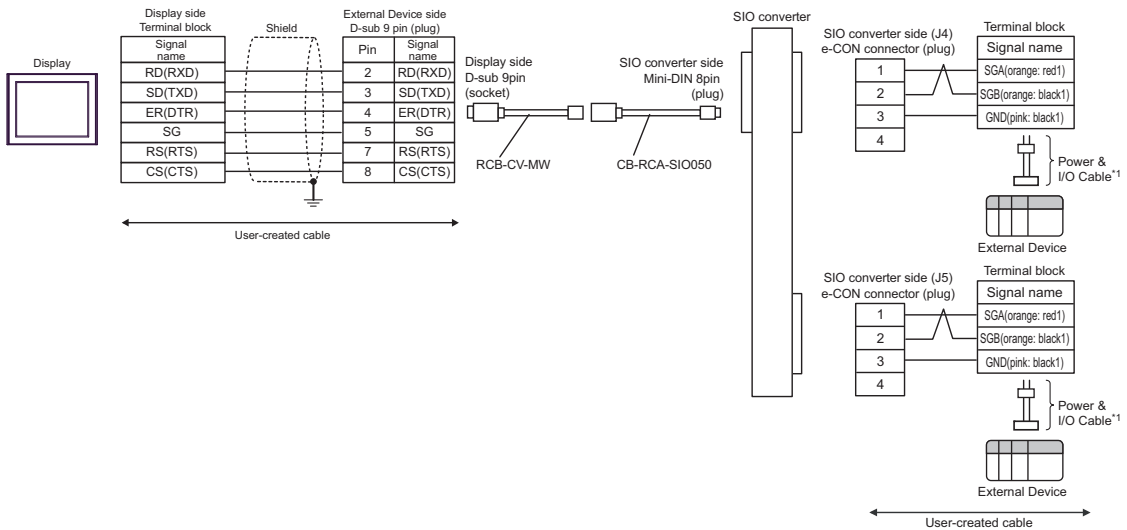


- *1 We recommend the IAI Corporation CB-ERC-PWBIO□□□□ or CB-ERC-PWBIO□□□□-RB as the Power & I/O Cable.

NOTE

- Cable length from SIO converter to External Device: 100m or less


7G)

- 1:1 connection

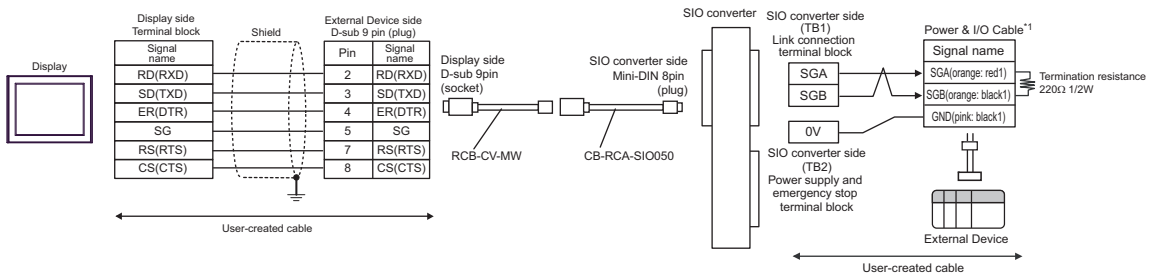

- *1 We recommend the IAI Corporation CB-ERC-PWBIO□□□ or CB-ERC-PWBIO□□□-RB as the Power & I/O Cable.

- 1:n connection

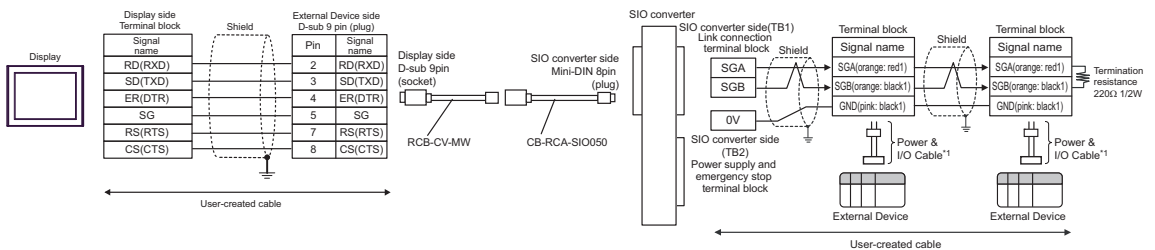


- *1 We recommend the IAI Corporation CB-ERC-PWBIO□□□ or CB-ERC-PWBIO□□□-RB as the Power & I/O Cable.

NOTE

- When connecting to more than one equipment, connect the terminal block.
- Cable length from SIO converter to External Device: 100m or less


7H)

- 1:1 connection

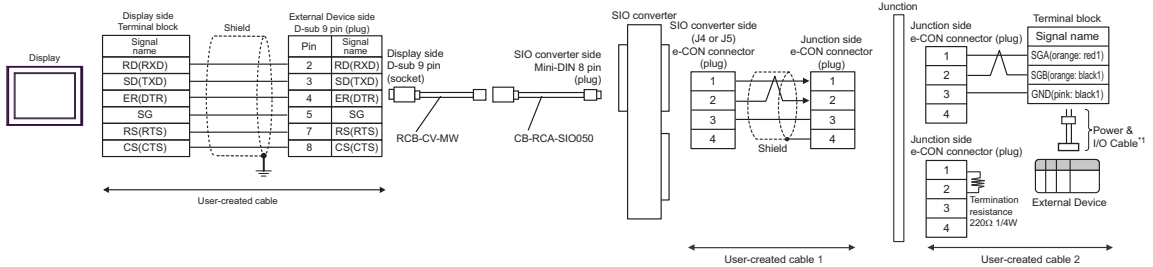

- *1 We recommend the IAI Corporation CB-ERC-PWBIO□□□ or CB-ERC-PWBIO□□□-RB as the Power & I/O Cable.

- 1:n connection

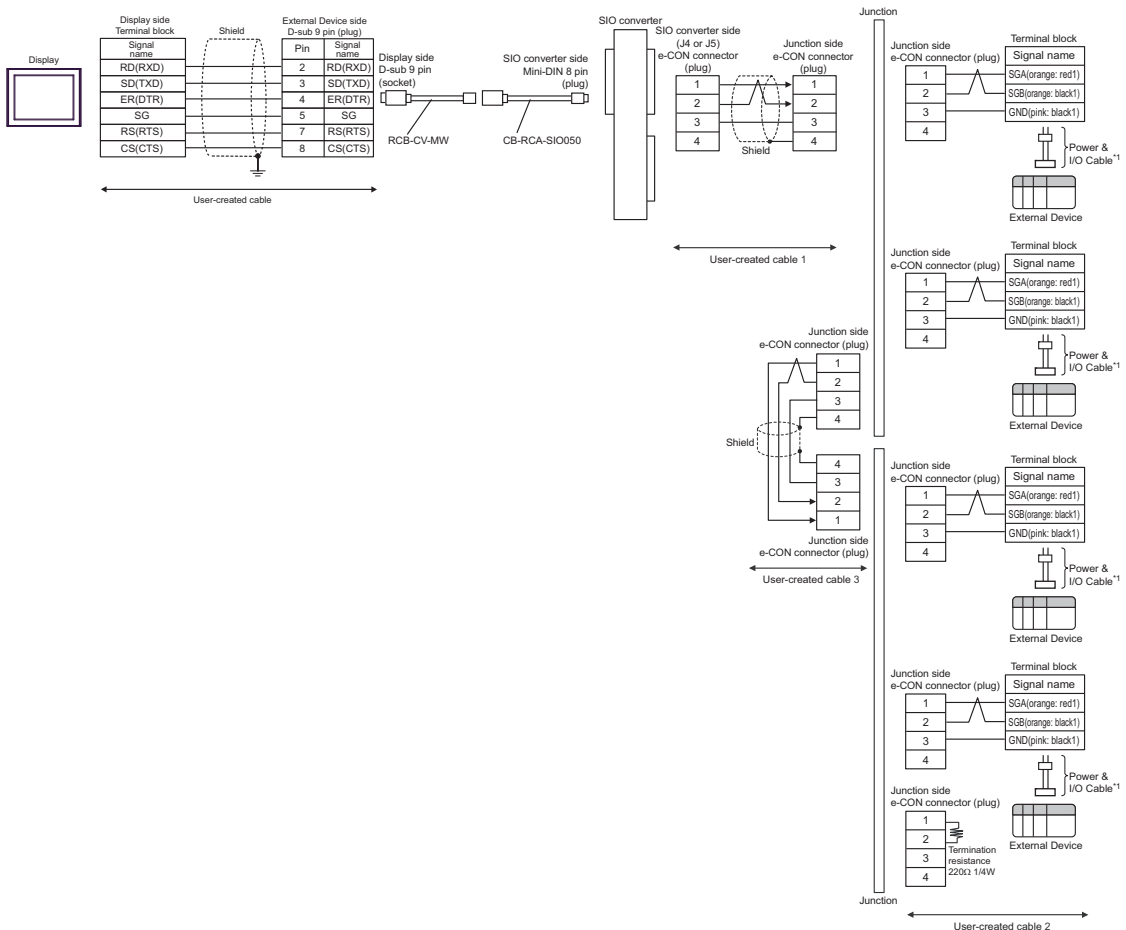


- *1 We recommend the IAI Corporation CB-ERC-PWBIO□□□ or CB-ERC-PWBIO□□□-RB as the Power & I/O Cable.

NOTE

- Cable length from SIO converter to External Device: 100m or less


71)

- 1:1 connection

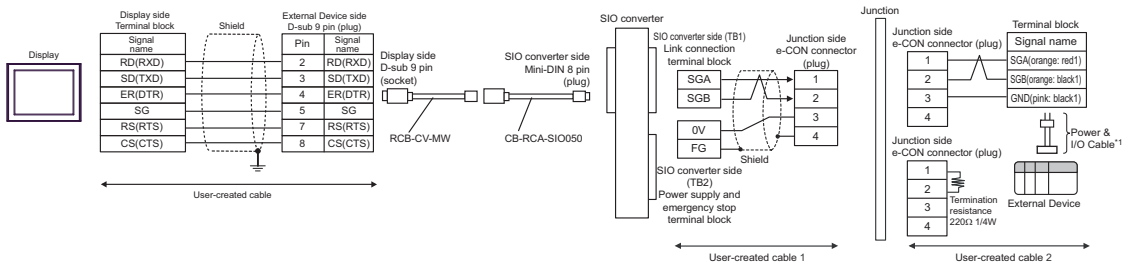

- *1 We recommend the IAI Corporation CB-ERC-PWBIO□□□□ or CB-ERC-PWBIO□□□□-RB as the Power & I/O Cable.

- 1:n connection

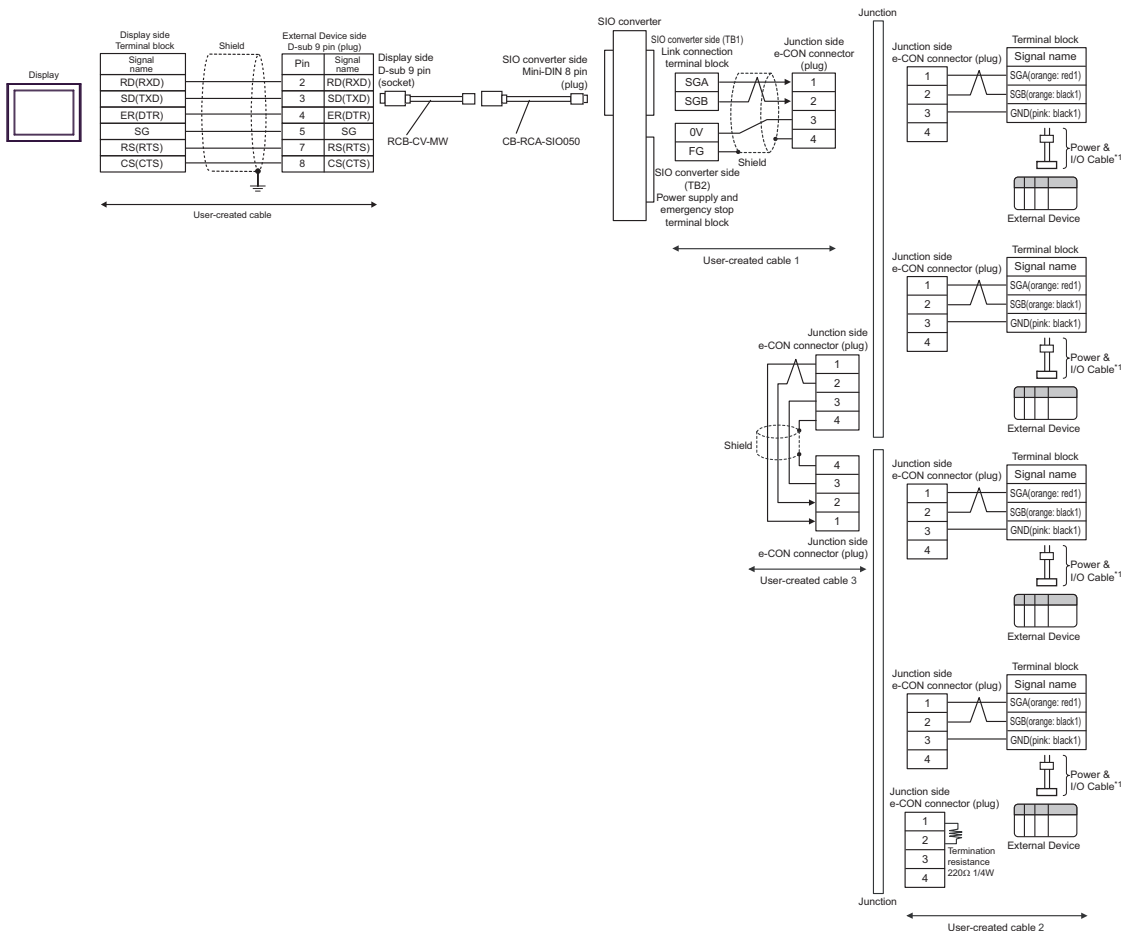


- *1 We recommend the IAI Corporation CB-ERC-PWBIO□□□□ or CB-ERC-PWBIO□□□□-RB as the Power & I/O Cable.

NOTE

- Cable length from SIO converter to External Device: 100m or less


7J)

- 1:1 connection

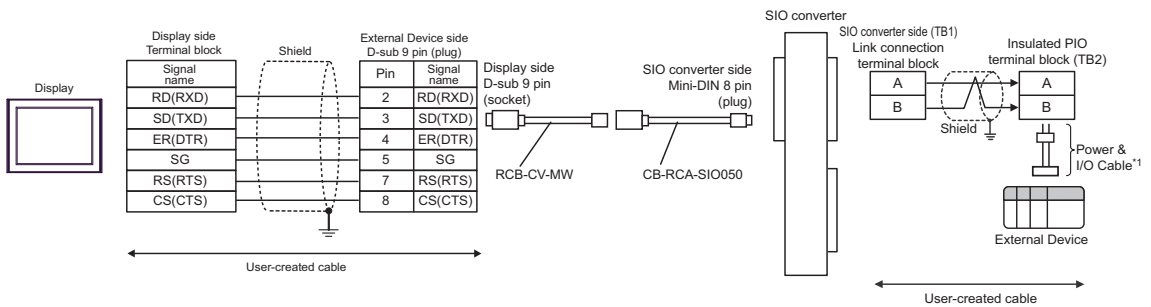

- *1 We recommend the IAI Corporation CB-ERC-PWBIO□□□-H6 or CB-ERC-PWBIO□□□-RB-H6 as the Power & I/O Cable.

- 1:n connection

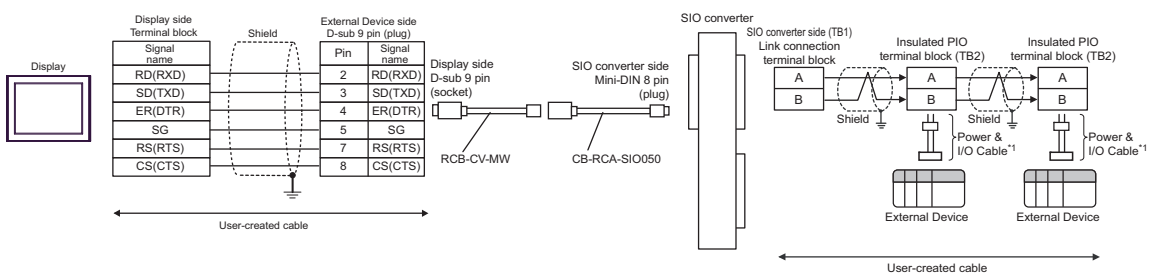

- *1 We recommend the IAI Corporation CB-ERC-PWBIO□□□-H6 or CB-ERC-PWBIO□□□-RB-H6 as the Power & I/O Cable.

NOTE

- Set the termination resistance connection switch of the PIO terminal block on the end to RTON side.
- Cable length from SIO converter to External Device: 100m or less

5.8 Cable Diagram 8

Display (Connection Port)	Cable		Notes
GP3000 (COM1) GP4000* ¹ (COM1) SP5000* ² (COM1/2) SP-5B00 (COM1) ST3000 (COM1) ST6000 (COM1) STM6000 (COM1) STC6000 (COM1) ET6000 (COM1) LT3000 (COM1) IPC* ³ PC/AT	8A	RS232C conversion unit by IAI Corporation RCB-CV-MW + Communication cable for PC connection by IAI Corporation CB-ERC2-SIO020 + Power & I/O Cable by IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB	
GP-4105 (COM1) GP-4115T (COM1) GP-4115T3 (COM1)	8B	User-created cable + RS232C conversion unit by IAI Corporation RCB-CV-MW + Communication cable for PC connection by IAI Corporation CB-ERC2-SIO020 + Power & I/O Cable by IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB	

*1 All GP4000 models except GP-4100 series and GP-4203T

*2 Except SP-5B00


*3 Only the COM port which can communicate by RS-232C can be used.

■ IPC COM Port (page 5)


NOTE

- RS232C conversion unit (RCB-CV-MW) and communication cable (CB-ERC2-SIO020) are accessories of PC Interface Software (RCM-101-MW) by IAI Corporation.

8A)

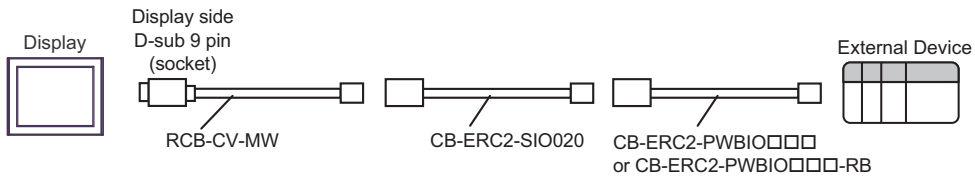

8B)

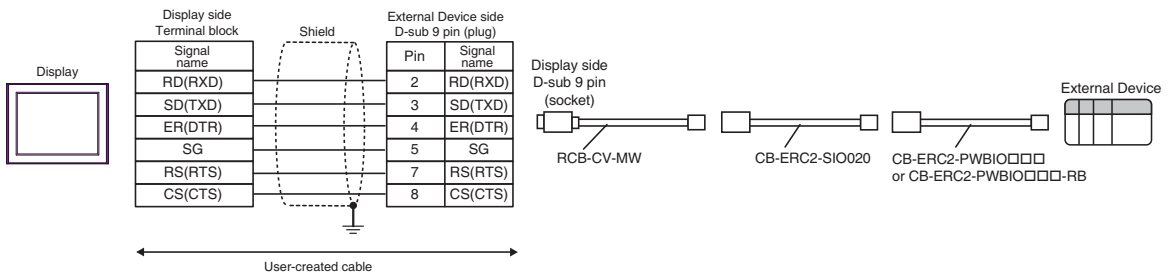

5.9 Cable Diagram 9

Display (Connection Port)	Cable		Notes
GP3000* ¹ (COM1) AGP-3302B (COM2) GP-4*01TM (COM1) GP-Rear Module (COM1) ST3000* ² (COM2) LT3000 (COM1)	9A	COM port conversion adapter by Pro-face CA3-ADPCOM-01 + Terminal block conversion adapter by Pro-face CA3-ADPTRM-01 + User-created cable 1 + Junction by AMP* ³ 5-1473574-4 + Network Connection Cable by IAI Corporation CB-ERC2-CTL001 + Power & I/O Cable by IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB	Cable length: 100m or less
	9B	User-created cable 1 + Junction by AMP* ³ 5-1473574-4 + Network Connection Cable by IAI Corporation CB-ERC2-CTL001 + Power & I/O Cable by IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB	
GP3000* ⁴ (COM2)	9C	Online adapter by Pro-face CA4-ADPONL-01 + Terminal block conversion adapter by Pro-face CA3-ADPTRM-01 + User-created cable 1 + Junction by AMP* ³ 5-1473574-4 + Network Connection Cable by IAI Corporation CB-ERC2-CTL001 + Power & I/O Cable by IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB	Cable length: 100m or less

Display (Connection Port)	Cable		Notes
GP3000* ⁵ (COM2)	9D	Online adapter by Pro-face CA4-ADPONL-01 + User-created cable 1 + Junction by AMP* ³ 5-1473574-4 + Network Connection Cable by IAI Corporation CB-ERC2-CTL001 + Power & I/O Cable by IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB	Cable length: 100m or less
IPC* ⁶	9E	COM port conversion adapter by Pro-face CA3-ADPCOM-01 + Terminal block conversion adapter by Pro-face CA3-ADPTRM-01 + User-created cable 1 + Junction by AMP* ³ 5-1473574-4 + Network Connection Cable by IAI Corporation CB-ERC2-CTL001 + Power & I/O Cable by IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB	Cable length: 100m or less
	9F	User-created cable 1 + Junction by AMP* ³ 5-1473574-4 + Network Connection Cable by IAI Corporation CB-ERC2-CTL001 + Power & I/O Cable by IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB	
GP-4106 (COM1) GP-4116T (COM1)	9G	User-created cable 1 + Junction by AMP* ³ 5-1473574-4 + Network Connection Cable by IAI Corporation CB-ERC2-CTL001 + Power & I/O Cable by IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB	Cable length: 100m or less

Display (Connection Port)	Cable		Notes
GP-4107 (COM1) GP-4*03T* ⁷ (COM2) GP-4203T (COM1)	9H	User-created cable 1 + Junction by AMP* ³ 5-1473574-4 + Network Connection Cable by IAI Corporation CB-ERC2-CTL001 + Power & I/O Cable by IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB	Cable length: 100m or less
GP4000* ⁸ (COM2) GP-4201T (COM1) SP5000* ⁹ (COM1/2) SP-5B00 (COM2) ST6000* ¹⁰ (COM2) ST-6200 (COM1) STM6000 (COM1) STC6000 (COM1) ET6000* ¹¹ (COM2) PS6000 (Basic Box) (COM1/2)	9I	RS-422 Terminal Block Conversion Adapterby Pro-face PFXZCBADTM1* ¹² + User-created cable 1 + Junction by AMP* ³ 5-1473574-4 + Network Connection Cable by IAI Corporation CB-ERC2-CTL001 + Power & I/O Cable by IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB	Cable length: 100m or less
	9B	User-created cable 1 + Junction by AMP* ³ 5-1473574-4 + Network Connection Cable by IAI Corporation CB-ERC2-CTL001 + Power & I/O Cable by IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB	
LT-4*01TM (COM1) LT-Rear Module (COM1)	9J	RJ45 RS-485 Cable (5m) by Pro-face PFXZLMCBJR81 + Junction by AMP* ³ 5-1473574-4 + Network Connection Cable by IAI Corporation CB-ERC2-CTL001 + Power & I/O Cable by IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB	Cable length: 100m or less

Display (Connection Port)	Cable		Notes
PE-4000B ^{*13} PS5000 ^{*13} PS6000 (Optional Interface) ^{*13}	9K	User-created cable 1 + Junction by AMP ^{*3} 5-1473574-4 + Network Connection Cable by IAI Corporation CB-ERC2-CTL001 + Power & I/O Cable by IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB	Cable length: 100m or less

*1 All GP3000 models except AGP-3302B

*2 Except AST-3211A and AST-3302B

*3 When using more than one junction by AMP, user-created cable 2 is required.

*4 All GP3000 models except GP-3200 series and AGP-3302B

*5 All GP3000 models except GP-3200 series and AGP-3302B

*6 Only the COM port which can communicate by RS-422/485 (2 wire) can be used. (Except PE-4000B, PS5000, and PS6000)

■ IPC COM Port (page 5)

*7 Except GP-4203T

*8 All GP4000 models except GP-4100 series, GP-4*01TM, GP-Rear Module, GP-4201T and GP-4*03T

*9 Except SP-5B00

*10 Except ST-6200

*11 Due to the COM port specifications, flow control is not possible. Omit wiring the control pins on the Display side of the cable diagram.


*12 When using a Terminal Block Conversion Adapter (CA3-ADPTRM-01) instead of the RS-422 Terminal Block Conversion Adapter, refer to Cable Diagram 9A.

*13 Only the COM port which can communicate by RS-422/485 (2 wire) can be used.

■ IPC COM Port (page 5)


9A)

- 1:1 connection

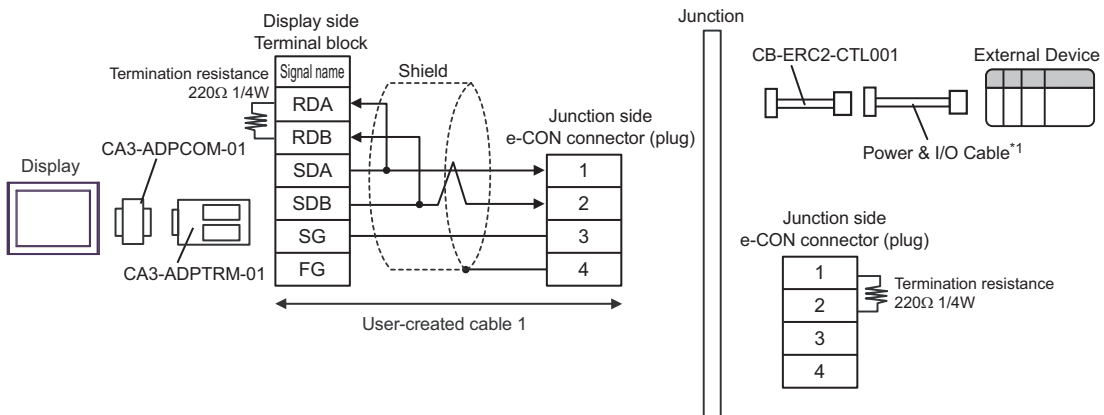

*1 We recommend the IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB as the Power & I/O Cable.

- 1:n connection

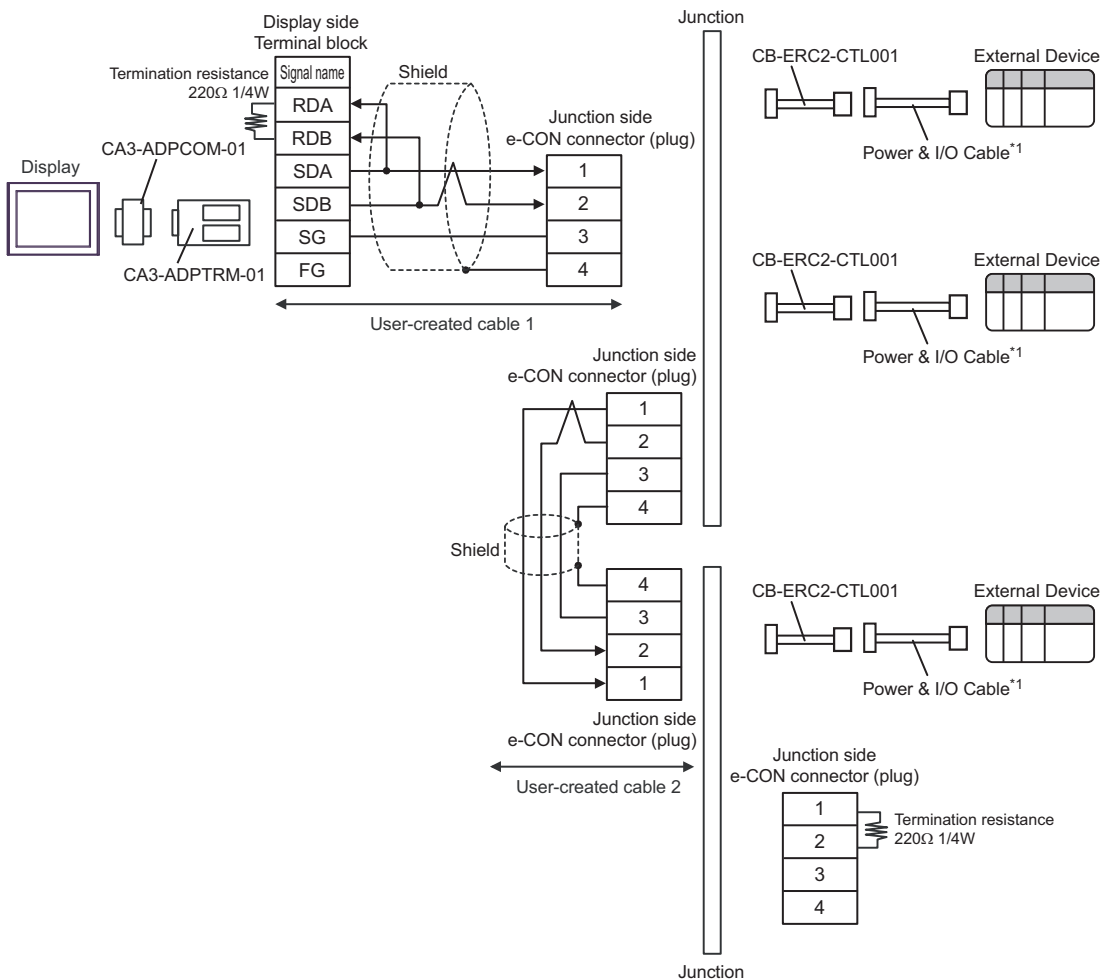


*1 We recommend the IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB as the Power & I/O Cable.

NOTE

- Cable length: 100m or less
-


9B)

- 1:1 connection

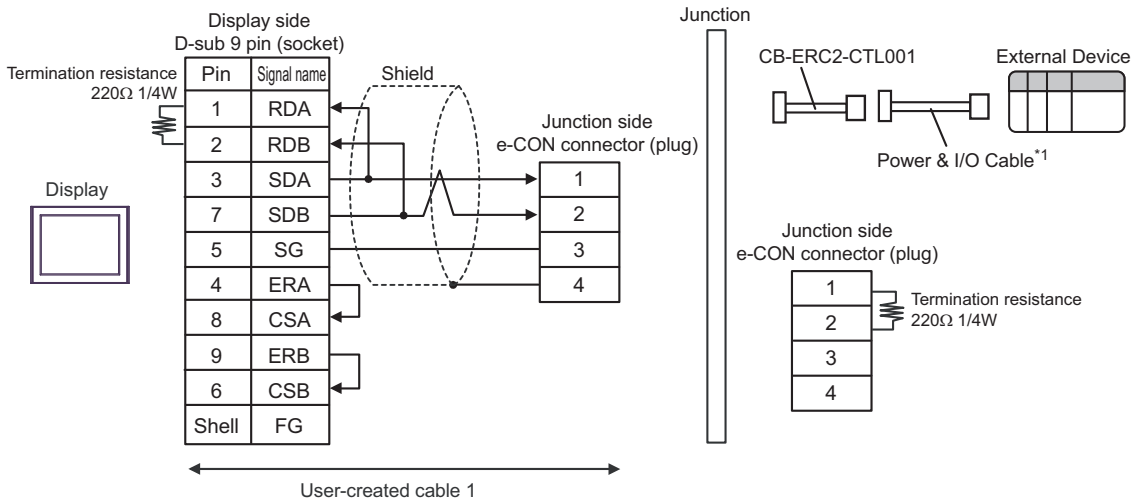

*1 We recommend the IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB as the Power & I/O Cable.

- 1:n connection

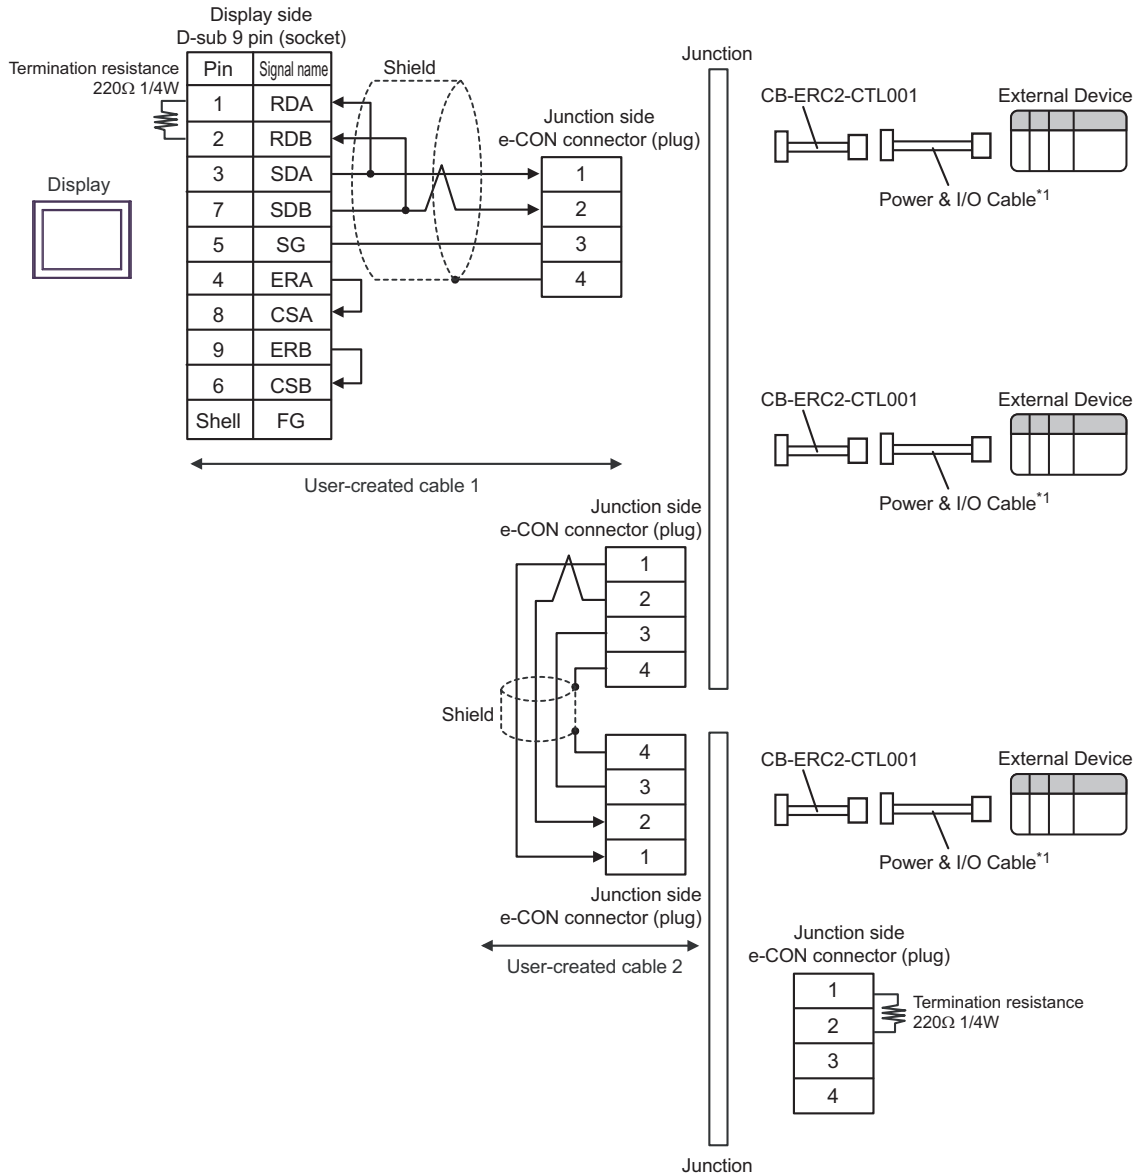


*1 We recommend the IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB as the Power & I/O Cable.

NOTE

- Cable length: 100m or less


9C)

- 1:1 connection

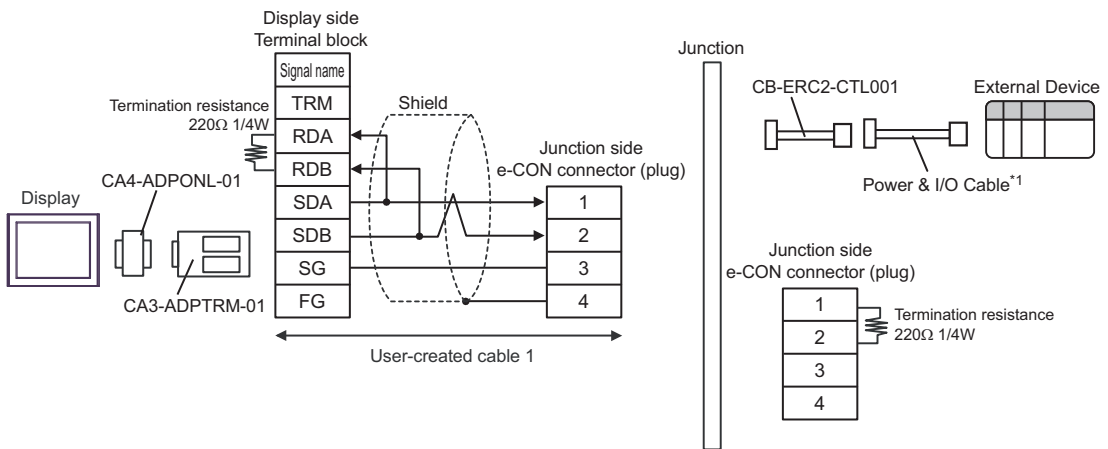

*1 We recommend the IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB as the Power & I/O Cable.

- 1:n connection

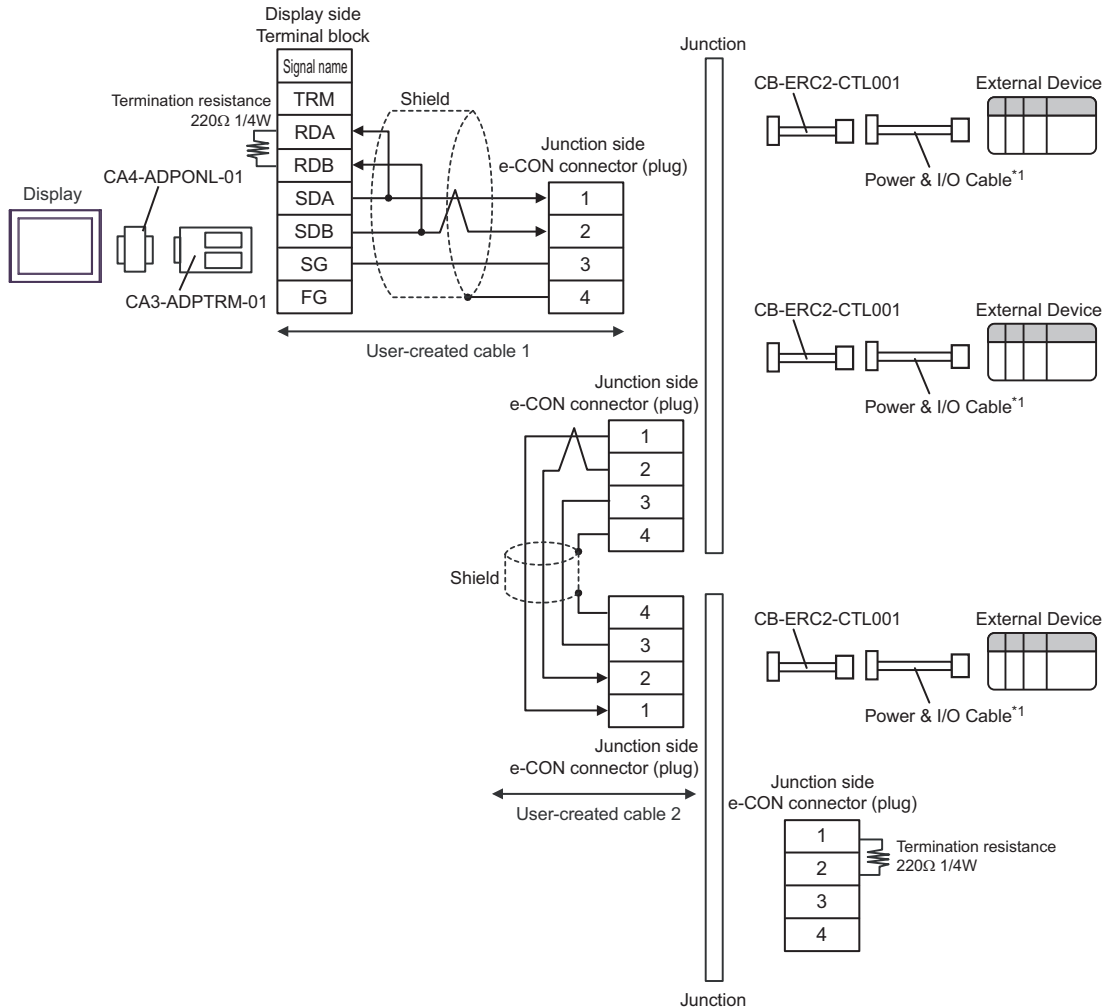


*1 We recommend the IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB as the Power & I/O Cable.

NOTE

- Cable length: 100m or less


9D)

- 1:1 connection

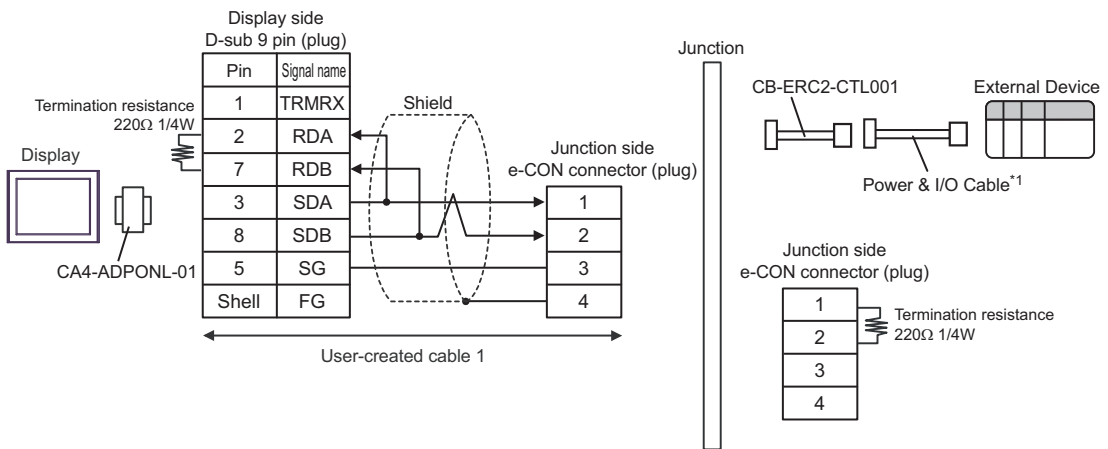

*1 We recommend the IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB as the Power & I/O Cable.

- 1:n connection

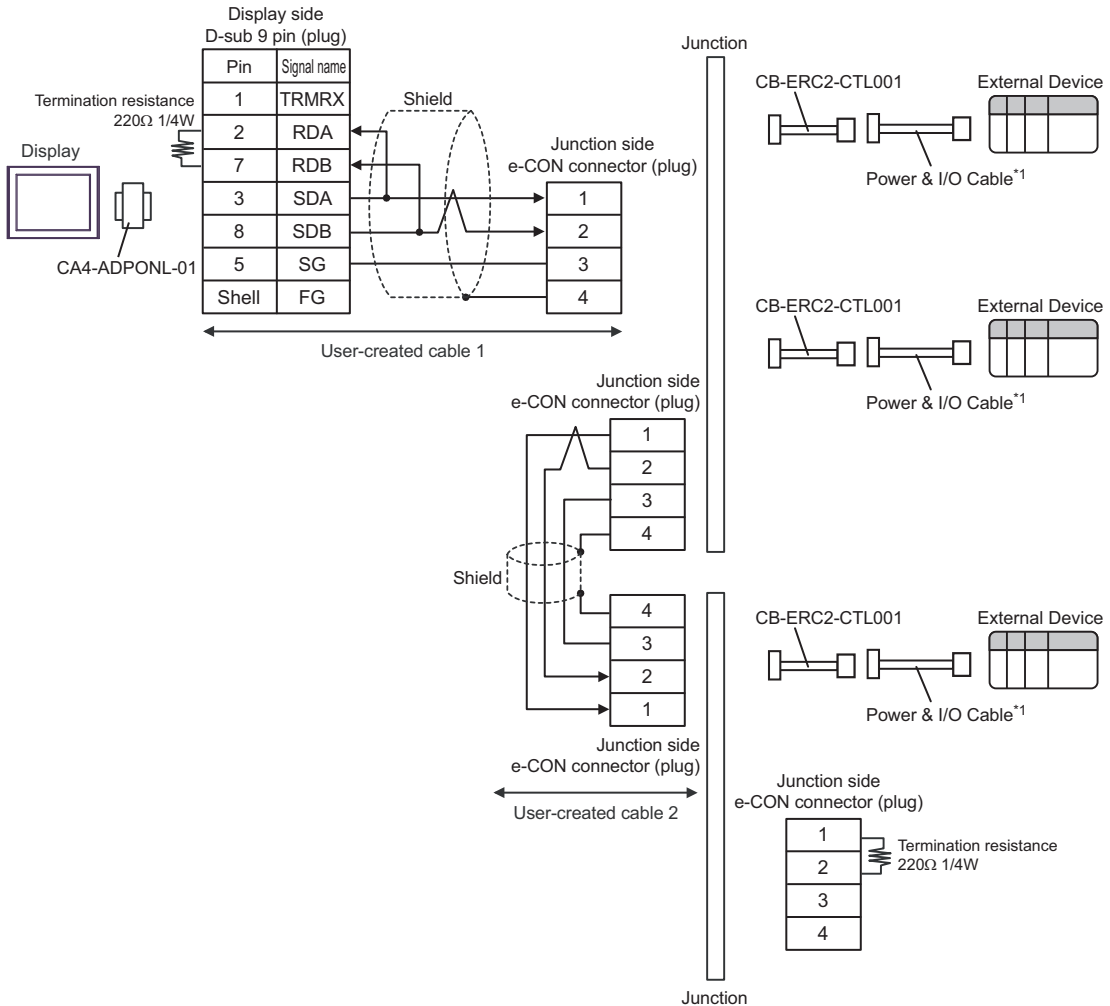


*1 We recommend the IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB as the Power & I/O Cable.

NOTE

- Cable length: 100m or less


9E)

- 1:1 connection

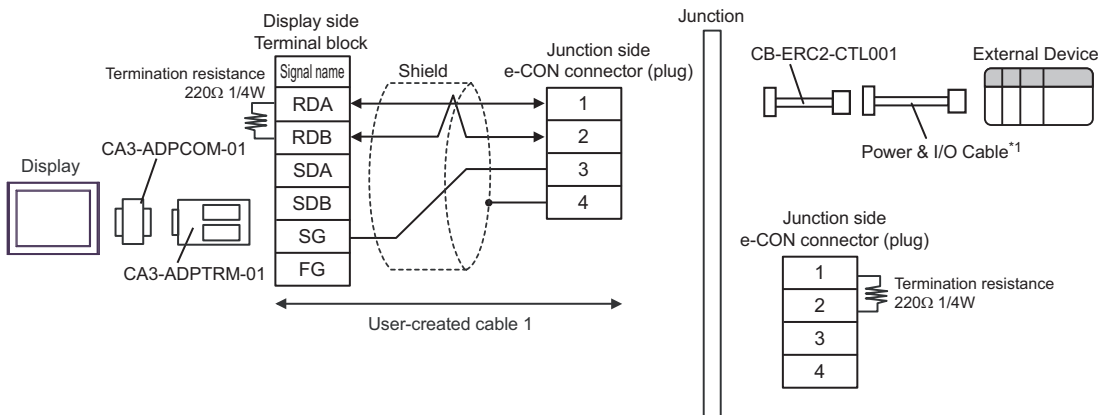

- *1 We recommend the IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB as the Power & I/O Cable.

- 1:n connection

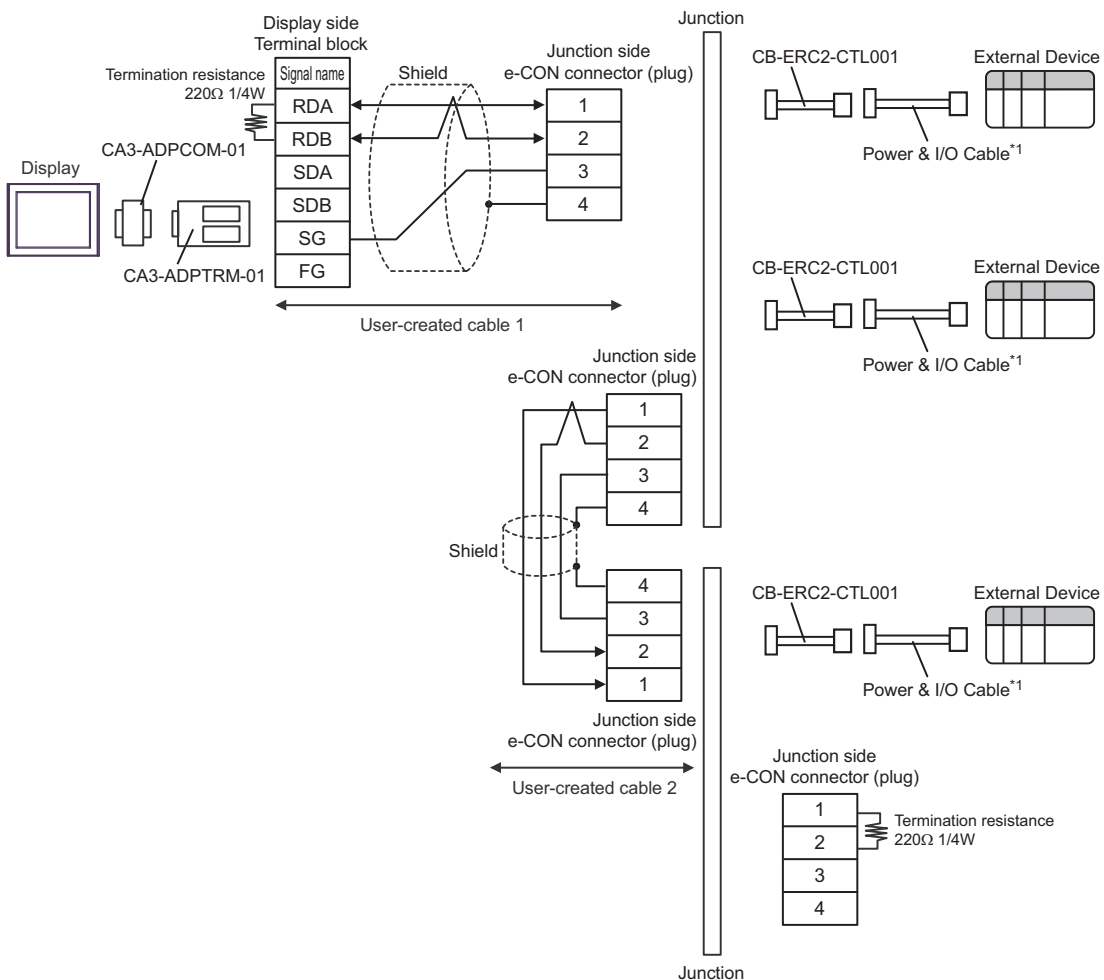


*1 We recommend the IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB as the Power & I/O Cable.

NOTE

- Cable length: 100m or less
-


9F)

- 1:1 connection

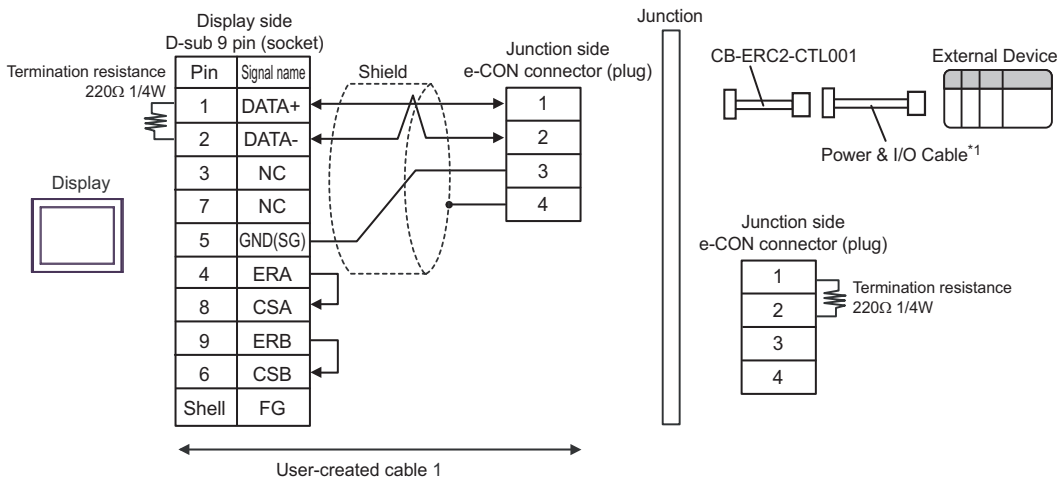

*1 We recommend the IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB as the Power & I/O Cable.

- 1:n connection

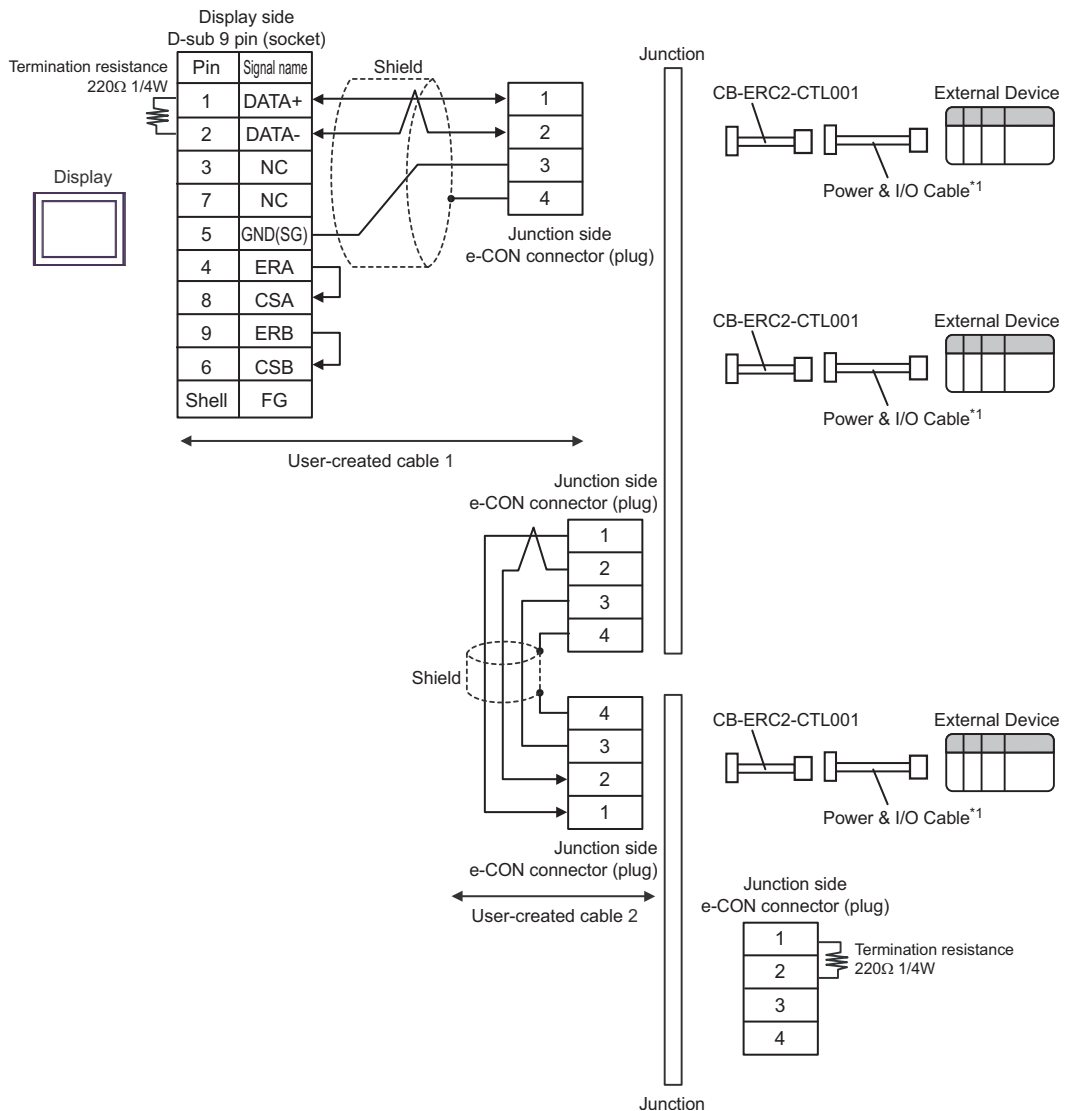


*1 We recommend the IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB as the Power & I/O Cable.

NOTE

- Cable length: 100m or less

9G)


- 1:1 connection

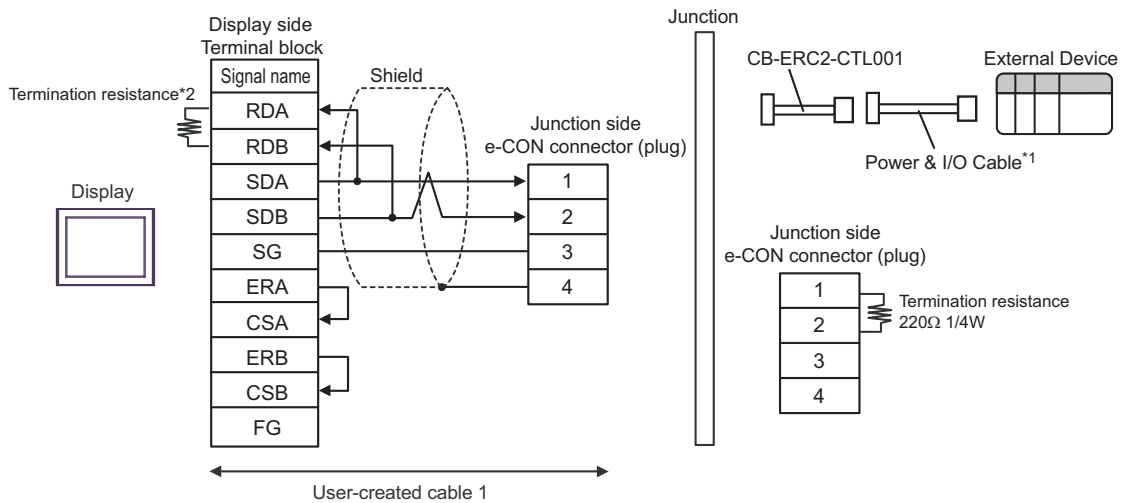

- *1 We recommend the IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB as the Power & I/O Cable.
- *2 The resistance in the Display is used as the termination resistance. Set the value of the DIP Switch on the rear of the Display as shown in the table below.

DIP Switch No.	Set Value
1	OFF
2	OFF
3	OFF
4	ON

- 1:n connection

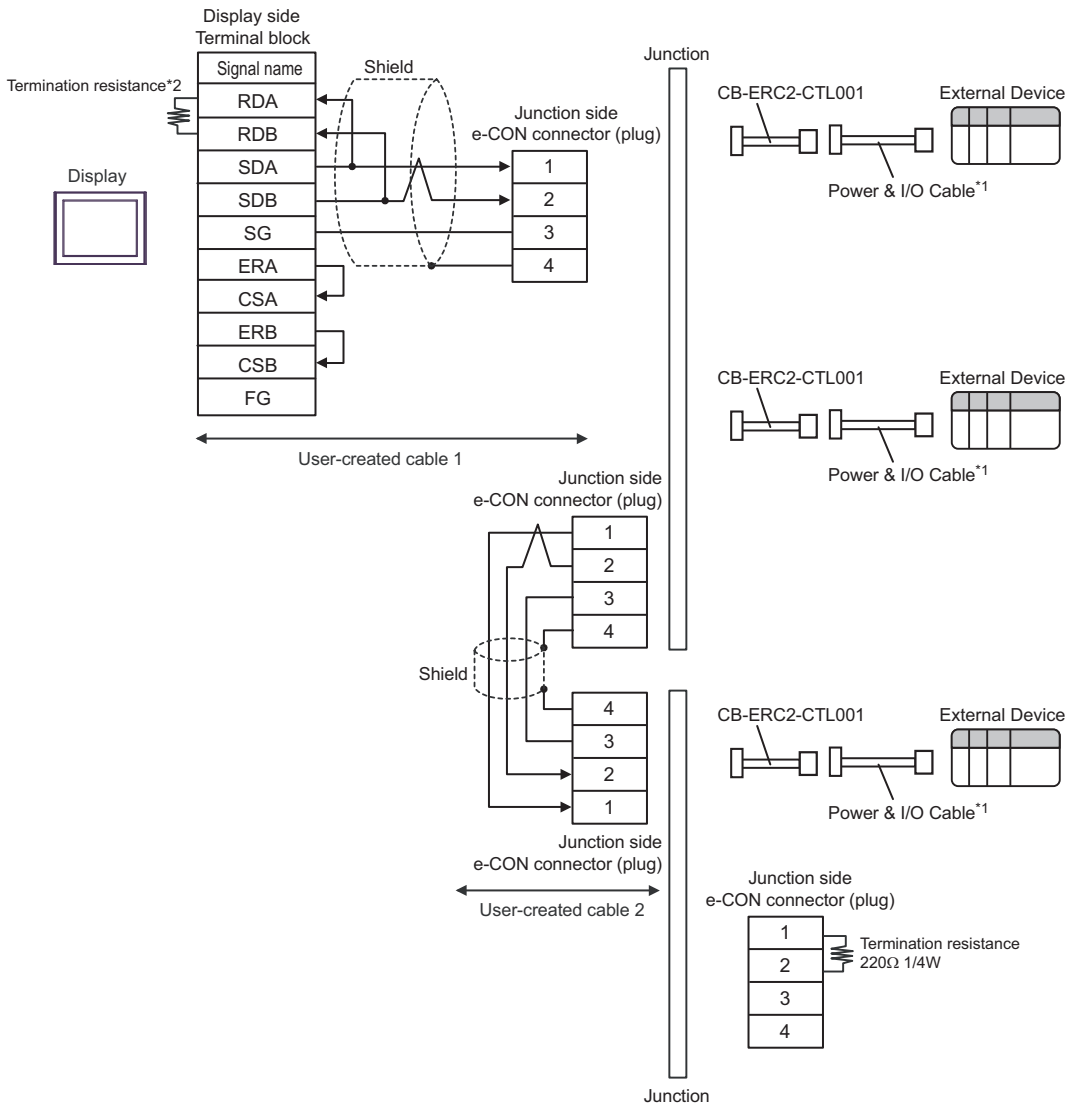

*1 We recommend the IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB as the Power & I/O Cable.

*2 The resistance in the Display is used as the termination resistance. Set the value of the DIP Switch on the rear of the Display as shown in the table below.


DIP Switch No.	Set Value
1	OFF
2	OFF
3	OFF
4	ON

NOTE

- Cable length: 100m or less


9H)

- 1:1 connection

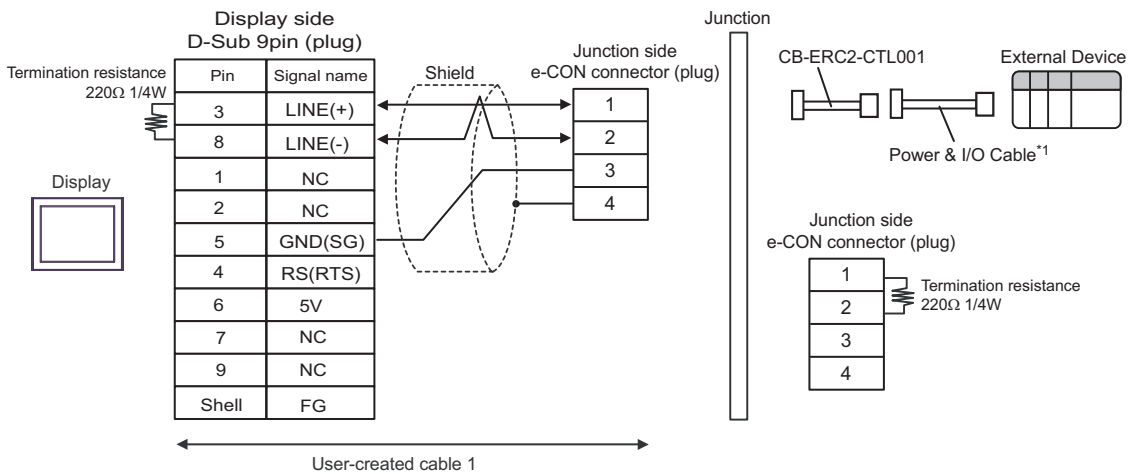

*1 We recommend the IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB as the Power & I/O Cable.

- 1:n connection

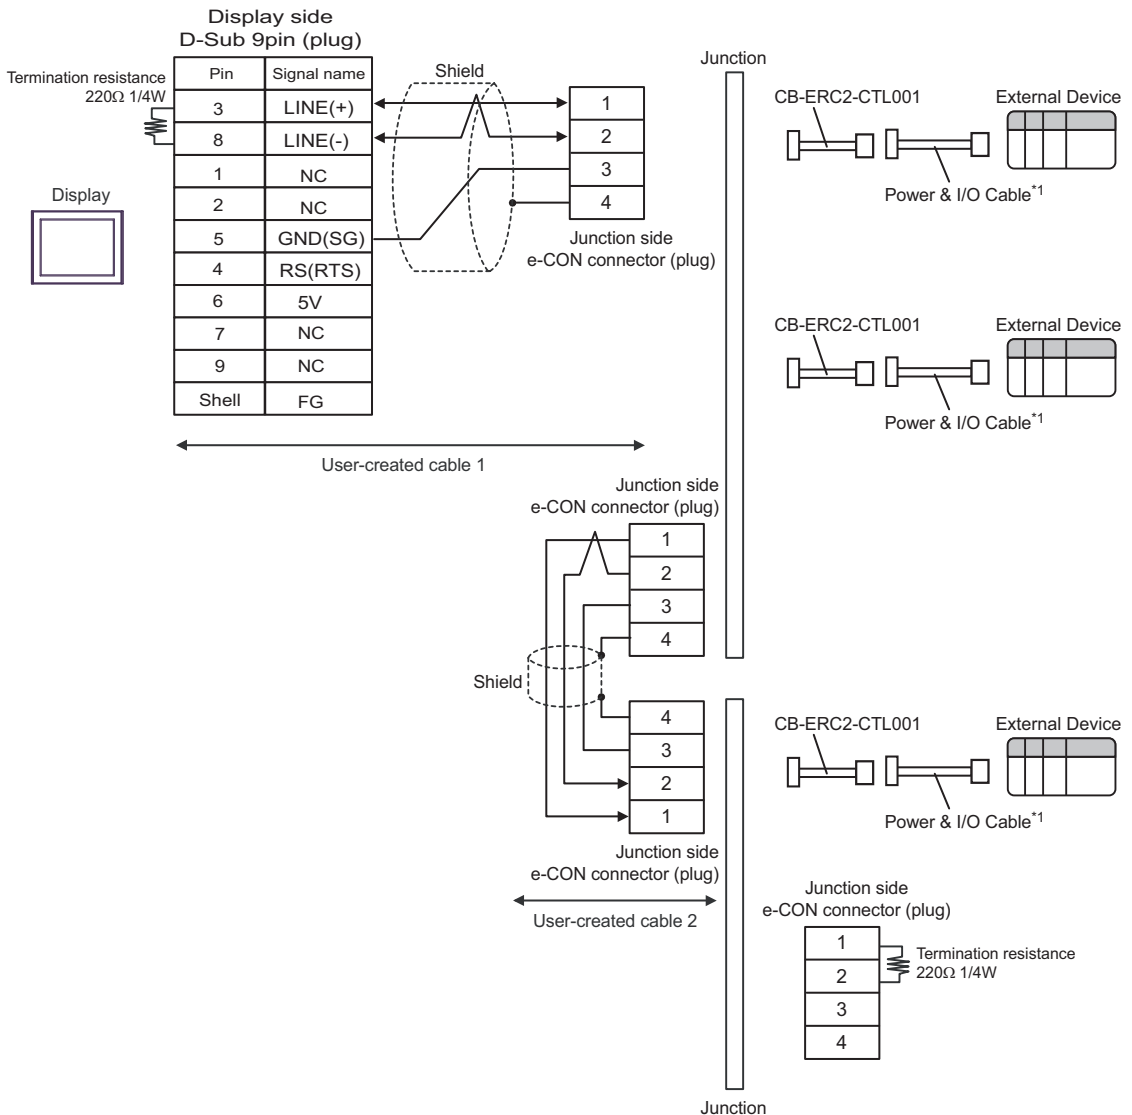

*1 We recommend the IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB as the Power & I/O Cable.

IMPORTANT


- The 5V output (Pin #6) on the Display is the power for the Siemens AG's PROFIBUS connector. Do not use it for other devices.

NOTE

- In COM on the GP-4107, the SG and FG terminals are isolated.
- Cable length: 100m or less


9I)

- 1:1 connection

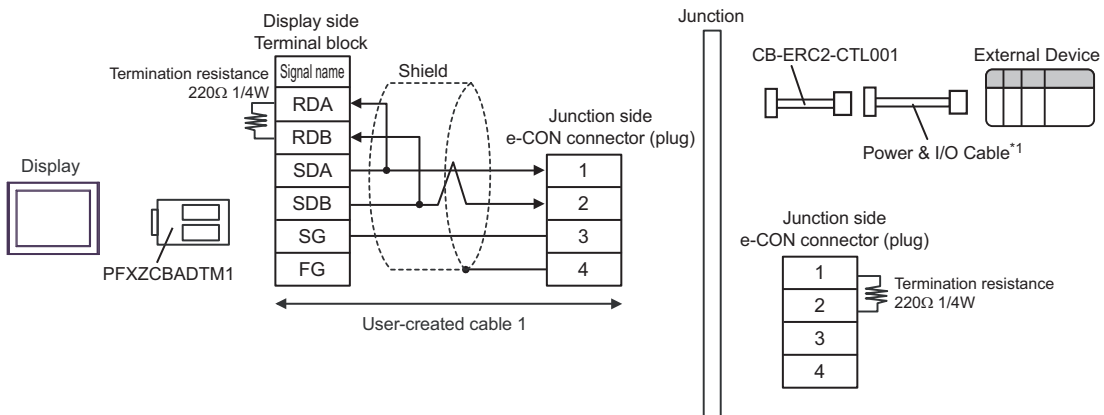

- *1 We recommend the IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB as the Power & I/O Cable.

- 1:n connection

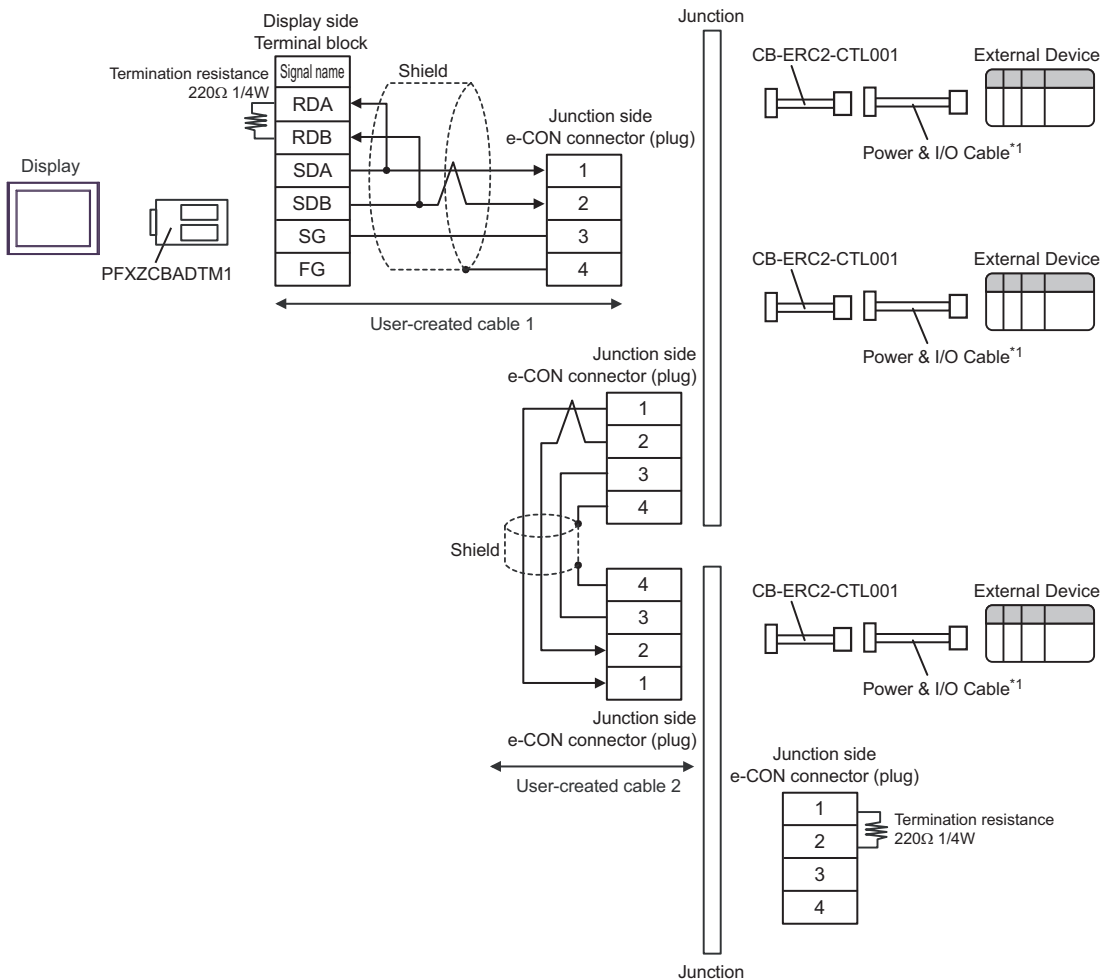


*1 We recommend the IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB as the Power & I/O Cable.

NOTE

- Cable length: 100m or less
-


9J)

- 1:1 connection

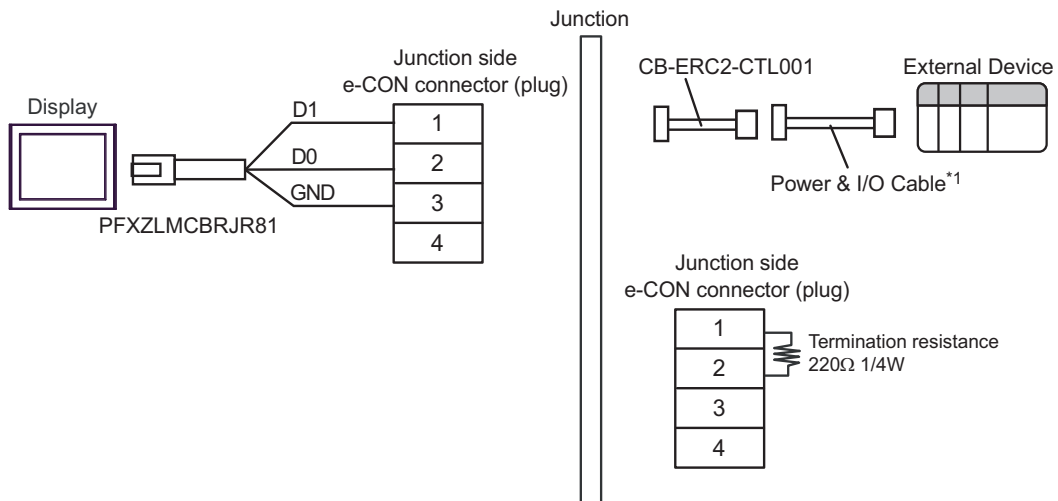

*1 We recommend the IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB as the Power & I/O Cable.


- 1:n connection

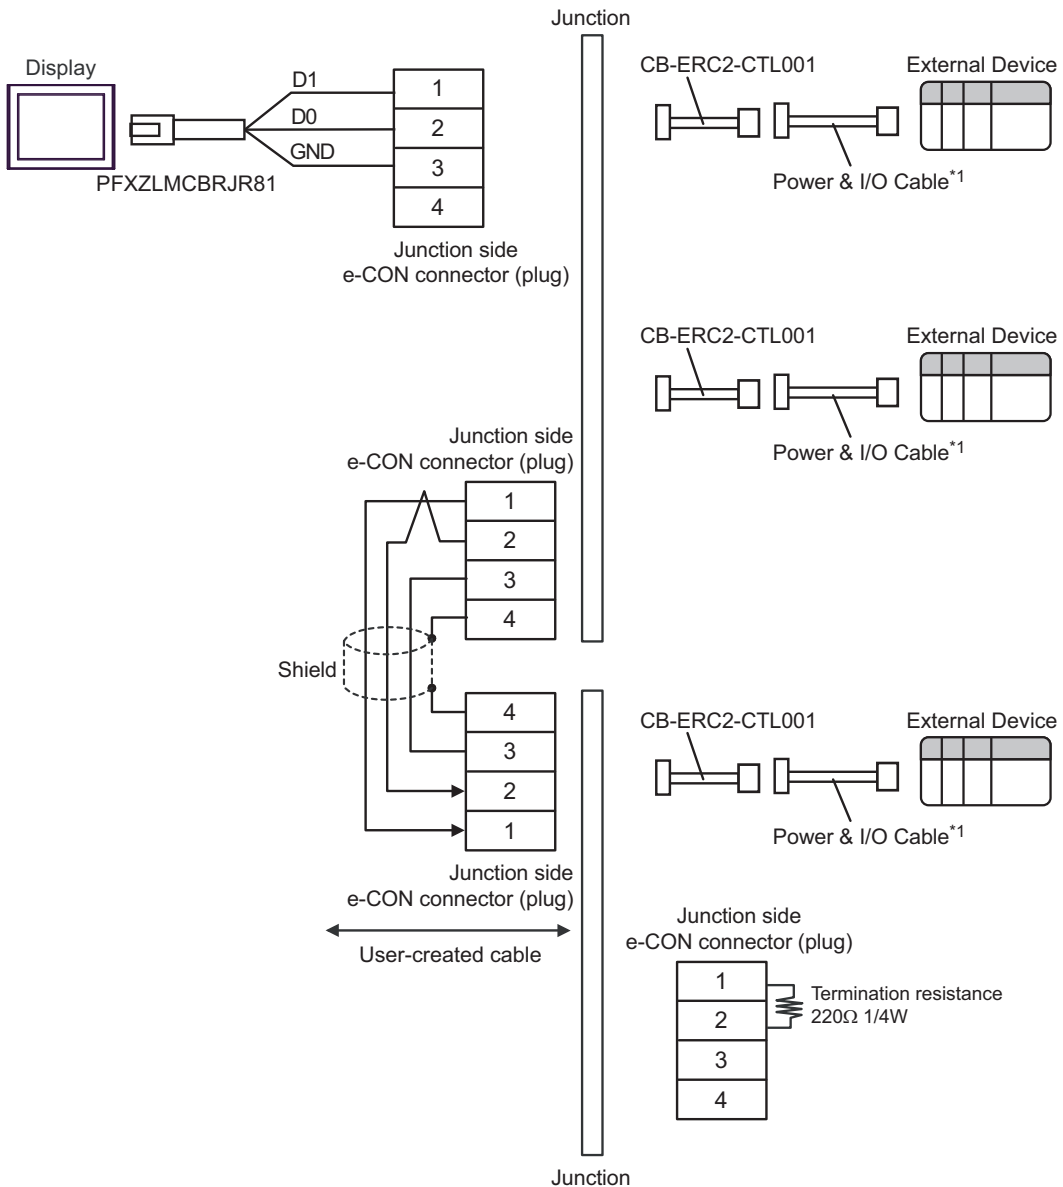

*1 We recommend the IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB as the Power & I/O Cable.


9K)

1:1 connection

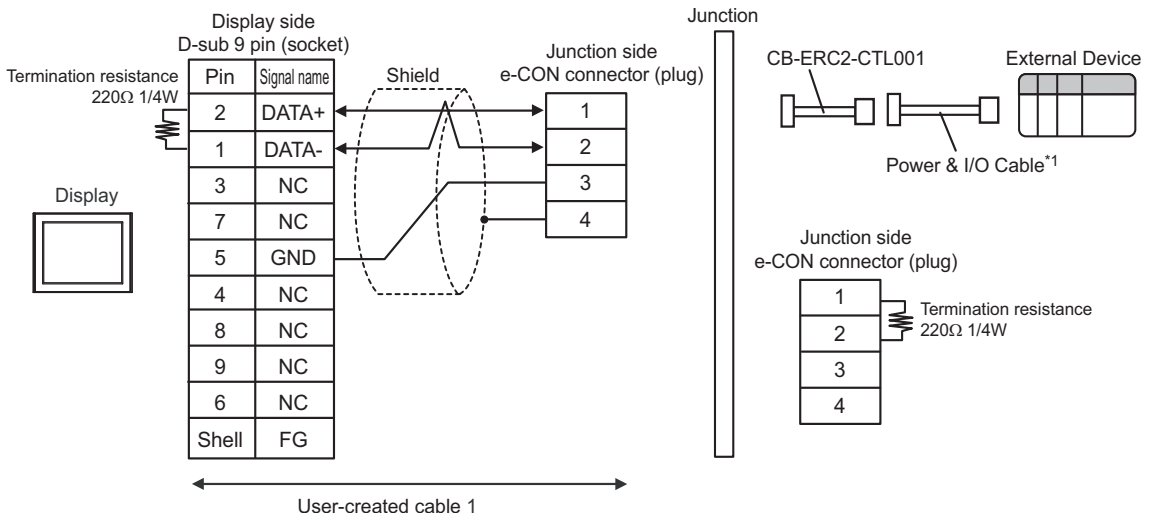

*1 We recommend the IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB as the Power & I/O Cable.

- 1:n connection

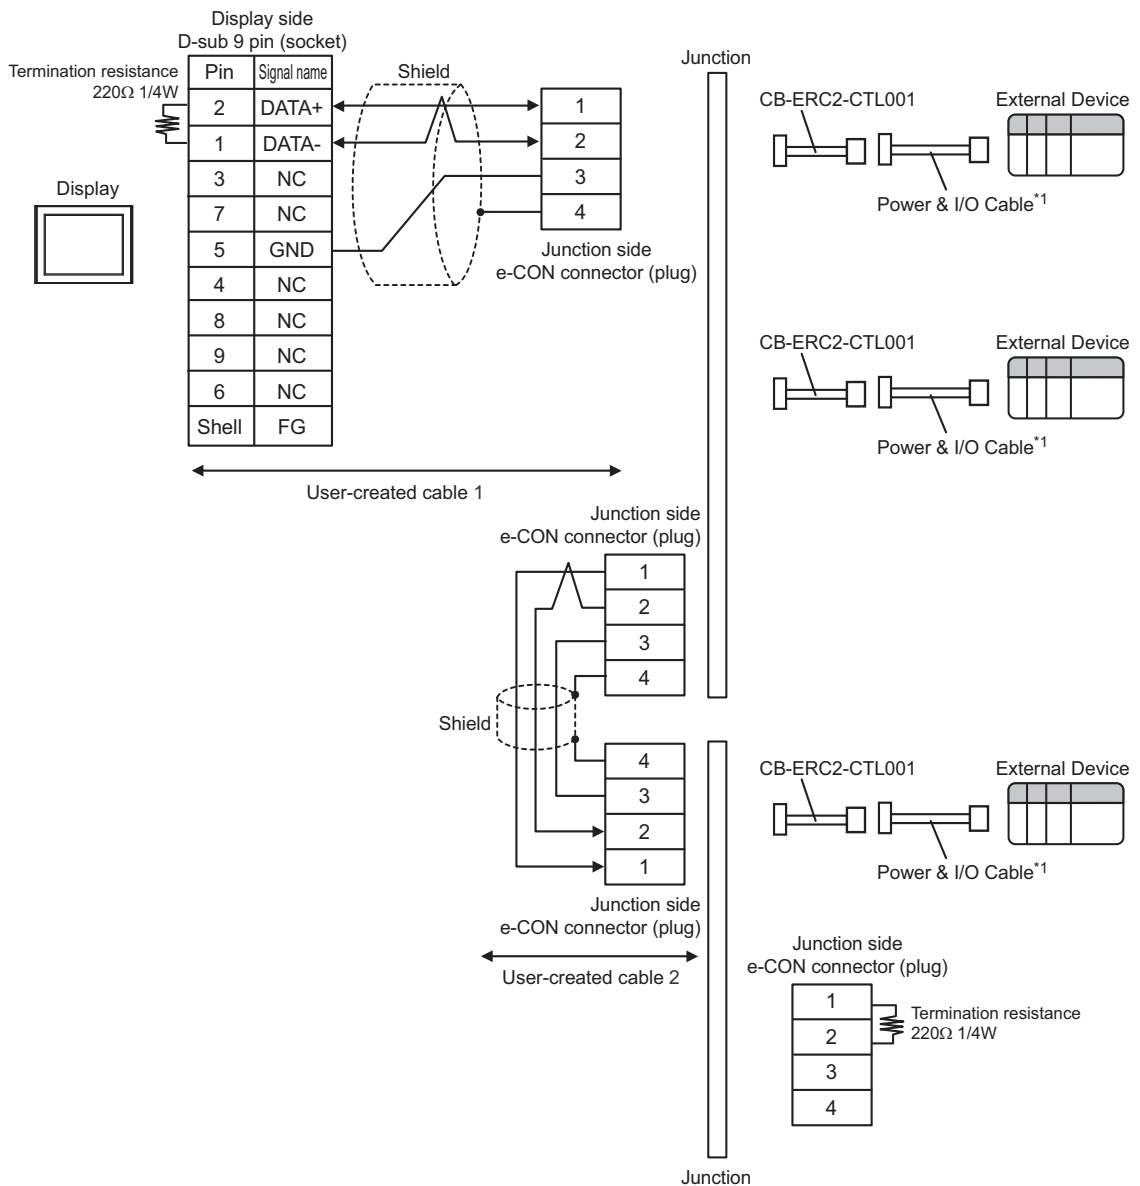

*1 We recommend the IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB as the Power & I/O Cable.

NOTE

- Cable length: 100m or less

5.10 Cable Diagram 10

Display (Connection Port)	Cable		Notes
GP3000 (COM1) GP4000* ¹ (COM1) SP5000* ² (COM1/2) SP-5B00 (COM1) ST3000 (COM1) ST6000 (COM1) STM6000 (COM1) STC6000 (COM1) ET6000 (COM1) LT3000 (COM1) IPC* ³ PC/AT	10A	User-created cable + SIO converter by IAI Corporation RC□-TU-SIO-□ + Network Connection Cable by IAI Corporation CB-ERC2-CTL001 + Power & I/O Cable by IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB	Cable length from Display to SIO converter: 15m or less
	10B	User-created cable 1 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable 2 + Junction by AMP* ⁴ 5-1473574-4 + Network Connection Cable by IAI Corporation CB-ERC2-CTL001 + Power & I/O Cable by IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB	
	10C	User-created cable 1 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable 2 + Junction by AMP* ⁴ 5-1473574-4 + Network Connection Cable by IAI Corporation CB-ERC2-CTL001 + Power & I/O Cable by IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB	

Display (Connection Port)	Cable		Notes
GP-4105 (COM1) GP-4115T (COM1) GP-4115T3 (COM1)	10D	User-created cable + SIO converter by IAI Corporation RC□-TU-SIO-□ + Network Connection Cable by IAI Corporation CB-ERC2-CTL001 + Power & I/O Cable by IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB	Cable length from Display to SIO converter: 15m or less
	10E	User-created cable 1 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable 2 + Junction by AMP*4 5-1473574-4 + Network Connection Cable by IAI Corporation CB-ERC2-CTL001 + Power & I/O Cable by IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB	
	10F	User-created cable 1 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable 2 + Junction by AMP*4 5-1473574-4 + Network Connection Cable by IAI Corporation CB-ERC2-CTL001 + Power & I/O Cable by IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB	

Display (Connection Port)	Cable		Notes
LT-4*01TM (COM1) LT-Rear Module (COM1)	10G	RJ45 RS-232C Cable (5m) by Pro-face PFXZLMCBJR21 + SIO converter by IAI Corporation RC□-TU-SIO-□ + Network Connection Cable by IAI Corporation CB-ERC2-CTL001 + Power & I/O Cable by IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB	Cable length from Display to SIO converter: 5m or less
	10H	RJ45 RS-232C Cable (5m) by Pro-face PFXZLMCBJR21 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable 1 + Junction by AMP*4 5-1473574-4 + Network Connection Cable by IAI Corporation CB-ERC2-CTL001 + Power & I/O Cable by IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB	
	10I	RJ45 RS-232C Cable (5m) by Pro-face PFXZLMCBJR21 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable 1 + Junction by AMP*4 5-1473574-4 + Network Connection Cable by IAI Corporation CB-ERC2-CTL001 + Power & I/O Cable by IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB	

*1 All GP4000 models except GP-4100 series and GP-4203T

*2 Except SP-5B00

*3 Only the COM port which can communicate by RS-232C can be used.
 ■ IPC COM Port (page 5)


*4 When using more than one junction by AMP, user-created cable 3 is required.

NOTE

- When connecting to 3 or more External Devices, use link connection terminal block or junction by AMP.


10A)

- 1:1 connection

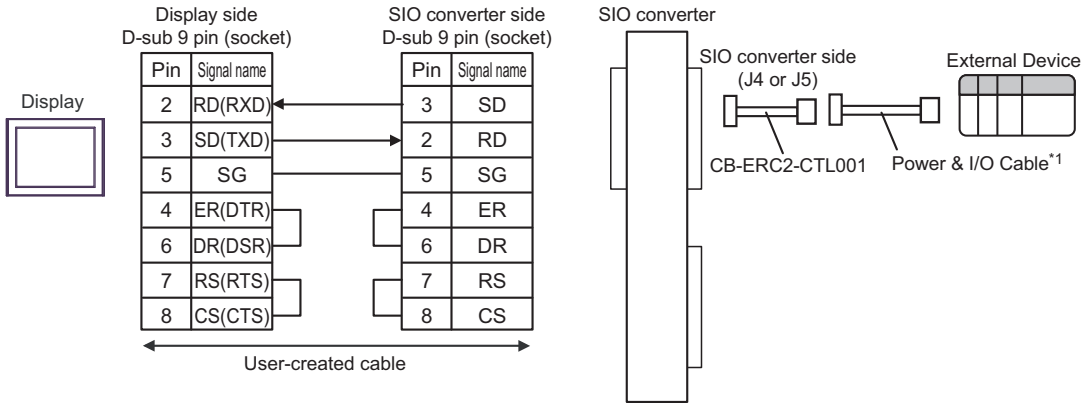

- *1 We recommend the IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB as the Power & I/O Cable.

- 1:n connection

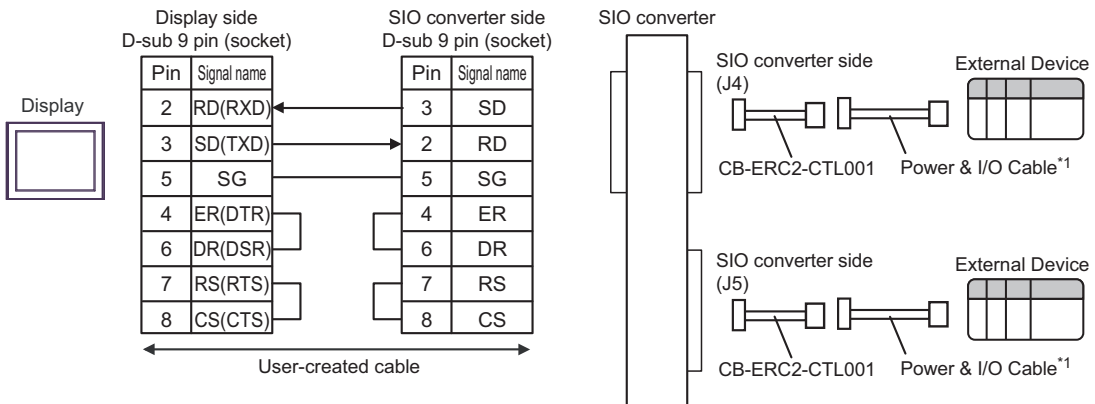


- *1 We recommend the IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB as the Power & I/O Cable.

NOTE

- Cable length from Display to SIO converter: 15m or less


10B)

- 1:1 connection

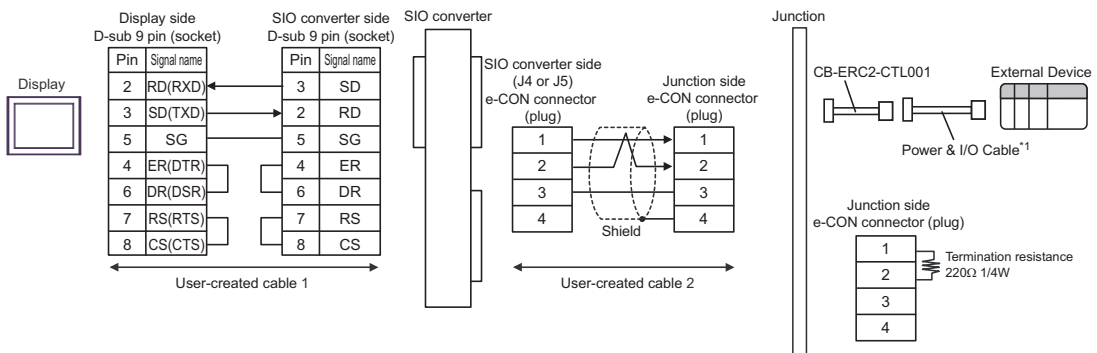

- *1 We recommend the IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB as the Power & I/O Cable.

- 1:n connection

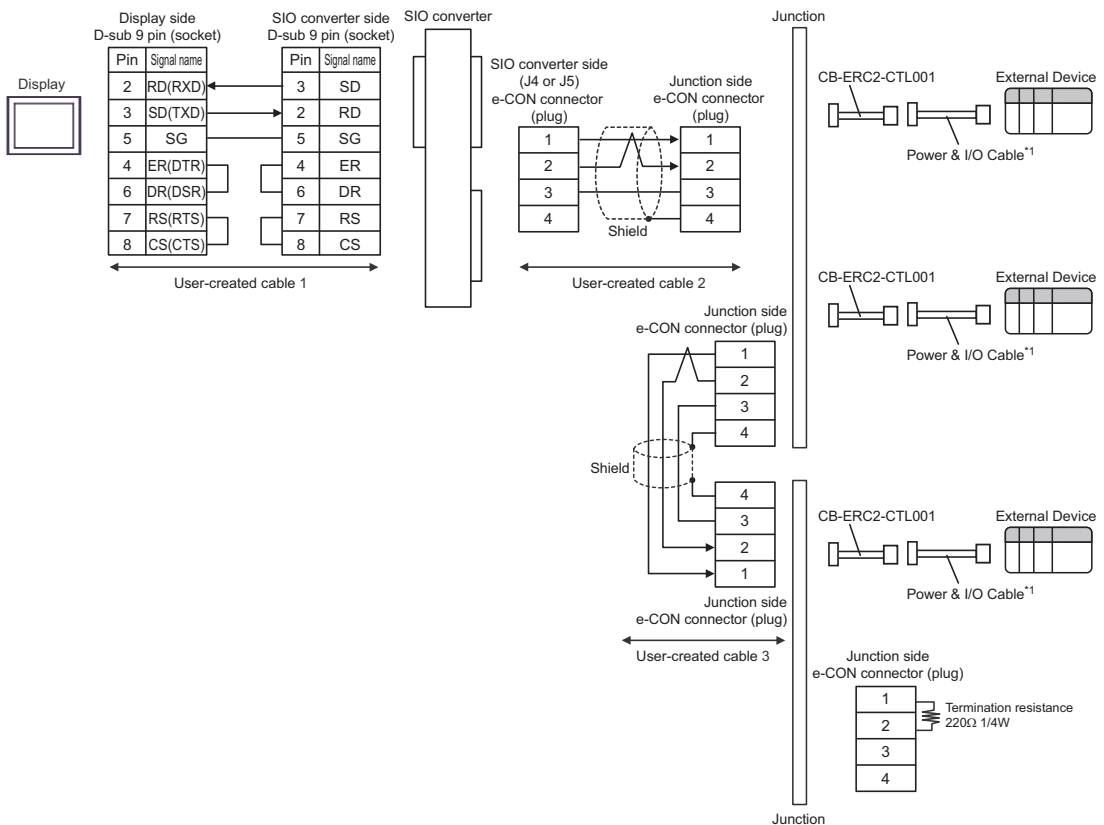


- *1 We recommend the IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB as the Power & I/O Cable.

NOTE

- Cable length from Display to SIO converter: 15m or less


10C)

- 1:1 connection

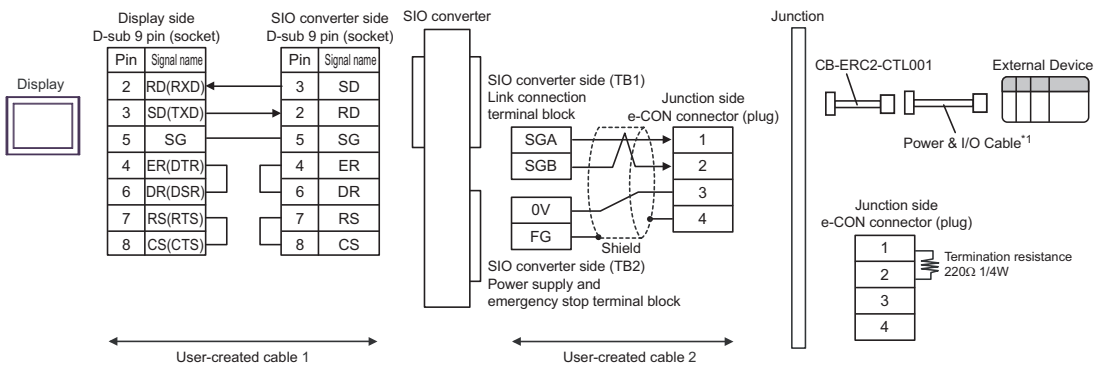

- *1 We recommend the IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB as the Power & I/O Cable.

- 1:n connection

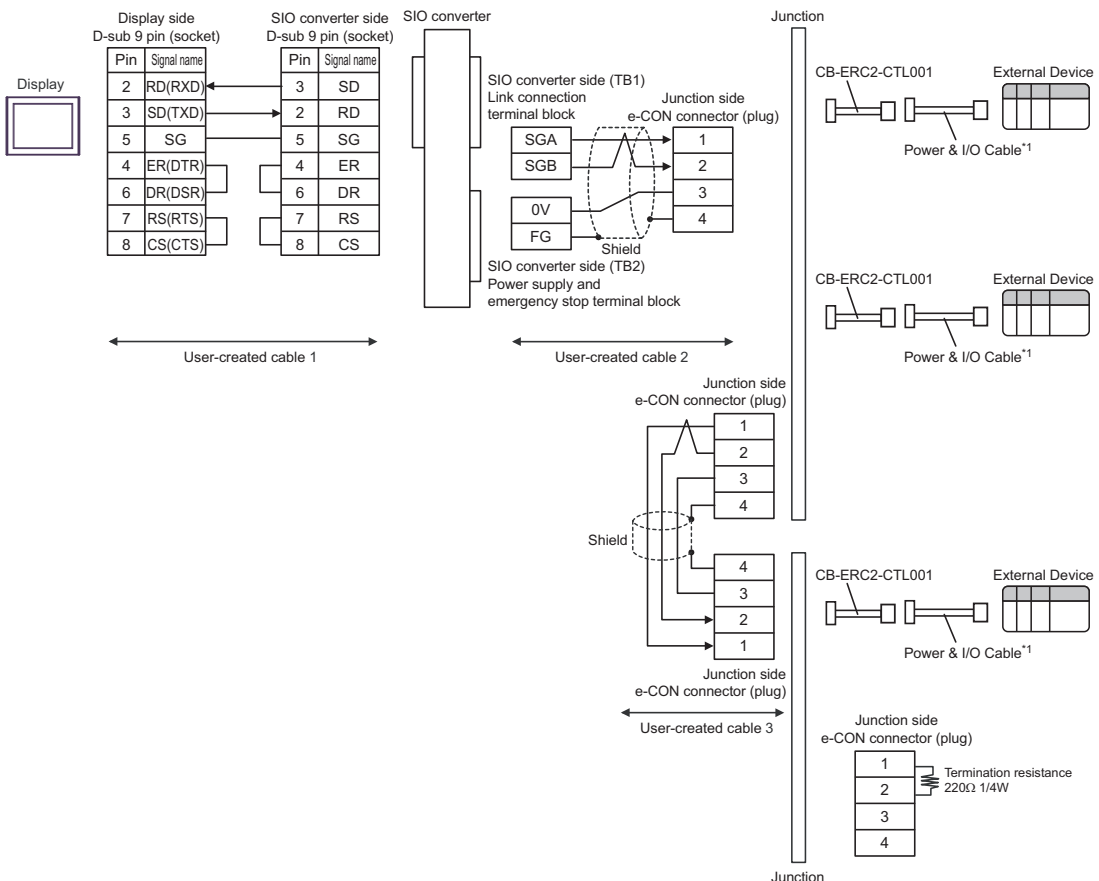


- *1 We recommend the IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB as the Power & I/O Cable.

NOTE

- Cable length from Display to SIO converter: 15m or less


10D)

- 1:1 connection

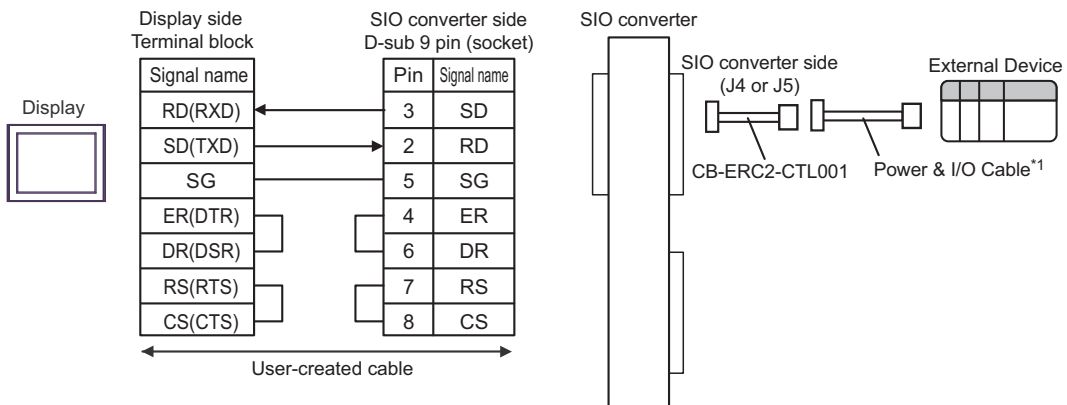

*1 We recommend the IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB as the Power & I/O Cable.

- 1:n connection

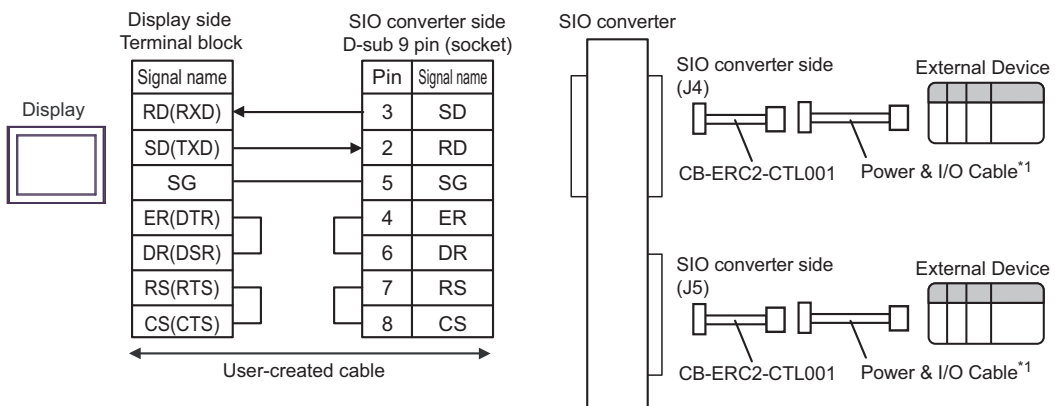


*1 We recommend the IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB as the Power & I/O Cable.

NOTE

- Cable length from Display to SIO converter: 15m or less


10E)

- 1:1 connection

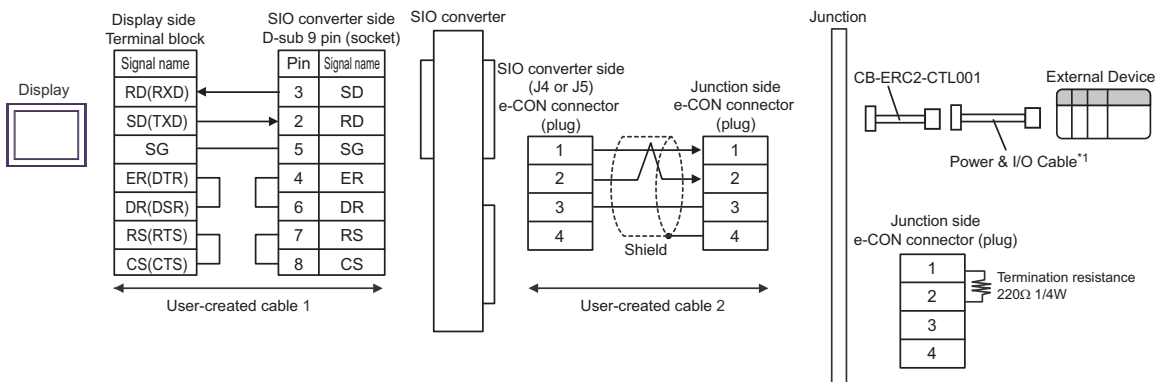

- *1 We recommend the IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB as the Power & I/O Cable.

- 1:n connection

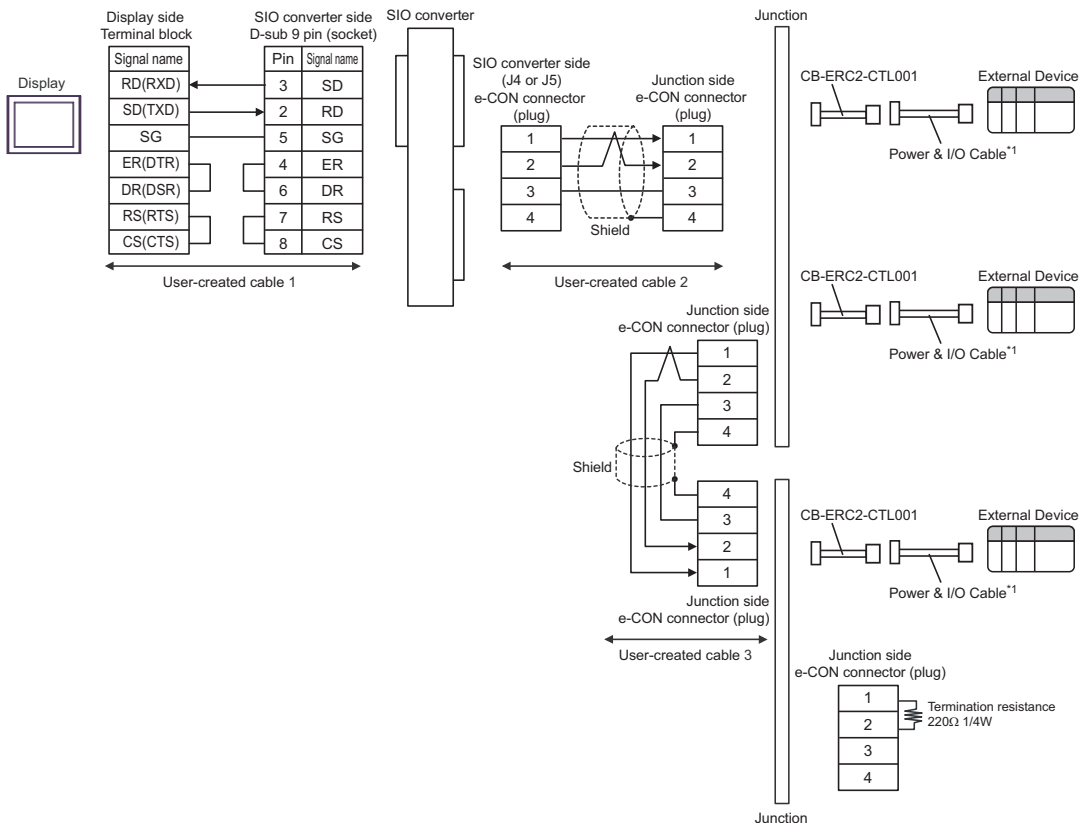


- *1 We recommend the IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB as the Power & I/O Cable.

NOTE

- Cable length from Display to SIO converter: 15m or less


10F)

- 1:1 connection

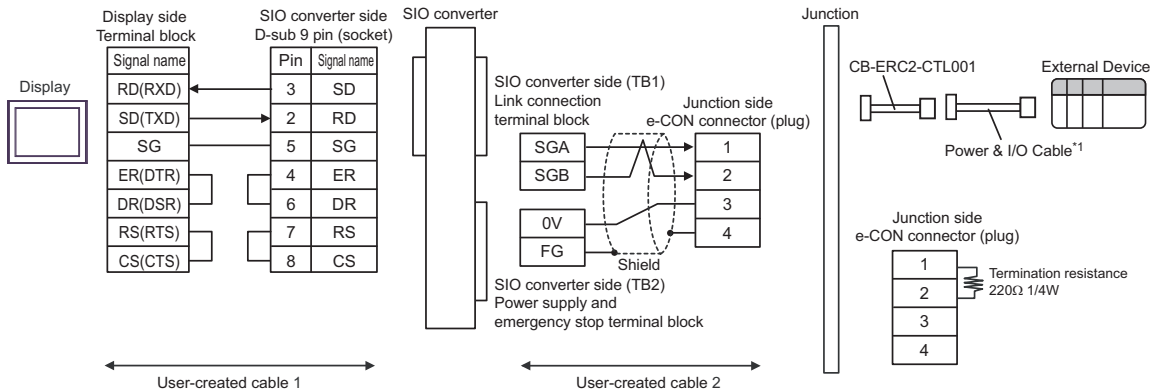

*1 We recommend the IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB as the Power & I/O Cable.

- 1:n connection

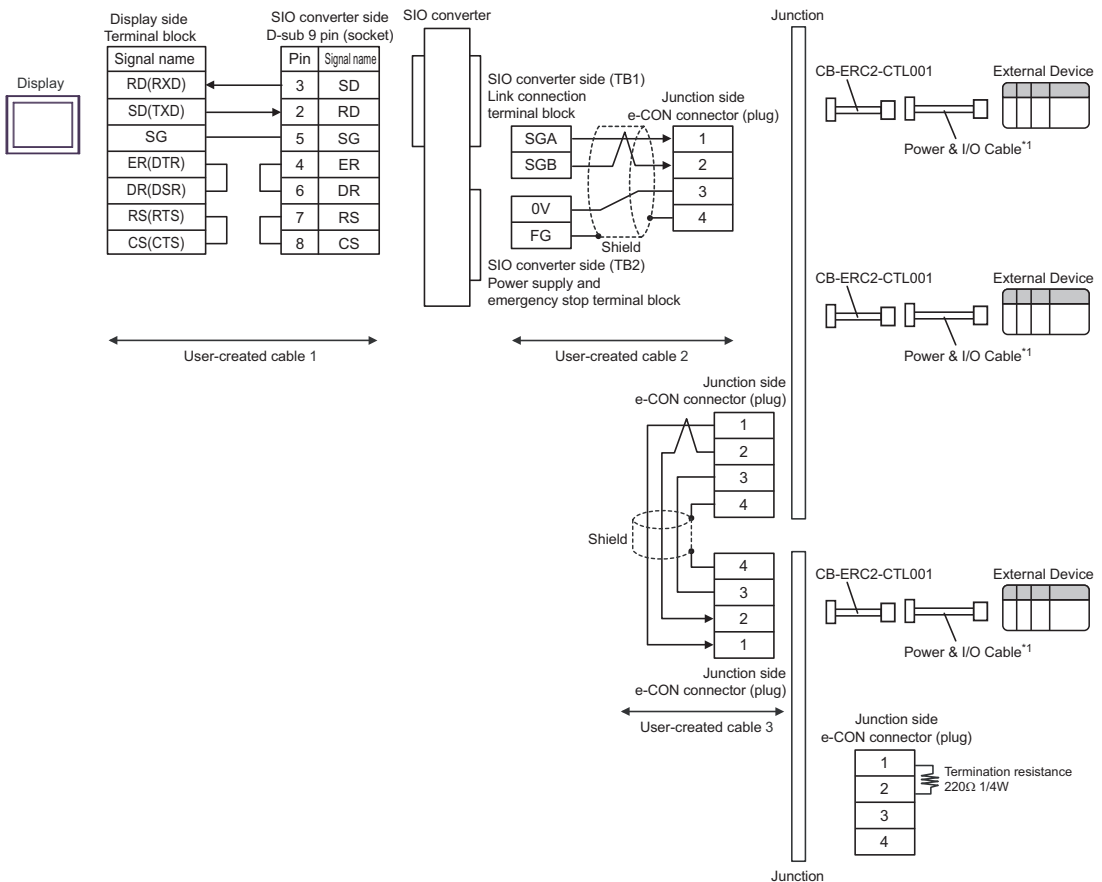


*1 We recommend the IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB as the Power & I/O Cable.

NOTE

- Cable length from Display to SIO converter: 15m or less


10G)

- 1:1 connection

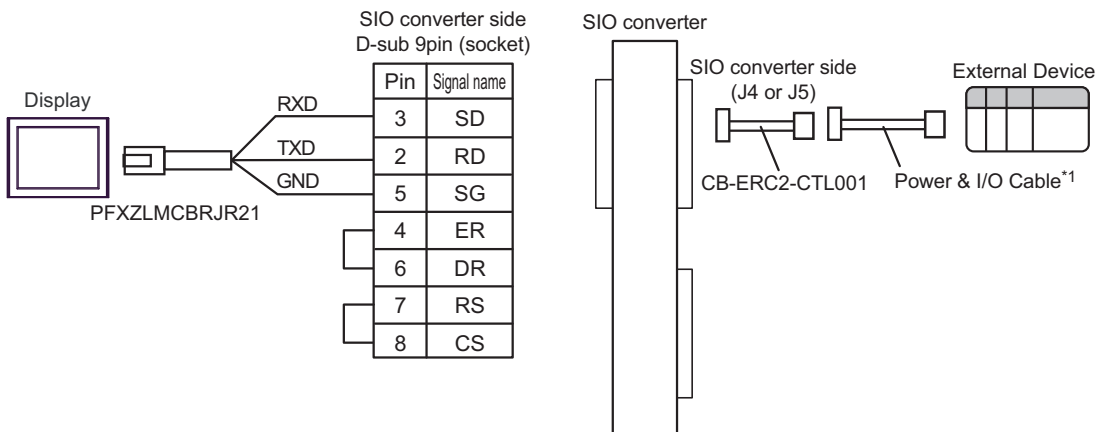

- *1 We recommend the IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB as the Power & I/O Cable.


- 1:n connection

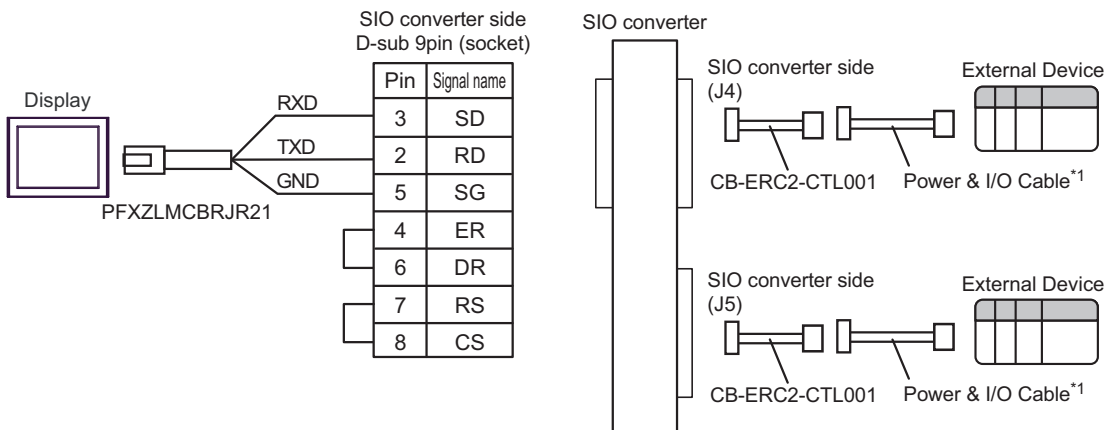

- *1 We recommend the IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB as the Power & I/O Cable.


10H)

- 1:1 connection

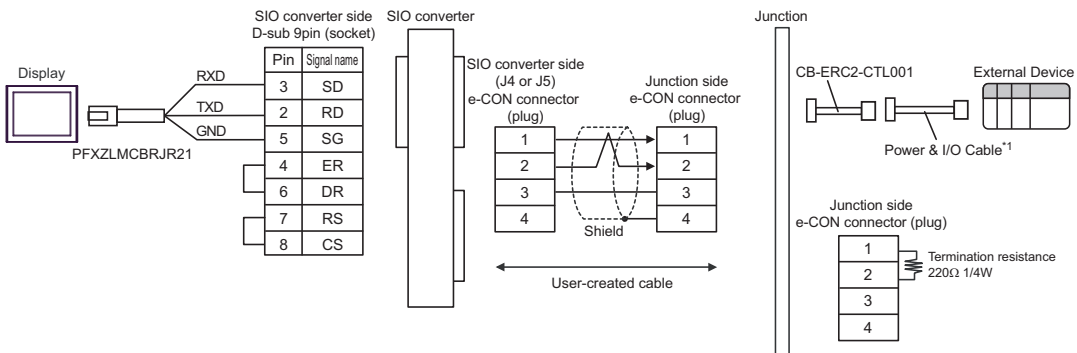

- *1 We recommend the IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB as the Power & I/O Cable.


- 1:n connection

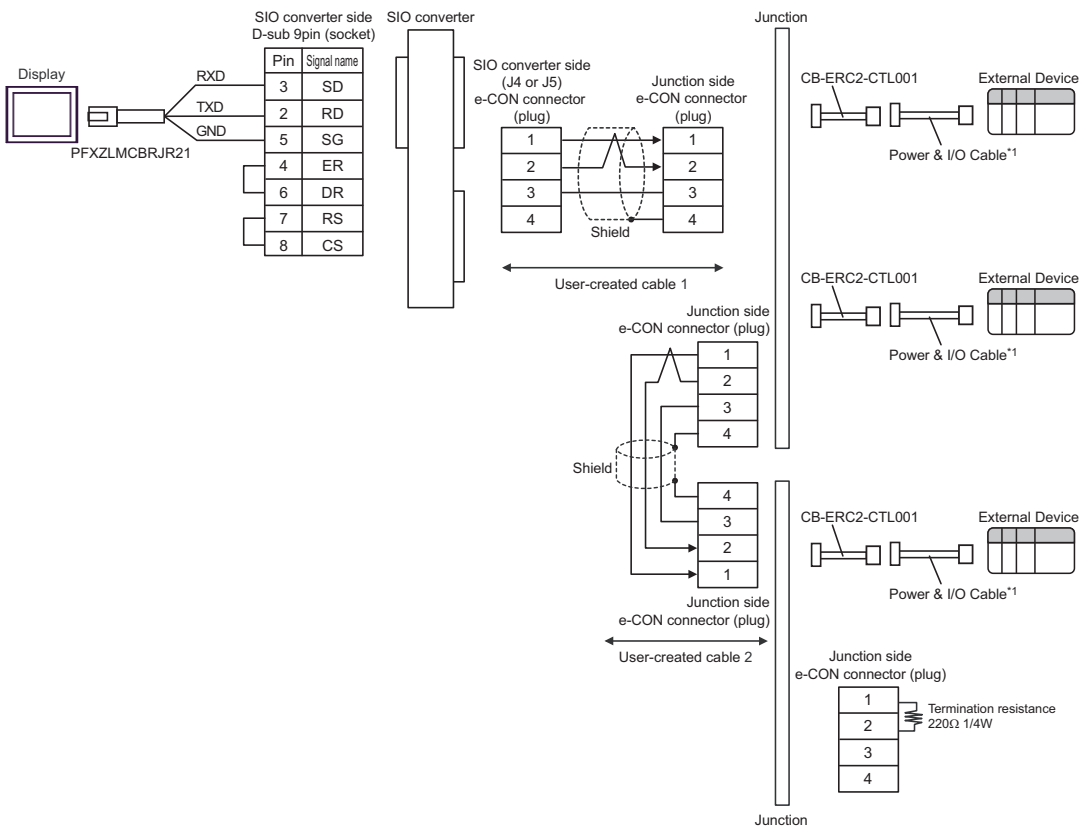

- *1 We recommend the IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB as the Power & I/O Cable.


101)

- 1:1 connection

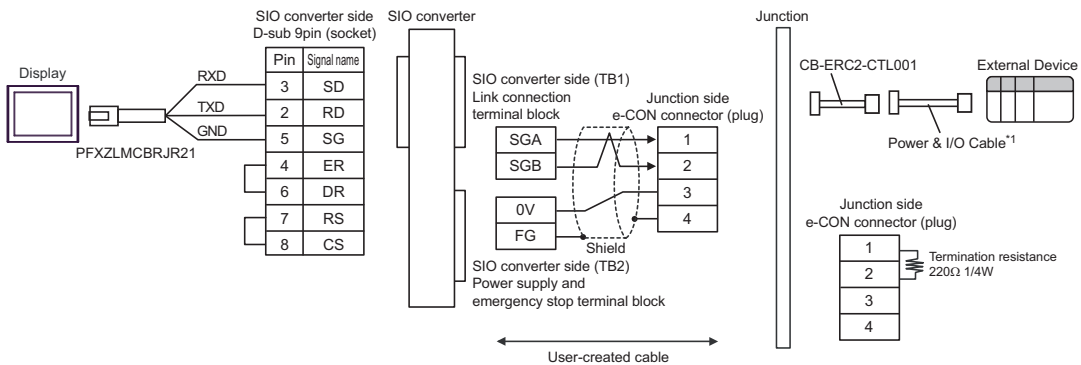

- *1 We recommend the IAI Corporation CB-ERC2-PWBIO□□□□ or CB-ERC2-PWBIO□□□□-RB as the Power & I/O Cable.

- 1:n connection

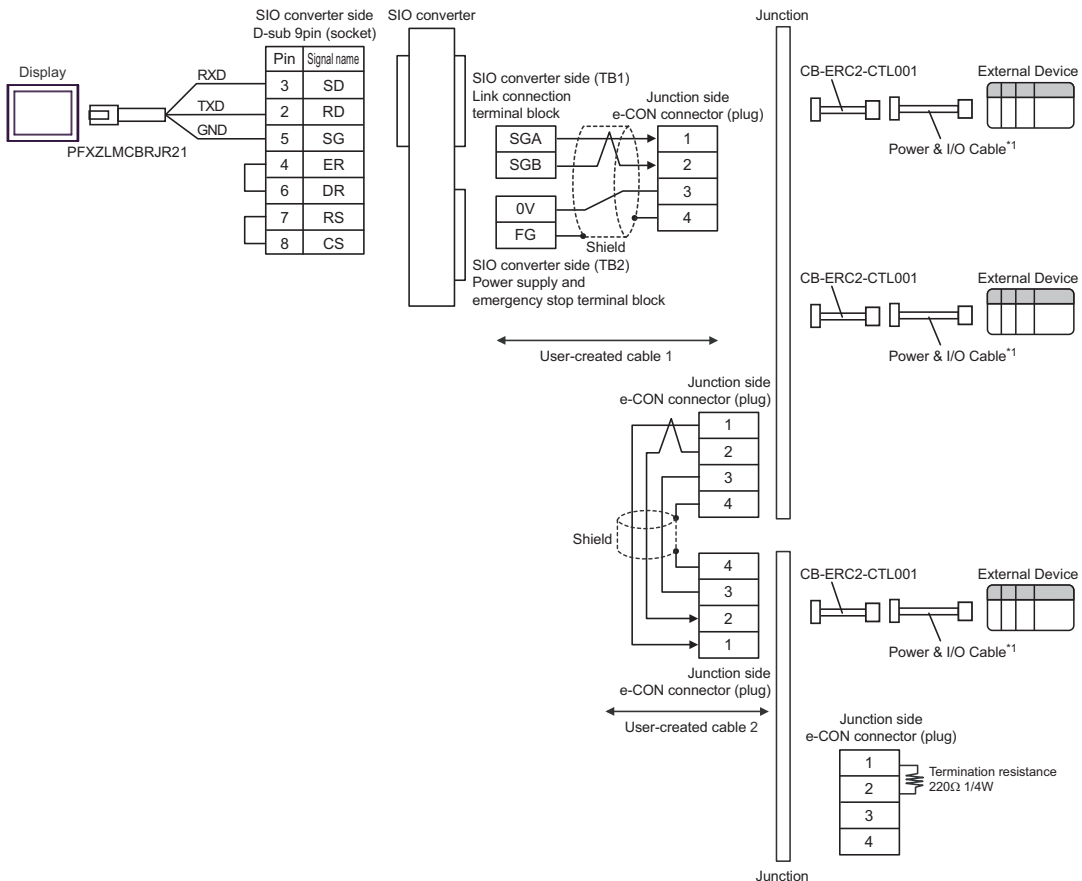

- *1 We recommend the IAI Corporation CB-ERC2-PWBIO□□□□ or CB-ERC2-PWBIO□□□□-RB as the Power & I/O Cable.

5.11 Cable Diagram 11

Display (Connection Port)	Cable		Notes
GP3000 (COM1) GP4000 ^{*1} (COM1) SP5000 ^{*2} (COM1/2) SP-5B00 (COM1) ST3000 (COM1) ST6000 (COM1) STM6000 (COM1) STC6000 (COM1) ET6000 (COM1) LT3000 (COM1) IPC ^{*3} PC/AT	11A	RS232C conversion unit by IAI Corporation RCB-CV-MW + Communication cable by IAI Corporation CB-RCA-SIO050 + SIO converter by IAI Corporation RC□-TU-SIO-□ + Network Connection Cable by IAI Corporation CB-ERC2-CTL001 + Power & I/O Cable by IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB	Cable length from SIO converter to External Device: 100m or less
	11B	RS232C conversion unit by IAI Corporation RCB-CV-MW + Communication cable by IAI Corporation CB-RCA-SIO050 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable 1 + Junction by AMP ^{*4} 5-1473574-4 + Network Connection Cable by IAI Corporation CB-ERC2-CTL001 + Power & I/O Cable by IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB	

Display (Connection Port)	Cable		Notes
GP3000 (COM1) GP4000 ^{*5} (COM1) SP5000 ^{*6} (COM1/2) SP-5B00 (COM1) ST3000 (COM1) ST6000 (COM1) STM6000 (COM1) STC6000 (COM1) ET6000 (COM1) LT3000 (COM1) IPC ^{*7} PC/AT	11C	RS232C conversion unit by IAI Corporation RCB-CV-MW + Communication cable by IAI Corporation CB-RCA-SIO050 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable 1 + Junction by AMP ^{*4} 5-1473574-4 + Network Connection Cable by IAI Corporation CB-ERC2-CTL001 + Power & I/O Cable by IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB	Cable length from SIO converter to External Device: 100m or less
GP-4105 (COM1) GP-4115T (COM1) GP-4115T3 (COM1)	11D	User-created cable + RS232C conversion unit by IAI Corporation RCB-CV-MW + Communication cable by IAI Corporation CB-RCA-SIO050 + SIO converter by IAI Corporation RC□-TU-SIO-□ + Network Connection Cable by IAI Corporation CB-ERC2-CTL001 + Power & I/O Cable by IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB	Cable length from SIO converter to External Device: 100m or less

Display (Connection Port)	Cable		Notes
GP-4105 (COM1) GP-4115T (COM1) GP-4115T3 (COM1)	11E	User-created cable + RS232C conversion unit by IAI Corporation RCB-CV-MW + Communication cable by IAI Corporation CB-RCA-SIO050 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable 1 + Junction by AMP*4 5-1473574-4 + Network Connection Cable by IAI Corporation CB-ERC2-CTL001 + Power & I/O Cable by IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB	Cable length from SIO converter to External Device: 100m or less
	11F	User-created cable + RS232C conversion unit by IAI Corporation RCB-CV-MW + Communication cable by IAI Corporation CB-RCA-SIO050 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable 1 + Junction by AMP*4 5-1473574-4 + Network Connection Cable by IAI Corporation CB-ERC2-CTL001 + Power & I/O Cable by IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB	

*1 All GP4000 models except GP-4100 series and GP-4203T

*2 Except SP-5B00

*3 Only the COM port which can communicate by RS-232C can be used.
 ■ IPC COM Port (page 5)

*4 When using more than one junction by AMP, user-created cable 2 is required.

*5 All GP4000 models except GP-4100 series and GP-4203T

*6 Except SP-5B00

*7 Only the COM port which can communicate by RS-232C can be used.


■ IPC COM Port (page 5)

NOTE

- RS232C conversion unit (RCB-CV-MW) and communication cable (CB-RCA-SIO050) are accessories of PC Interface Software (RCM-101-MW) by IAI Corporation.
 - When connecting to 3 or more External Devices, use link connection terminal block or junction by AMP.
-


11A)

- 1:1 connection

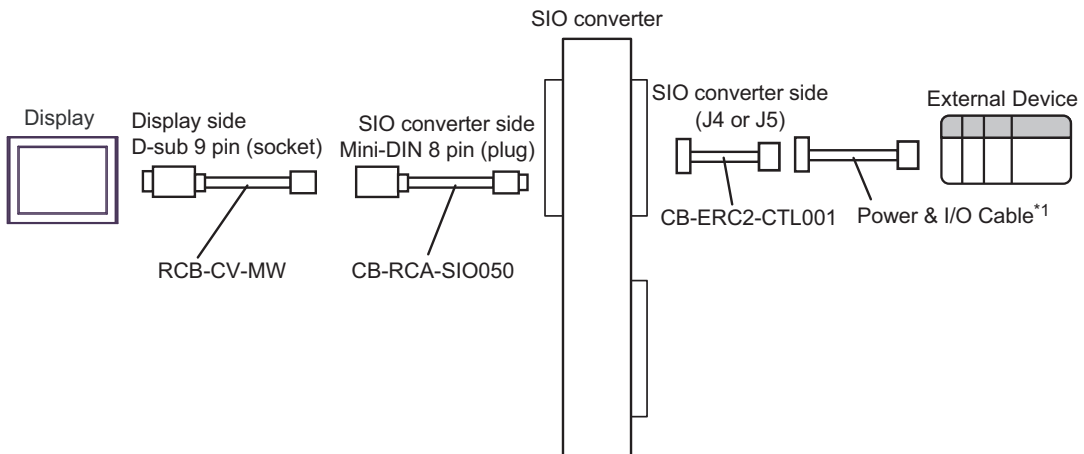

*1 We recommend the IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB as the Power & I/O Cable.

- 1:n connection

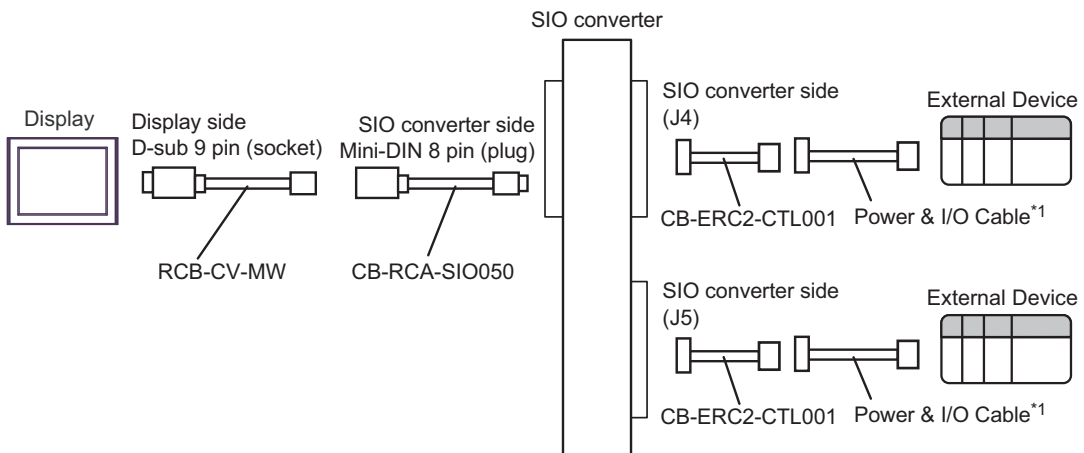


*1 We recommend the IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB as the Power & I/O Cable.

NOTE

- Cable length from SIO converter to External Device: 100m or less


11B)

- 1:1 connection

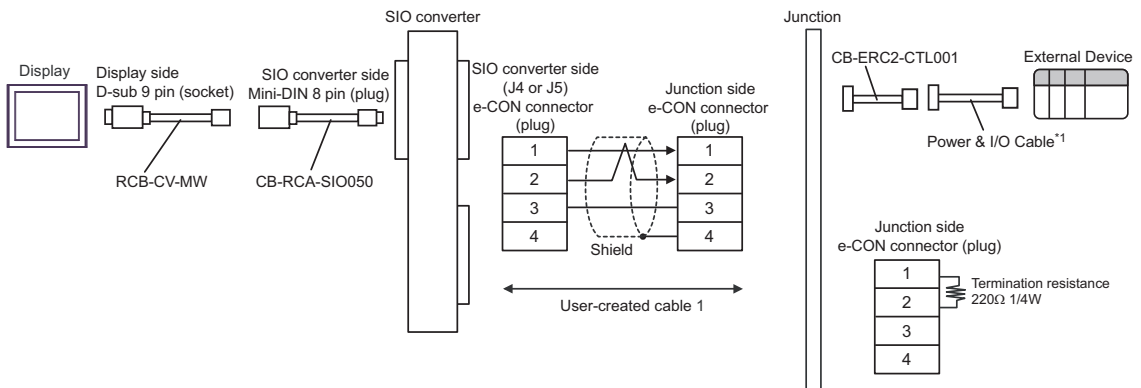

- *1 We recommend the IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB as the Power & I/O Cable.

- 1:n connection

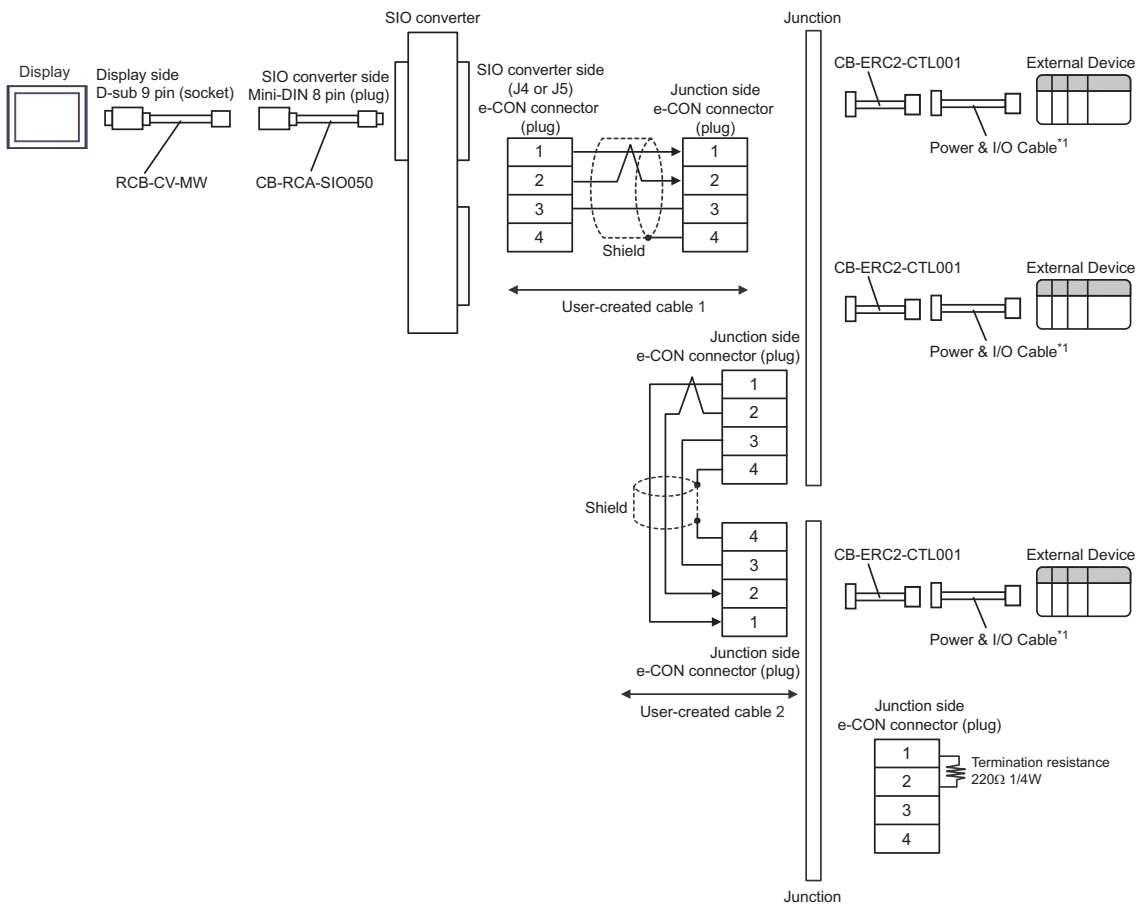


- *1 We recommend the IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB as the Power & I/O Cable.

NOTE

- Cable length from SIO converter to External Device: 100m or less


11C)

- 1:1 connection

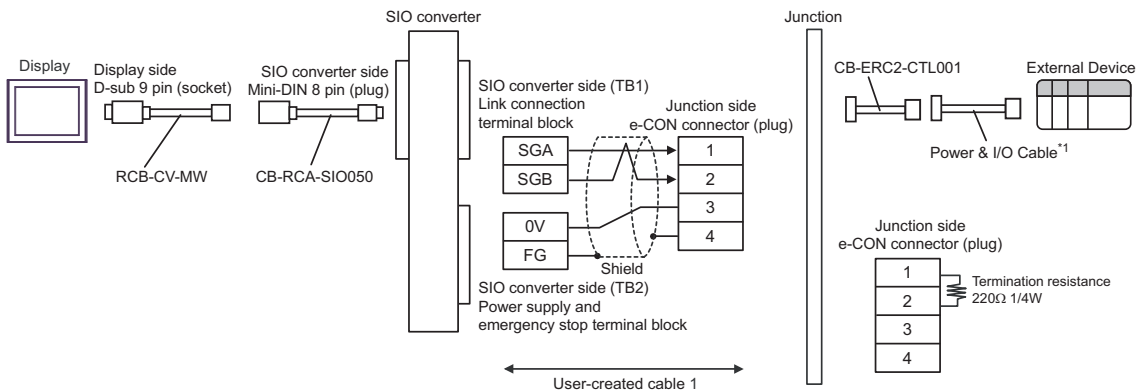

- *1 We recommend the IAI Corporation CB-ERC2-PWBIO□□□□ or CB-ERC2-PWBIO□□□□-RB as the Power & I/O Cable.

- 1:n connection

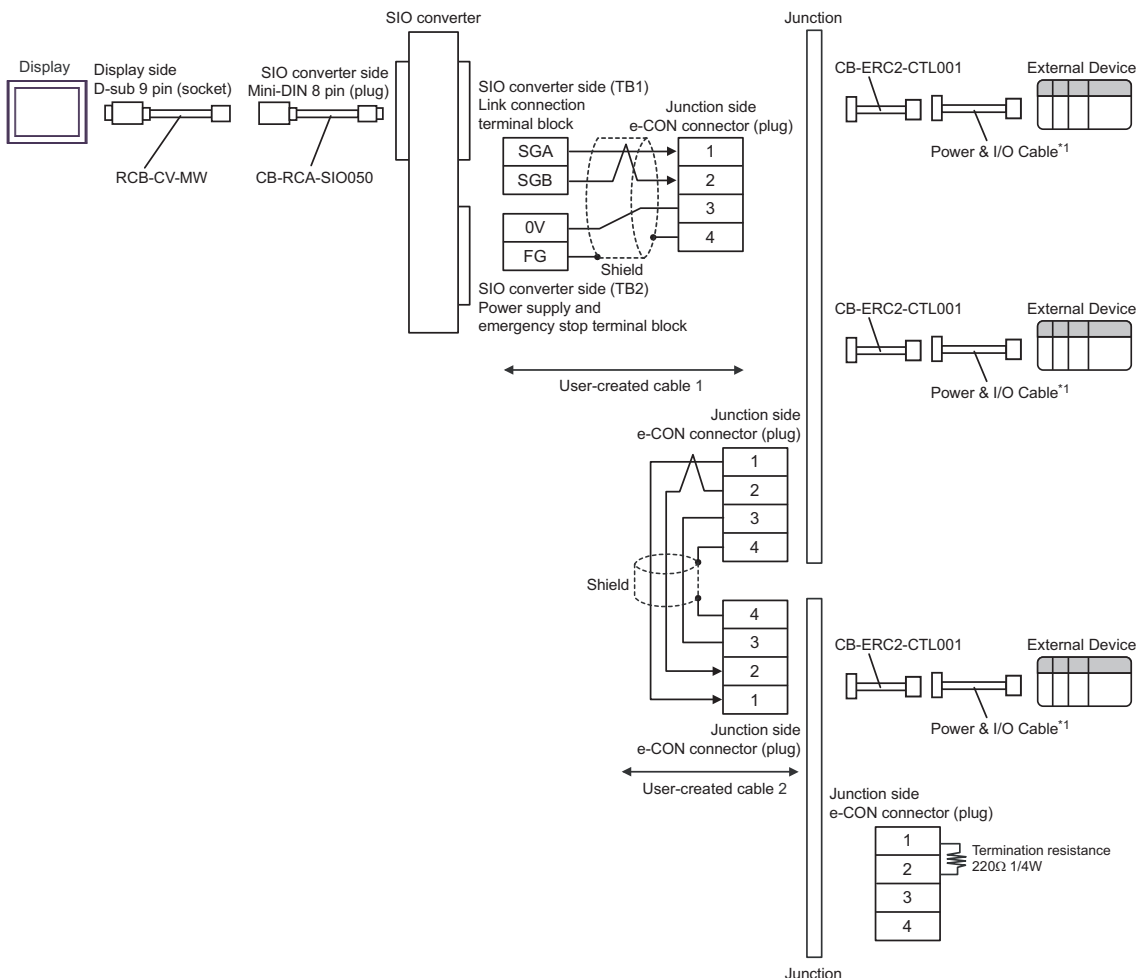


*1 We recommend the IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB as the Power & I/O Cable.

NOTE

- Cable length from SIO converter to External Device: 100m or less
-


11D)

- 1:1 connection

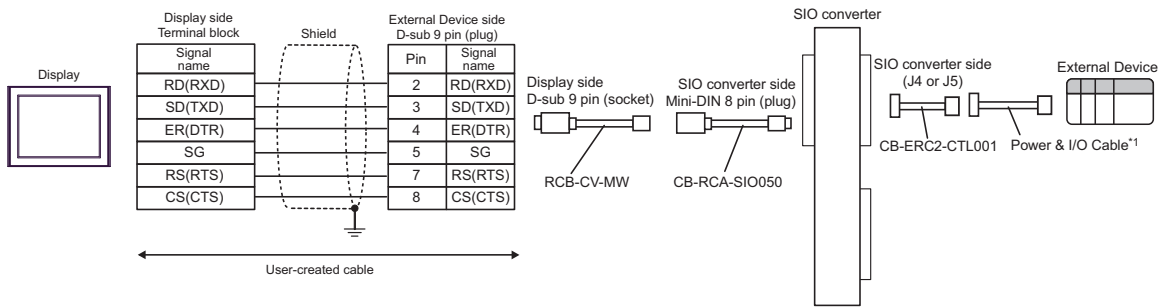

- *1 We recommend the IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB as the Power & I/O Cable.

- 1:n connection

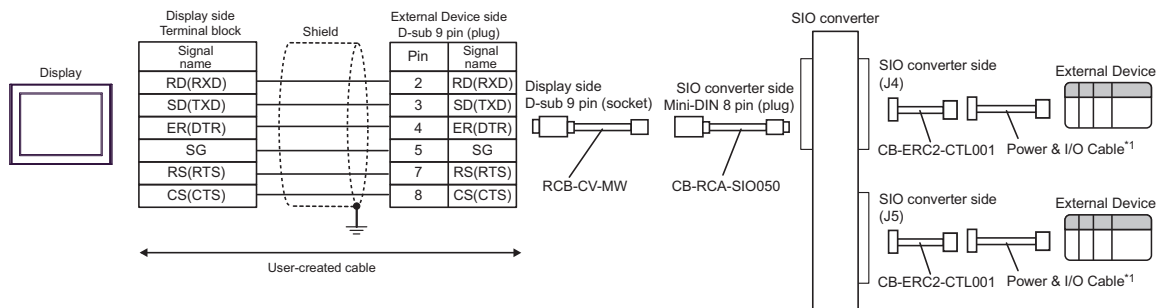


- *1 We recommend the IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB as the Power & I/O Cable.

NOTE

- Cable length from SIO converter to External Device: 100m or less


11E)

- 1:1 connection

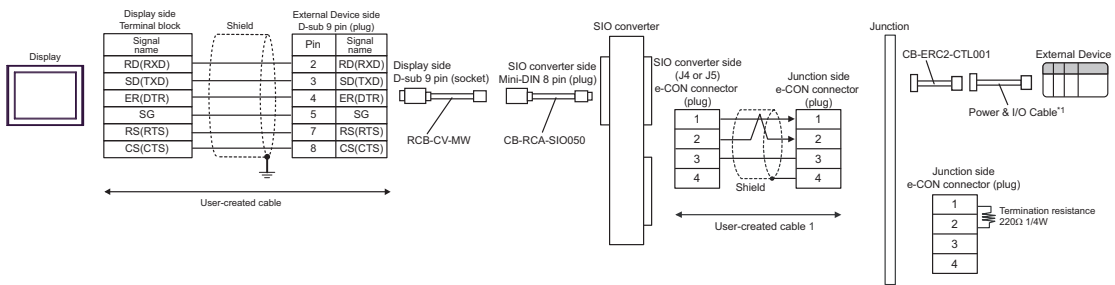

- *1 We recommend the IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB as the Power & I/O Cable.

- 1:n connection

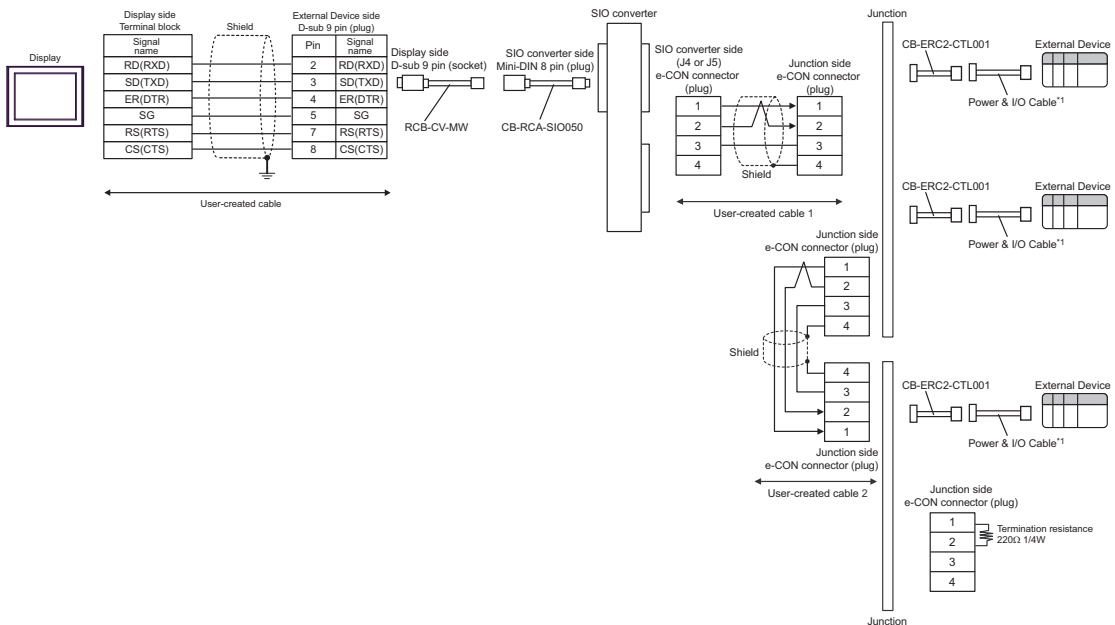


- *1 We recommend the IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB as the Power & I/O Cable.

NOTE

- Cable length from SIO converter to External Device: 100m or less


11F)

- 1:1 connection

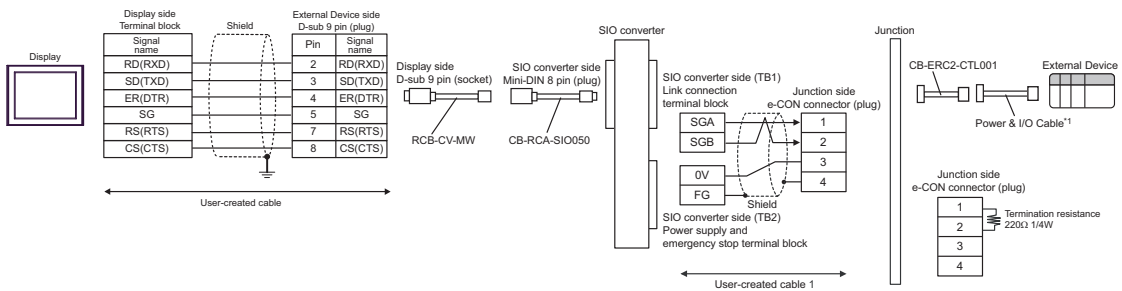

- *1 We recommend the IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB as the Power & I/O Cable.

- 1:n connection

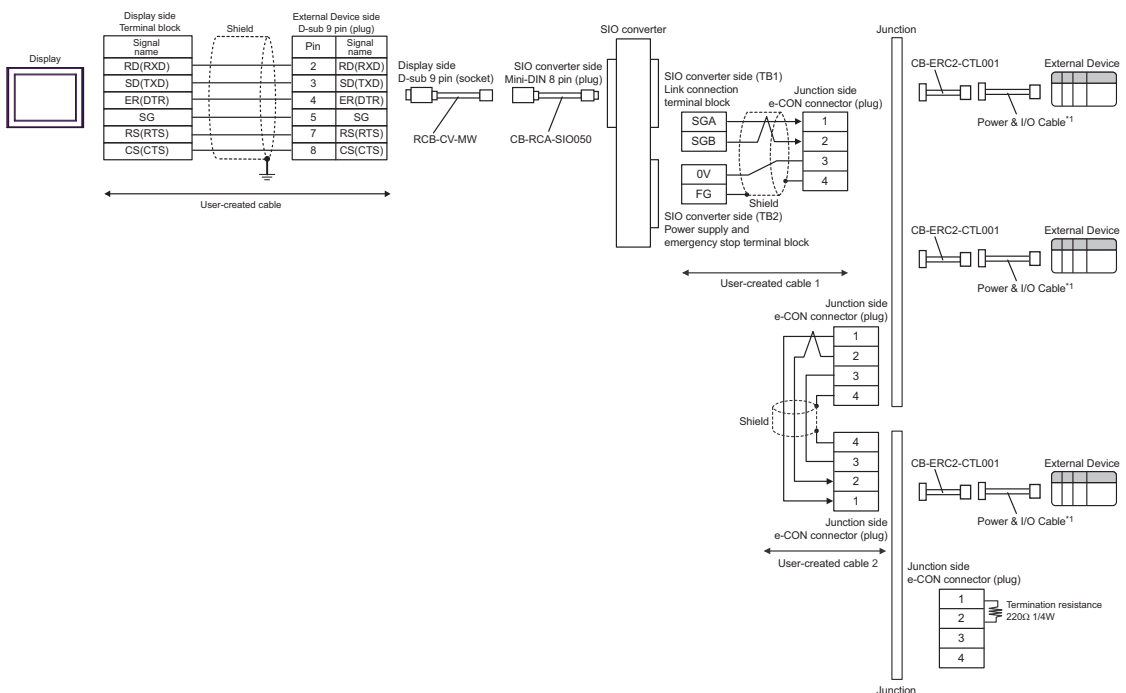

- *1 We recommend the IAI Corporation CB-ERC2-PWBIO□□□ or CB-ERC2-PWBIO□□□-RB as the Power & I/O Cable.

NOTE

- Cable length from SIO converter to External Device: 100m or less

5.12 Cable Diagram 12

Display (Connection Port)	Cable		Notes
GP3000* ¹ (COM1) AGP-3302B (COM2) GP-4*01TM (COM1) GP-Rear Module (COM1) ST3000* ² (COM2) LT3000 (COM1)	12A	COM port conversion adapter by Pro-face CA3-ADPCOM-01 + Terminal block conversion adapter by Pro-face CA3-ADPTRM-01 + User-created cable + Connector by Phoenix Contact K.K. MC1.5/4-ST-3.5	Cable length: 100m or less
	12B	User-created cable + Connector by Phoenix Contact K.K. MC1.5/4-ST-3.5	
GP3000* ³ (COM2)	12C	Online adapter by Pro-face CA4-ADPONL-01 + Terminal block conversion adapter by Pro-face CA3-ADPTRM-01 + User-created cable + Connector by Phoenix Contact K.K. MC1.5/4-ST-3.5	Cable length: 100m or less
	12D	Online adapter by Pro-face CA4-ADPONL-01 + User-created cable + Connector by Phoenix Contact K.K. MC1.5/4-ST-3.5	
IPC* ⁴	12E	COM port conversion adapter by Pro-face CA3-ADPCOM-01 + Terminal block conversion adapter by Pro-face CA3-ADPTRM-01 + User-created cable + Connector by Phoenix Contact K.K. MC1.5/4-ST-3.5	Cable length: 100m or less
	12F	User-created cable + Connector by Phoenix Contact K.K. MC1.5/4-ST-3.5	
GP-4106 (COM1) GP-4116T (COM1)	12G	User-created cable + Connector by Phoenix Contact K.K. MC1.5/4-ST-3.5	Cable length: 100m or less

Display (Connection Port)	Cable		Notes
GP-4107 (COM1) GP-4*03T* ⁵ (COM2) GP-4203T (COM1)	12H	User-created cable + Connector by Phoenix Contact K.K. MC1.5/4-ST-3.5	Cable length: 100m or less
GP4000* ⁶ (COM2) GP-4201T (COM1) SP5000* ⁷ (COM1/2) SP-5B00 (COM2) ST6000* ⁸ (COM2) ST-6200 (COM1) STM6000 (COM1) STC6000 (COM1) ET6000* ⁹ (COM2) PS6000 (Basic Box) (COM1/2)	12I	RS-422 Terminal Block Conversion Adapterby Pro-face PFXZCBADTM1* ¹⁰ + User-created cable + Connector by Phoenix Contact K.K. MC1.5/4-ST-3.5	Cable length: 100m or less
	12B	User-created cable + Connector by Phoenix Contact K.K. MC1.5/4-ST-3.5	
LT-4*01TM (COM1) LT-Rear Module (COM1)	12J	RJ45 RS-485 Cable (5m) by Pro-face PFXZLMCBJR81 + Connector by Phoenix Contact K.K. MC1.5/4-ST-3.5	Cable length: 100m or less
PE-4000B* ¹¹ PS5000* ¹¹ PS6000 (Optional Interface)* ¹¹	12K	User-created cable + Connector by Phoenix Contact K.K. MC1.5/4-ST-3.5	Cable length: 100m or less

*1 All GP3000 models except AGP-3302B

*2 Except AST-3211A and AST-3302B

*3 All GP3000 models except GP-3200 series and AGP-3302B

*4 Only the COM port which can communicate by RS-422/485 (2 wire) can be used. (Except PE-4000B, PS5000, and PS6000)

■ IPC COM Port (page 5)

*5 Except GP-4203T

*6 All GP4000 models except GP-4100 series, GP-4*01TM, GP-Rear Module, GP-4201T and GP-4*03T

*7 Except SP-5B00

*8 Except ST-6200

*9 Due to the COM port specifications, flow control is not possible. Omit wiring the control pins on the Display side of the cable diagram.


*10 When using a Terminal Block Conversion Adapter (CA3-ADPTRM-01) instead of the RS-422 Terminal Block Conversion Adapter, refer to Cable Diagram 12A.

*11 Only the COM port which can communicate by RS-422/485 (2 wire) can be used.

■ IPC COM Port (page 5)

12A)


- 1:1 connection

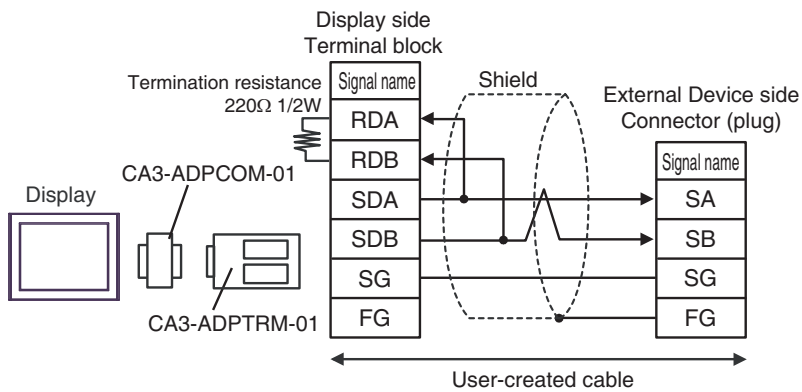**NOTE**

- Cable length: 100m or less

12B)


- 1:1 connection

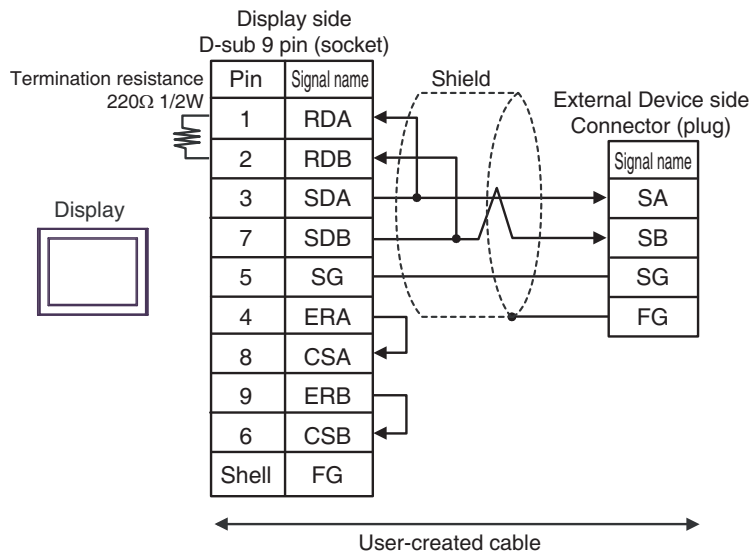**NOTE**

- Cable length: 100m or less

12C)


- 1:1 connection

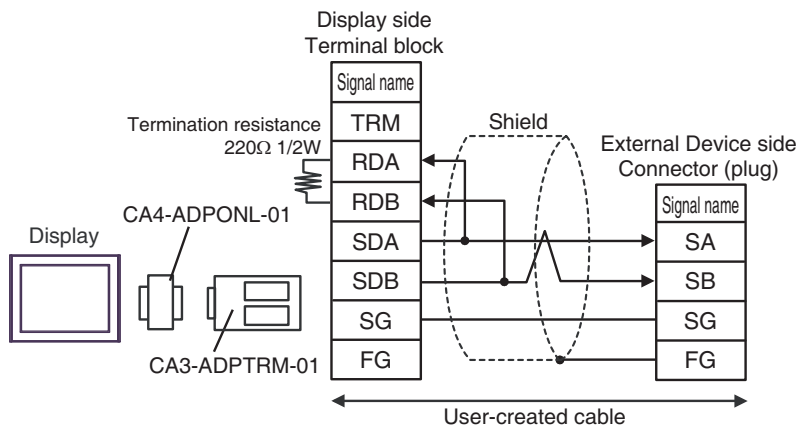**NOTE**

- Cable length: 100m or less

12D)


- 1:1 connection

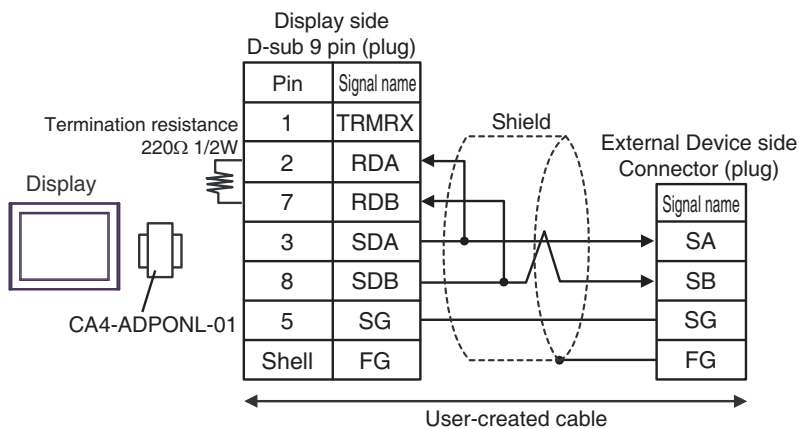**NOTE**

- Cable length: 100m or less

12E)


- 1:1 connection

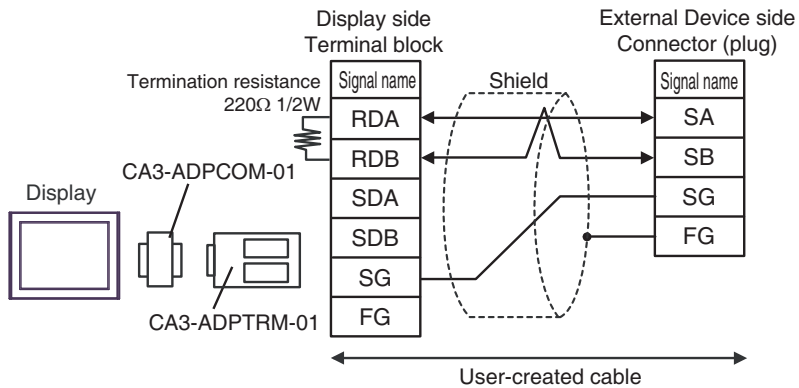**NOTE**

- Cable length: 100m or less

12F)


- 1:1 connection

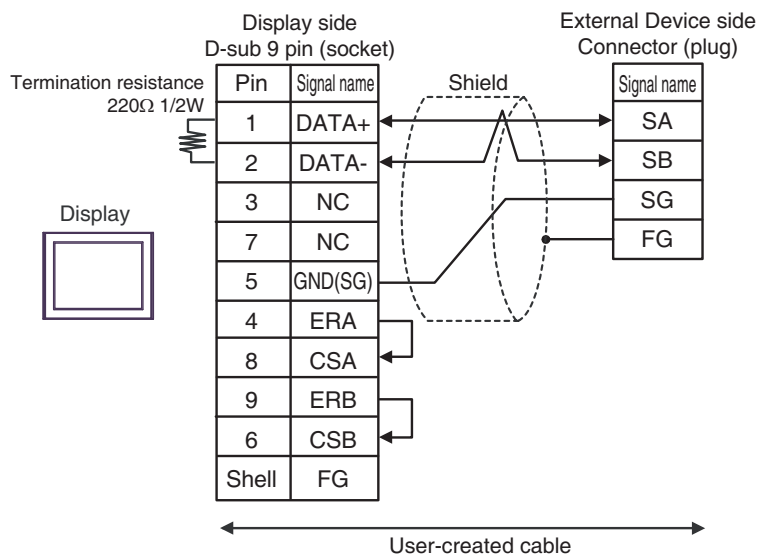**NOTE**

- Cable length: 100m or less

12G)

- 1:1 connection

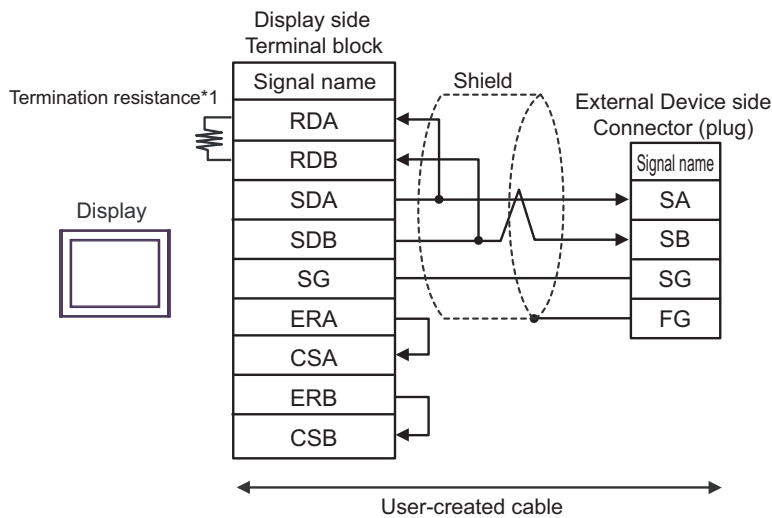

- *1 The resistance in the Display is used as the termination resistance. Set the value of the DIP Switch on the rear of the Display as shown in the table below.


DIP Switch No.	Set Value
1	OFF
2	OFF
3	OFF
4	ON

NOTE

- Cable length: 100m or less

12H)

- 1:1 connection

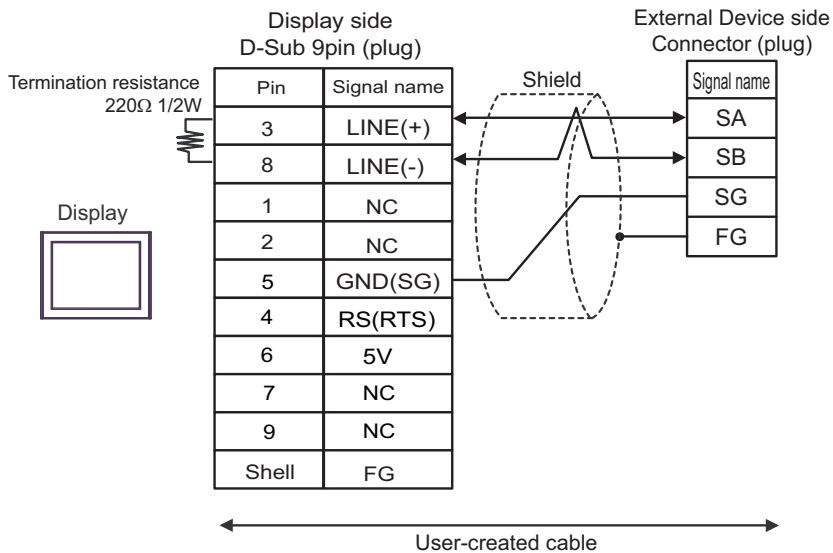**IMPORTANT**


- The 5V output (Pin #6) on the Display is the power for the Siemens AG's PROFIBUS connector. Do not use it for other devices.

NOTE

- In COM on the GP-4107, the SG and FG terminals are isolated.
- Cable length: 100m or less

12I)


- 1:1 connection

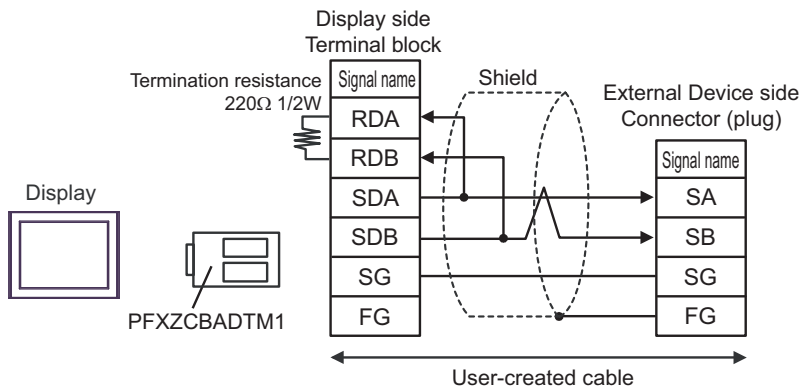**NOTE**

- Cable length: 100m or less


12J)

- 1:1 connection

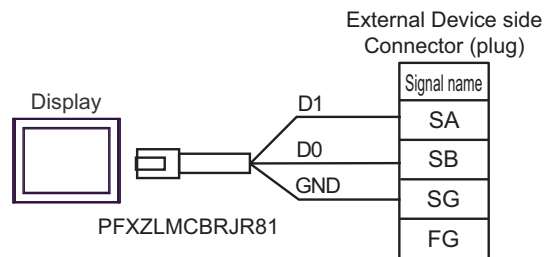

12K)

- 1:1 connection

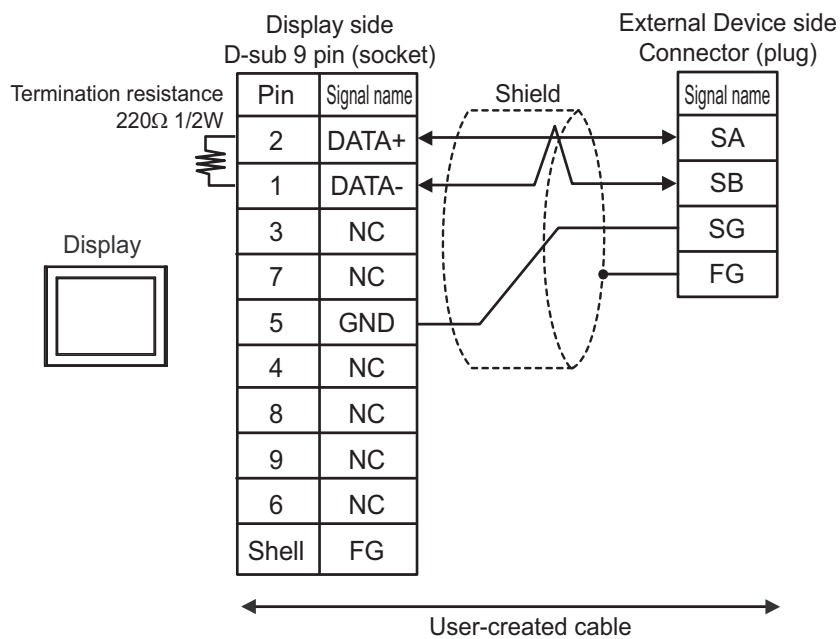**NOTE**

- Cable length: 100m or less

5.13 Cable Diagram 13

Display (Connection Port)	Cable		Notes
GP3000 (COM1) GP4000 ^{*1} (COM1) SP5000 ^{*2} (COM1/2) SP-5B00 (COM1) ST3000 (COM1) ST6000 (COM1) STM6000 (COM1) STC6000 (COM1) ET6000 (COM1) LT3000 (COM1) IPC ^{*3} PC/AT	13A	User-created cable 1 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable 2 + Connector by Phoenix Contact K.K. MC1.5/4-ST-3.5	Cable length from Display to SIO converter: 15m or less Cable length from SIO converter to External Device: 100m or less
	13B	User-created cable 1 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable 2 + Connector by Phoenix Contact K.K. MC1.5/4-ST-3.5	
	13C	User-created cable 1 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable 2 + Junction by AMP ^{*4} 5-1473574-4 + User-created cable 3 + Connector by Phoenix Contact K.K. MC1.5/4-ST-3.5	
	13D	User-created cable 1 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable 2 + Junction by AMP ^{*4} 5-1473574-4 + User-created cable 3 + Connector by Phoenix Contact K.K. MC1.5/4-ST-3.5	

Display (Connection Port)	Cable		Notes
GP-4105 (COM1) GP-4115T (COM1) GP-4115T3 (COM1)	13E	User-created cable 1 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable 2 + Connector by Phoenix Contact K.K. MC1.5/4-ST-3.5	Cable length from Display to SIO converter: 15m or less Cable length from SIO converter to External Device: 100m or less
	13F	User-created cable 1 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable 2 + Connector by Phoenix Contact K.K. MC1.5/4-ST-3.5	
	13G	User-created cable 1 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable 2 + Junction by AMP*4 5-1473574-4 + User-created cable 3 + Connector by Phoenix Contact K.K. MC1.5/4-ST-3.5	
	13H	User-created cable 1 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable 2 + Junction by AMP*4 5-1473574-4 + User-created cable 3 + Connector by Phoenix Contact K.K. MC1.5/4-ST-3.5	

Display (Connection Port)	Cable		Notes
LT-4*01TM (COM1) LT-Rear Module (COM1)	13I	RJ45 RS-232C Cable (5m) by Pro-face PFXZLMCBJR21 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable + Connector by Phoenix Contact K.K. MC1.5/4-ST-3.5	Cable length from Display to SIO converter: 5m or less Cable length from SIO converter to External Device: 100m or less
	13J	RJ45 RS-232C Cable (5m) by Pro-face PFXZLMCBJR21 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable + Connector by Phoenix Contact K.K. MC1.5/4-ST-3.5	
	13K	RJ45 RS-232C Cable (5m) by Pro-face PFXZLMCBJR21 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable 1 + Junction by AMP*4 5-1473574-4 + User-created cable 2 + Connector by Phoenix Contact K.K. MC1.5/4-ST-3.5	
	13L	RJ45 RS-232C Cable (5m) by Pro-face PFXZLMCBJR21 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable 1 + Junction by AMP*4 5-1473574-4 + User-created cable 2 + Connector by Phoenix Contact K.K. MC1.5/4-ST-3.5	

*1 All GP4000 models except GP-4100 series and GP-4203T

*2 Except SP-5B00


- *3 Only the COM port which can communicate by RS-232C can be used.
■ IPC COM Port (page 5)
- *4 When using more than one junction by AMP, user-created cable 4 is required.

NOTE

- When connecting to 3 or more External Devices, use link connection terminal block or junction by AMP.
-

13A)


- 1:1 connection

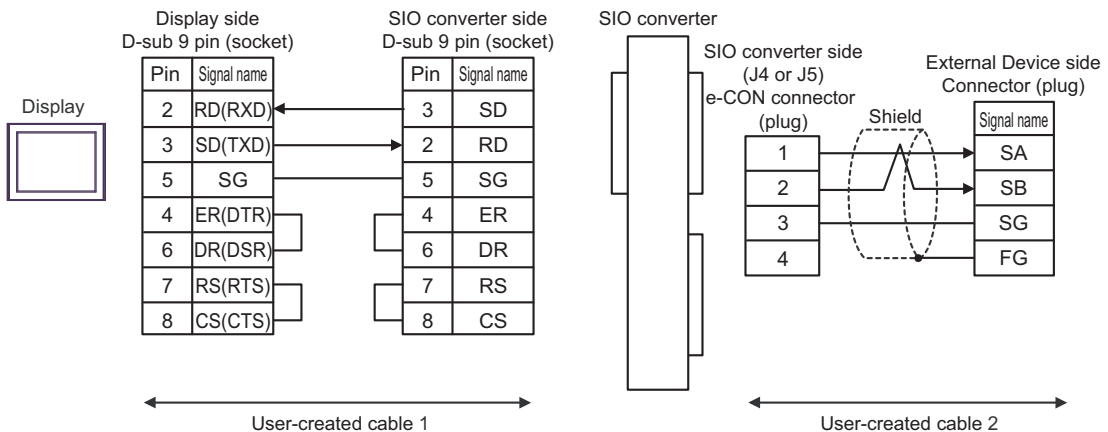**NOTE**

- Cable length from Display to SIO converter: 15m or less
- Cable length from SIO converter to External Device: 100m or less

13B)


- 1:1 connection

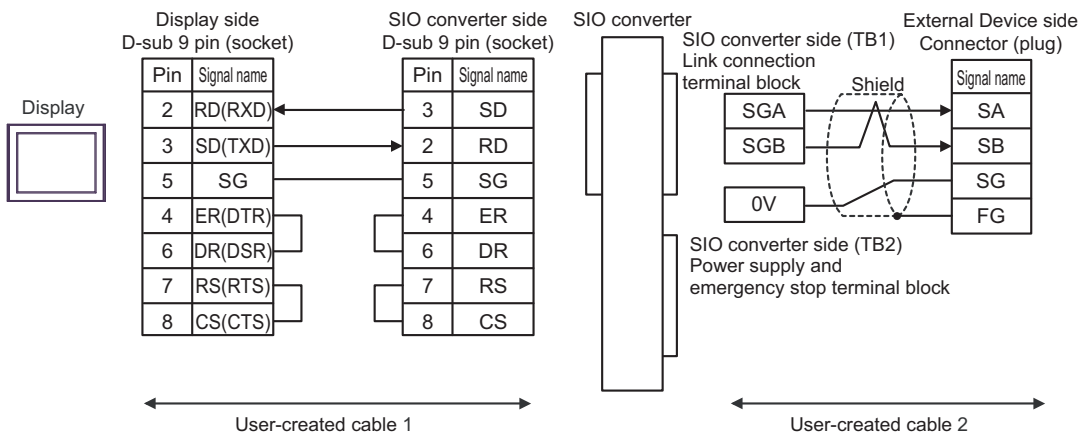**NOTE**

- Cable length from Display to SIO converter: 15m or less
- Cable length from SIO converter to External Device: 100m or less

13C)


- 1:1 connection

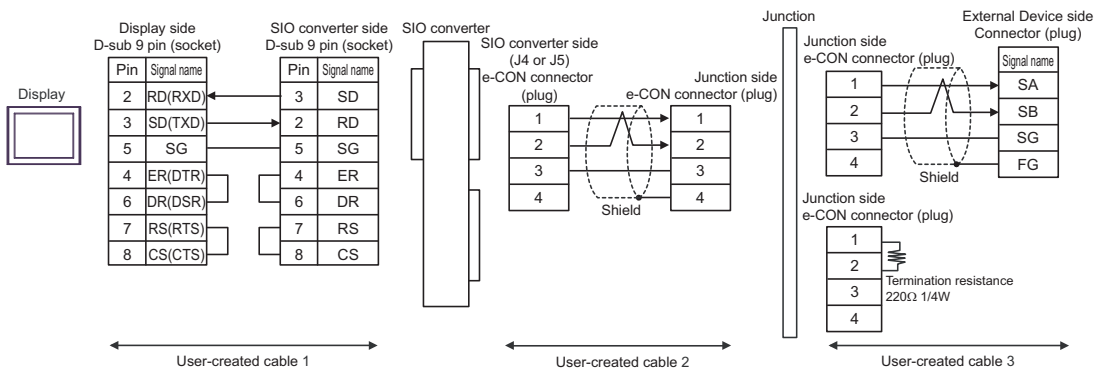**NOTE**

- Cable length from Display to SIO converter: 15m or less
- Cable length from SIO converter to External Device: 100m or less

13D)


- 1:1 connection

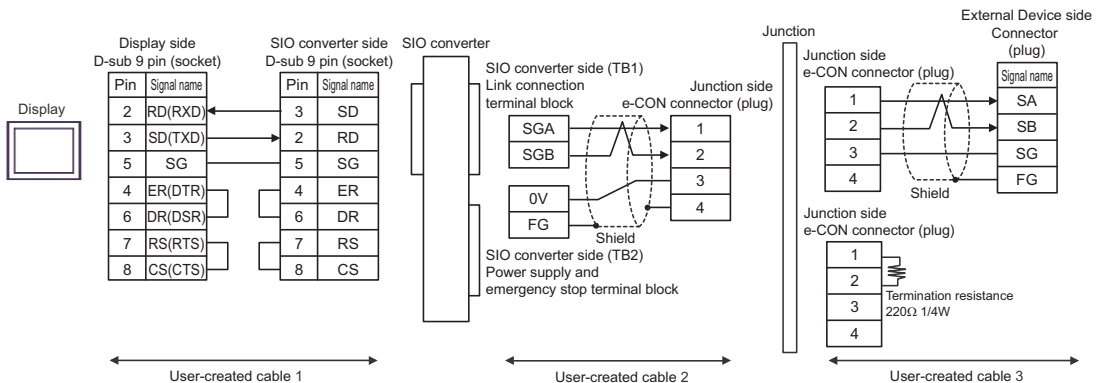**NOTE**

- Cable length from Display to SIO converter: 15m or less
- Cable length from SIO converter to External Device: 100m or less

13E)


- 1:1 connection

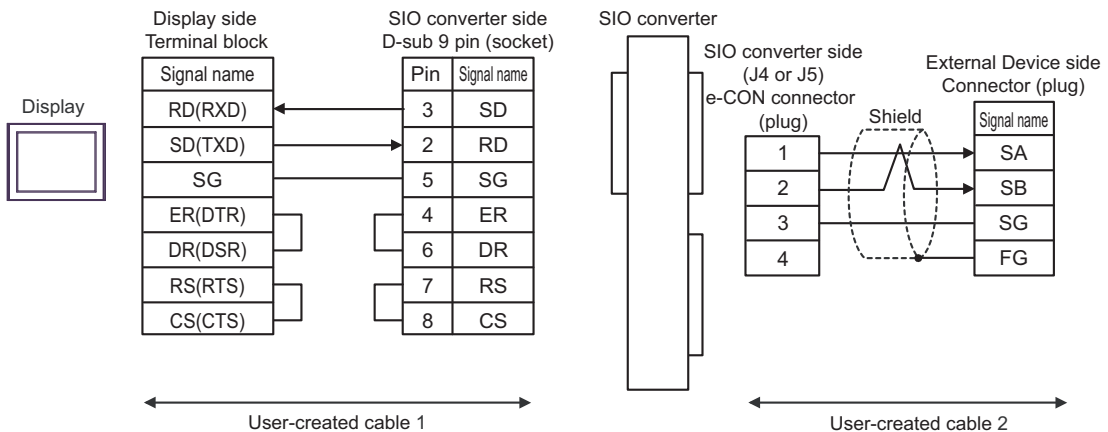**NOTE**

- Cable length from Display to SIO converter: 15m or less
- Cable length from SIO converter to External Device: 100m or less

13F)


- 1:1 connection

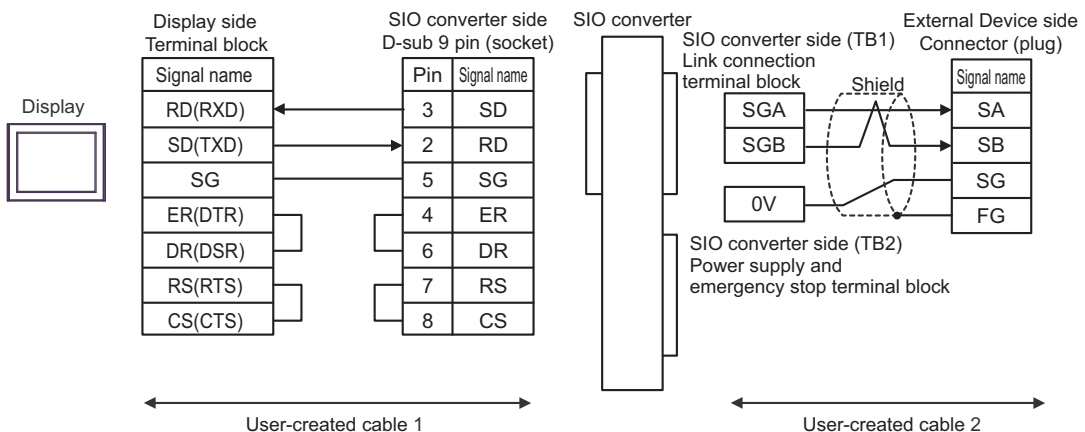**NOTE**

- Cable length from Display to SIO converter: 15m or less
- Cable length from SIO converter to External Device: 100m or less

13G)


- 1:1 connection

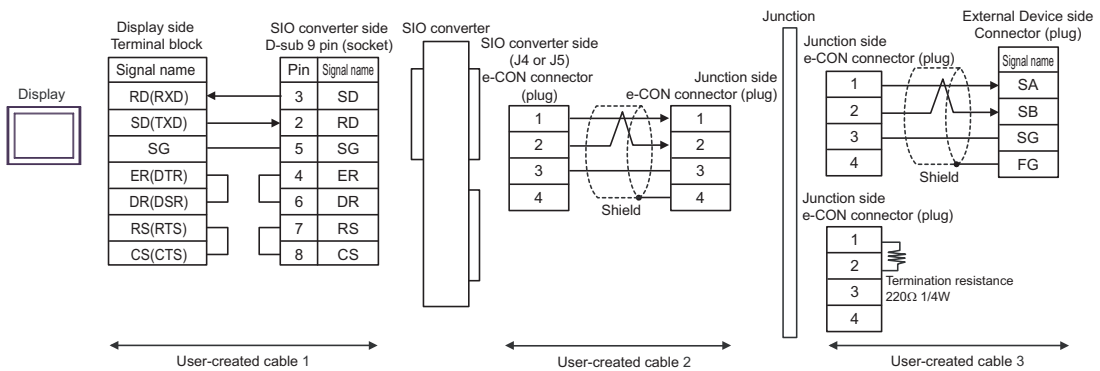**NOTE**

- Cable length from Display to SIO converter: 15m or less
- Cable length from SIO converter to External Device: 100m or less

13H)


- 1:1 connection

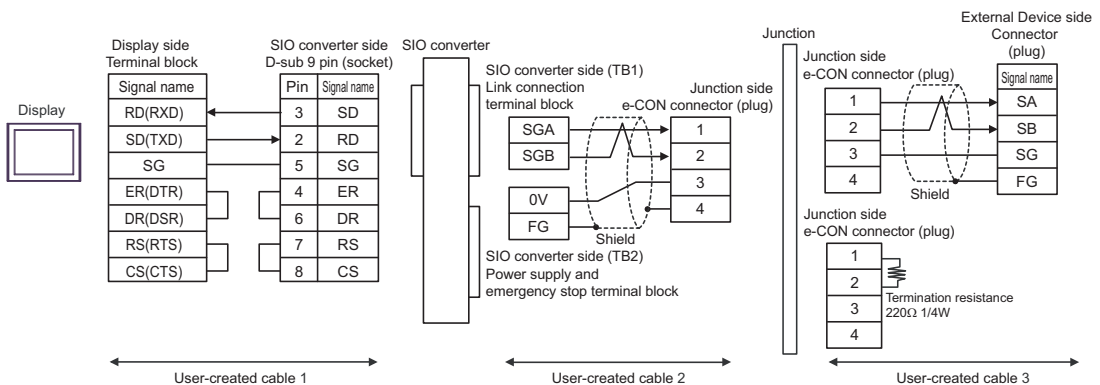**NOTE**

- Cable length from Display to SIO converter: 15m or less
- Cable length from SIO converter to External Device: 100m or less

13I)


- 1:1 connection

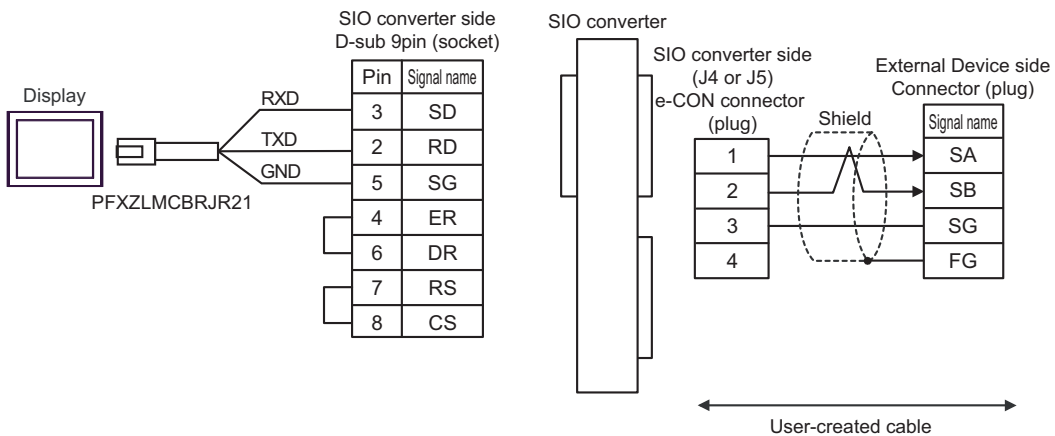**NOTE**

- Cable length from SIO converter to External Device: 100m or less

13J)


- 1:1 connection

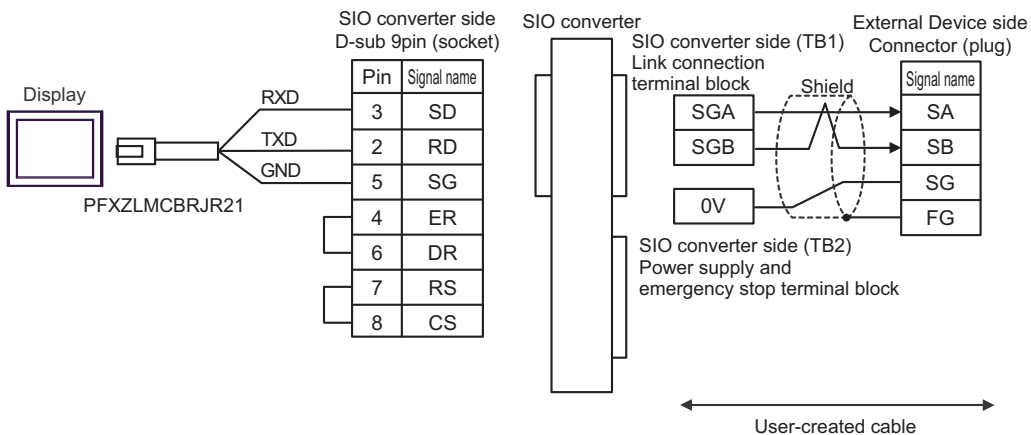**NOTE**

- Cable length from SIO converter to External Device: 100m or less

13K)


- 1:1 connection

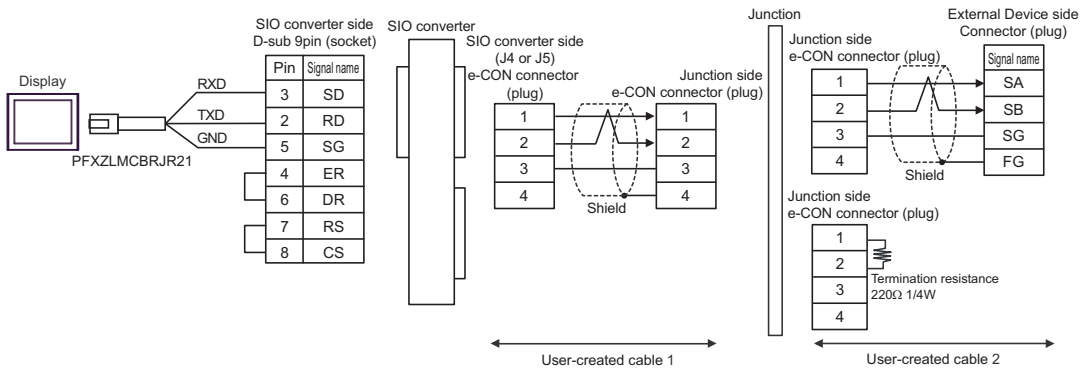**NOTE**

- Cable length from SIO converter to External Device: 100m or less

13L)

- 1:1 connection

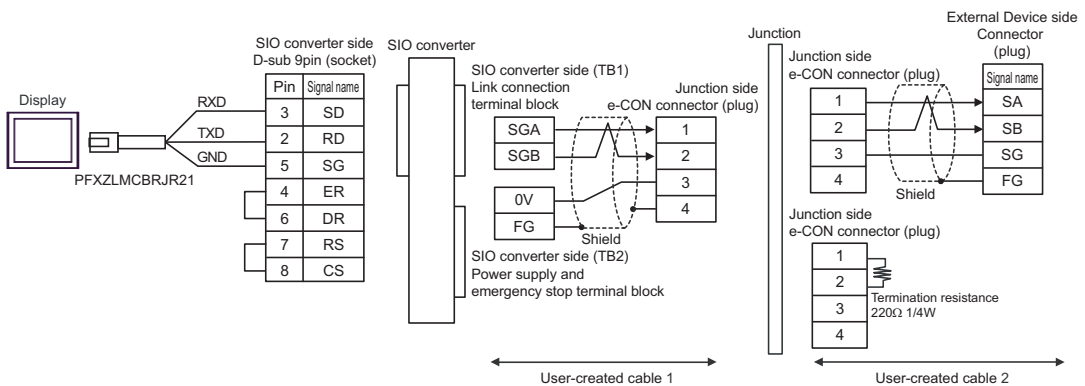**NOTE**

- Cable length from SIO converter to External Device: 100m or less

5.14 Cable Diagram 14

Display (Connection Port)	Cable		Notes
GP3000 (COM1) GP4000 ^{*1} (COM1) SP5000 ^{*2} (COM1/2) SP-5B00 (COM1) ST3000 (COM1) ST6000 (COM1) STM6000 (COM1) STC6000 (COM1) ET6000 (COM1) LT3000 (COM1) IPC ^{*3} PC/AT	14A	RS232C conversion unit by IAI Corporation RCB-CV-MW + Communication cable by IAI Corporation CB-RCA-SIO050 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable + Connector by Phoenix Contact K.K. MC1.5/4-ST-3.5	Cable length from SIO converter to External Device: 100m or less
	14B	RS232C conversion unit by IAI Corporation RCB-CV-MW + Communication cable by IAI Corporation CB-RCA-SIO050 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable + Connector by Phoenix Contact K.K. MC1.5/4-ST-3.5	
	14C	RS232C conversion unit by IAI Corporation RCB-CV-MW + Communication cable by IAI Corporation CB-RCA-SIO050 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable 1 + Junction by AMP ^{*4} 5-1473574-4 + User-created cable 2 + Connector by Phoenix Contact K.K. MC1.5/4-ST-3.5	

Display (Connection Port)	Cable		Notes
GP3000 (COM1) GP4000 ^{*5} (COM1) SP5000 ^{*6} (COM1/2) SP-5B00 (COM1) ST3000 (COM1) ST6000 (COM1) STM6000 (COM1) STC6000 (COM1) ET6000 (COM1) LT3000 (COM1) IPC ^{*7} PC/AT	14D	RS232C conversion unit by IAI Corporation RCB-CV-MW + Communication cable by IAI Corporation CB-RCA-SIO050 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable 1 + Junction by AMP ^{*4} 5-1473574-4 + User-created cable 2 + Connector by Phoenix Contact K.K. MC1.5/4-ST-3.5	Cable length from SIO converter to External Device: 100m or less
GP-4105 (COM1) GP-4115T (COM1) GP-4115T3 (COM1)	14E	User-created cable + RS232C conversion unit by IAI Corporation RCB-CV-MW + Communication cable by IAI Corporation CB-RCA-SIO050 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable + Connector by Phoenix Contact K.K. MC1.5/4-ST-3.5	Cable length from SIO converter to External Device: 100m or less
	14F	User-created cable + RS232C conversion unit by IAI Corporation RCB-CV-MW + Communication cable by IAI Corporation CB-RCA-SIO050 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable + Connector by Phoenix Contact K.K. MC1.5/4-ST-3.5	

Display (Connection Port)	Cable		Notes
GP-4105 (COM1) GP-4115T (COM1) GP-4115T3 (COM1)	14G	User-created cable + RS232C conversion unit by IAI Corporation RCB-CV-MW + Communication cable by IAI Corporation CB-RCA-SIO050 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable 1 + Junction by AMP*4 5-1473574-4 + User-created cable 2 + Connector by Phoenix Contact K.K. MC1.5/4-ST-3.5	Cable length from SIO converter to External Device: 100m or less
	14H	User-created cable + RS232C conversion unit by IAI Corporation RCB-CV-MW + Communication cable by IAI Corporation CB-RCA-SIO050 + SIO converter by IAI Corporation RC□-TU-SIO-□ + User-created cable 1 + Junction by AMP*4 5-1473574-4 + User-created cable 2 + Connector by Phoenix Contact K.K. MC1.5/4-ST-3.5	

*1 All GP4000 models except GP-4100 series and GP-4203T

*2 Except SP-5B00

*3 Only the COM port which can communicate by RS-232C can be used.
 ■ IPC COM Port (page 5)

*4 When using more than one junction by AMP, user-created cable 3 is required.

*5 All GP4000 models except GP-4100 series and GP-4203T

*6 Except SP-5B00


*7 Only the COM port which can communicate by RS-232C can be used.
 ■ IPC COM Port (page 5)

NOTE

- RS232C conversion unit (RCB-CV-MW) and communication cable (CB-RCA-SIO050) are accessories of PC Interface Software (RCM-101-MW) by IAI Corporation.
 - When connecting to 3 or more External Devices, use link connection terminal block or junction by AMP.
-

14A)


- 1:1 connection

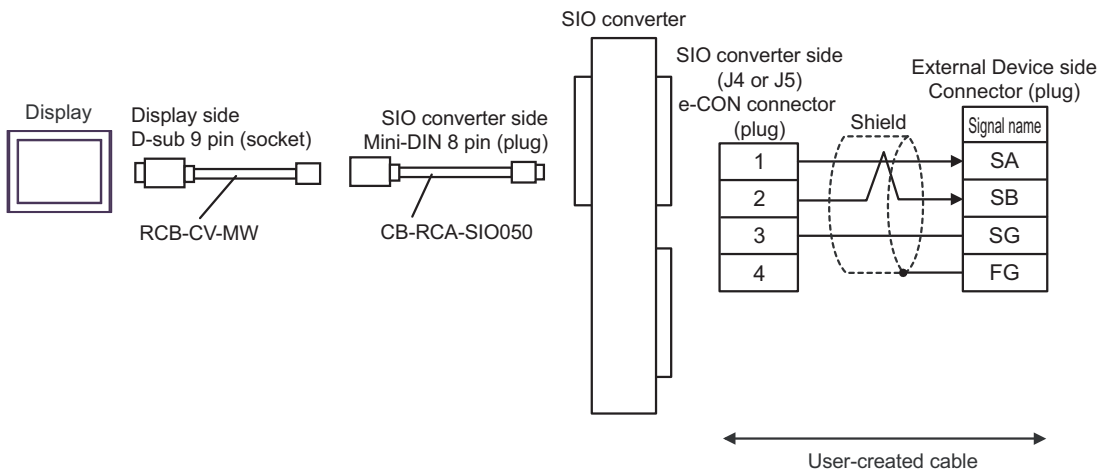**NOTE**

- Cable length from SIO converter to External Device: 100m or less

14B)


- 1:1 connection

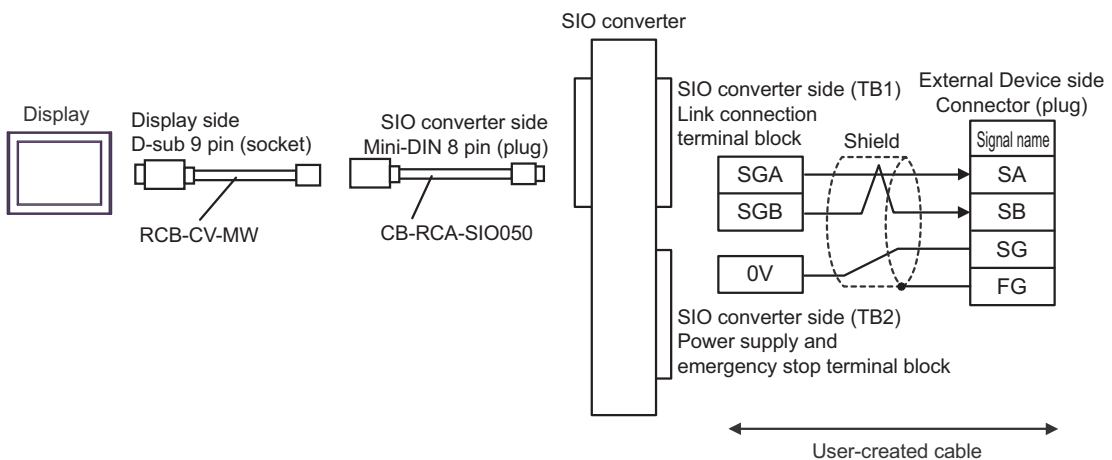**NOTE**

- Cable length from SIO converter to External Device: 100m or less

14C)


- 1:1 connection

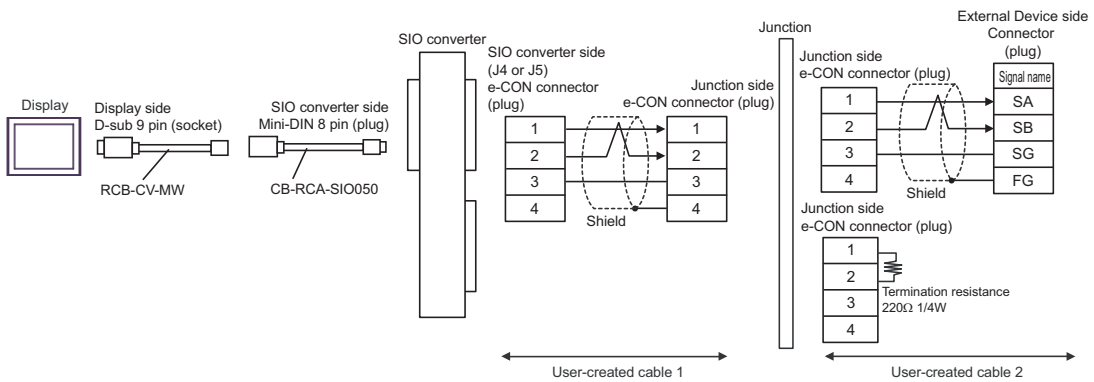**NOTE**

- Cable length from SIO converter to External Device: 100m or less

14D)


- 1:1 connection

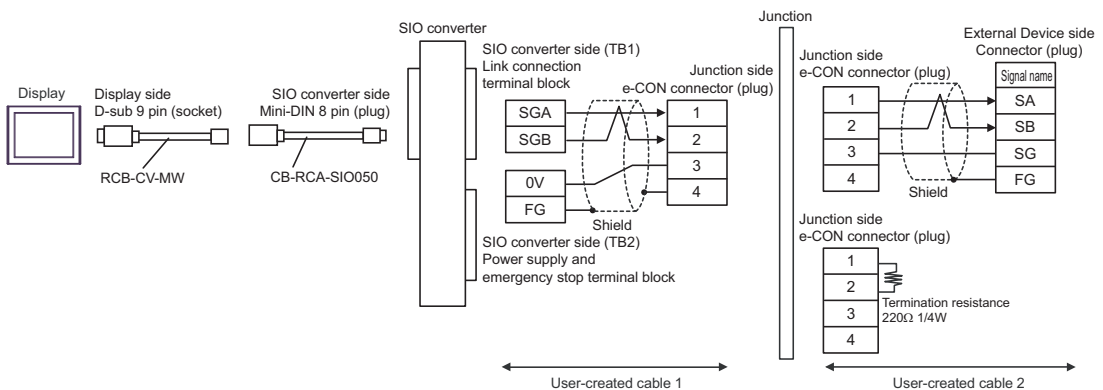**NOTE**

- Cable length from SIO converter to External Device: 100m or less

14E)


- 1:1 connection

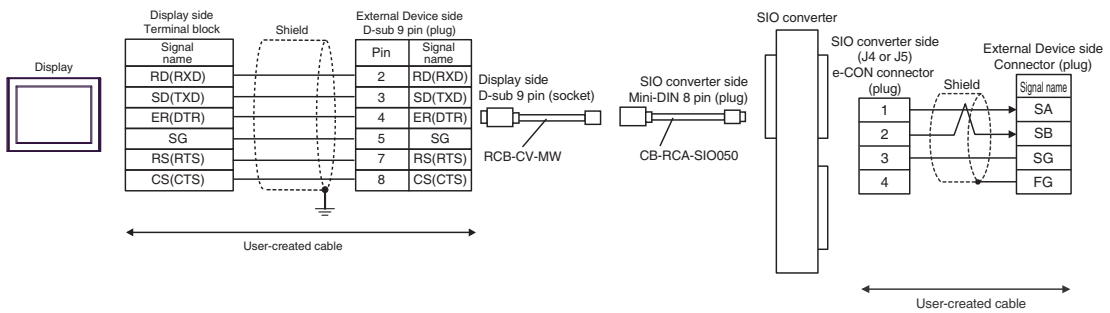**NOTE**

- Cable length from SIO converter to External Device: 100m or less

14F)


- 1:1 connection

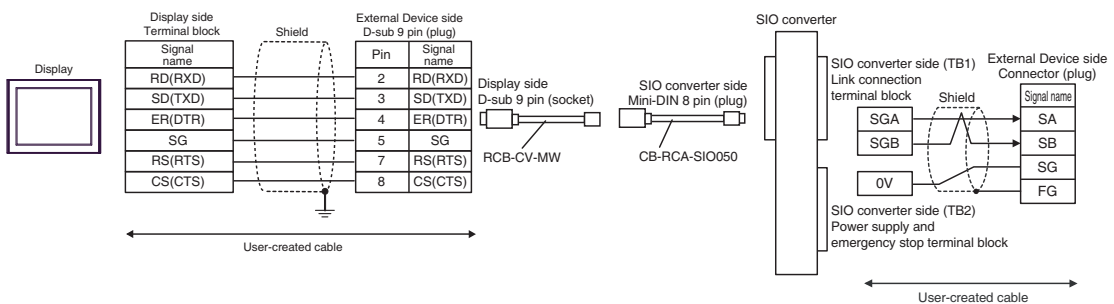**NOTE**

- Cable length from SIO converter to External Device: 100m or less

14G)


- 1:1 connection

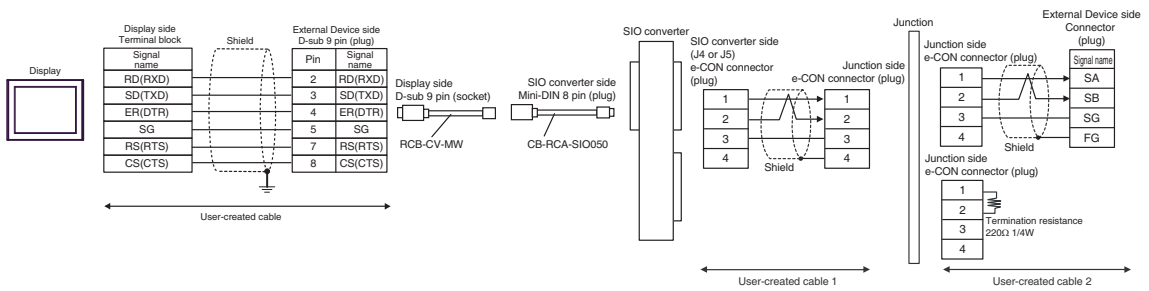**NOTE**

- Cable length from SIO converter to External Device: 100m or less

14H)

- 1:1 connection

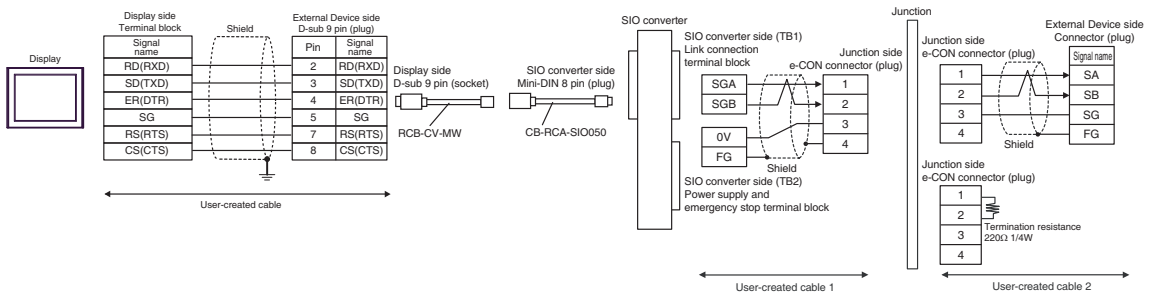**NOTE**

- Cable length from SIO converter to External Device: 100m or less

6 Supported Device

Range of supported device address is shown in the table below. Please note that the actually supported range of the devices varies depending on the External Device to be used. Please check the actual range in the manual of your External Device.

 This address can be specified as system data area.

Device	Bit Address	Word Address	32bits	Notes
Data register	D0000,00 - DFFFF,15	D0000 - DFFFF		*1 *2 *3
Status register	S0000 - SFFFF	S0000 - SFFF0		 *3

- *1 System status register (D9008) in the data register has an area for 2 words. When accessing D9008 on the Display, you need to access separately both from the upper and lower words.
e.g. When accessing the 16th bit, assign “D9008,00” on the Display. In the same way, when accessing the 0 bit, assign “D9009,00.”
- *2 Once a bit is written, the Display reads the corresponding word address of the External Device, sets the bit to the read-in word address, and returns it to the External Device. While the Display reads data of the External Device and returns the data, if the writing process is conducted with the word address ladder program, data may not be written correctly.
- *3 32bit-display with Offset does not work.

NOTE

- Please refer to the GP-Pro EX Reference Manual for system data area.
Cf. GP-Pro EX Reference Manual "LS Area (Direct Access Method Area)"
- Please refer to the precautions on manual notation for icons in the table.
 Manual Symbols and Terminology

7 Device Code and Address Code

Use device code and address code when you select "Device Type & Address" for the address type in data displays.

Device	Device Name	Device Code (HEX)	Address Code
Data register	D	0000	Word Address
Status register	S	0080	Value of word address divided by 16

8 Error Messages

Error messages are displayed on the screen of Display as follows: "No. : Device Name: Error Message (Error Occurrence Area)". Each description is shown below.

Item	Description
No.	Error No.
Device Name	Name of External Device where error occurs. Device name is a title of External Device set with GP-Pro EX. (Initial value [PLC1])
Error Message	Displays messages related to the error which occurs.
Error Occurrence Area	Displays IP address or device address of External Device where error occurs, or error codes received from External Device. NOTE • IP address is displayed such as "IP address (Decimal): MAC address (Hex)". • Device address is displayed such as "Address: Device address". • Received error codes are displayed such as "Decimal [Hex]".

Display Examples of Error Messages

"RHAA035:PLC1: Error has been responded for device write command (Error Code: 2 [02H])"

NOTE

- Refer to your External Device manual for details on received error codes.
- Refer to "Display-related errors" in "Maintenance/Troubleshooting Guide" for details on the error messages common to the driver.

■ Error Codes Unique to External Device

Error Code	Description
01H	ILLEGAL FUNCTION
02H	ILLEGAL DATA ADDRESS
03H	ILLEGAL DATA VALUE
04H	SLAVE DEVICE FAILURE

