




General MODBUS SIO Master Driver

1	General MODBUS SIO Master Driver	3
2	System Configuration	4
3	External Device Selection	7
4	Communication Setting	8
5	Setup Items	14
6	Cable Diagrams	26
7	Supported Device.....	50
8	Device Code and Address Code	52
9	Error Messages	53

Introduction

This manual describes how to connect the Display and the External Device (target PLC).

In this manual, the connection procedure will be described in the sections identified below.

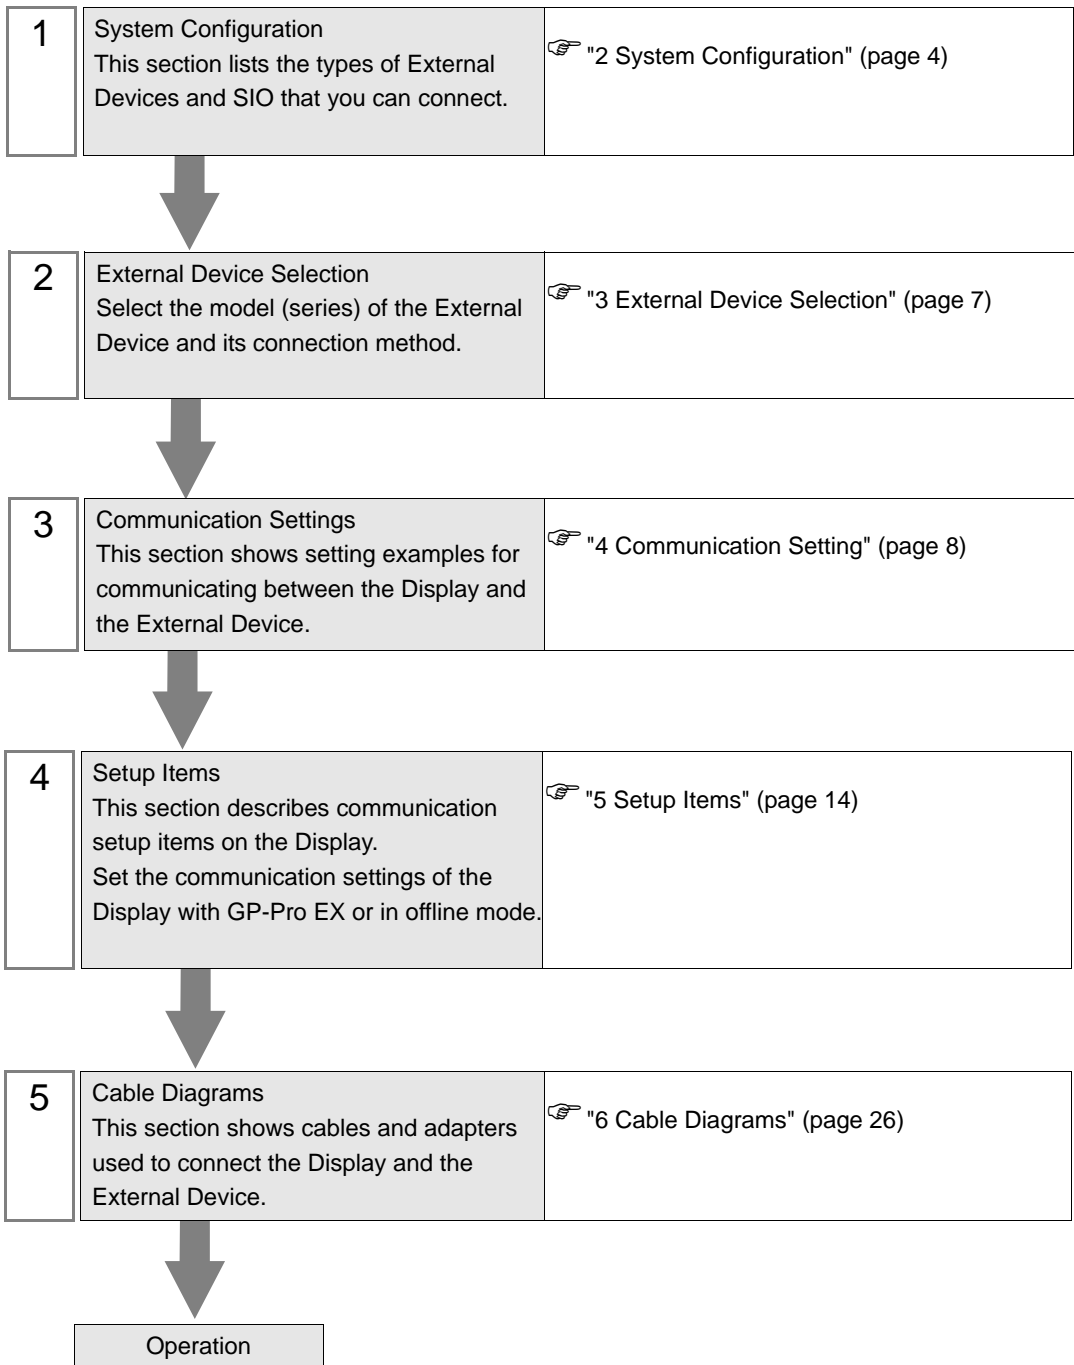

1 General MODBUS SIO Master Driver

The general MODBUS SIO Master Driver is used to connect the Display to a MODBUS-compatible External Device for general purpose.

The function code and boundary required for communication can be changed according to the External Device.

Up to 31 units of the External Device can be connected to the Display when one COM port of the Display is used.

Up to 32 units are available when two or more COM ports are used.

2 System Configuration

The following table lists system configurations for connecting MODBUS-compatible External Device and the Display.

Series	CPU	Link I/F	SIO Type	Setting Example	Cable Diagram
MODBUS Slave Device			RS-232C	Setting Example 1 (page 8)	Cable Diagram 1 (page 26)
			RS-422/485 (4 wire)	Setting Example 2 (page 10)	Cable Diagram 2 (page 30)
			RS-422/485 (2 wire)	Setting Example 3 (page 12)	Cable Diagram 3 (page 39)


■ Connection Configuration

◆ 1:1 Connection




◆ 1: n Connection

- Using 1 port

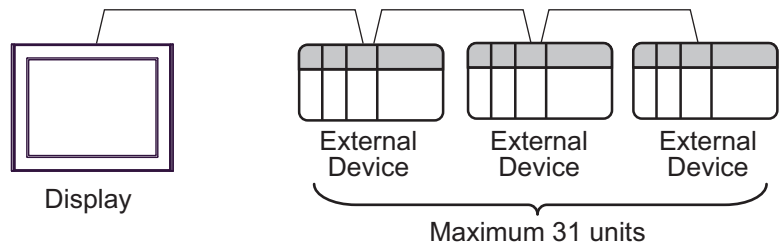

- Using 2 or more ports

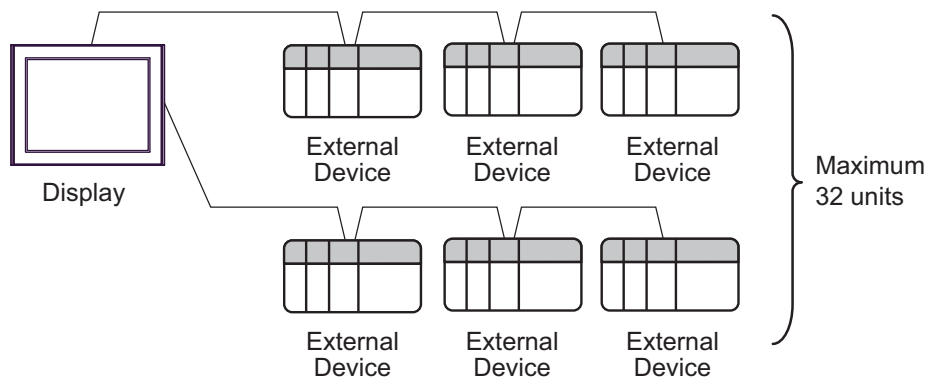

■ IPC COM Port

When connecting IPC with an External Device, the COM port used depends on the series and SIO type. Please refer to the IPC manual for details.

Usable port

Series	Usable Port		
	RS-232C	RS-422/485(4 wire)	RS-422/485(2 wire)
PS-2000B	COM1 ^{*1} , COM2, COM3 ^{*1} , COM4	-	-
PS-3450A, PS-3451A, PS3000-BA, PS3001-BD	COM1, COM2 ^{*1*2}	COM2 ^{*1*2}	COM2 ^{*1*2}
PS-3650A (T41 model), PS-3651A (T41 model)	COM1 ^{*1}	-	-
PS-3650A (T42 model), PS-3651A (T42 model)	COM1 ^{*1*2} , COM2	COM1 ^{*1*2}	COM1 ^{*1*2}
PS-3700A (Pentium®4-M), PS-3710A	COM1 ^{*1} , COM2 ^{*1} , COM3 ^{*2} , COM4	COM3 ^{*2}	COM3 ^{*2}
PS-3711A	COM1 ^{*1} , COM2 ^{*2}	COM2 ^{*2}	COM2 ^{*2}
PS4000 ^{*3}	COM1, COM2	-	-
PL3000	COM1 ^{*1*2} , COM2 ^{*1} , COM3, COM4	COM1 ^{*1*2}	COM1 ^{*1*2}

*1 The RI/5V can be switched. Use the IPC's switch to change if necessary.

*2 Set up the SIO type with the DIP Switch. Please set up as follows according to SIO type to be used.

*3 When making communication between an External Device and COM port on the Expansion slot, only RS-232C is supported. However, ER (DTR/CTS) control cannot be executed because of the specification of COM port.

For connection with External Device, use user-created cables and disable Pin Nos. 1, 4, 6 and 9.

Please refer to the IPC manual for details of pin layout.

DIP Switch setting: RS-232C

DIP Switch	Setting	Description
1	OFF ^{*1}	Reserved (always OFF)
2	OFF	SIO type: RS-232C
3	OFF	
4	OFF	Output mode of SD (TXD) data: Always output
5	OFF	Terminal resistance (220Ω) insertion to SD (TXD): None
6	OFF	Terminal resistance (220Ω) insertion to RD (RXD): None
7	OFF	Short-circuit of SDA (TXA) and RDA (RXA): Not available
8	OFF	Short-circuit of SDB (TXB) and RDB (RXB): Not available
9	OFF	RS (RTS) Auto control mode: Disabled
10	OFF	

*1 When using PS-3450A, PS-3451A, PS3000-BA and PS3001-BD, turn ON the set value.

DIP Switch setting: RS-422/485 (4 wire)


DIP Switch	Setting	Description
1	OFF	Reserved (always OFF)
2	ON	SIO type: RS-422/485
3	ON	
4	OFF	Output mode of SD (TXD) data: Always output
5	OFF	Terminal resistance (220Ω) insertion to SD (TXD): None
6	OFF	Terminal resistance (220Ω) insertion to RD (RXD): None
7	OFF	Short-circuit of SDA (TXA) and RDA (RXA): Not available
8	OFF	Short-circuit of SDB (TXB) and RDB (RXB): Not available
9	OFF	RS (RTS) Auto control mode: Disabled
10	OFF	

DIP Switch setting: RS-422/485 (2 wire)

DIP Switch	Setting	Description
1	OFF	Reserved (always OFF)
2	ON	SIO type: RS-422/485
3	ON	
4	OFF	Output mode of SD (TXD) data: Always output
5	OFF	Terminal resistance (220Ω) insertion to SD (TXD): None
6	OFF	Terminal resistance (220Ω) insertion to RD (RXD): None
7	ON	Short-circuit of SDA (TXA) and RDA (RXA): Available
8	ON	Short-circuit of SDB (TXB) and RDB (RXB): Available
9	ON	RS (RTS) Auto control mode: Enabled
10	ON	

3 External Device Selection

Select the External Device to be connected to the Display.

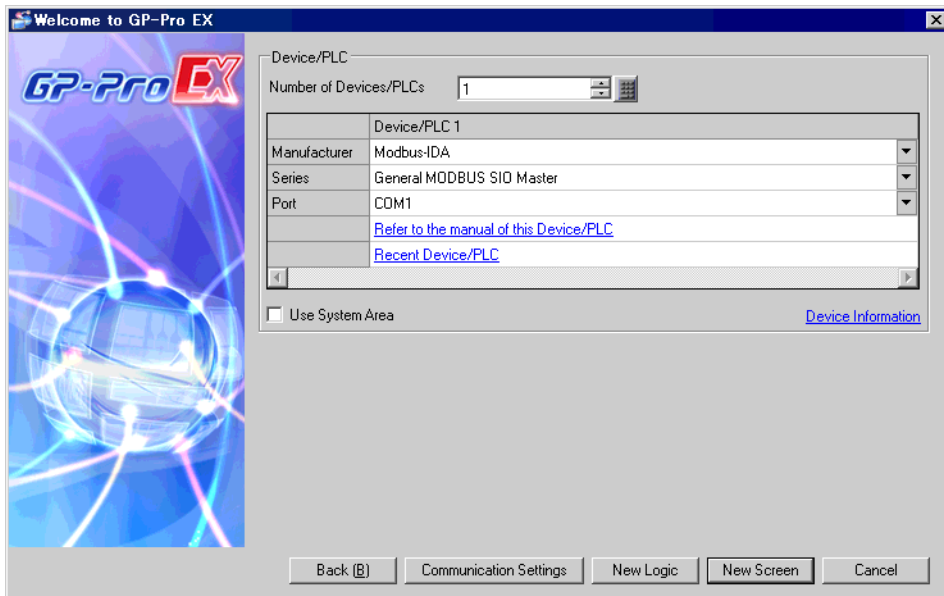

Setup Items	Setup Description
Number of Devices/PLCs	Use an integer from 1 to 4 to enter the number of Devices/PLCs to connect to the display.
Manufacturer	Select the manufacturer of the External Device to be connected. Select "Modbus-IDA".
Series	Select a model (series) of the External Device to be connected and connection method. Select "General MODBUS SIO Master". In System configuration, check to make sure the external device to which you are connecting is supported in "General MODBUS SIO Master". ☞ "2 System Configuration" (page 4)
Port	Select the Display port to be connected to the External Device.
Use System Area	Check this option to synchronize the system data area of the Display and the device (memory) of the External Device. When synchronized, you can use the External Device's ladder program to switch the display or display the window on the Display. Cf. GP-Pro EX Reference Manual "LS Area (Direct Access Method Area)" This feature can also be set in GP-Pro EX or in the Display's offline mode. Cf. GP-Pro EX Reference Manual "System Settings [Display Unit] - [System Area] Settings Guide" Cf. Maintenance/Troubleshooting Guide "Main Unit - System Area Settings"

4 Communication Setting

This section provides examples of communication settings for the Display and the External Device, which are recommended by Pro-face.

4.1 Setting Example 1

■ GP-Pro EX Settings

◆ Communication Settings

To display the setup screen, from the [Project] menu, point to [System Settings] and select [Device/PLC].

Device/PLC 1

Summary

ManufacturerModbus-IDA

SeriesGeneral MODBUS SIO Master

PortCOM1

Text Data Mode1

Change Device/PLC

Communication Settings

SIO Type

☒ RS232C

☐ RS422/485(2wire)

☐ RS422/485(4wire)

Speed

19200

Data Length

☐ 7

☒ 8

Parity

☐ NONE

☒ EVEN

☐ ODD

Stop Bit

☒ 1

☐ 2

Flow Control

☒ NONE

☐ ER(DTR/CTS)

☐ XON/XOFF

Timeout

3

(sec)

Retry

2

Wait To Send

3

(ms)

☒ Default Value

Mode

☒ RTU

☐ ASCII

RI / VCC

☒ RI

☐ VCC

In the case of RS232C, you can select the 9th pin to RI (Input) or VCC (5V Power Supply). If you use the Digital's RS232C Isolation Unit, please select it to VCC.

Default

Device-Specific Settings

Allowable Number of Devices/PLCs31

Add Device

No.1

Device NamePLC1

Settings


Slave Equipment Address=1, Rest of the bits in this word

Add Indirect Device

NOTE


- Select "NONE" or "ER (DTR/CTS)" for the flow control according to the cable to use.

◆ Device Setting

To display the [Individual Device Settings] dialog box, from [Device-Specific Settings] in the [Device/PLC] window, select the external device and click [Settings]  .


To connect multiple External Devices, from [Device-Specific Settings] in the [Device/PLC] window, click [Add Device] to add another External Device.

[Equipment Configuration] Tab

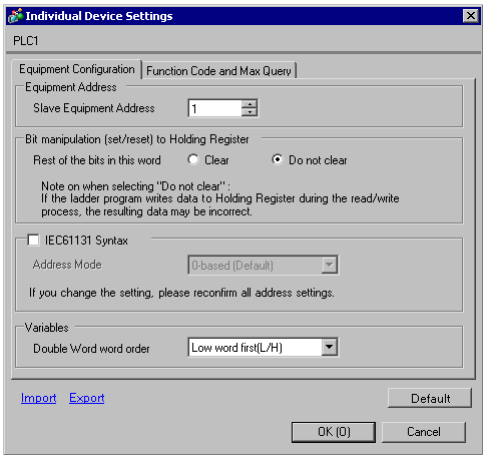

The dialog box shows the 'Equipment Configuration' tab for PLC1. It includes fields for 'Equipment Address' (set to 1) and 'Slave Equipment Address'. There are radio buttons for 'Clear' and 'Do not clear' under 'Bit manipulation (set/reset) to Holding Register'. A note explains that selecting 'Do not clear' may lead to incorrect data if the ladder program writes during a read/write process. There is a checkbox for 'IEC61131 Syntax' and a dropdown for 'Address Mode' (set to '0-based (Default)'). A 'Variables' section has a dropdown for 'Double Word word order' (set to 'Low word first(L/H)'). At the bottom are 'Import', 'Export', 'Default', 'OK (O)', and 'Cancel' buttons.

[Function Code and Max Query] Tab

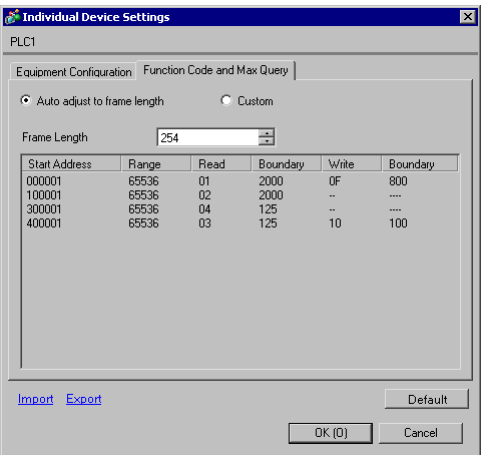

The dialog box shows the 'Function Code and Max Query' tab for PLC1. It has radio buttons for 'Auto adjust to frame length' (selected) and 'Custom'. The 'Frame Length' is set to 254. Below is a table with 6 columns: Start Address, Range, Read, Boundary, Write, and Boundary.

Start Address	Range	Read	Boundary	Write	Boundary
000001	65536	01	2000	0F	800
100001	65536	02	2000	--	----
300001	65536	04	125	--	----
400001	65536	03	125	10	100

At the bottom are 'Import', 'Export', 'Default', 'OK (O)', and 'Cancel' buttons.

■ External Device Settings

External Device settings vary depending on the device. Refer to your External Device manual for details.

4.2 Setting Example 2

■ GP-Pro EX Settings

◆ Communication Settings

To display the setup screen, from the [Project] menu, point to [System Settings] and select [Device/PLC].

Device/PLC 1

Summary [Change Device/PLC](#)

Manufacturer: Series: Port:

Text Data Mode: [Change](#)

Communication Settings

SIO Type: ☐ RS232C ☐ RS422/485(2wire) ☒ RS422/485(4wire)

Speed:

Data Length: ☐ 7 ☒ 8

Parity: ☐ NONE ☒ EVEN ☐ ODD

Stop Bit: ☒ 1 ☐ 2

Flow Control: ☒ NONE ☐ ER(DTR/CTS) ☐ XON/XOFF

Timeout: (sec)

Retry:

Wait To Send: (ms) ☒ Default Value

Mode: ☒ RTU ☐ ASCII

RI / VCC: ☒ RI ☐ VCC

In the case of RS232C, you can select the 9th pin to RI (Input) or VCC (5V Power Supply). If you use the Digital's RS232C Isolation Unit, please select it to VCC.

[Default](#)


Device-Specific Settings

Allowable Number of Devices/PLCs: 31 [Add Device](#)

No.	Device Name	Settings
1	PLC1	Slave Equipment Address=1, Rest of the bits in this word


[Add Indirect Device](#)

◆ Device Setting

To display the [Individual Device Settings] dialog box, from [Device-Specific Settings] in the [Device/PLC] window, select the external device and click [Settings]  .


To connect multiple External Devices, from [Device-Specific Settings] in the [Device/PLC] window, click [Add Device] to add another External Device.

[Equipment Configuration] Tab

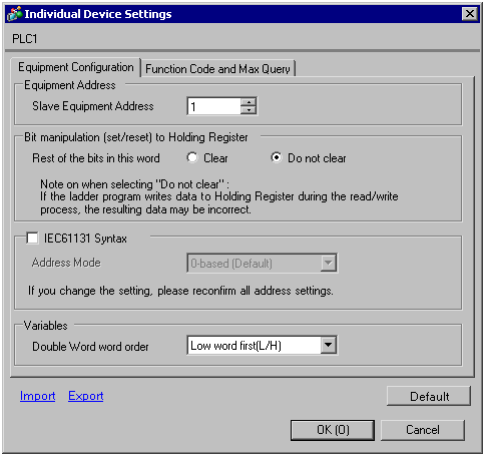

The dialog box shows the 'Equipment Configuration' tab for PLC1. It includes fields for 'Equipment Address' and 'Slave Equipment Address' (set to 1). There are radio buttons for 'Clear' and 'Do not clear' under 'Bit manipulation (set/reset) to Holding Register'. A note explains that selecting 'Do not clear' is for cases where the ladder program writes data to the Holding Register. There are also dropdowns for 'Address Mode' (set to '0-based (Default)') and 'Double Word word order' (set to 'Low word first(L/H)'). At the bottom are 'Import', 'Export', 'Default', 'OK (O)', and 'Cancel' buttons.

[Function Code and Max Query] Tab

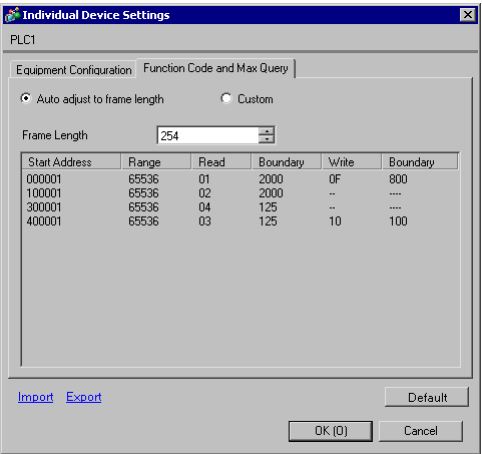

The dialog box shows the 'Function Code and Max Query' tab for PLC1. It has radio buttons for 'Auto adjust to frame length' (selected) and 'Custom'. The 'Frame Length' is set to 254. Below is a table with 6 columns: Start Address, Range, Read, Boundary, Write, and Boundary.

Start Address	Range	Read	Boundary	Write	Boundary
000001	65536	01	2000	0F	800
100001	65536	02	2000	--	----
300001	65536	04	125	--	----
400001	65536	03	125	10	100

At the bottom are 'Import', 'Export', 'Default', 'OK (O)', and 'Cancel' buttons.

■ External Device Settings

External Device settings vary depending on the device. Refer to your External Device manual for details.

4.3 Setting Example 3

■ GP-Pro EX Settings

◆ Communication Settings

To display the setup screen, from the [Project] menu, point to [System Settings] and select [Device/PLC].

Device/PLC 1

Summary [Change Device/PLC](#)

Manufacturer Series Port

Text Data Mode [Change](#)

Communication Settings

SIO Type ☐ RS232C ☒ RS422/485(2wire) ☐ RS422/485(4wire)

Speed

Data Length ☐ 7 ☒ 8

Parity ☐ NONE ☒ EVEN ☐ ODD

Stop Bit ☒ 1 ☐ 2

Flow Control ☒ NONE ☐ ER(DTR/CTS) ☐ XON/XOFF

Timeout (sec)

Retry

Wait To Send (ms) ☒ Default Value

Mode ☒ RTU ☐ ASCII

RI / VCC ☒ RI ☐ VCC

In the case of RS232C, you can select the 9th pin to RI (Input) or VCC (5V Power Supply). If you use the Digital's RS232C Isolation Unit, please select it to VCC.

[Default](#)


Device-Specific Settings

Allowable Number of Devices/PLCs 31 [Add Device](#)

No.	Device Name	Settings
1	PLC1	Slave Equipment Address=1, Rest of the bits in this word


[Add Indirect Device](#)

◆ Device Setting

To display the [Individual Device Settings] dialog box, from [Device-Specific Settings] in the [Device/PLC] window, select the external device and click [Settings]  .

To connect multiple External Devices, from [Device-Specific Settings] in the [Device/PLC] window, click [Add Device] to add another External Device.


[Equipment Configuration] Tab

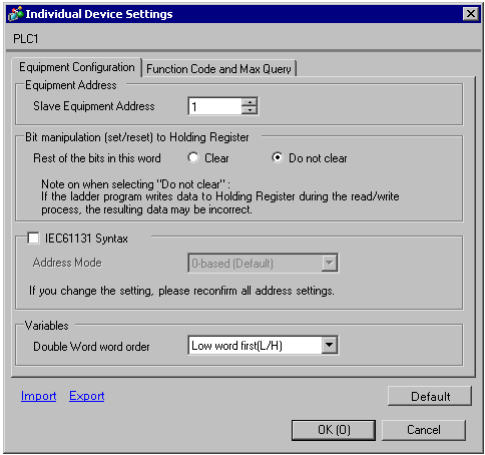

The dialog box is titled "Individual Device Settings" and has a tab labeled "Equipment Configuration". It contains the following fields and controls:

- Equipment Address:** A text box with the value "1".
- Slave Equipment Address:** A text box with the value "1".
- Bit manipulation (set/reset) to Holding Register:** Two radio buttons: "Clear" (selected) and "Do not clear".
- Note on when selecting "Do not clear":** "If the ladder program writes data to Holding Register during the read/write process, the resulting data may be incorrect."
- IEC61131 Syntax:** A checkbox that is unchecked.
- Address Mode:** A dropdown menu showing "0-based (Default)".
- If you change the setting, please reconfirm all address settings.**
- Variables:** A section with a dropdown menu showing "Low word first(L/H)".
- Buttons:** "Import", "Export", "Default", "OK (O)", and "Cancel".

[Function Code and Max Query] Tab

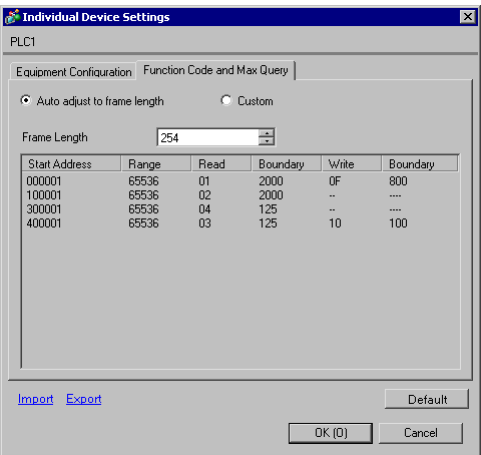

The dialog box is titled "Individual Device Settings" and has a tab labeled "Function Code and Max Query". It contains the following fields and controls:

- Equipment Configuration:** A section with two radio buttons: "Auto adjust to frame length" (selected) and "Custom".
- Frame Length:** A text box with the value "254".
- Table:** A table with 6 columns: Start Address, Range, Read, Boundary, Write, and Boundary. It contains 4 rows of data.
- Buttons:** "Import", "Export", "Default", "OK (O)", and "Cancel".

Start Address	Range	Read	Boundary	Write	Boundary
000001	65536	01	2000	0F	800
100001	65536	02	2000	--	----
300001	65536	04	125	--	----
400001	65536	03	125	10	100


■ External Device Settings

External Device settings vary depending on the device. Refer to your External Device manual for details.

5 Setup Items

Set up the Display's communication settings in GP-Pro EX or in the Display's offline mode.


The setting of each parameter must match that of the External Device.

 "4 Communication Setting" (page 8)

5.1 Setup Items in GP-Pro EX

■ Communication Settings

To display the setup screen, from the [Project] menu, point to [System Settings] and select [Device/PLC].

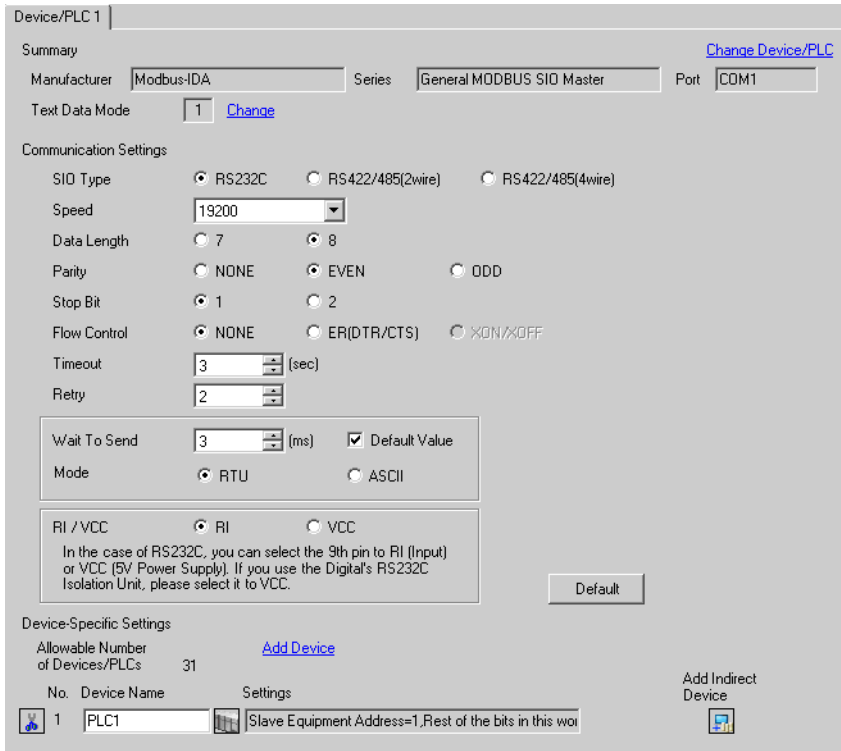


Setup Items	Setup Description
SIO Type	Select the SIO type for communicating with the External Device.
Speed	Select the communication speed between the External Device and the Display.
Data Length	Select a data length.
Parity	Select how to check parity.
Stop Bit	Select a stop bit length.
Flow Control	Select the communication control method to prevent overflow of transmission and reception data.
Timeout	Use an integer from 1 to 127 to enter the time(s) for which the Display waits for the response from the External Device.
Retry	In case of no response from the External Device, enter how many times the Display retransmits the command, from "0 to 255".

Setup Items	Setup Description
Wait To Send	<p>Enter the standby time (ms) from when the Display receives packets until it transmits the next command, from "0 to 5000".</p> <p>When [RTU] is selected for [Mode] and the check box of the default value is checked, the Wait To Send value automatically changes according to the formula below by changing each value for Speed/Data Length/Parity/Stop Bit.</p> $\text{Wait To Send (ms)} = \frac{3500 \times (1 + \text{Data Length} + \text{Stop Bit} + \text{Parity})}{\text{Speed (bps)}}$ <p>Value for the parity setting is shown below. No Parity = 0 Parity Even = 1 Parity Odd = 1</p>
Mode	Select either [RTU] or [ASCII] for the communication mode.
RI/VCC	<p>You can switch between RI/VCC on the 9th pin when you select RS-232C for SIO type.</p> <p>To connect to the IPC, you need to switch between RI/5V using the IPC selector switch. Refer to your IPC manual for details.</p>

NOTE


- Refer to the GP-Pro EX Reference Manual for Indirect Device.
 Cf. GP-Pro EX Reference Manual "Changing the Device/PLC at Runtime (Indirect Device)"



■ Device Setting

To display the [Individual Device Settings] dialog box, from [Device-Specific Settings] in the [Device/PLC] window, select the external device and click [Settings]  .

To connect multiple External Devices, from [Device-Specific Settings] in the [Device/PLC] window, click [Add Device] to add another External Device.

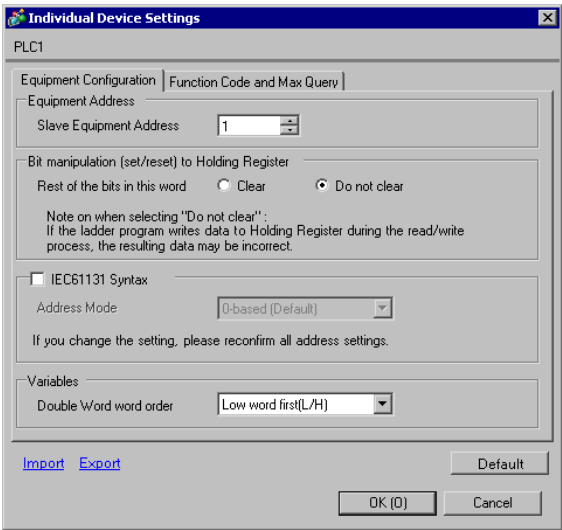- [Equipment Configuration] Tab



Setup Items		Setup Description
Slave Equipment Address		Use an integer from 1 to 247 to enter the slave address of the External Device.
Bit manipulation (set/reset) to Holding Register		Select how other bits in the same word are handled when you manipulate bits in the holding register, from "Clear" or "Do not clear".
	Rest of the bits in this word	
IEC61131 Syntax		Select this item to use the IEC61131 syntax for variables. If you check this item, select the address mode from "0-based" or "1-based".
Double Word word order		Select the order of storing double word data from "Low word first" or "High word first".
Import		Import the device settings described in the xml file.  " ◆ Import Procedure in the Device Setting" (page 20)
Export		Export the device settings into the xml file.  " ◆ Export Procedure in the Device Setting" (page 20)

- [Function Code and Max Query] Tab (when "Auto adjust to frame length" is selected)

RTU mode

Individual Device Settings

PLC1

Equipment Configuration Function Code and Max Query

☒ Auto adjust to frame length ☐ Custom

Frame Length: 254

Start Address	Range	Read	Boundary	Write	Boundary
000001	65536	01	2000	0F	800
100001	65536	02	2000	--	----
300001	65536	04	125	--	----
400001	65536	03	125	10	100

Import Export Default OK (O) Cancel

ASCII mode

Individual Device Settings

PLC1

Equipment Configuration Function Code and Max Query

☒ Auto adjust to frame length ☐ Custom

Frame Length: 254 x 2 + 3 bytes

Start Address	Range	Read	Boundary	Write	Boundary
000001	65536	01	2000	0F	800
100001	65536	02	2000	--	----
300001	65536	04	125	--	----
400001	65536	03	125	10	100

Import Export Default OK (Q) Cancel

Setup Items	Setup Description
Auto adjust to frame length	Automatically set each function code and the boundary for one communication according to the frame length. Function codes cannot be changed. To change a function code, use "Custom".
Frame Length	Set the frame length from "6 to 254". After setting, click the device list to display the boundary of Read and Write. Specify the frame length so that the value can be within the range of the boundary of Read and Write for the external device to be used.
Import	Import the device settings described in the xml file. ☞ "◆ Import Procedure in the Device Setting" (page 20)
Export	Export the device settings into the xml file. ☞ "◆ Export Procedure in the Device Setting" (page 20)


NOTE

- When "Auto adjust to frame length" is selected, use the following function codes. The read/write boundary is automatically calculated according to "Frame Length".

Device	Function Code	
	Read	Write
Coil	01	0F: Force Multiple Coils
Discrete Input	02	Disabled
Input Register	04	Disabled
Holding Register	03	10: Preset Multiple Register

- Use "Custom" in the following cases:
 - When you use a different function code depending on an address.
 - When you use the function code "05: Force Single Coil" or "06: Preset Single Register".
 - When the read/write boundary depends on the device.

- [Function Code and Max Query] Tab (when "Custom" is selected)

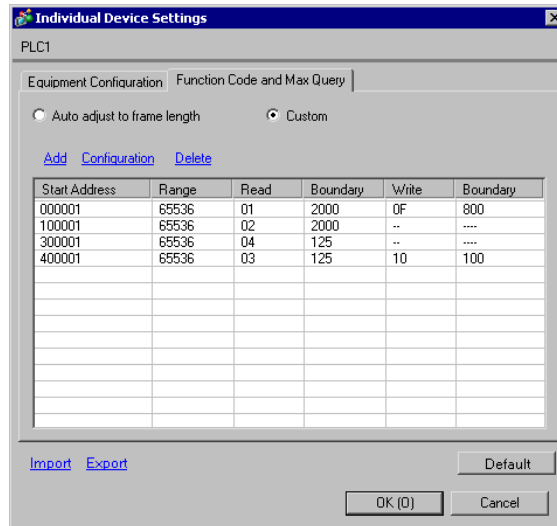

Setup Items	Setup Description
Custom	Manually set each function code and the boundary for one communication.
Add	Add the function code and its data boundary settings. Up to 20 settings can be added. Add the settings in the [Add setting] dialog box.
Configuration	Change the selected device settings. Change the settings in the [Configuration setting] dialog box.
Delete	Delete the selected device settings.
Import	Import the device settings described in the xml file. ☞ " ◆ Import Procedure in the Device Setting" (page 20)
Export	Export the device settings into the xml file. ☞ " ◆ Export Procedure in the Device Setting" (page 20)

- [Add setting] Dialog Box / [Configuration setting] Dialog Box

Add setting

Start Address

000001

Range

65536

Read

Function Code

01

Boundary

2000

Write

Function Code

0F (Multiple)

Boundary

800

OK

Cancel

Configuration setting

Start Address

000001

Range

65536

Read

Function Code

01

Boundary

2000

Write

Function Code

0F (Multiple)

Boundary

800

OK

Cancel

Setup Items		Setup Description
Start Address		Set the start address of the device.
Range		Set the range of the device specified in the start address.
Read		Set the function codes to be used for read and the read boundary in one communication.
	Function Code	The function code is assigned by the specified start address.
	Boundary	The boundary depends on the device. Refer to the following table for details.
Write		Set the function code to be used for write and the write boundary in one communication.
	Function Code	The function code depends on the device. Refer to the following table for details.
	Boundary	The boundary depends on the device. Refer to the following table for details.

NOTE

- When "Custom" is selected, use the following function codes.

Device	Function Code (Boundary)		
	Read	Write	
		Multiple	Single
Coil	01(2000)	0F: Force Multiple Coils (800)	05: Force Single Coil (Fixed to 1)
Discrete Input	02(2000)	Disabled	Disabled
Input Register	04(125)	Disabled	Disabled
Holding Register	03(125)	10: Preset Multiple Register (100)	06: Preset Single Register (Fixed to 1)

- If the set device address is disabled to write, you cannot set the write function code and boundary.
- When you select the function code "05" or "06", the write boundary will be fixed to "1", and cannot be changed.

◆ Import Procedure in the Device Setting

- 1 Create the xml file based on the following format sample.
- Format sample when "Auto adjust to frame length" is selected

```
<?xml version="1.0" encoding="utf-8" ?>
<ModbusConfiguration version="1">
  <ClearBits>OFF</ClearBits>
  <AddressMode>ModiconSyntax</AddressMode>
  <DWORD>L/H</DWORD>
  <FunctionCode>
    <Mode>AutoAdjust</Mode>
    <FrameLength>254</FrameLength>
  </FunctionCode>
</ModbusConfiguration>
```

Bit manipulation to Holding Register
Address Mode
Double Word word order

Mode
Frame Length

- Format sample when "Custom" is selected

```
<?xml version="1.0" encoding="utf-8" ?>
<ModbusConfiguration version="1">
  <ClearBits>OFF</ClearBits>
  <AddressMode>ModiconSyntax</AddressMode>
  <DWORD>L/H</DWORD>
  <FunctionCode>
    <Mode>Custom</Mode>
    <Setting>
      <Address>000001</Address>
      <Range>65535</Range>
      <Read>
        <FunctionCode>01</FunctionCode>
        <Boundary>2000</Boundary>
      </Read>
      <Write>
        <FunctionCode>0F</FunctionCode>
        <Boundary>800</Boundary>
      </Write>
    </Setting>
  </FunctionCode>
</ModbusConfiguration>
```

Bit manipulation to Holding Register
Address Mode
Double Word word order

Mode

Start Address
Range

Read Function Code
Read Boundary

Write Function Code
Write Boundary

- 2 Click [Import] on the [Individual Device Settings] dialog box to display the [Open] dialog box.
- 3 Select the created xml file and click [Open].

◆ Export Procedure in the Device Setting

- 1 Click [Export] on the [Individual Device Settings] dialog box to display the [Save as] dialog box.
- 2 Enter a name and click [Save].

5.2 Setup Items in Offline Mode

- NOTE

- Refer to the Maintenance/Troubleshooting guide for information on how to enter offline mode or about the operation.

Cf. Maintenance/Troubleshooting Guide "Offline Mode"

 - The number of the setup items to be displayed for 1 page in the offline mode depends on the Display in use. Please refer to the Reference manual for details.

◆ Communication Settings

To display the setting screen, touch [Device/PLC Settings] from [Peripheral Equipment Settings] in offline mode.
Touch the External Device you want to set from the displayed list.

Comm.	Device	Option		
General MODBUS SIO Master [COM1] Page 1/1				
SIO Type	RS232C			
Speed	19200			
Data Length	<input type="radio"/> 7 <input checked="" type="radio"/> 8			
Parity	<input type="radio"/> NONE <input checked="" type="radio"/> EVEN <input type="radio"/> ODD			
Stop Bit	<input checked="" type="radio"/> 1 <input type="radio"/> 2			
Flow Control	NONE			
Timeout(s)	3			
Retry	2			
Wait To Send(ms)	3			
Mode	<input checked="" type="radio"/> RTU <input type="radio"/> ASCII			
Exit			Back	
			2012/07/10 09:56:19	

Setup Items	Setup Description
SIO Type	Select the SIO type for communicating with the External Device. <div>IMPORTANT</div> <p>In the communication settings, set [SIO Type] correctly according to the serial interface specifications of the Display. If you select an SIO type that the serial interface does not support, proper operation cannot be guaranteed. Refer to your Display manual for details on the serial interface specifications.</p>
Speed	Select the communication speed between the External Device and the Display.
Data Length	Select a data length.
Parity	Select how to check parity.
Stop Bit	Select a stop bit length.
Flow Control	Select the communication control method to prevent overflow of transmission and reception data.

Setup Items	Setup Description
Timeout	Use an integer from 1 to 127 to enter the time (s) for which the Display waits for the response from the External Device.
Retry	In case of no response from the External Device, enter how many times the Display retransmits the command, from "0 to 255".
Wait To Send	<p>Enter the standby time (ms) from when the Display receives packets until it transmits the next command, from "0 to 5000".</p> <p>When [RTU] is selected for [Mode] and each value for Speed/Data Length/Parity/Stop Bit is changed, set the Wait To Send value calculated with the following formula.</p> $\text{Wait To Send (ms)} = \frac{3500 \times (1 + \text{Data Length} + \text{Stop Bit} + \text{Parity})}{\text{Speed (bps)}}$ <p>Value for the parity setting is shown below. No Parity = 0 Parity Even = 1 Parity Odd = 1</p>
Mode	Select either [RTU] or [ASCII] for the communication mode.

◆ Device Setting

To display the setting screen, touch [Device/PLC Settings] from [Peripheral Equipment Settings]. Touch the External Device you want to set from the displayed list, and touch [Device].

(Page 1/22)

Comm.	Device	Option		
General MODBUS SIO Master [COM1] Page 1/22				
Device/PLC Name <input type="text" value="PLC1"/>				
Slave Address <input type="text" value="1"/>				
Bit manipulation to HR		Rest of bits in word are not cleared		
Double Word word order		Low word first		
IEC61131 Syntax		OFF		
➡				
Exit		Back		2012/07/10 09:56:24

Setup Items	Setup Description
Device/PLC Name	Select the External Device to set. The device name is the title of the External Device set with GP-Pro EX.(Initial value [PLC1])
Slave Address	Use an integer from 1 to 247 to enter the slave address of the External Device.
Bit manipulation to HR	Displays how other bits in the same word are handled when you manipulate bits in the holding register, as "Rest of bits in word are cleared" or "Rest of bits in word are not cleared". (Not available to set in offline mode.)

Setup Items	Setup Description
Double Word word order	Displays the currently set order of storing double word data as "Low word first" or "High word first". (Not available to set in offline mode.)
IEC61131 Syntax	Displays the usage status of the currently set IEC61131 syntax in ON/OFF. (Not available in offline mode.)

(Page 2/22)

Comm.	Device	Option		
General MODBUS SIO Master [COM1] Page 2/22				
Device/PLC Name <input type="text" value="PLC1"/>				
Function Code and Max Query				
Auto adjust Setting Auto adjust to Frame Length				
Frame Length 254				
<div>← →</div>				
Exit		Back		2012/07/10 09:56:29

Setup Items	Setup Description
Device/PLC Name	Select the External Device to set. The device name is the title of the External Device set with GP-Pro EX.(Initial value [PLC1])
Function Code and Max Query	Displays the option to set the function code and boundary. (Not available to set in offline mode.)
Auto adjust Setting	Displays the set frame length when "Auto adjust to frame length" is selected in the online mode. (Not available to set in offline mode.)
Frame Length	

NOTE	• When "Custom" is selected, the setup items of the frame length are invalid.
-------------	---

(Page 3/22 to 22/22)

Comm.	Device	Option		
General MODBUS SIO Master [COM1] Page 3/22				
Device/PLC Name <input type="text" value="PLC1"/>				
Custom Setting 1				
Start Address 000001				
Range 65536				
Read 01 / 2000				
Write 0F / 0800				
				<div>← →</div>
Exit		Back		2012/07/10 09:56:33

Setup Items	Setup Description
Device/PLC Name	Select the External Device to set. The device name is the title of the External Device set with GP-Pro EX. (Initial value [PLC1])
Start Address	Displays the start address of the device. (Not available to set in offline mode.)
Range	Displays the range of the device specified in the start address. (Not available to set in offline mode.)
Read	Displays the device function codes and boundaries to be read for one communication. (Not available to set in offline mode.)
Write	Displays the device function codes and boundaries to be written for one communication. (Not available to set in offline mode.)

<div>NOTE</div>	<ul style="list-style-type: none">• Page 3 and the following pages display the set descriptions in order.• When "Auto adjust to frame length" is selected, the Custom setup items are invalid.
-----------------	---

◆ Option

To display the setting screen, touch [Device/PLC Settings] from [Peripheral Equipment Settings]. Touch the External Device you want to set from the displayed list, and touch [Option].

Comm.	Device	Option		
General MODBUS SIO Master		[COM1]	Page 1/1	
<div>RI / VCC <input checked="" type="radio"/> RI <input type="radio"/> VCC</div> <p>In the case of RS232C, you can select the 9th pin to RI(Input) or VCC(5V Power Supply). If you use the Digital's RS232C Isolation Unit, please select it to VCC.</p>				
	Exit		Back	2012/07/10 09:56:37

Setup Items	Setup Description
RI/VCC	You can switch between RI/VCC on the 9th pin when you select RS-232C for SIO type. To connect to the IPC, you need to switch between RI/5V using the IPC selector switch. Refer to your IPC manual for details.

<div>NOTE</div>	<ul style="list-style-type: none">GP-4100 series, GP-4*01TM, LT-4*01TM and LT-Rear Module do not have the [Option] setting in the offline mode.
-----------------	---

6 Cable Diagrams

The cable diagram shown below may be different from the cable diagram recommended by Modbus-IDA.

Please be assured there is no operational problem in applying the cable diagram shown in this manual.

- The FG pin on the External Device must be D-class grounded. Refer to your External Device manual for details.
- The SG and FG are connected inside the Display. If you connect the External Device to the SG, do not form any short-circuit loop in the system design.
- If the communication is not stable because of noise or other factors, connect an isolation unit.
- The connector type or signal name may vary depending on the External Device.


Connect correctly corresponding to the External Device interface specifications.

Cable Diagram 1

Display (Connection Port)	Cable		Remarks
GP3000 (COM1) GP4000 ^{*1} (COM1) SP5000 (COM1/2) ST (COM1) LT3000 (COM1) IPC ^{*2} PC/AT	1A	User created cable (ER (DTR/CTS) control)	The cable length must be 15m maximum.
	1B	User created cable (without control)	
GP-4105 (COM1)	1C	User created cable (ER (DTR/CTS) control)	The cable length must be 15m maximum.
	1D	User created cable (without control)	
LT-4*01TM (COM1) LT-Rear Module (COM1)	1E	RJ45 RS-232C Cable (5m) by Pro-face PFXZLMCBRJ21	The cable length must be 5m maximum.


*1 All GP4000 models except GP-4100 series and GP-4203T

*2 Available only with the COM ports that support RS-232C.


 ■ IPC COM Port (page 5)

1A)


- When the External Device supports RTS/CTS control

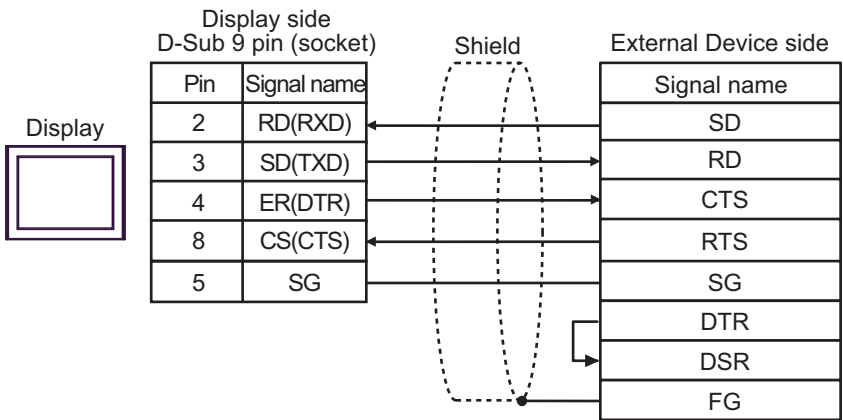

- When the External Device supports DTR/DSR control

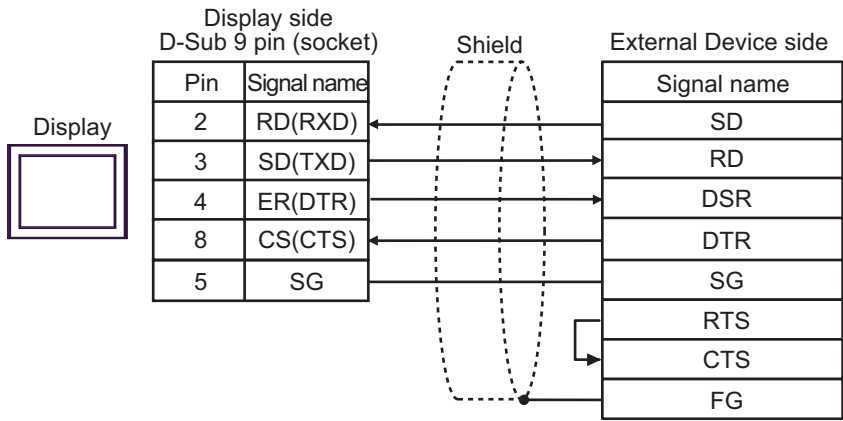


1B)

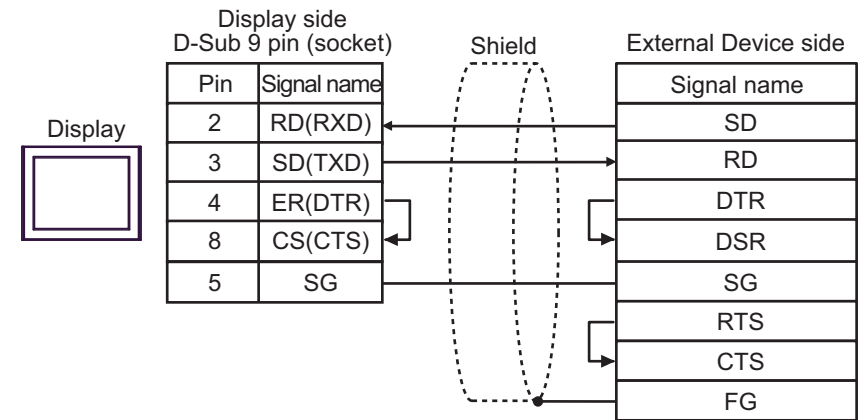


1C)


- When the External Device supports RTS/CTS control

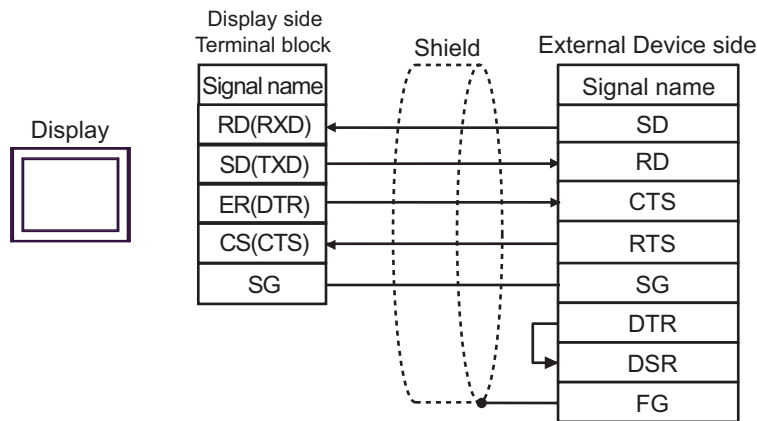


- When the External Device supports DTR/DSR control

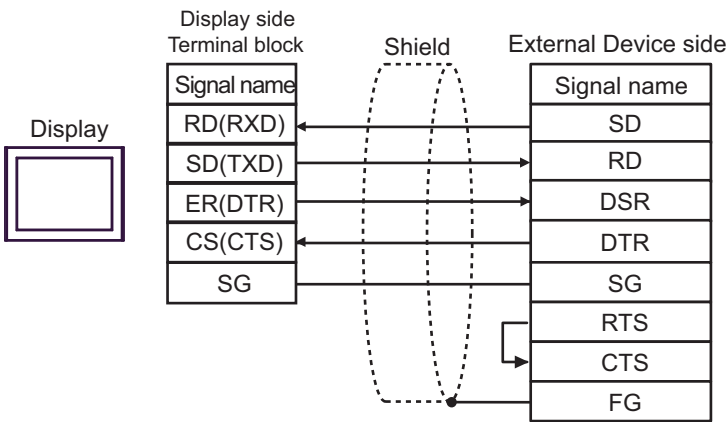

1D)

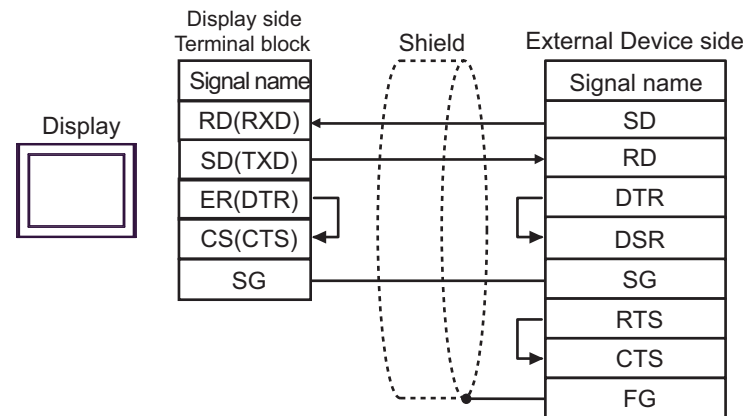

1E)

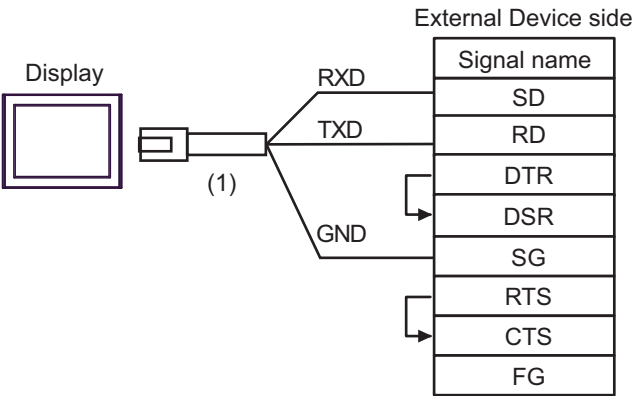


Legend	Name	Note
(1)	RJ45 RS-232C Cable (5m) by Pro-face PFXZLMCBJR21	

Cable Diagram 2

Display (Connection Port)	Cable		Remarks
GP3000 ^{*1} (COM1) AGP-3302B (COM2) GP-4*0ITM (COM1) ST ^{*2} (COM2) LT3000 (COM1) IPC ^{*3}	2A	COM port conversion adapter by Pro-face CA3-ADPCOM-01 + Connector terminal block conversion adapter by Pro-face CA3-ADPTRM-01 + User created cable	The cable length must be 1000m maximum.
	2B	COM port conversion adapter by Pro-face CA3-ADPCOM-01 + RS-422 cable by Pro-face CA3-CBL422-01	
	2C	User created cable	
GP3000 ^{*4} (COM2)	2D	Online adapter by Pro-face CA4-ADPONL-01 + Connector terminal block conversion adapter by Pro-face CA3-ADPTRM-01 + User created cable	The cable length must be 1000m maximum.
	2E	Online adapter by Pro-face CA4-ADPONL-01 + RS-422 cable by Pro-face CA3-CBL422-01	
	2F	Online adapter by Pro-face CA4-ADPONL-01 + User created cable	
GP-4106 (COM1)	2G	User created cable	The cable length must be 1000m maximum.
GP4000 ^{*5} (COM2) GP-420IT (COM1) SP5000 (COM1/2)	2H	RS-422 terminal block conversion adapter by Pro-face PFXZCBADTM1 ^{*6} + User created cable	The cable length must be 1000m maximum.
	2B	COM port conversion adapter by Pro-face CA3-ADPCOM-01 + RS-422 cable by Pro-face CA3-CBL422-01	
	2C	User created cable	

*1 All GP3000 models except AGP-3302B

*2 All ST models except AST-3211A and AST-3302B

*3 Available only with the COM ports that support RS-422/485 (4 wire).
 ■ IPC COM Port (page 5)

*4 All GP3000 models except GP-3200 series and AGP-3302B


- *5 All GP4000 models except GP-4100 series, GP-4*01TM, GP-4201T and GP-4*03T
- *6 When using a Terminal Block Conversion Adapter (CA3-ADPTRM-01) instead of the RS-422 Terminal Block Conversion Adapter, refer to Cable Diagram 2A.

IMPORTANT


- The RS-422/485 cable length is normally 1000m or less, which depends on the External Device. Please refer to the manual of the External Device for more details.
- The connection method and termination resistance depends on the External Device.
- The termination resistance on the Display is not isolated.

2A)

- 1:1 Connection

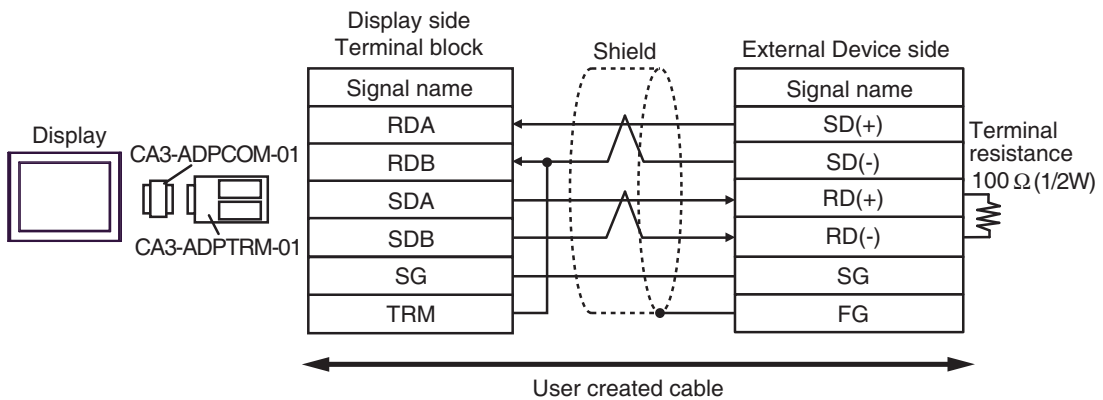


- 1:n Connection

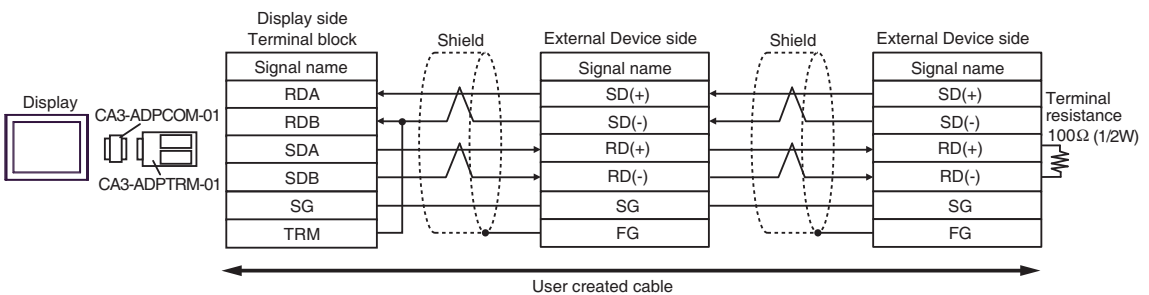**NOTE**


- When the RDB terminal of CA3-ADPTRM-01 to the TRM terminal, the termination resistance of 100Ω (1/2W) is inserted between RDA and RDB terminals on the Display.

2B)

- 1:1 Connection

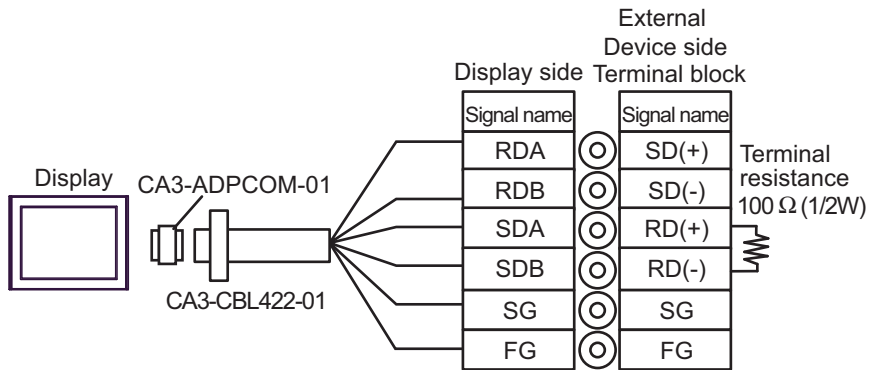


- 1:n Connection

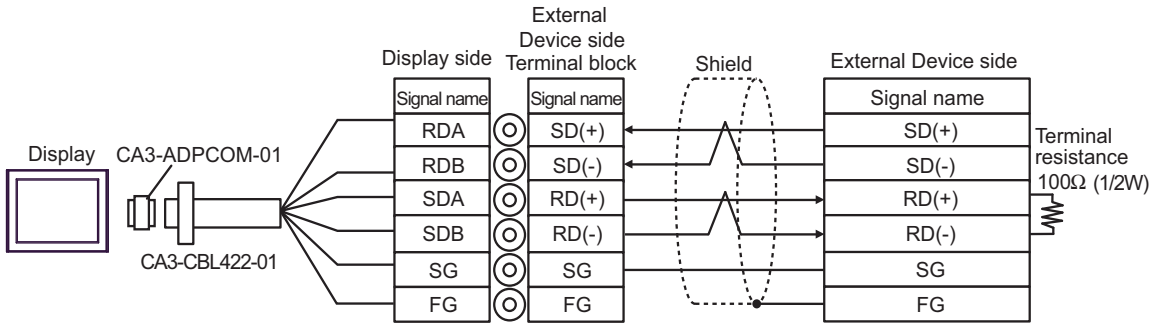


NOTE • 100Ω (1/2W) termination resistance is inserted between RDA and RDB in CA3-CBL422-01.

2C)

- 1:1 Connection

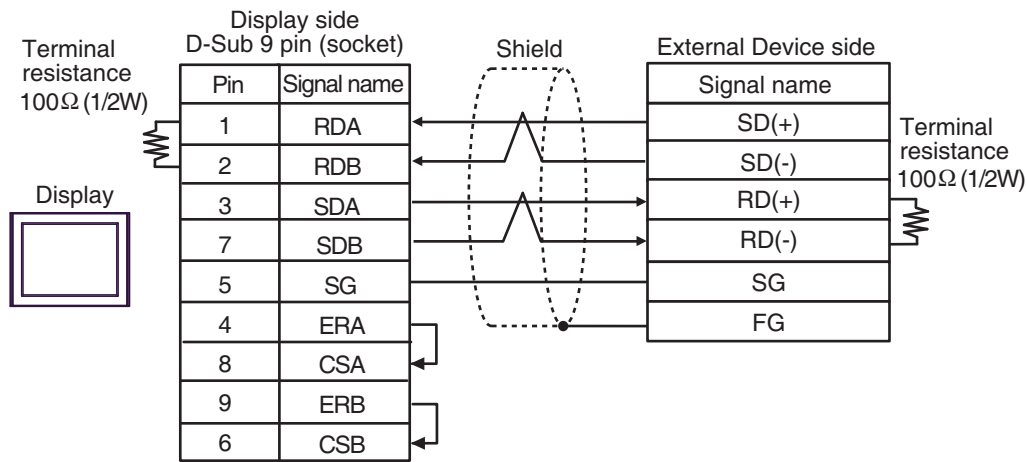


- 1:n Connection

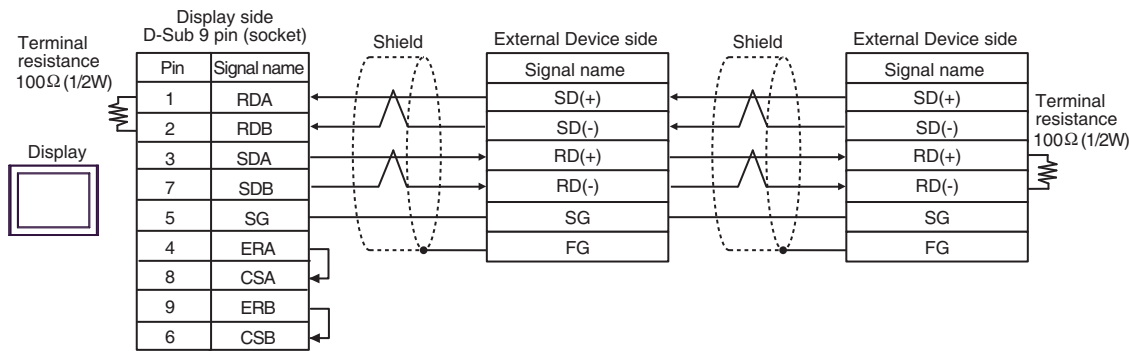


2D)

- 1:1 Connection

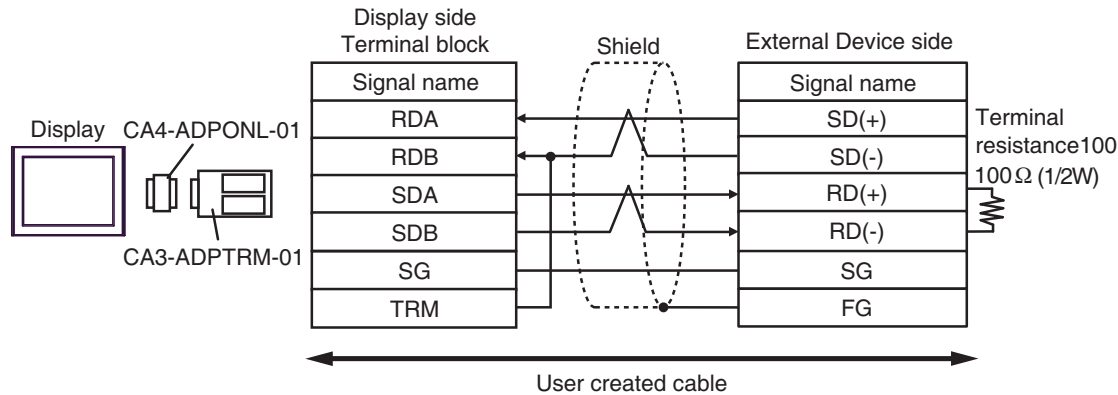

- 1:n Connection

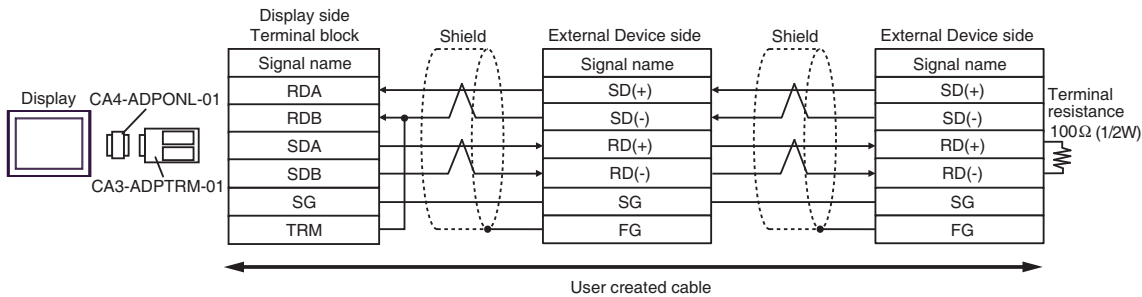


NOTE


- When the RDB terminal of CA3-ADPTRM-01 to the TRM terminal, the termination resistance of 100Ω (1/2W) is inserted between RDA and RDB terminals on the Display.

2E)

- 1:1 Connection

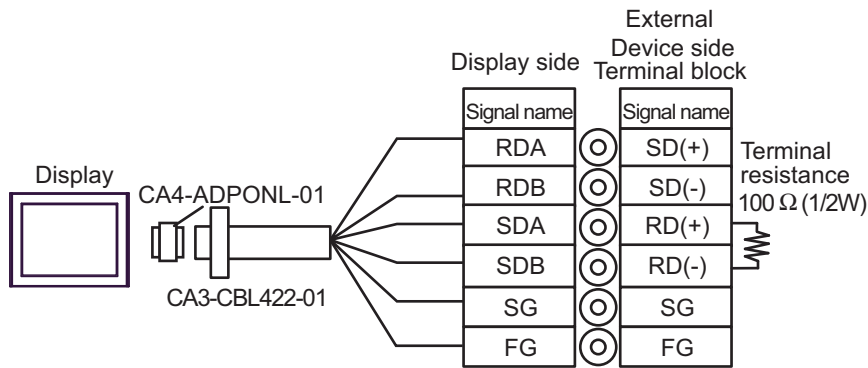


- 1:n Connection

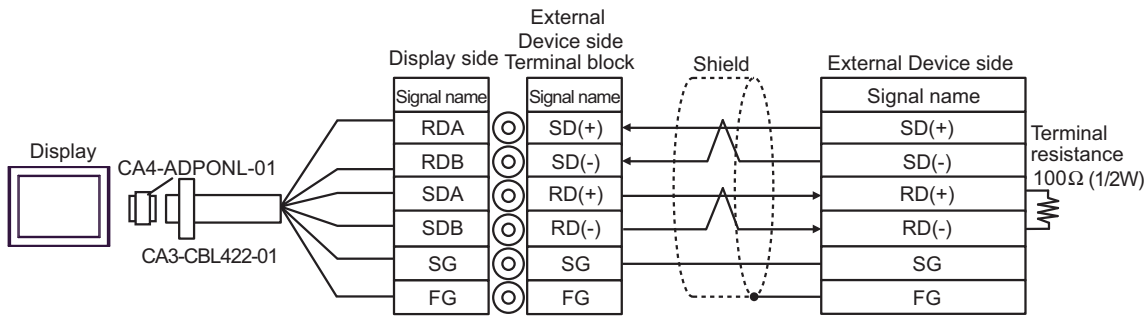


NOTE • 100Ω (1/2W) termination resistance is inserted between RDA and RDB in CA3-CBL422-01.

2F)

- 1:1 Connection

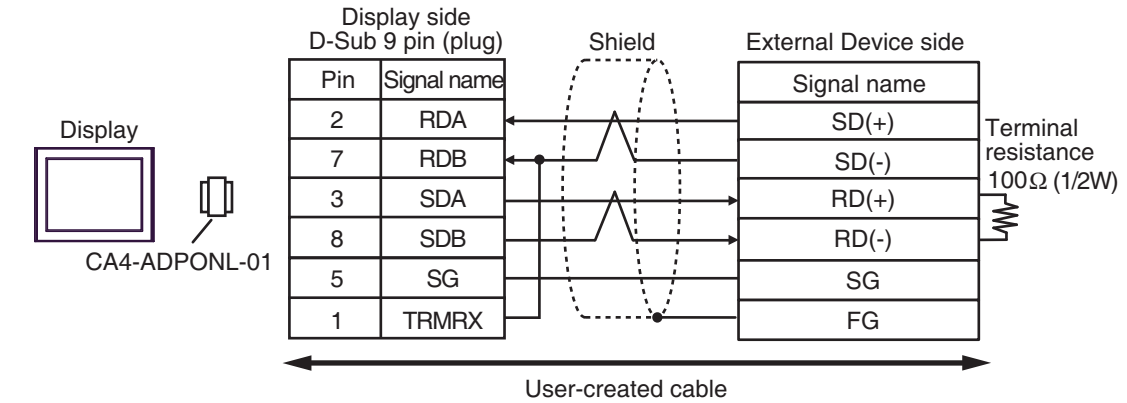

- 1:n Connection

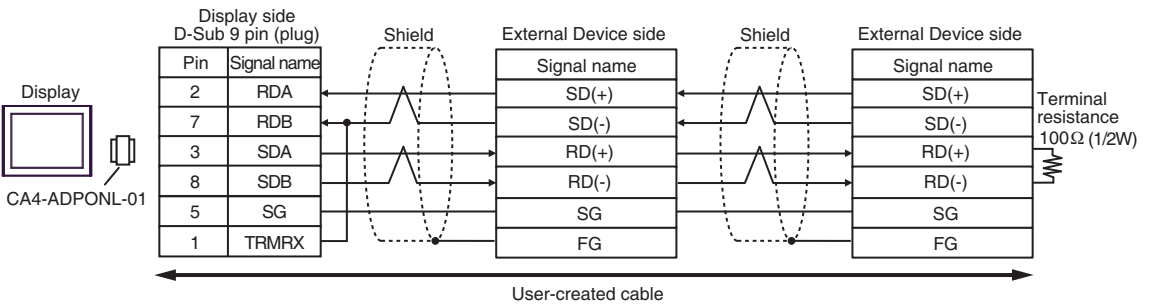


NOTE


- When the RDB terminal of CA4-ADPONL-01 to the TRMRX terminal, the termination resistance of 100Ω (1/2W) is inserted between RDA and RDB terminals on the Display.

2G)

- 1:1 Connection

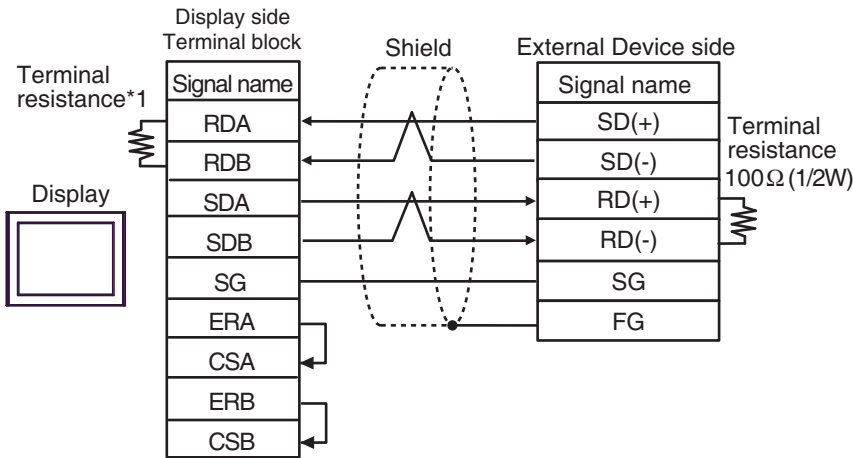

- 1:n Connection

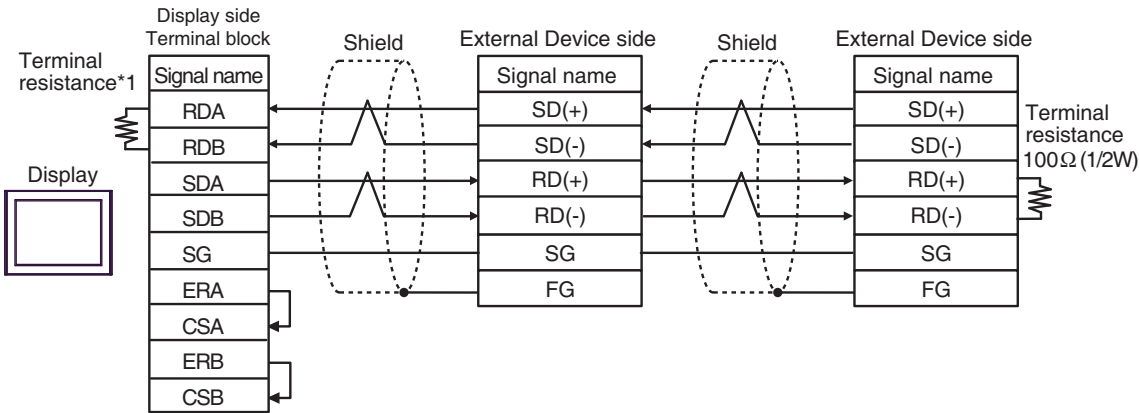


*1 The resistance in the Display is used as the termination resistance. Set the value of the DIP Switch on the rear of the Display as shown in the table below.


DIP Switch No.	Set Value
1	OFF
2	OFF
3	ON
4	ON

2H)

- 1:1 Connection

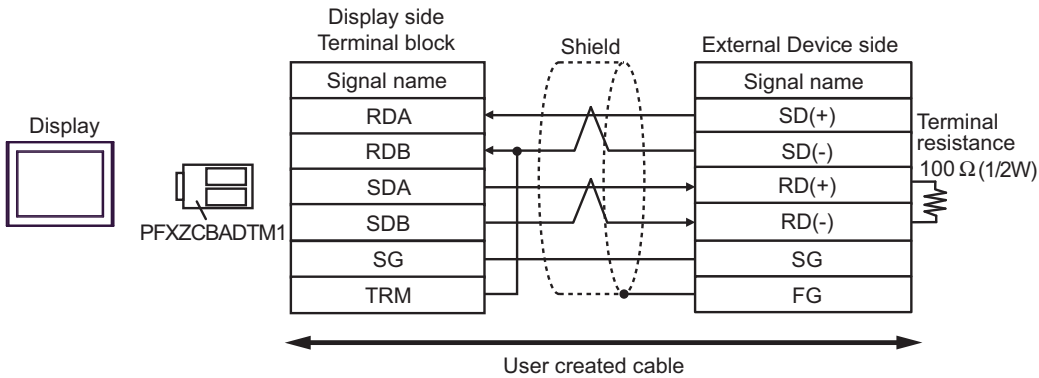

- 1:n Connection

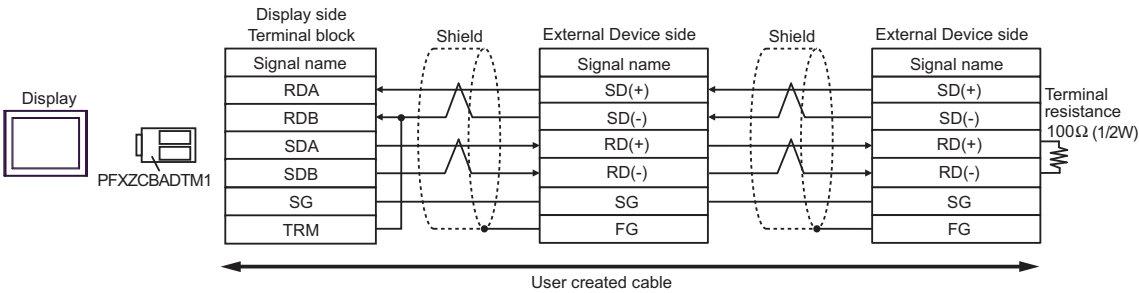

NOTE


- When the RDB terminal of PFXZCBADTM1 to the TRM terminal, the termination resistance of 100Ω (1/2W) is inserted between RDA and RDB terminals on the Display.

Cable Diagram 3

Display (Connection Port)	Cable		Remarks
GP3000 ^{*1} (COM1) AGP-3302B (COM2) GP-4*01TM (COM1) ST ^{*2} (COM2) LT3000 (COM1)	3A	COM port conversion adapter by Pro-face CA3-ADPCOM-01 + Connector terminal block conversion adapter by Pro-face CA3-ADPTRM-01 + User created cable	The cable length must be 1000m maximum.
	3B	User created cable	
GP3000 ^{*3} (COM2)	3C	Online adapter by Pro-face CA4-ADPONL-01 + Connector terminal block conversion adapter by Pro-face CA3-ADPTRM-01 + User created cable	The cable length must be 1000m maximum.
	3D	Online adapter by Pro-face CA4-ADPONL-01 + User created cable	
IPC ^{*4}	3E	COM port conversion adapter by Pro-face CA3-ADPCOM-01 + Connector terminal block conversion adapter by Pro-face CA3-ADPTRM-01 + User created cable	The cable length must be 1000m maximum.
	3F	User created cable	
GP-4106 (COM1)	3G	User created cable	The cable length must be 1000m maximum.
GP-4107 (COM1) GP-4*03T ^{*5} (COM2) GP-4203T (COM1)	3H	User created cable	The cable length must be 1000m maximum.
GP4000 ^{*6} (COM2) GP-4201T (COM1) SP5000 (COM1/2)	3I	RS-422 terminal block conversion adapter by Pro-face PFXZCBADTM1 ^{*7} + User created cable	The cable length must be 1000m maximum.
	3B	User created cable	
LT-4*01TM (COM1) LT-Rear Module (COM1)	3J	RJ45 RS-485 Cable (5m) by Pro-face PFXZLMCBJR81	The cable length must be 200m maximum.

*1 All GP3000 models except AGP-3302B

*2 All ST models except AST-3211A and AST-3302B


- *3 All GP3000 models except GP-3200 series and AGP-3302B
- *4 Available only with the COM ports that support RS-422/485 (2 wire).
 ■ IPC COM Port (page 5)
- *5 Except GP-4203T
- *6 All GP4000 models except GP-4100 series, GP-4*01TM, GP-4201T and GP-4*03T
- *7 When using a Terminal Block Conversion Adapter (CA3-ADPTRM-01) instead of the RS-422 Terminal Block Conversion Adapter, refer to Cable Diagram 3A.

IMPORTANT


- The RS-422/485 cable length is normally 1000m or less (for LT-4*01TM and LT-Rear Module, 200m or less), which depends on the External Device. Please refer to the manual of the External Device for more details.
- The connection method and termination resistance depends on the External Device.
- The termination resistance on the Display is not isolated.

3A)

- 1:1 Connection

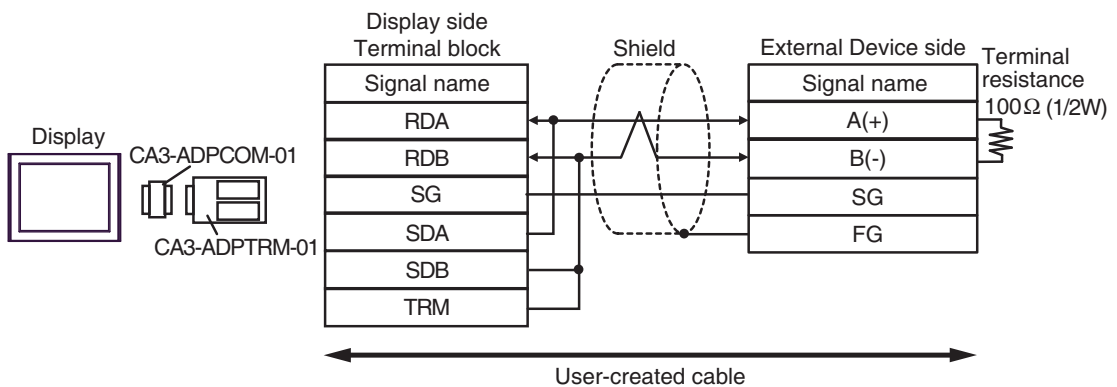


- 1: n Connection

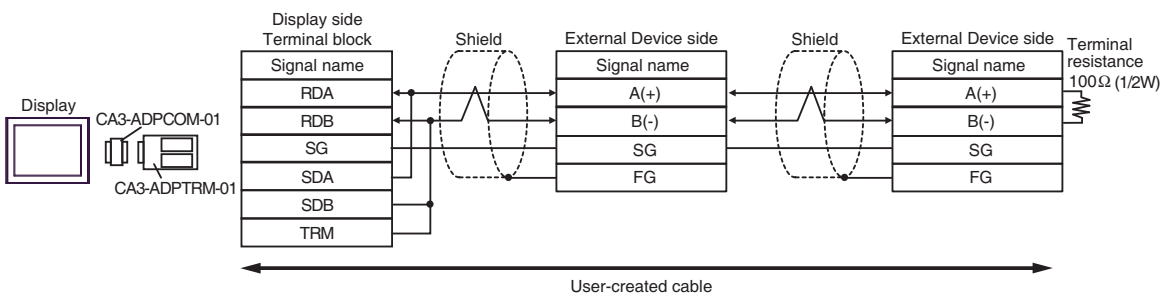**NOTE**


- When the RDB terminal of CA3-ADPTRM-01 to the TRM terminal, the termination resistance of 100Ω (1/2W) is inserted between RDA and RDB terminals on the Display.

3B)

- 1:1 Connection

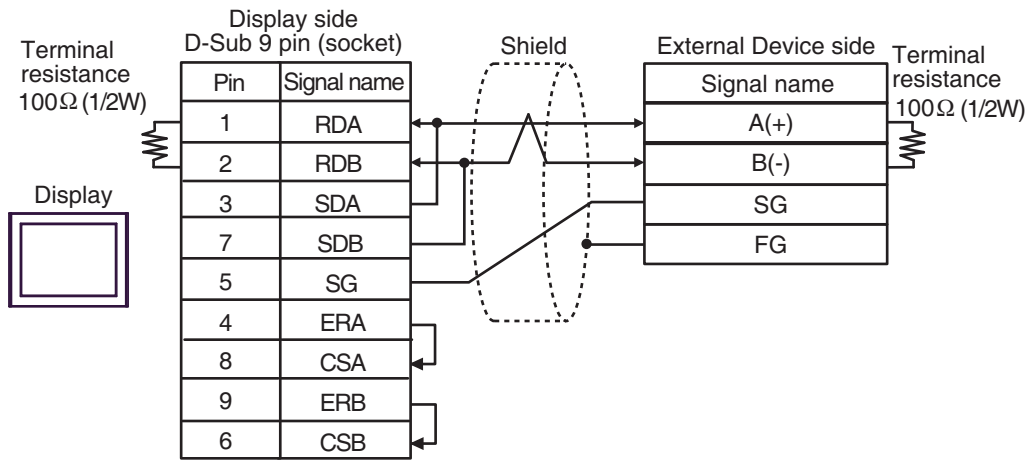


- 1: n Connection

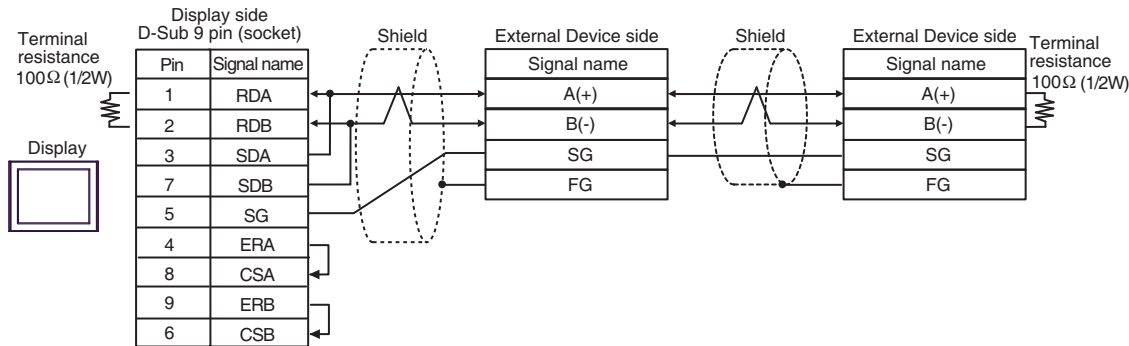


3C)

- 1:1 Connection

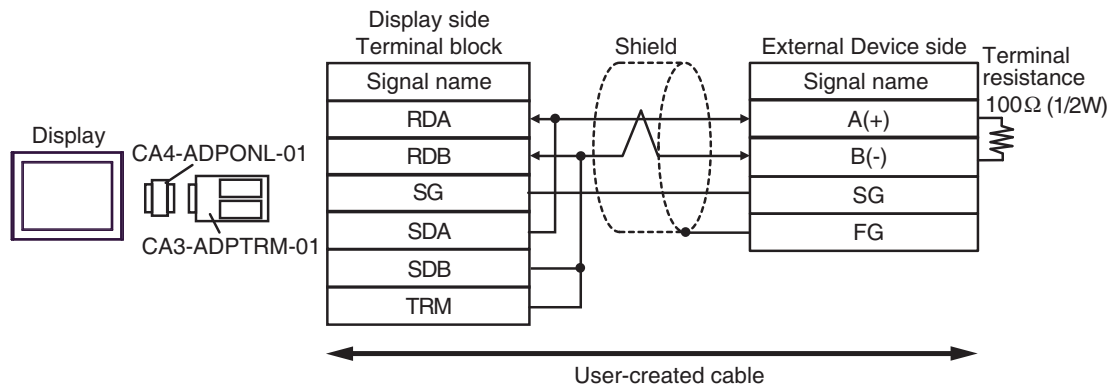

- 1: n Connection

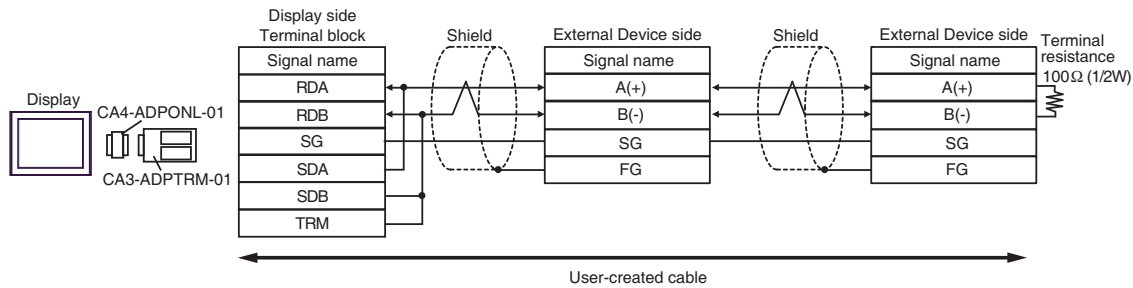


NOTE


- When the RDB terminal of CA3-ADPTRM-01 to the TRM terminal, the termination resistance of 100Ω (1/2W) is inserted between RDA and RDB terminals on the Display.

3D)

- 1:1 Connection

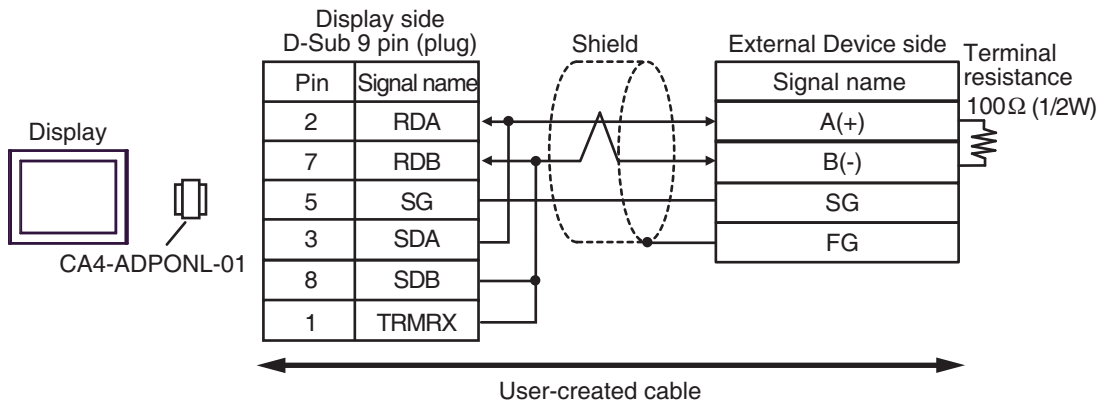

- 1: n Connection

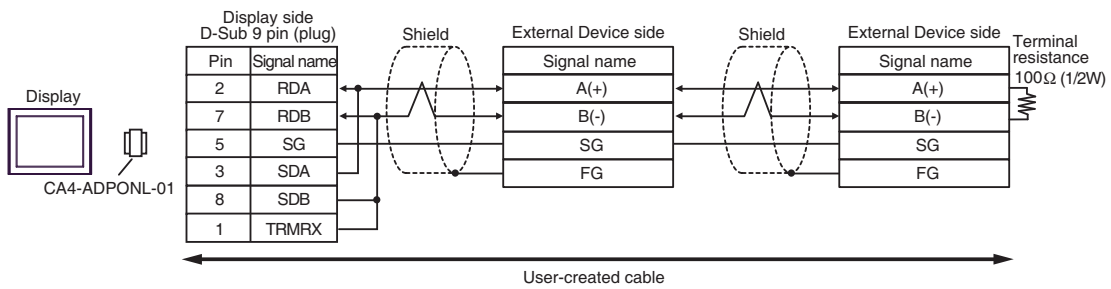


NOTE


- When the RDB terminal of CA4-ADPONL-01 to the TRMRX terminal, the termination resistance of 100Ω (1/2W) is inserted between RDA and RDB terminals on the Display.

3E)

1:1 Connection

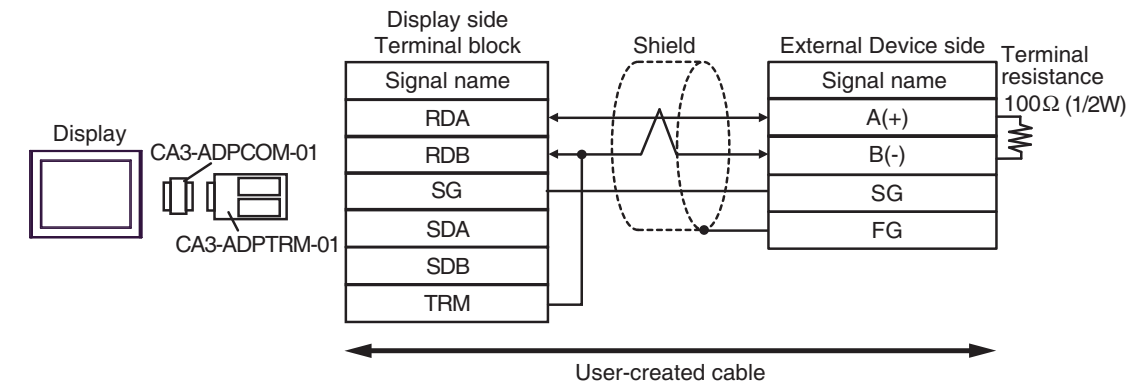

• 1: n Connection

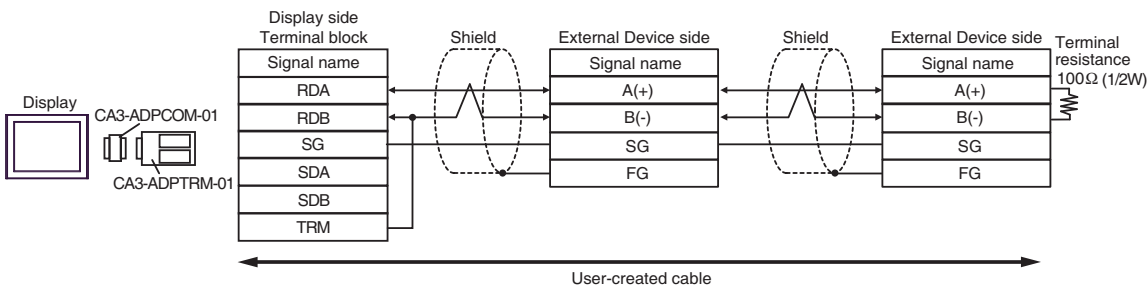


NOTE


- When the RDB terminal of CA3-ADPTRM-01 to the TRM terminal, the termination resistance of 100Ω (1/2W) is inserted between RDA and RDB terminals on the Display.

3F)

- 1:1 Connection

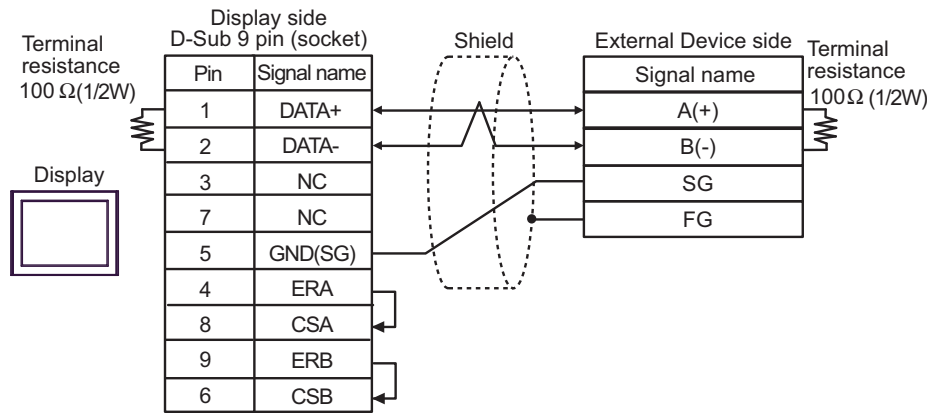


- 1: n Connection

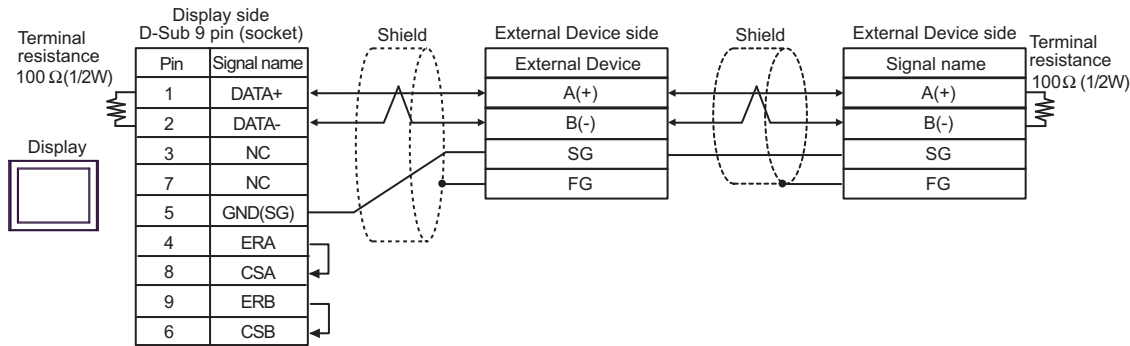


3G)

- 1:1 Connection

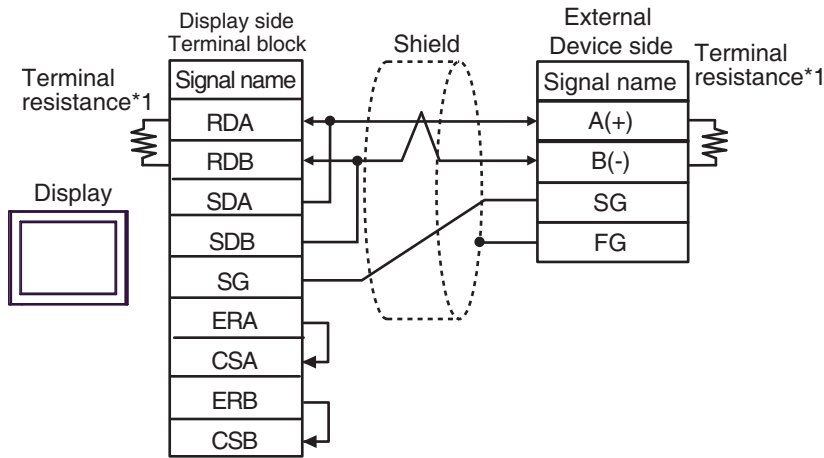

- 1: n Connection

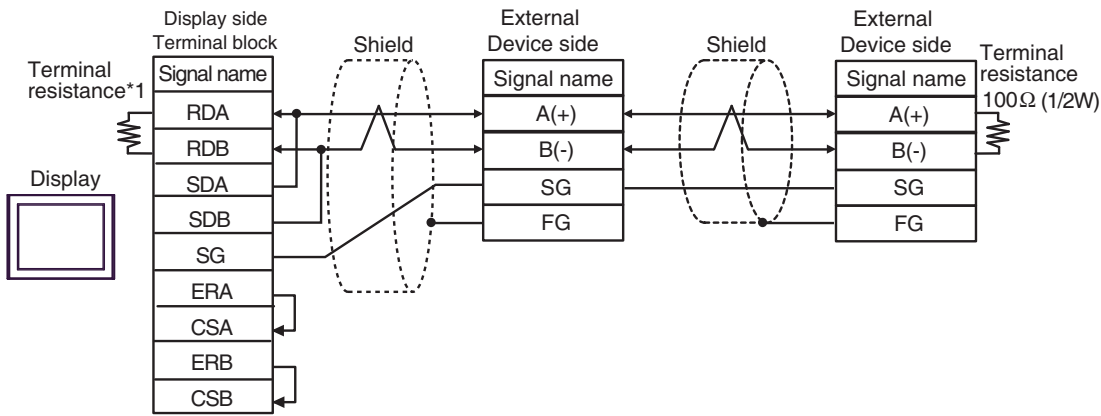


*1 The resistance in the Display is used as the termination resistance. Set the value of the DIP Switch on the rear of the Display as shown in the table below.


DIP Switch No.	Set Value
1	OFF
2	OFF
3	ON
4	ON

3H)

- 1:1 Connection

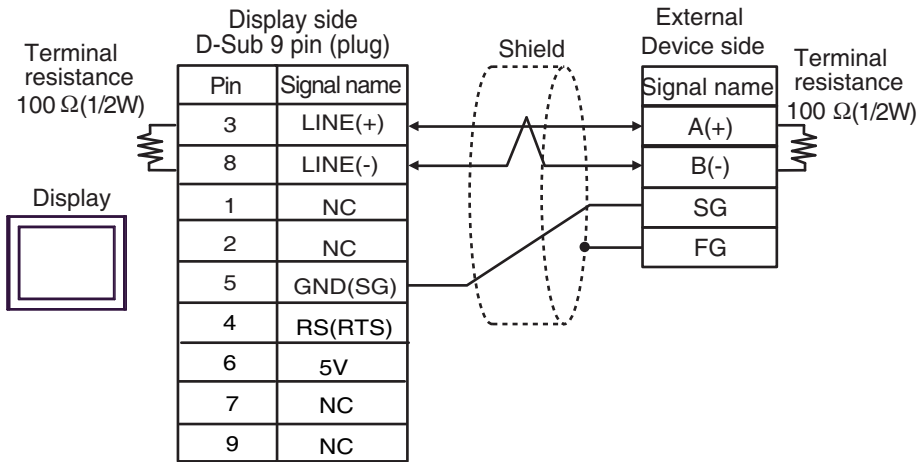

- 1: n Connection

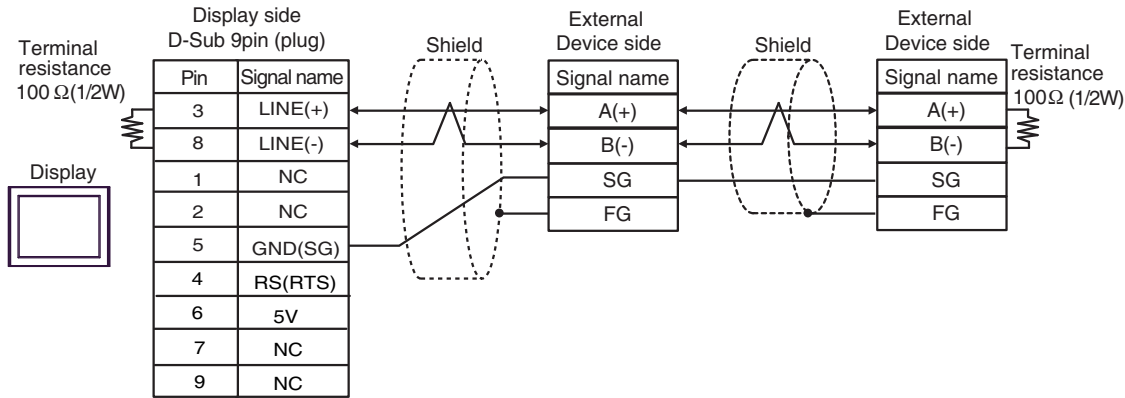

IMPORTANT


- The 5V output (Pin #6) on the Display is the power for the Siemens AG's PROFIBUS connector. Do not use it for other devices.

NOTE


- In COM on the GP-4107, the SG and FG terminals are isolated.

3l)

- 1:1 Connection

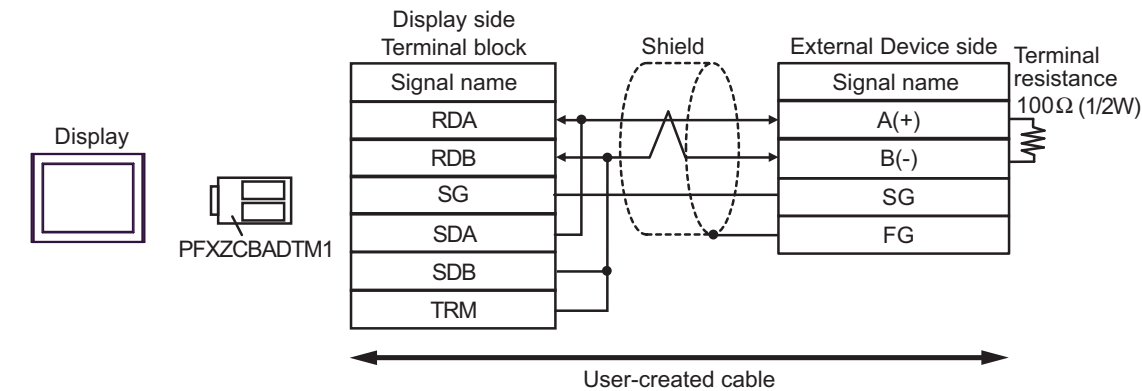


- 1: n Connection

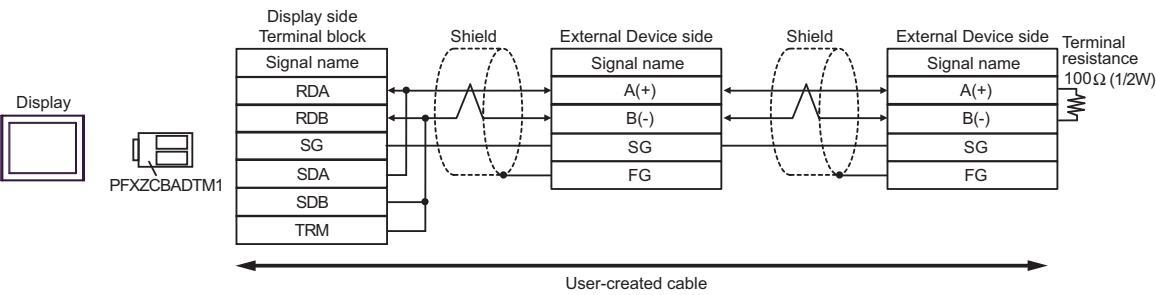


NOTE	<ul style="list-style-type: none">• When the RDB terminal of PFXZCBADTM1 to the TRM terminal, the termination resistance of 100Ω (1/2W) is inserted between RDA and RDB terminals on the Display.
-------------	---

3J)

- 1:1 Connection

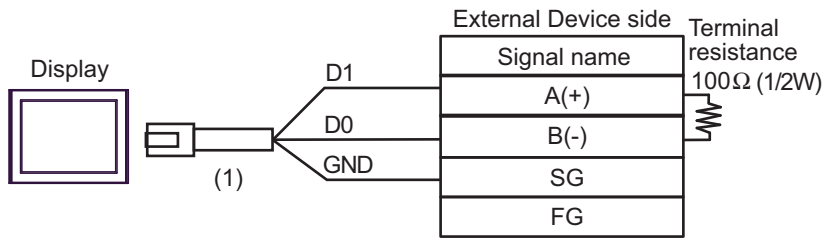


- 1: n Connection







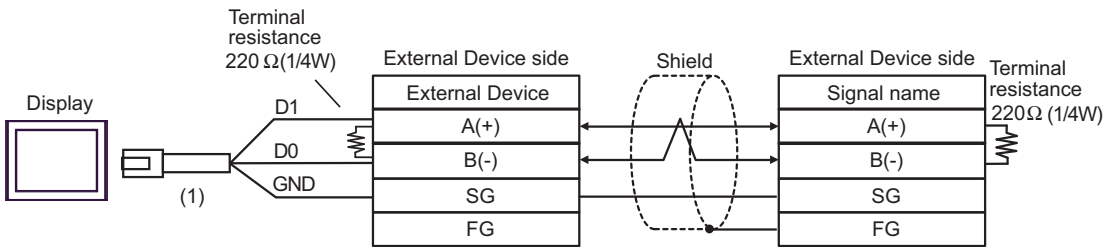


Legend	Name	Note
(1)	RJ45 RS-485 Cable (5m) by Pro-face PFXZLMCBRJ81	

7 Supported Device

The range of supported device addresses is shown in the table below. Please note that the actual supported range for devices varies depending on the external device that is used. Please check the actual range in the external device manual.

 : This address can be specified as system data area.


Device	Bit Address	Word Address	32 bits	Remarks
Coil	000001 - 065536	000001 - 065521	<div> <div>L / H</div> <div>or</div> <div>H / L</div> <div>*1</div> </div>	 *2
Discrete Input	100001 - 165536	100001 - 165521		 *2
Input Register	-----	300001 - 365536		 *2
Holding Register	400001,00 - 465536,15	 400001 - 465536		 *3
Input Register	-----	D300001 - D365535		 *2
Holding Register	D400001,00 - D465535,31	D400001 - D465535		 *4

*1 Whether the data is stored as higher or lower is determined by the [Double Word word order] setting in [Device Setting].

 "5.1 Setup Items in GP-Pro EX" (page 14)


*2 Write disable.

*3 An access method at the time of Bit Set varies depending on the [Rest of the bits in this word] setting of [Device Setting].

"Clear" 

"Do not clear" 400001,00 - 465536,15

*4 An access method at the time of Bit Set varies depending on the [Rest of the bits in this word] setting of [Device Setting].

"Clear" 

"Do not clear" D400001,00 - D465535,31

■ IEC61131 Syntax Address Description


The following table compares IEC61131 and MODBUS syntax address descriptions.

Device	MODBUS Syntax			IEC61131 Syntax				
	Format	Range	First element	Format	0-based		1-based	
					Range	First element	Range	First element
Coil	000001+i	i = 0 to 65535	000001	%Mi	i = 0 to 65535	%M00000	i = 1 to 65536	%M00001
Discrete Input	100001+i	i = 0 to 65535	100001	-	-	-	-	-
Input Register (Word)	300001+i	i = 0 to 65535	300001	-	-	-	-	-
Input Register (Word bit)	300001+i,j	i = 0 to 65535 j = 0 to 15	300001,00	-	-	-	-	-
Holding Register (Word)	400001+i	i = 0 to 65535	400001	%MWi	i = 0 to 65535	%MW00000	i = 1 to 65536	%MW00001
Holding Register (Word bit)	400001+i,j	i = 0 to 65535 j = 0 to 15	400001,00	%Mwi: Xj	i = 0 to 65535 j=0 to 15	%MW00000 :X00	i = 1 to 65536 j=0 to 15	%MW00001 :X00
Input Register (D Word)	D300001+i	i = 0 to 65534	D300001	-	-	-	-	-
Input Register (D Word bit)	D300001+i,j	i = 0 to 65534 j = 0 to 31	D300001,00	-	-	-	-	-
Holding Register (D Word)	D400001+i	i = 0 to 65534	D400001	%MDi	i = 0 to 65534	%MD00000	i = 1 to 65535	%MD00001
Holding Register (D Word bit)	D400001+i,j	i = 0 to 65534 j = 0 to 31	D400001,00	%MDi:Xj	i = 0 to 65534 j=0 to 31	%MD00000 :X00	i = 1 to 65535 j=0 to 31	%MD00001 :X00

NOTE

- The addresses 100000 and 300000 cannot be accessed using IEC61131 syntax.
- If you apply IEC61131 syntax to a project that has a discrete input or input register already set, the addresses become "-Undefined-" and invalid.

NOTE

- Refer to the GP-Pro EX Reference Manual for system data area.
Cf. GP-Pro EX Reference Manual "LS Area (Direct Access Method Area)"
- Refer to the precautions on manual notation for icons in the table.
 "Manual Symbols and Terminology"

8 Device Code and Address Code

Use device code and address code when you set "Device Type & Address" for the address type of the data display or other devices.

Device	Device Name	Device Code (HEX)	Address Code
Coil	0	0080	Value of (word address - 1) divided by 16
Discrete Input	1	0081	Value of (word address - 1) divided by 16
Input Register	3	0001	Value of (word address - 1)
Holding Register	4	0000	Value of (word address - 1)
Input Register	D3	0002	Value of (word address - 1) divided by 2
Holding Register	D4	0003	Value of (word address - 1) divided by 2

9 Error Messages

Error messages are displayed on the screen of Display as follows: "No. : Device Name: Error Message (Error Occurrence Area)". Each description is shown below.

Item	Description
No.	Error Number.
Device Name	Name of the External Device where an error has occurred. The Device name is the title of the External Device set with GP-Pro EX.(Initial value [PLC1])
Error Message	Displays messages related to an error that has occurred.
Error Occurrence Area	<p>Displays the IP address or device address of the External Device where an error has occurred, or error codes received from the External Device.</p> <div style="border: 1px solid black; padding: 2px; margin: 5px 0;">NOTE</div> <ul style="list-style-type: none"> • IP address is displayed as "IP address (Decimal): MAC address (Hex)". • Device address is displayed as "Address: Device address". • Received error codes are displayed as "Decimal [Hex]".

Display Examples of Error Messages

"RHAA035: PLC1: Error has been responded for device write command (Error Code: 2[02H])"

NOTE

- Refer to your External Device manual for details on received error codes.
- Refer to "Display-related errors" in "Maintenance/Troubleshooting Guide" for details on the error messages common to the driver.

■ Error Codes Specific to the External Device

Please refer to the manual of the External Device for error codes specific to the External Device.

General MODBUS error codes are shown below.

Error Code (HEX)	Description
01	Does not support the corresponding Function Code.
02	The specified data address does not exist.
03	Data value error.

■ Error Messages Specific to the External Device

Error Number	Error Message	Description
RHxx128	(Node Name): (Device Address) can't be read because of the limitation of the Read boundary	When reading the coil or discrete input as a word address while the boundary is less than 16 bits, or accessing the input or holding register as a double word while the boundary is set to 1 word, an error will be displayed.
RHxx129	(Node Name): (Device Address) can't be written because of the limitation of the Write boundary	When writing the coil as a word address while the boundary is less than 16 bits, or accessing the holding register as a double word while the boundary is set to 1 word, an error will be displayed.
RHxx130	(Node Name): (Device Address) is not defined on Function Code and Max Query setting	When accessing the device out of the defined area, an error will be displayed.
RHxx131	(Node Name): (Device Address) can't be read because of the limitation of the Device Range setting	When reading the coil or discrete input as a word address while the range is less than 16 bits, or accessing the input or holding register as a double word while the range is set to 1 word, an error will be displayed.
RHxx132	(Node Name): (Device Address) can't be written because of the limitation of the Device Range setting	When writing the coil as a word address while the range is less than 16 bits, or accessing the holding register as a double word while the range is set to 1 word, an error will be displayed.